


2016.0 RANGE ROVER (LG), 413-06

HORN

DESCRIPTION AND OPERATION

SIREN

COMPONENT LOCATION

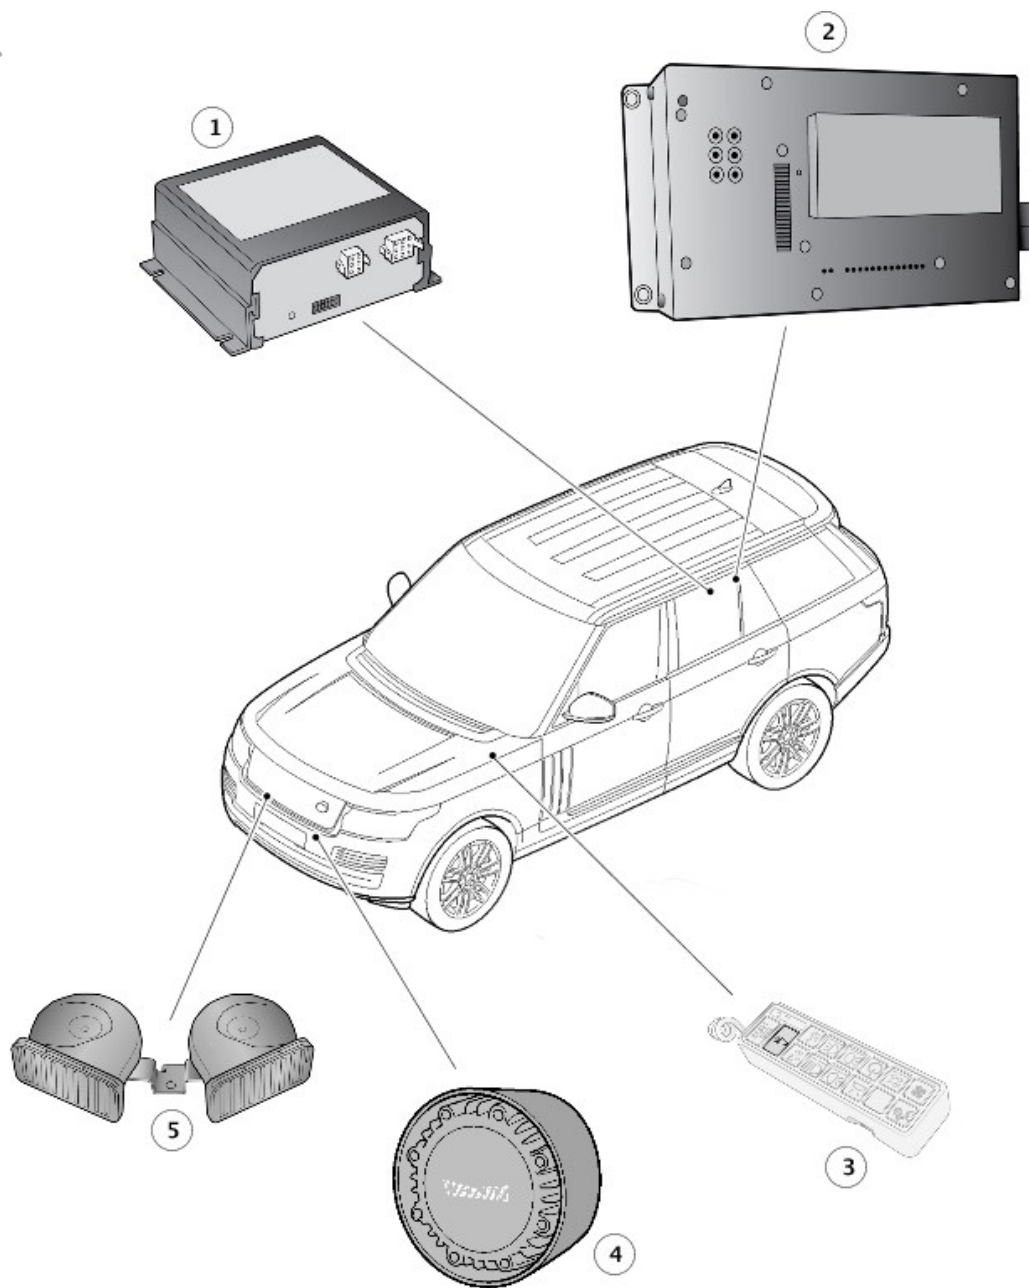

E168037

ITEM	DESCRIPTION
1	Amplifier
2	Emergency response control module
3	Remote emergency response switchpack
4	Emergency response speaker
5	Vehicle horn

OVERVIEW

The all-weather emergency response speaker incorporates a 100 watt front loaded, powder-coated speaker driver installed in an all-weather nylon composite housing. The emergency response speaker is vibration resistant and provides exceptional true-tone performance and a wide/high frequency. The compact size of the speaker is excellent for providing a concealed installation.

NOTE:

The emergency response speaker has a dual function as it also operates as the speaker for the public address (PA) system.

For additional information, refer to: Intercom System (415-01 Information and Entertainment System, Description and Operation).

DESCRIPTION


When activated, the speaker emits either a 'wail' or 'yelp' tone, to alert other road users of the vehicle's presence; in a similar manner to emergency service vehicles.

The siren system comprises:

- an emergency response speaker located behind the front bumper on the left-side of the vehicle;
- an amplifier located in the luggage space area;
- a siren switch located in the remote emergency response switchpack.

For additional information, refer to: [Remote Emergency Response Switchpack - Armoured](#) (413-09A Warning Devices, Description and Operation).

Emergency response speaker

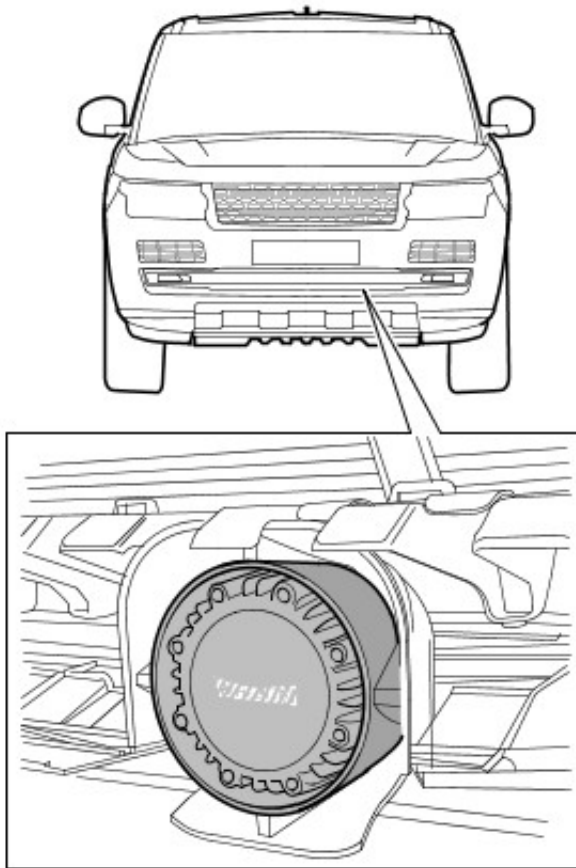


E168038

OPERATION

The siren is activated when the siren switch located in the remote emergency response switchpack, is 'On'

A status lamp in the siren switch will illuminate when the switch is in the 'On' position.


Siren switch with integrated status lamp

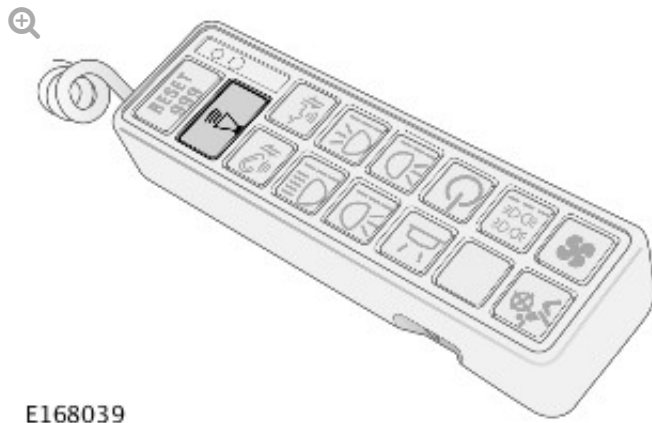

E168039

When activated the siren operates via the amplifier in one of two modes, emitting either a 'wail' or a 'yelp' tone.

Amplifier

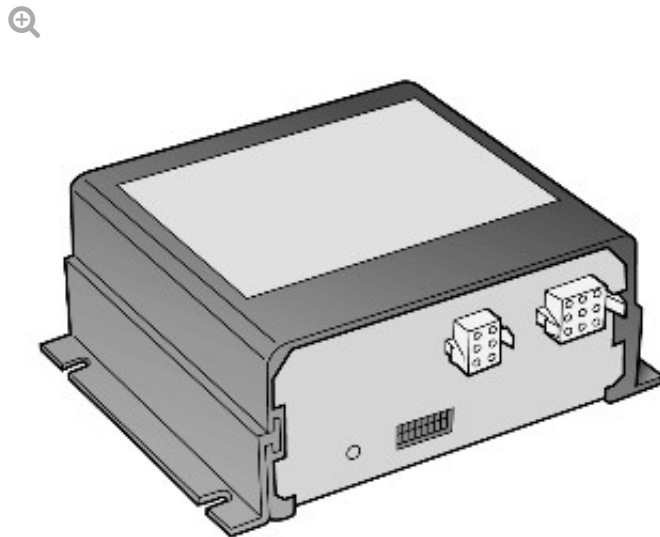


E168040

Siren tone selection is controlled by the vehicle horn button on the steering wheel:

- A single press and each subsequent single press on the horn button will alternate the siren's 'wail' and 'yelp' tones.
- Two presses in quick succession will silence the siren.
- Pressing the horn button when the siren is in silent mode will restart the siren.

Vehicle horn button

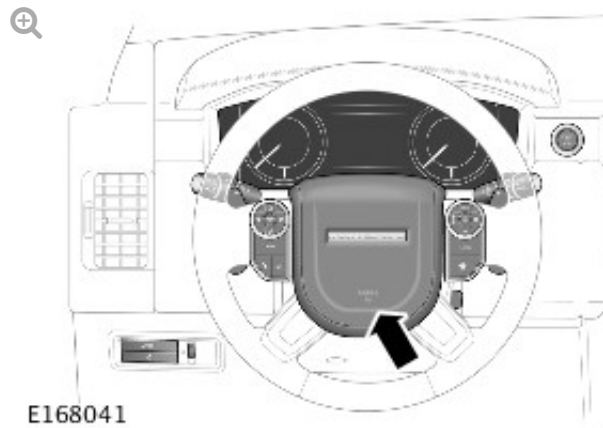

When the siren switch, in the remote emergency response switchpack, is in the 'Off' position the vehicle horn will function as normal.

The siren takes its power from the emergency response control module located in the luggage space compartment. The siren harness incorporates an integral fuse, housed in a moulded case.

A horn-ring connection is connected to the vehicle's horn ring circuit; when the vehicle horn is pressed the siren cycles through the available tones.


NOTE:

The remote emergency response switchpack also incorporates a microphone for the public address system and is made active via the press-to-talk switch on side of the remote. When the switch is pressed it will mute any active siren tones.

For additional information, refer to: Intercom System (415-01 Information and Entertainment System, Description and Operation).

CONTROL DIAGRAM

(A) = Hardwired

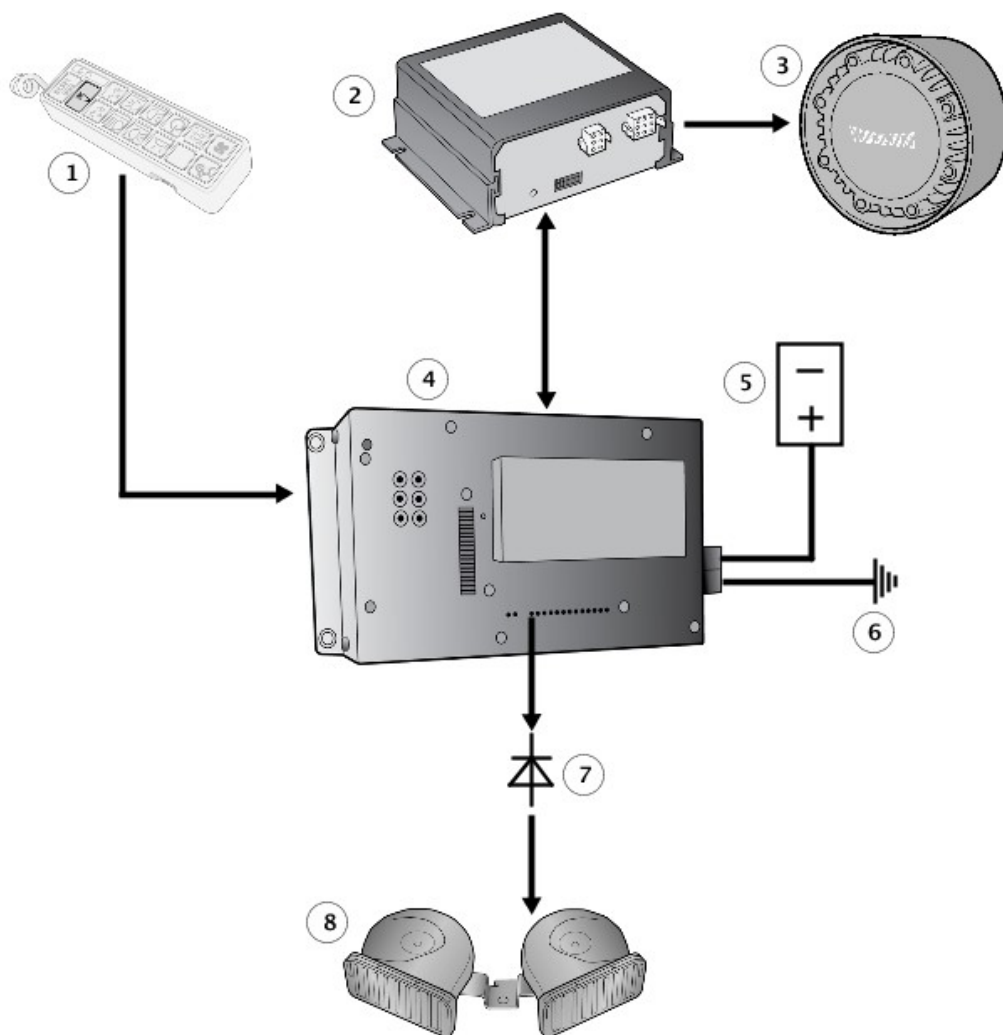

E168042

A →

ITEM	DESCRIPTION
1	Siren switch
2	Amplifier
3	Emergency response speaker
4	Emergency response control module
5	Auxiliary battery
6	Ground
7	Diode
8	Vehicle horn

