

2016.0 RANGE ROVER (LG), 413-08

INFORMATION AND MESSAGE CENTER

HEAD UP DISPLAY CONTROL MODULE (G1770470)

REMOVAL AND INSTALLATION

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.




All vehicles

1. Refer to: [Instrument Panel Lower Section](#) (501-12A Instrument Panel and Console - Standard Wheel Base, Removal and Installation).

2.


CAUTION:

Take extra care not to damage the wiring harnesses.

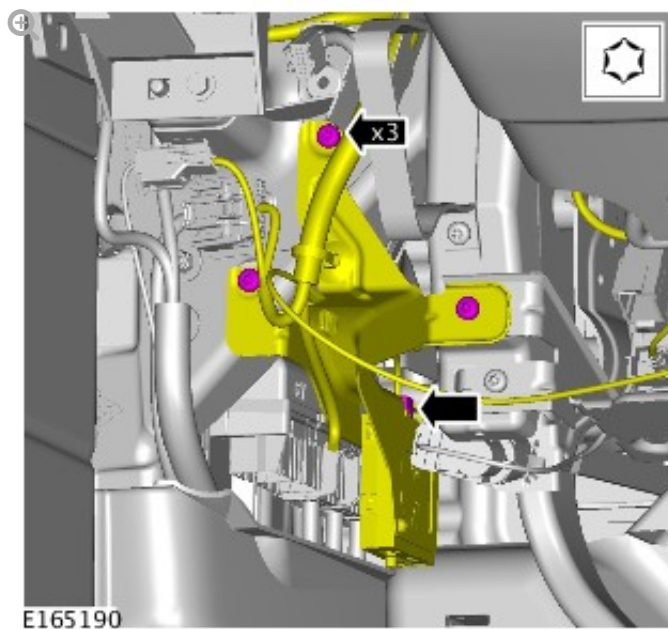


Torque: 12 Nm

3.

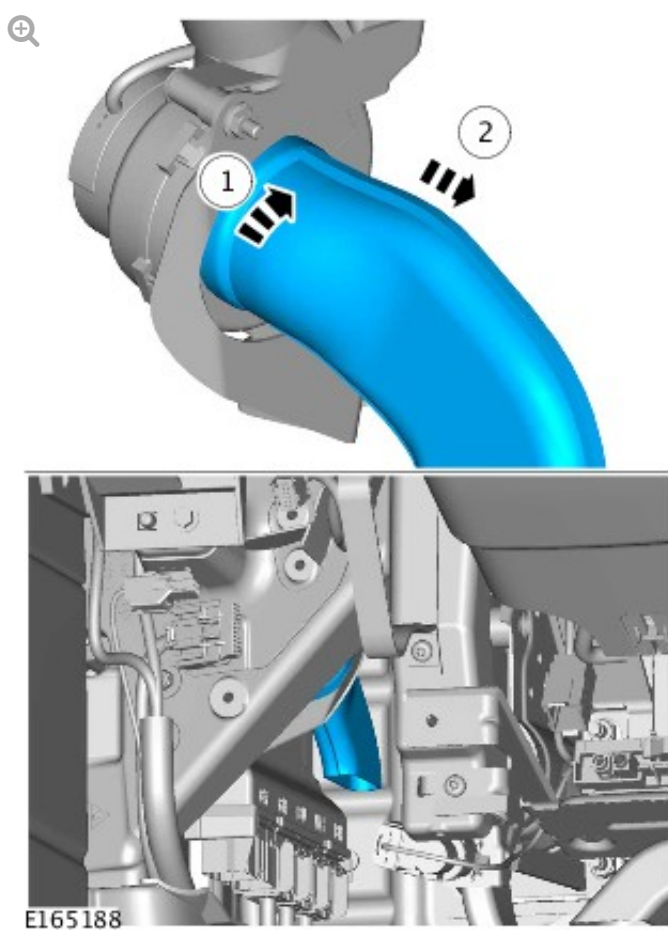

Right-hand drive vehicles

4.

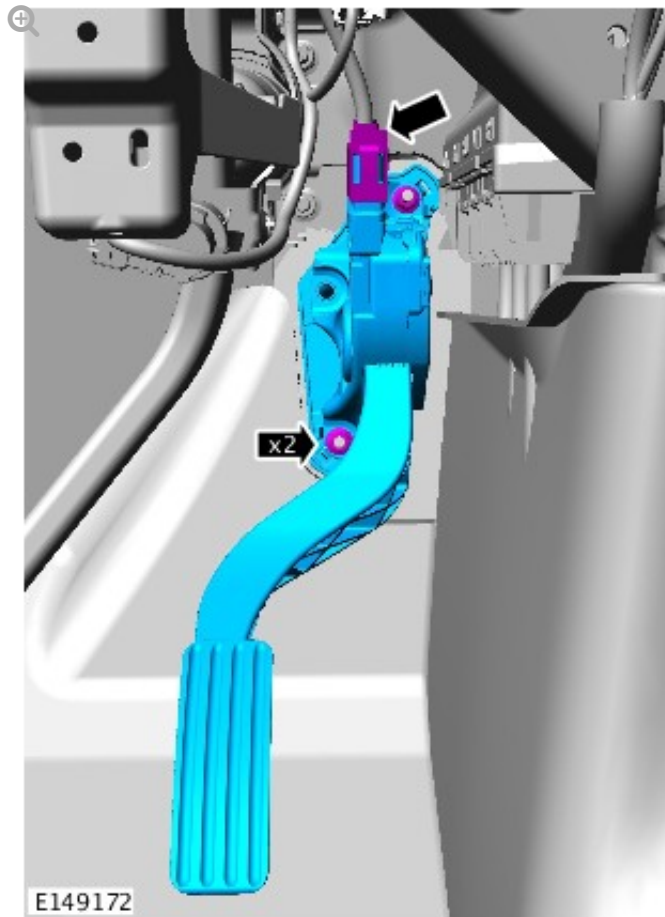


Torque: 10 Nm





All vehicles

5.

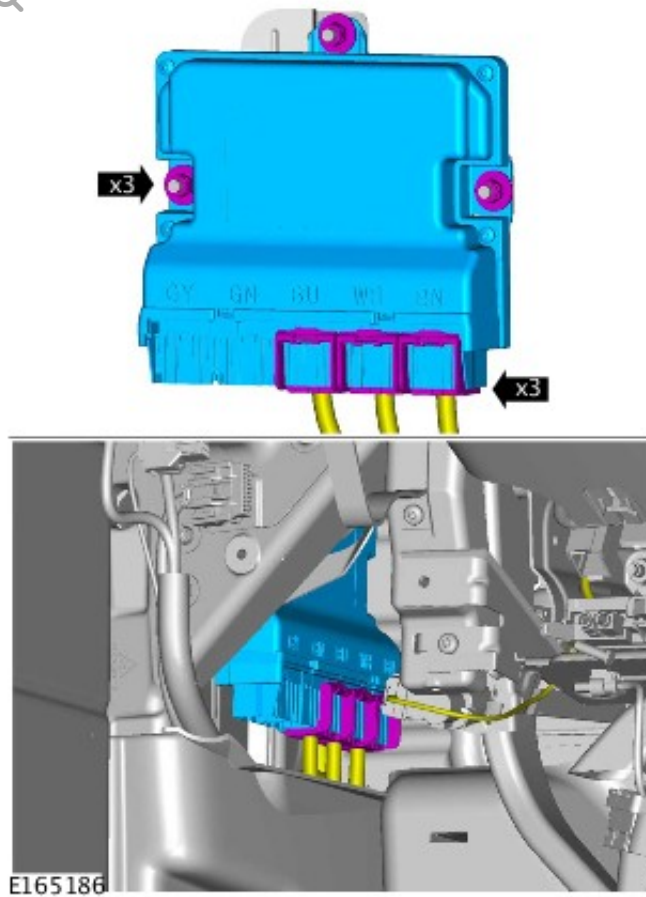

Torque: 10 Nm

6.

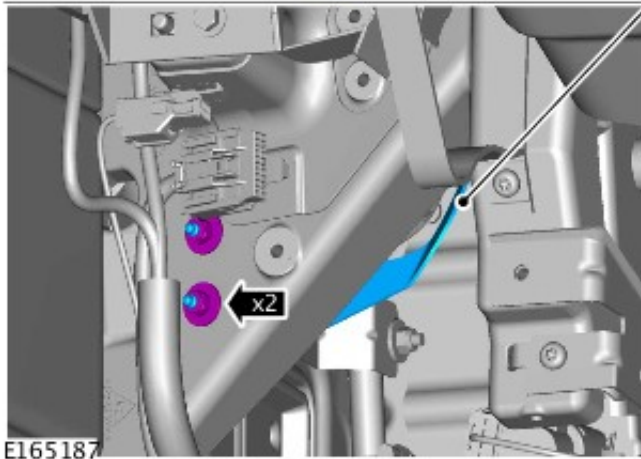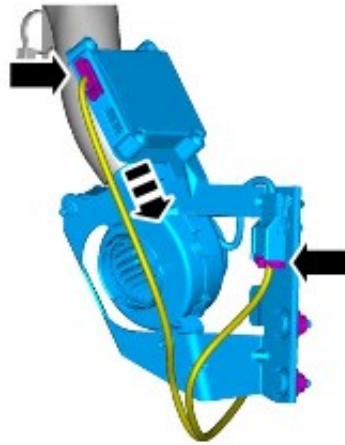


Torque: 10 Nm

7.

NOTE:

Do not disassemble further if the component is removed for access only.

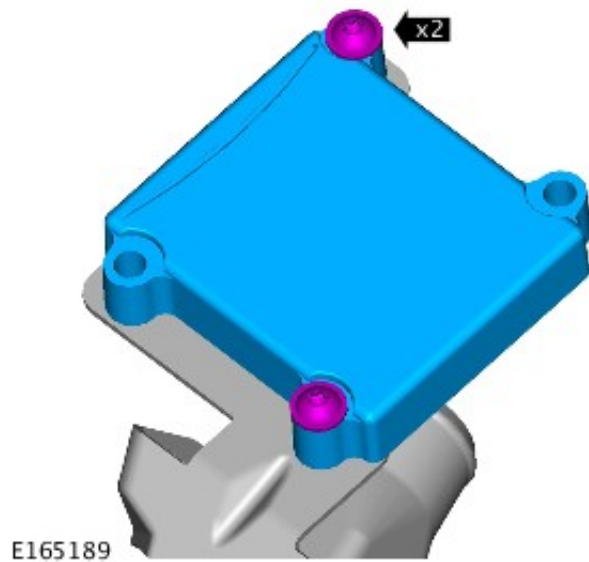

Torque: 1.5 Nm

INSTALLATION

1. To install, reverse the removal procedure.
2. If a new component is to be installed, configure using Land Rover approved diagnostic equipment.