

2016.0 RANGE ROVER (LG), 415-01

INFORMATION AND ENTERTAINMENT SYSTEM

DIGITAL RADIO CONTROL MODULE (G1561108)


REMOVAL AND INSTALLATION

REMOVAL


NOTE:

Removal steps in this procedure may contain installation details.


1.

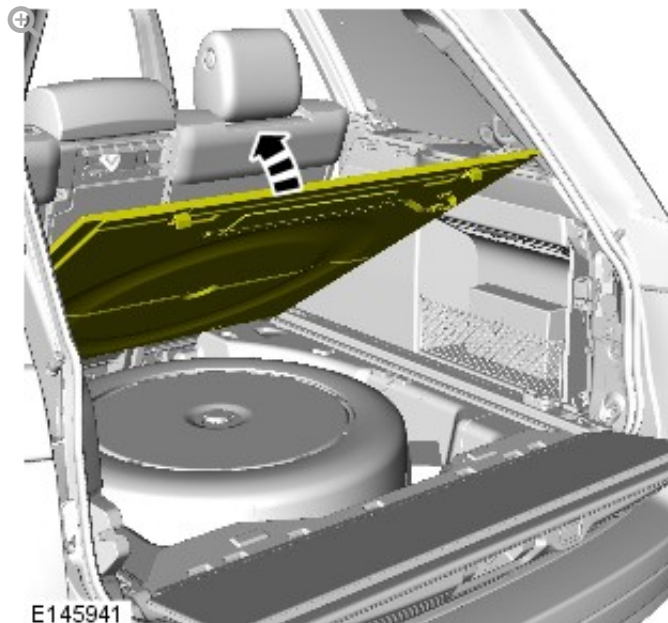

2.

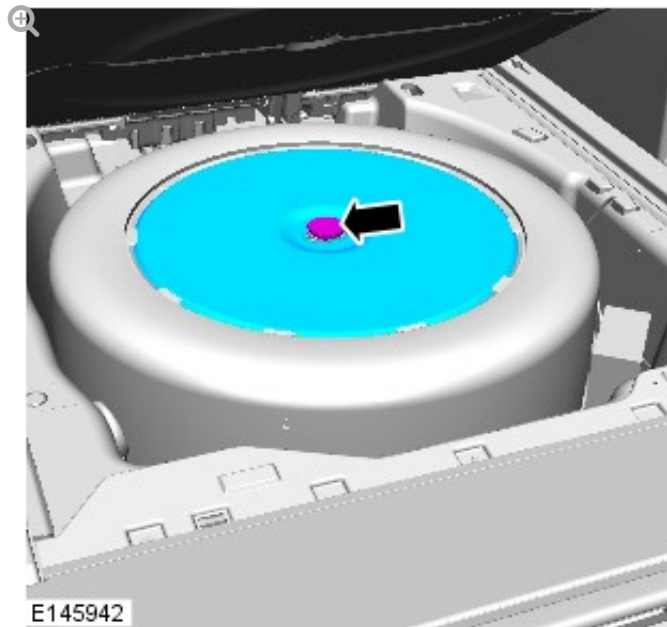


3.

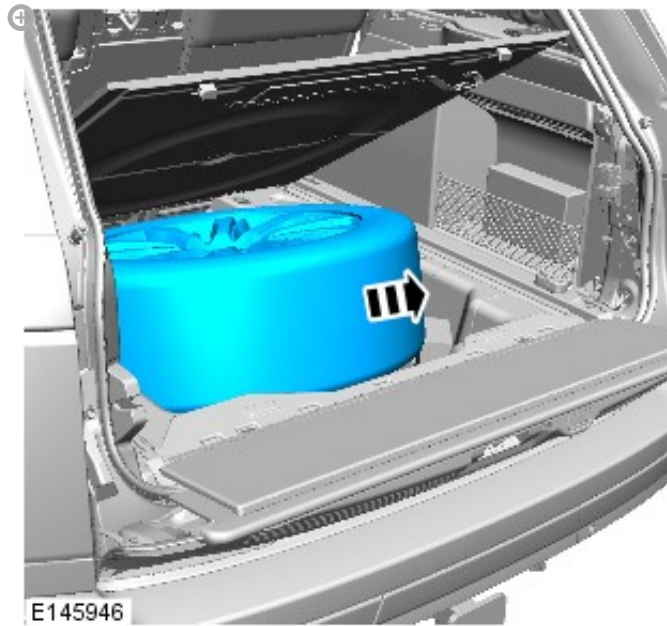


4. Disconnect the battery ground cable.
Refer to: Specifications (414-00, Specifications).

5.

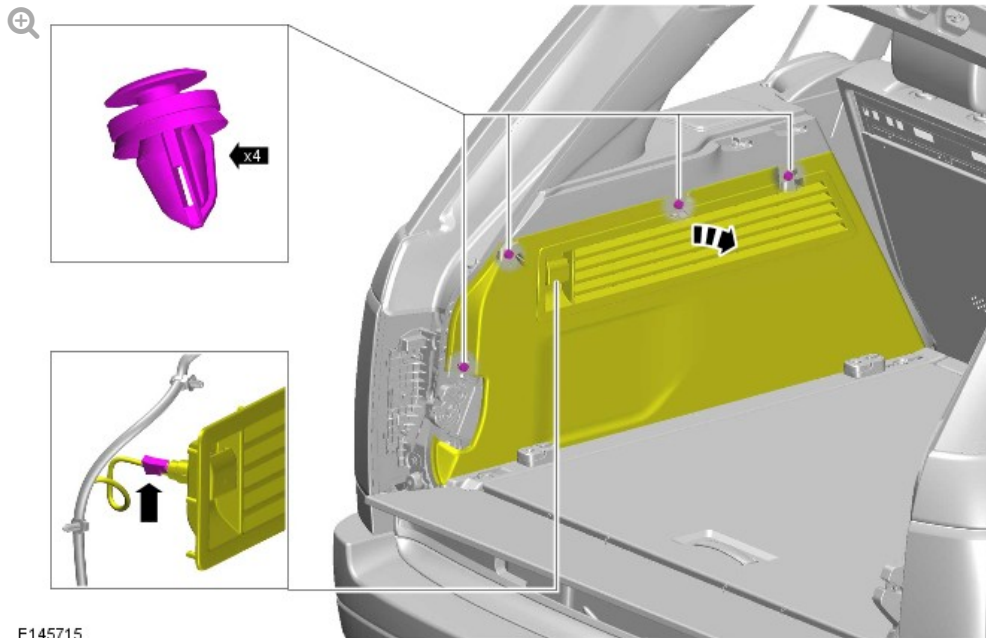


E145715

6.

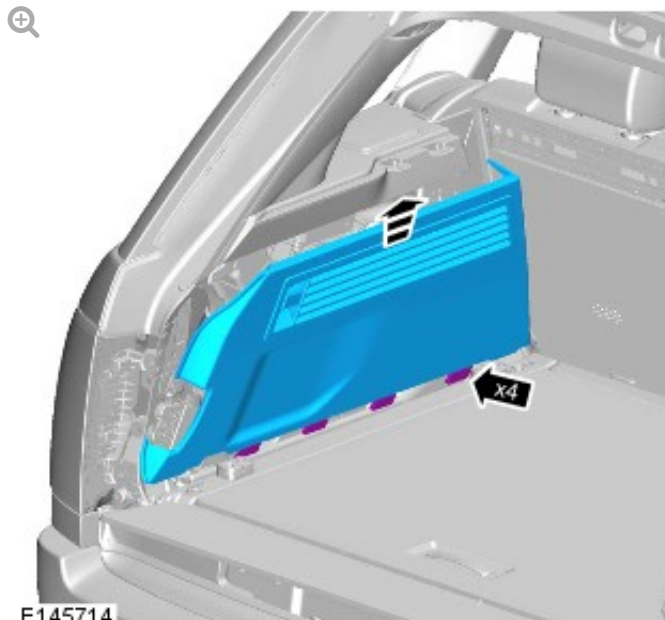


E145714

7.

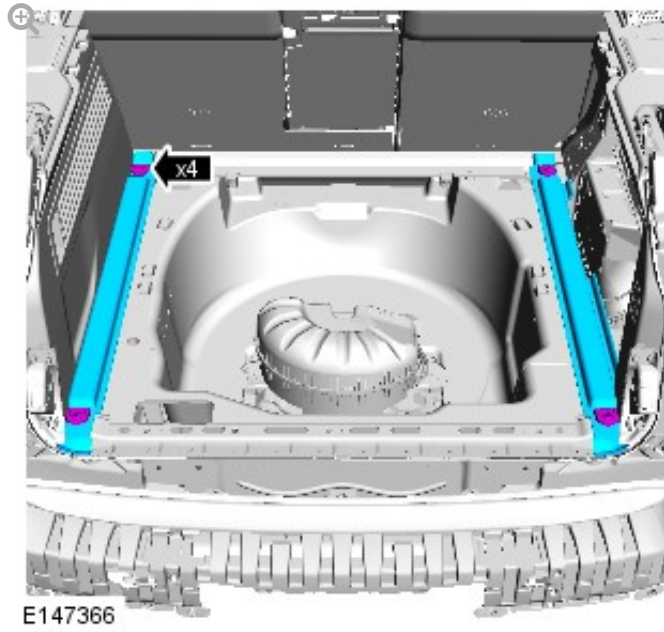


Torque: 20 Nm


8.

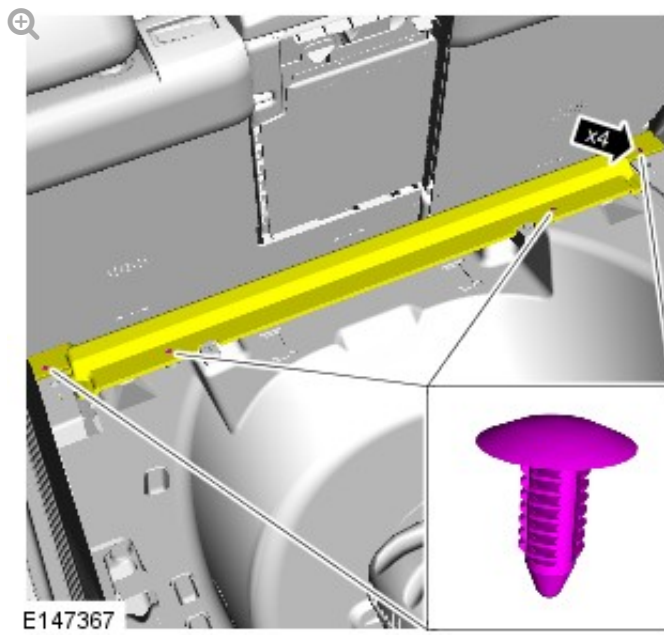


9.

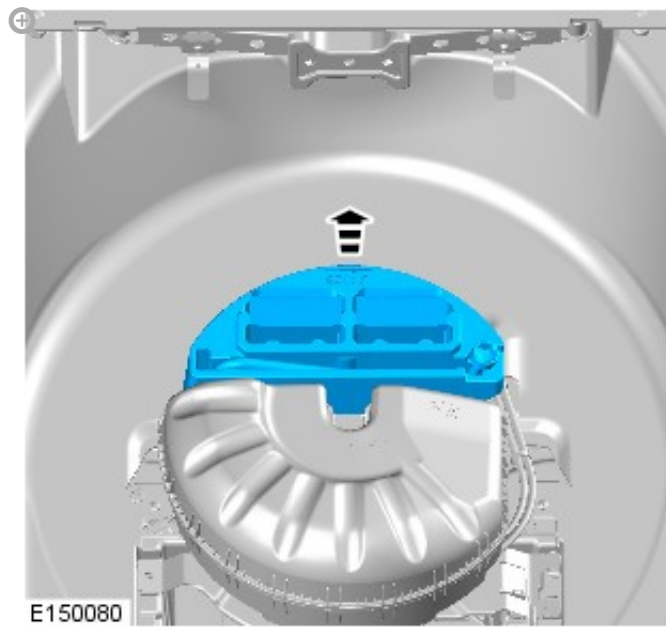


10.

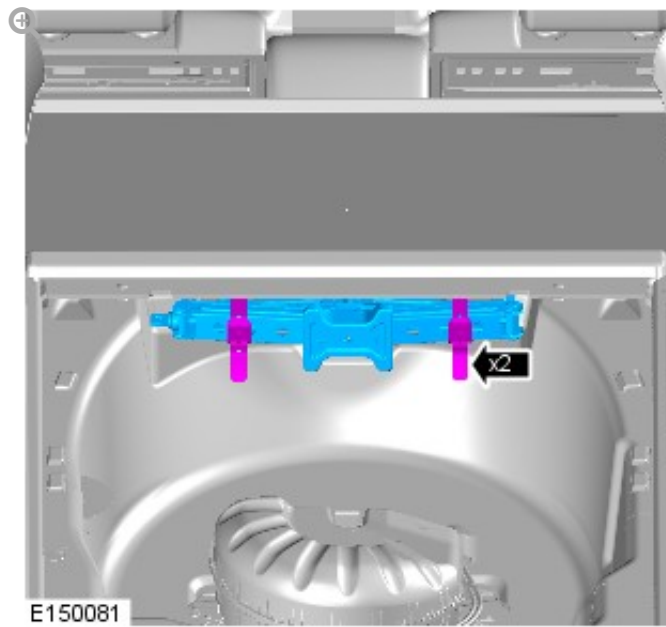

11.

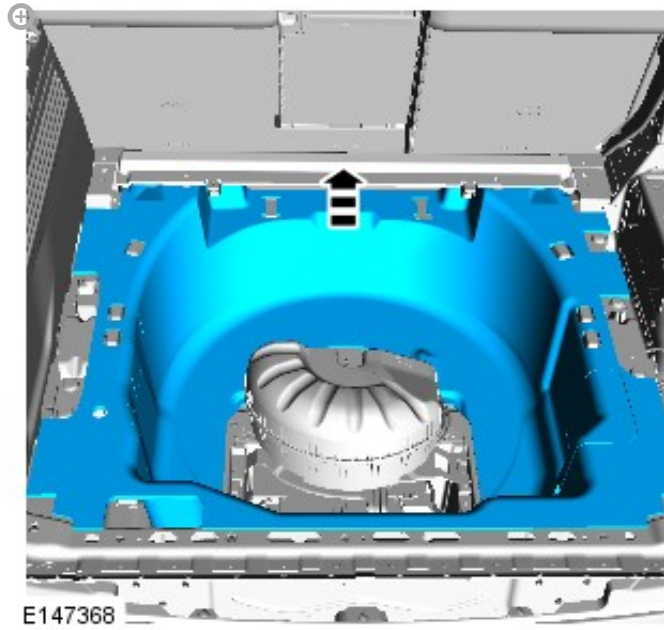


12.

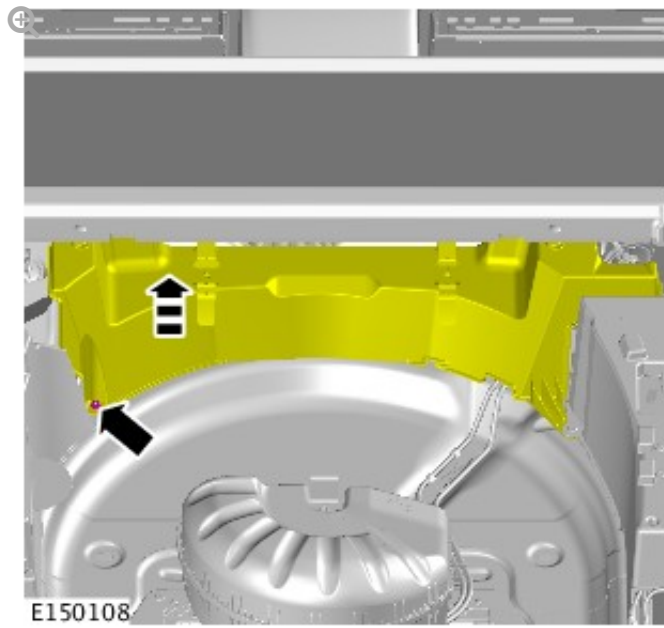


Torque: 9 Nm

13.

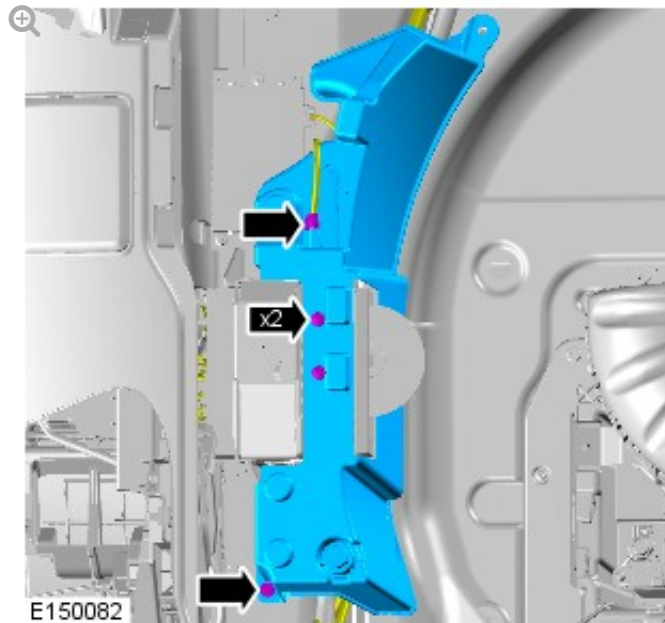

Torque: 9 Nm

14.

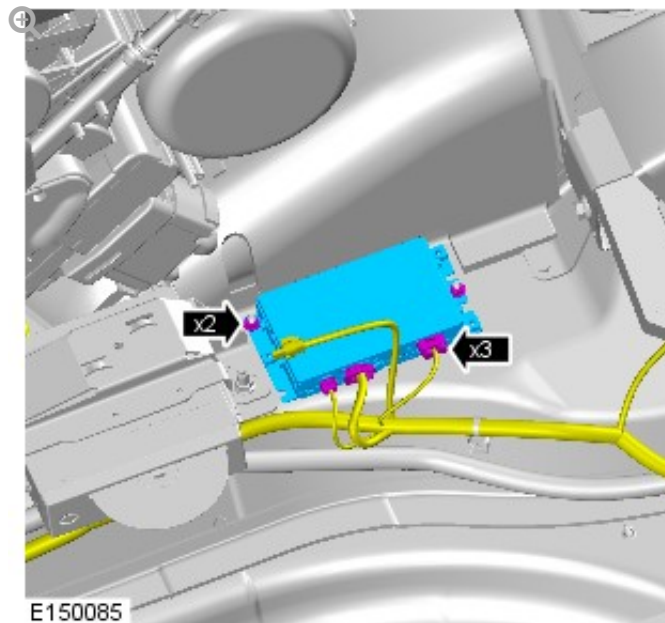

Torque: 9 Nm

INSTALLATION

1. To install, reverse the removal procedure.
2. If a new component has been installed, configure using Land Rover approved diagnostic equipment.

