

2016.0 RANGE ROVER (LG), 415-01

INFORMATION AND ENTERTAINMENT SYSTEM

NAVIGATION CONTROL MODULE (G1561105)


REMOVAL AND INSTALLATION

REMOVAL


NOTE:

Removal steps in this procedure may contain installation details.


1.

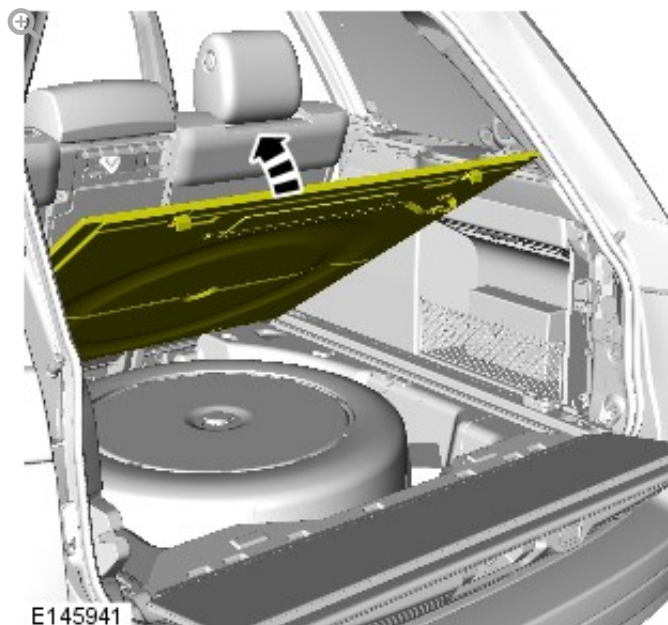

2.

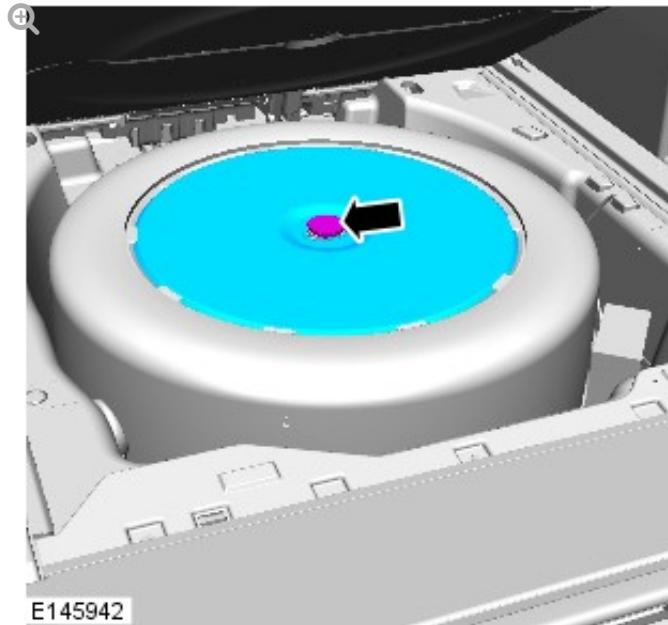


3.

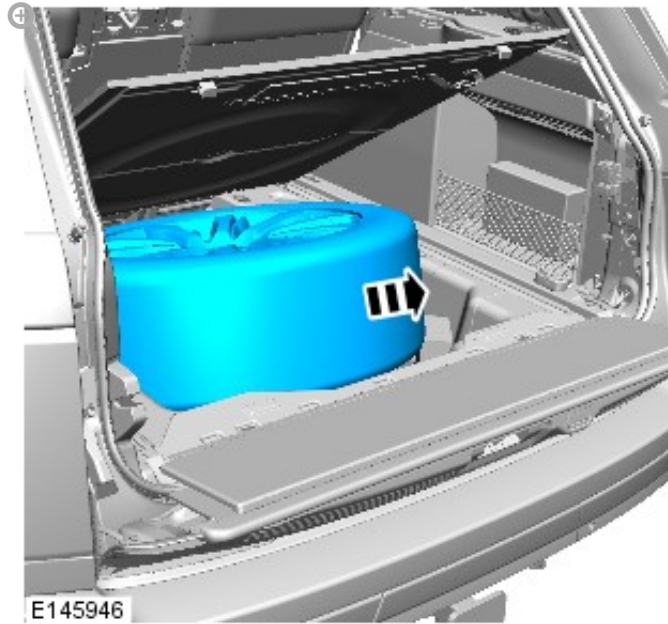


4. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

5.

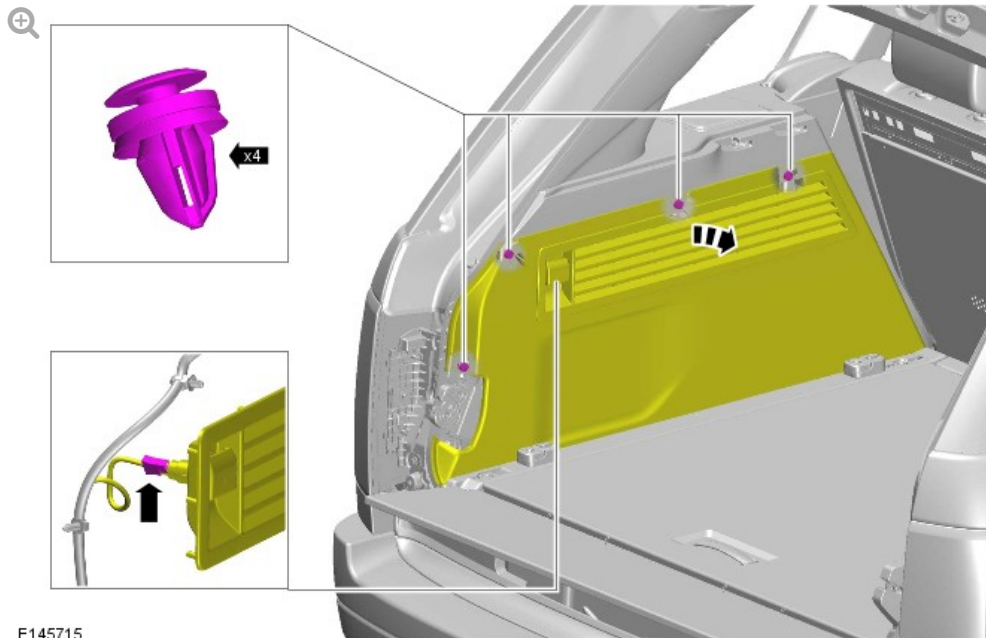


E145715

6.

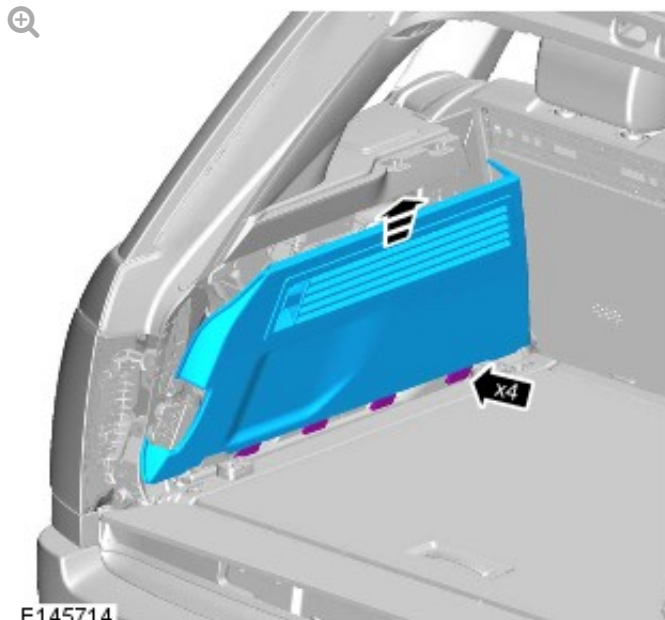


E145714

7.

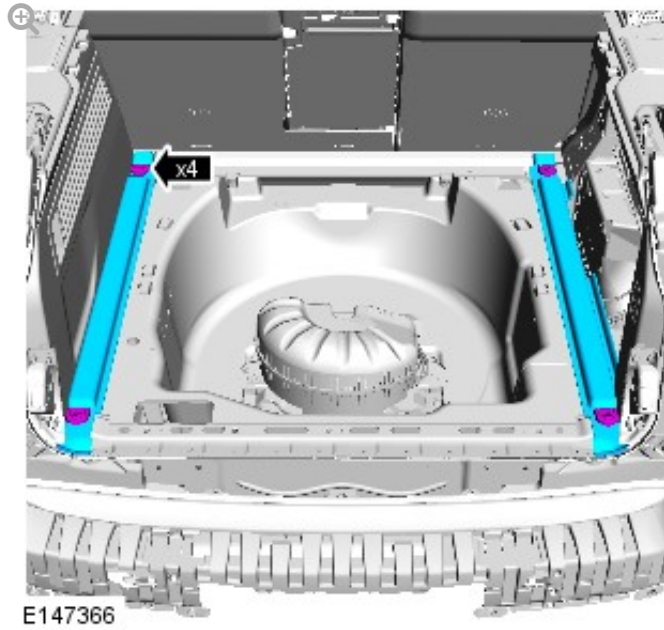


Torque: 20 Nm


8.

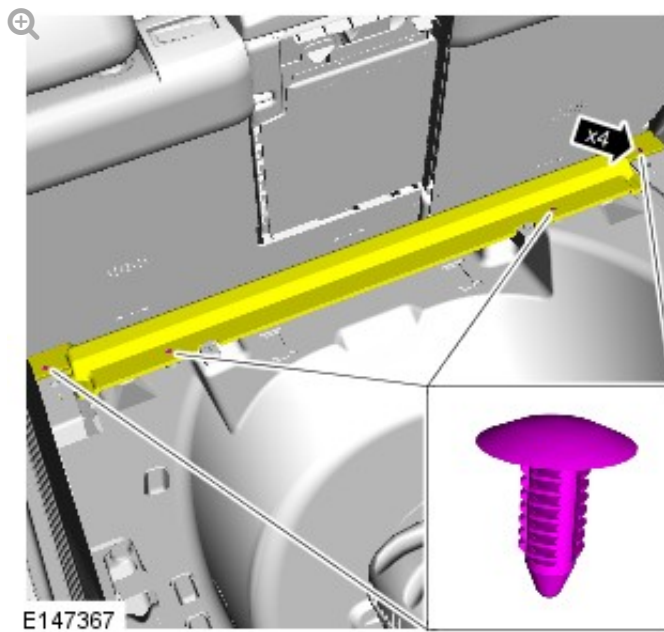


9.

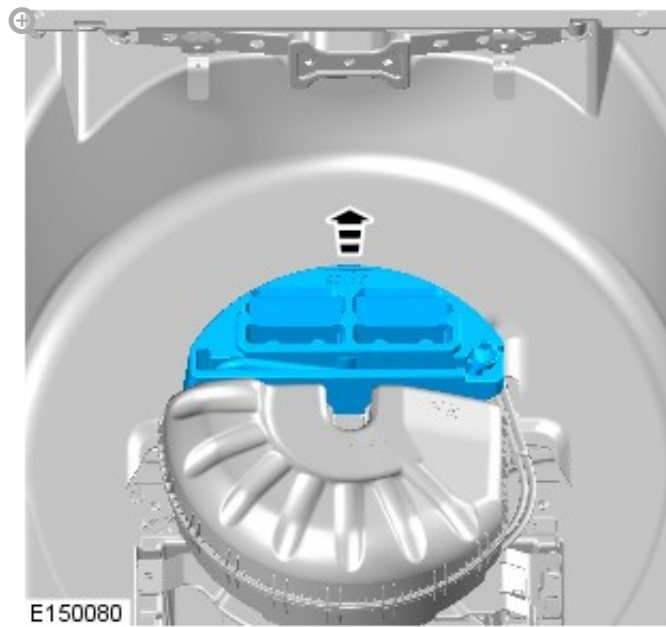


10.

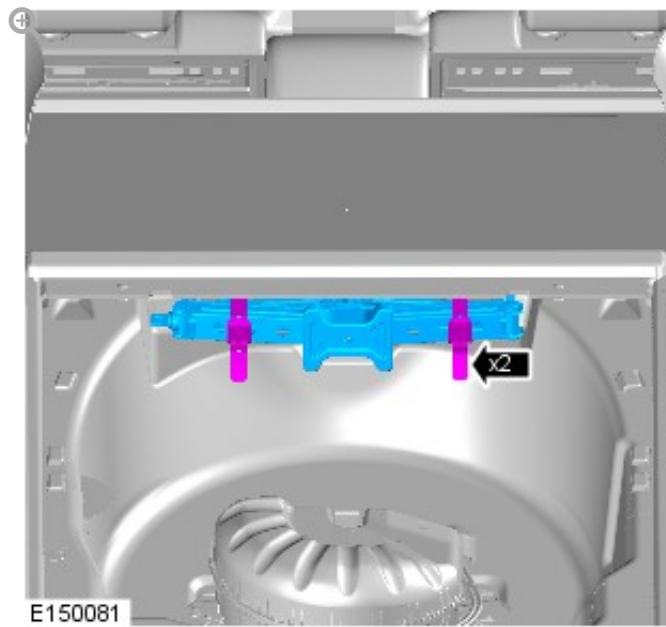

11.

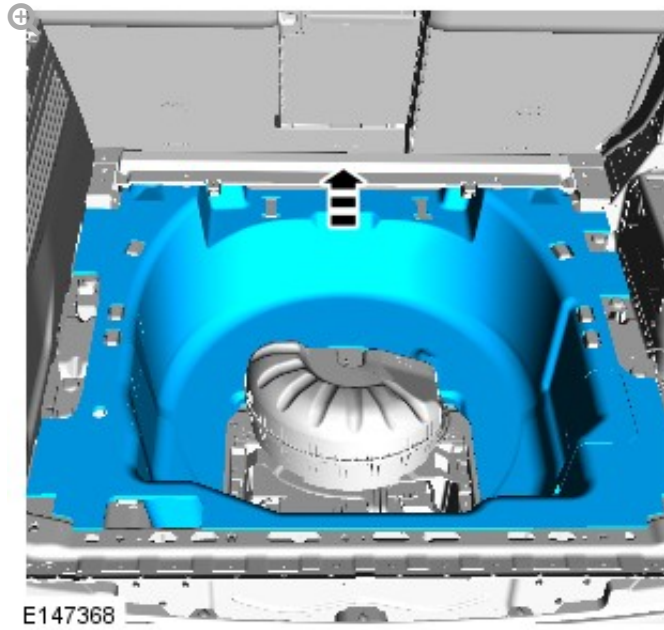


12.

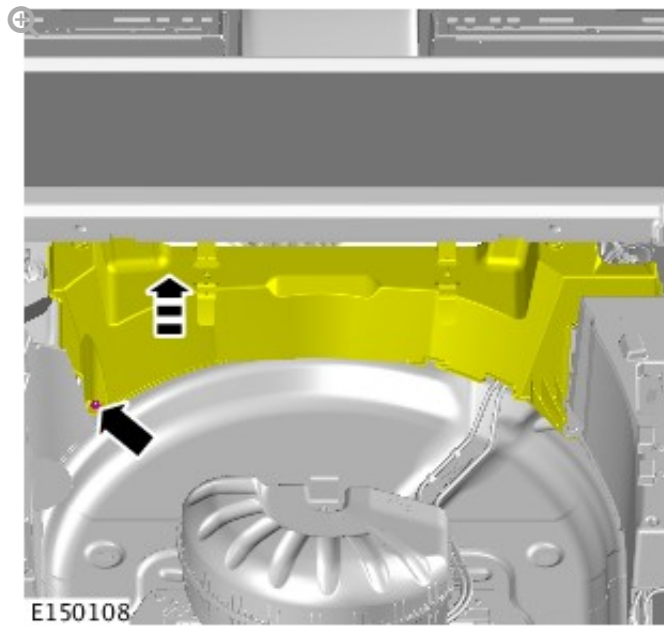



Torque: 9 Nm

13.

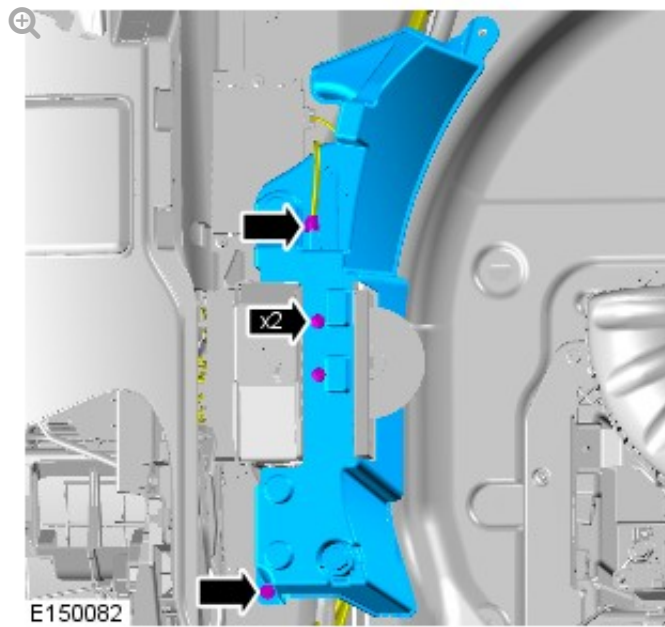

Torque: 9 Nm

14.

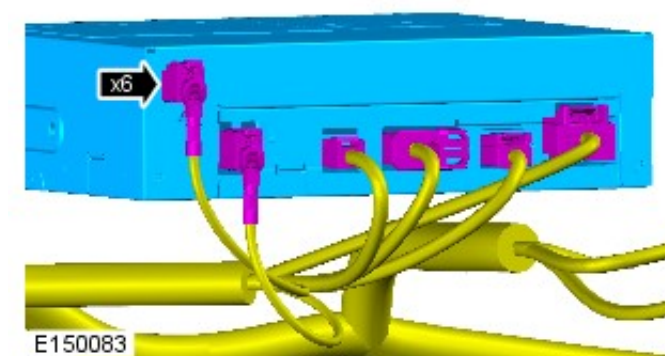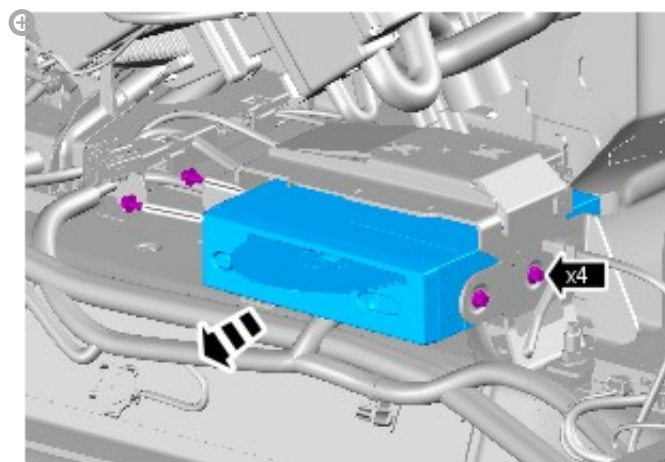

Torque: 9 Nm

INSTALLATION

1. To install, reverse the removal procedure.

2.

NOTE:

If a new component is installed the navigation system will require setting up with the country and region, follow the on screen instructions within the set up menu.

If a new component has been installed, configure using Land Rover approved diagnostic equipment.