

2016.0 RANGE ROVER (LG), 413-01

INSTRUMENT CLUSTER

INSTRUMENT CLUSTER (G1577065)

REMOVAL AND INSTALLATION

REMOVAL


NOTES:

- When a new instrument cluster is to be installed, the Land Rover approved diagnostic system must be connected to the vehicle and the instrument cluster renewal procedure followed. This will allow vehicle coding data and current service interval data to be correctly installed to the new instrument cluster.
- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.

1.


CAUTION:

Apply heatshrink or protective tape to the end of a suitable tool to protect the interior components.

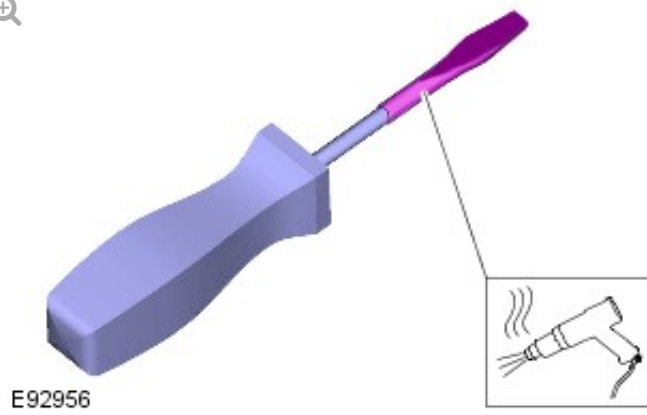

E92956

2.

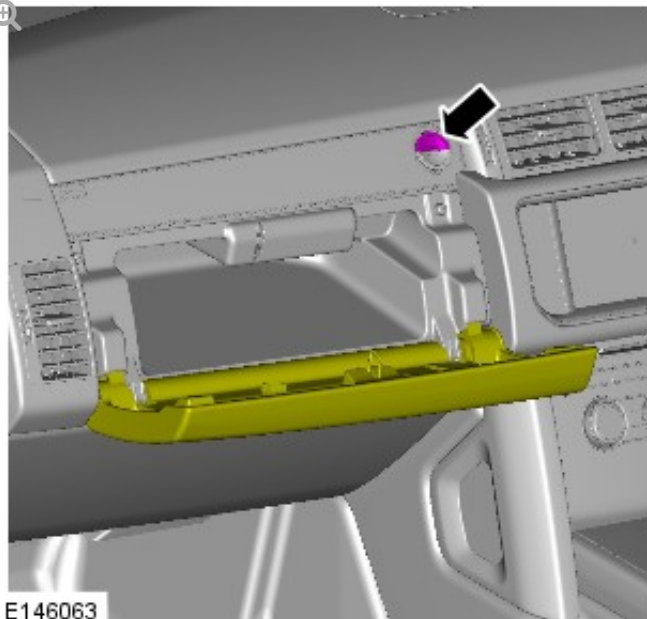


E146063

3. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

4.


NOTE:

Release the trim clips from the middle to the sides, failure to follow this instruction may result in damage to the retaining frame.

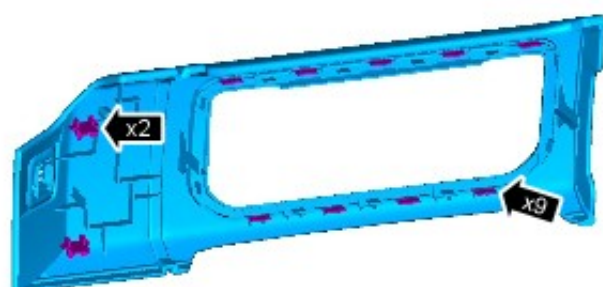

E146064

5.


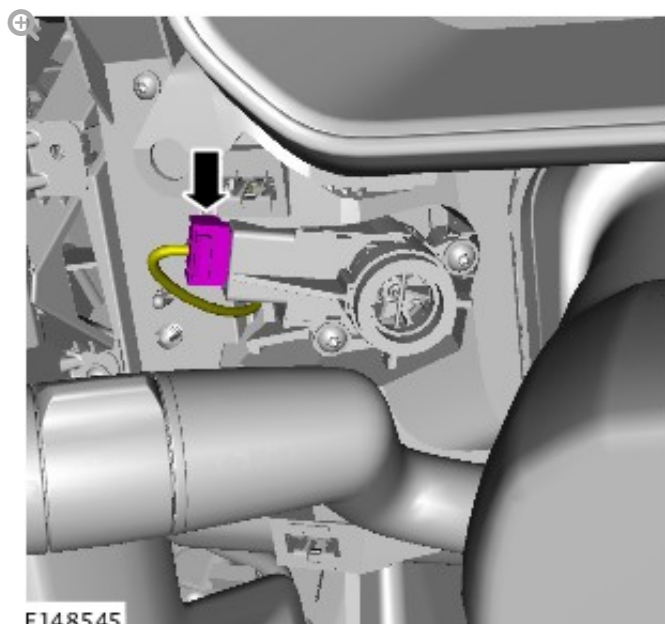


E148545

6.


NOTE:

The steering wheel is shown removed for clarity.

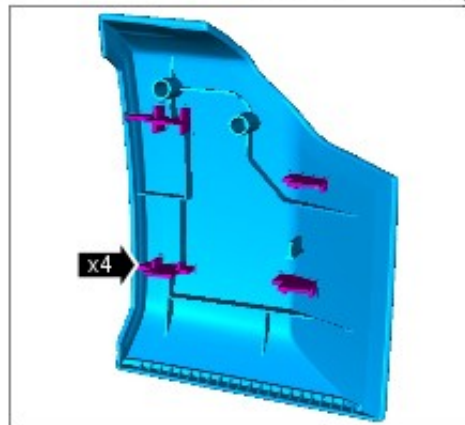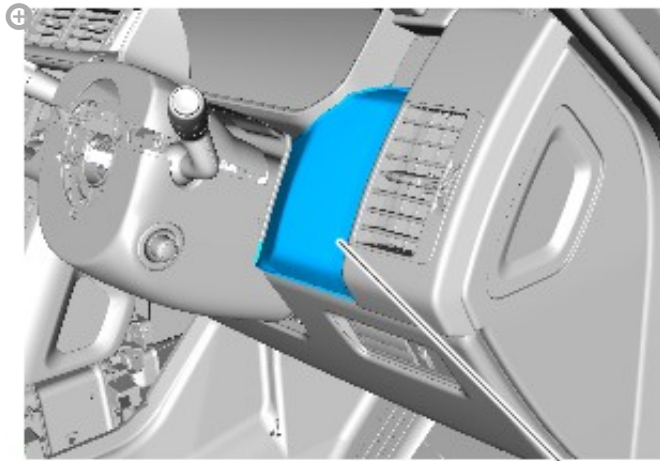


E148285

7.

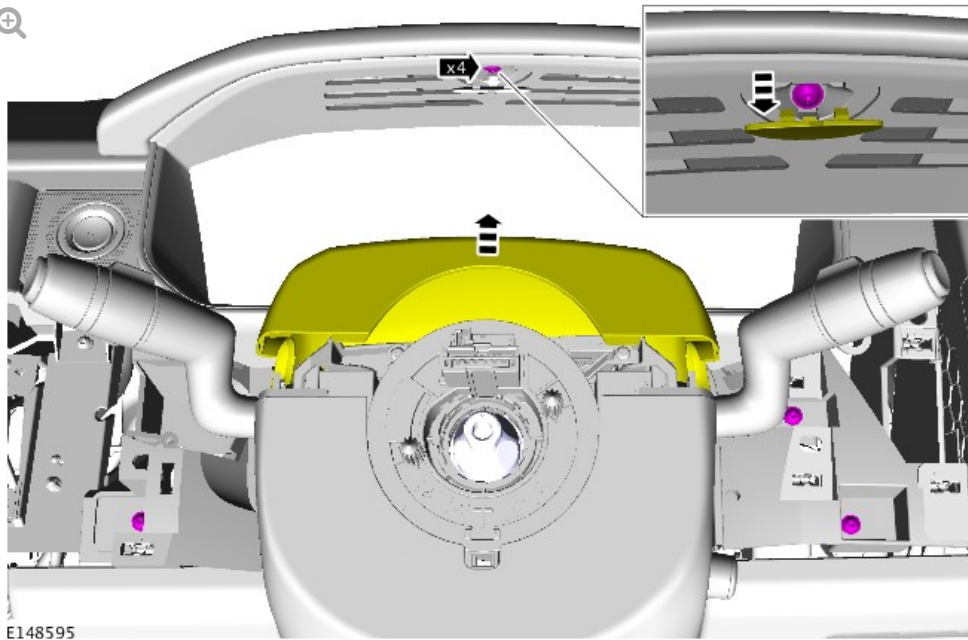


Torque: 1.7 Nm

8.

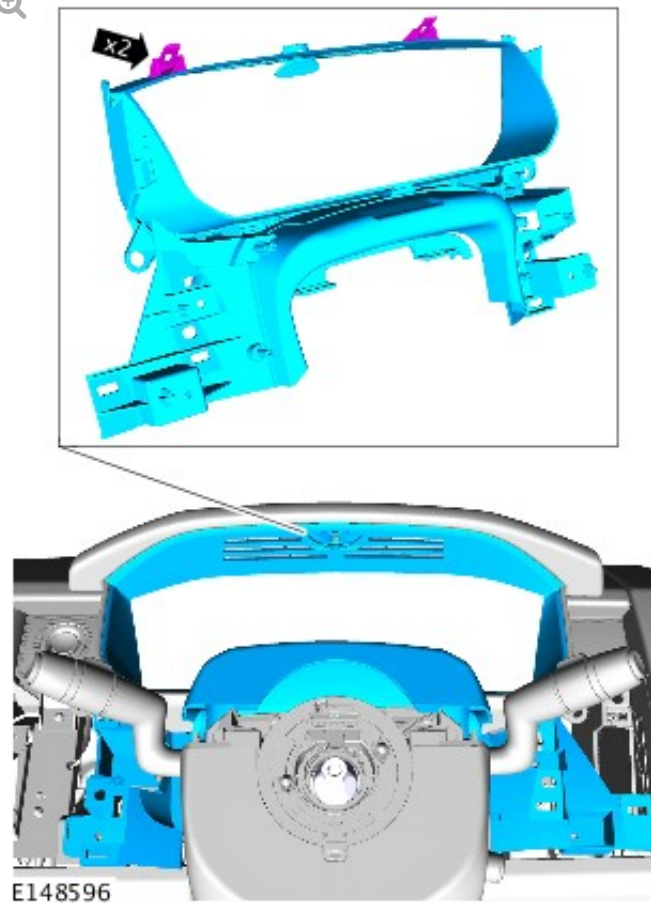


NOTE:

The steering wheel is shown removed for clarity.

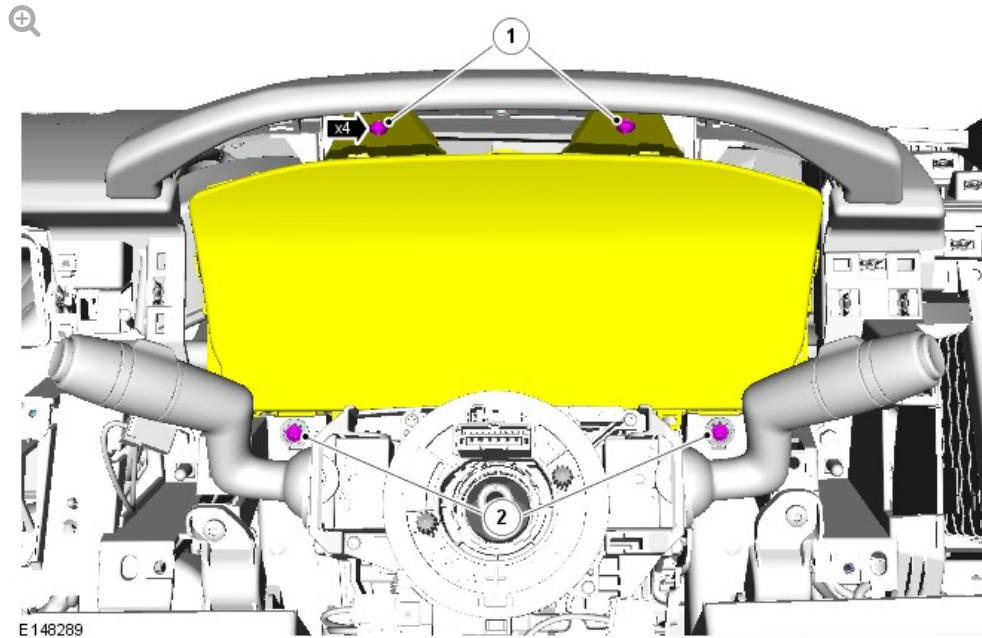

- **Torque:**
 - Upper screws (1) **1.1 Nm**
 - Lower screws (1) **1.7 Nm**

10.

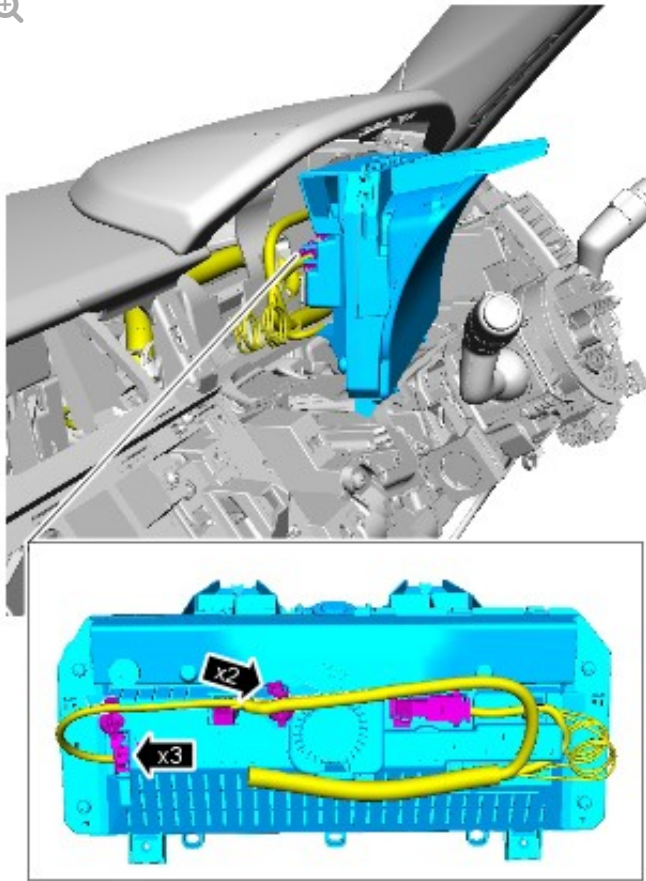


E148290

INSTALLATION

1.

NOTE:

Install new retaining clips.

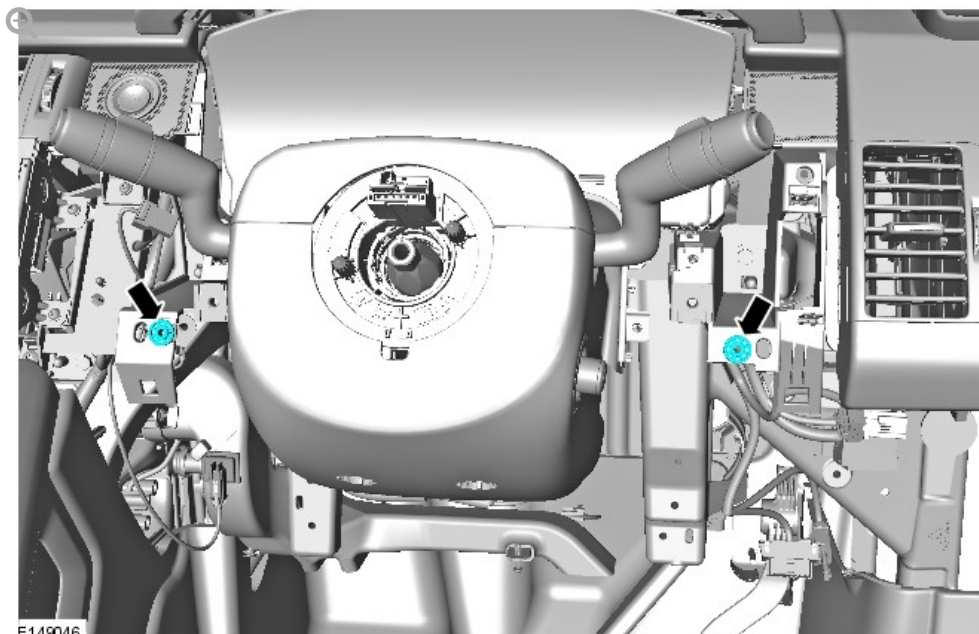

2.

NOTE:

Install the trim retaining clips in the moulding prior to installing the components.




E149095

NOTE:


If a new component is installed.

3.

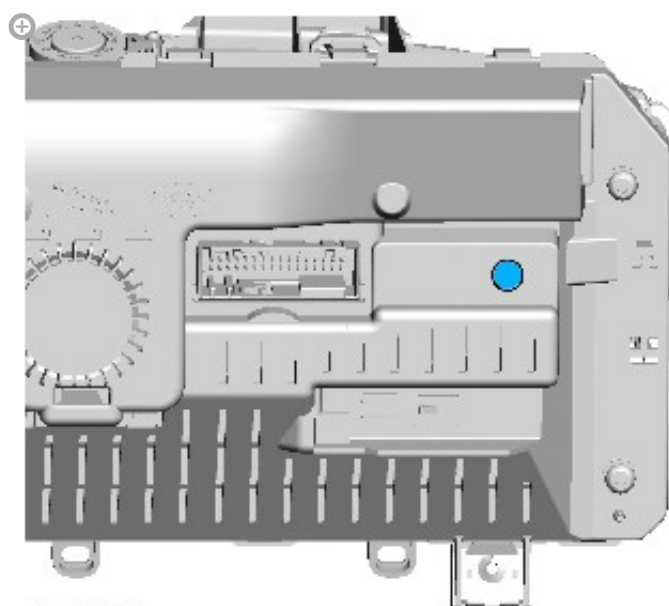


E164166

4.

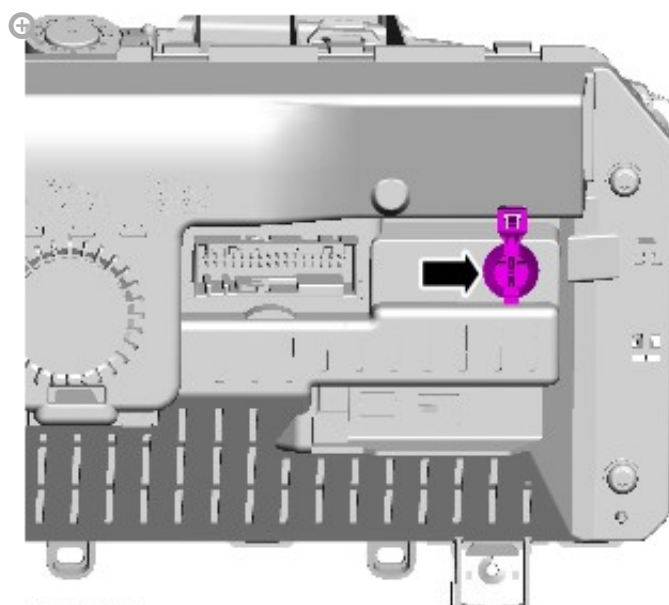

E164167

5.

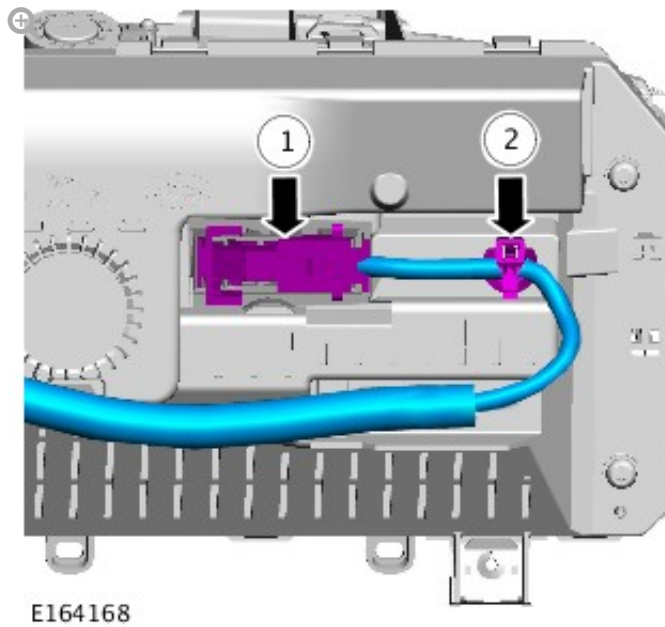

6. To install, reverse the removal procedure.
7. Using the diagnostic tool, configure the instrument cluster.

NOTE:

If a new component is installed.