

2016.0 RANGE ROVER (LG), 417-01

EXTERIOR LIGHTING

ADAPTIVE FRONT LIGHTING MODULE [G1549873]

REMOVAL AND INSTALLATION


REMOVAL

NOTES:

- Removal steps in this procedure may contain installation details.
- LHD illustration shown, RHD is similar.

1. Remove the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).
2. Refer to: [Central Junction Box](#) (418-00 Module Communications Network, Removal and Installation).

3.

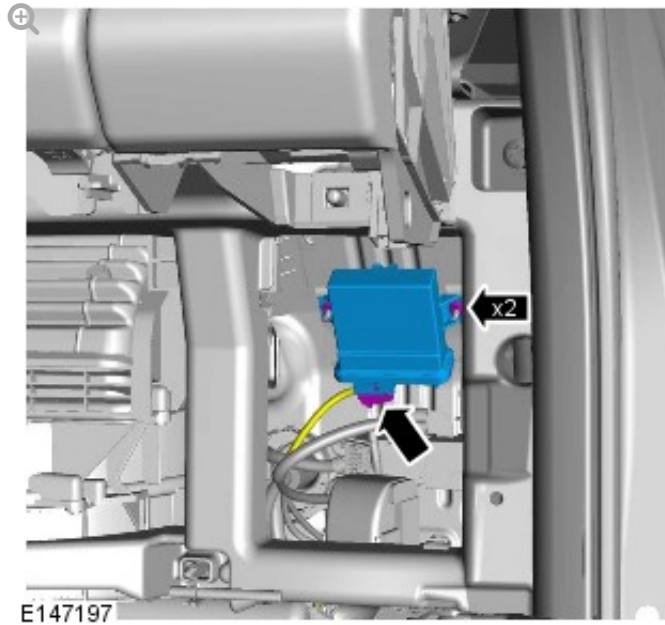

Torque: 5 Nm

INSTALLATION

1. To install reverse the removal procedure.