

2016.0 RANGE ROVER (LG), 417-01

EXTERIOR LIGHTING

HEADLAMP ADJUSTMENT

[G1549872]

GENERAL PROCEDURES

CHECK

NOTES:

- LH illustration shown, RH is similar.
- The headlamp setting is 1.2 % below horizontal and parallel.


1. Refer to: [Air Suspension Manual Tight Tolerance Setting Mode](#) (204-05 Vehicle Dynamic Suspension, General Procedures).
2. Align the headlamp beam setting equipment to one headlamp.
3. Switch the headlamps on and to dipped beam.

ADJUSTMENT

NOTES:

- LH illustration shown, RH is similar.
- The headlamp setting is 1.2 % below horizontal and parallel.

4.

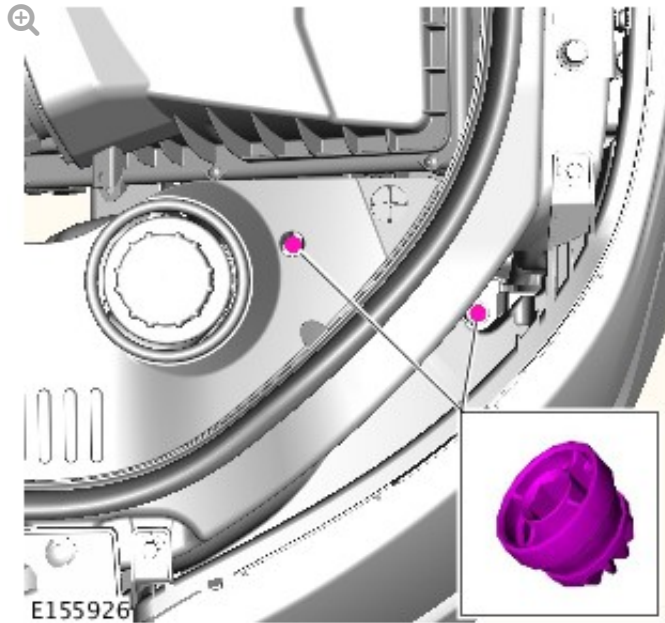

Adjust the headlamps.

5. To adjust the second headlamp, repeat the above procedure.