

2016.0 RANGE ROVER (LG), 417-01

EXTERIOR LIGHTING

HEADLAMP ASSEMBLY (G1549875)

REMOVAL AND INSTALLATION

REMOVAL

WARNING:

Vehicles fitted with Xenon headlamps, the following precautions must be observed. Failure to comply may result in exposure to ultra violet rays, severe electric shock, burns or the risk of explosion. Ensure the headlamps are switched off at all times. Eye and hand protection must be worn. Never switch on the lamps or test the bulbs with the lamp holder released from the headlamp.

NOTES:

- Removal steps in this procedure may contain installation details.
- LH illustration shown, RH is similar.
- The ignition must be switched off.

1. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).


2.

WARNING:

Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

3.

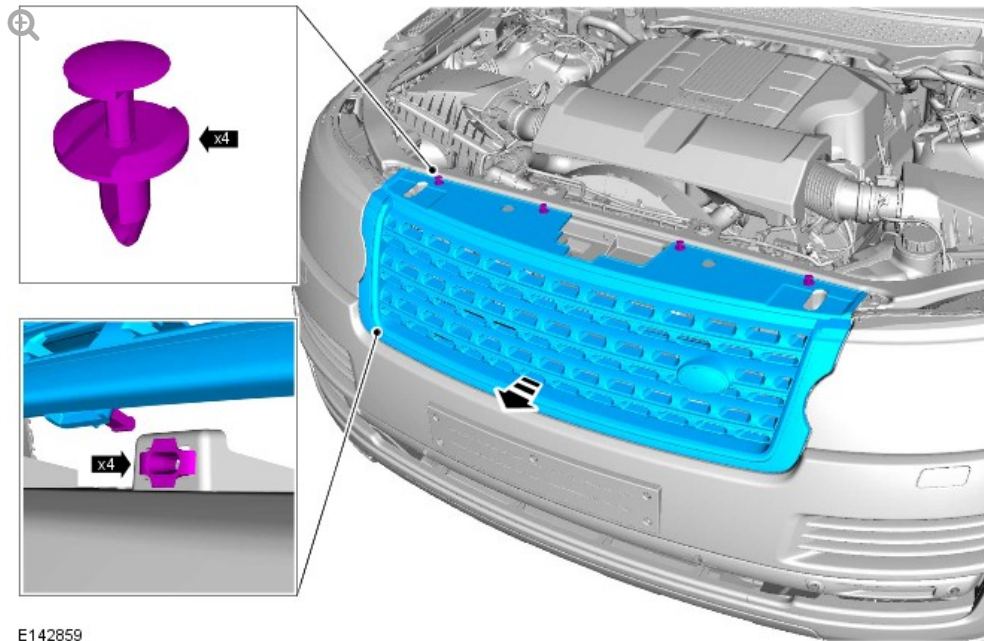

E142859


4.

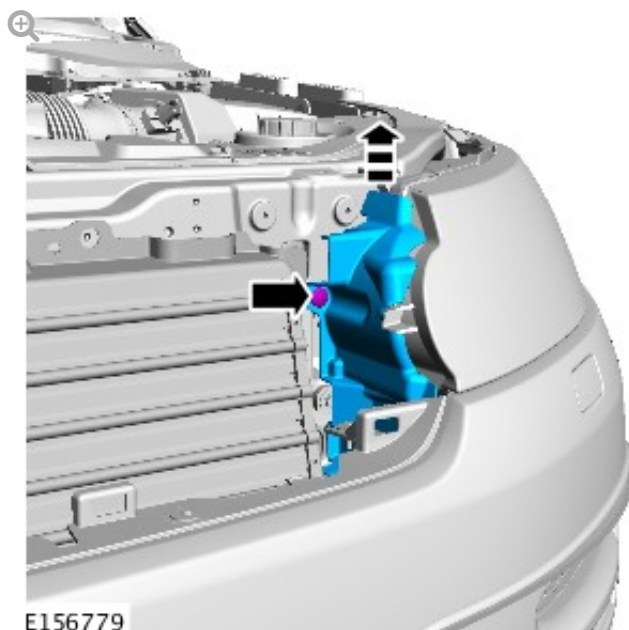

E156779


Torque: 5 Nm

5.

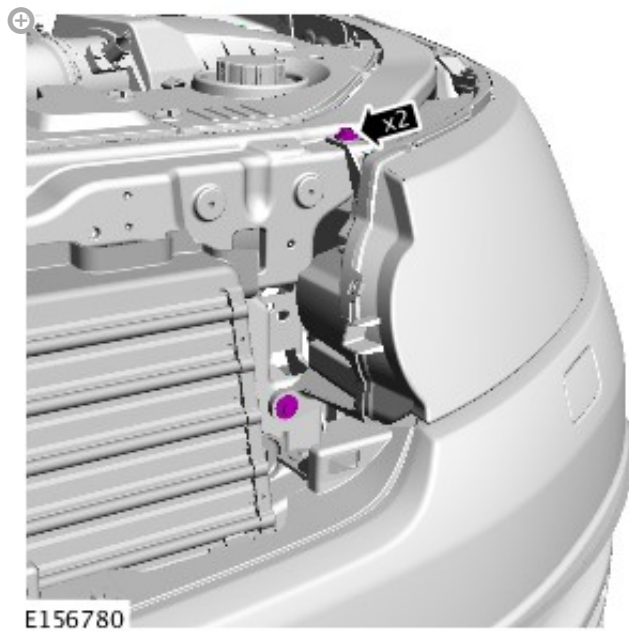


Torque: 5 Nm


6.

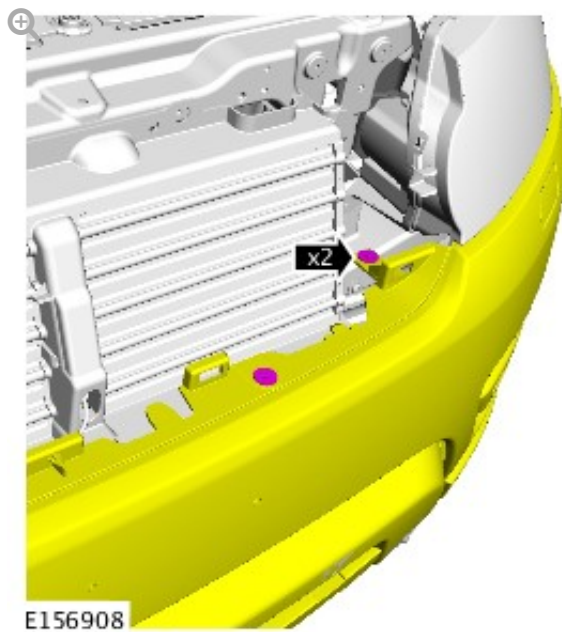

7.

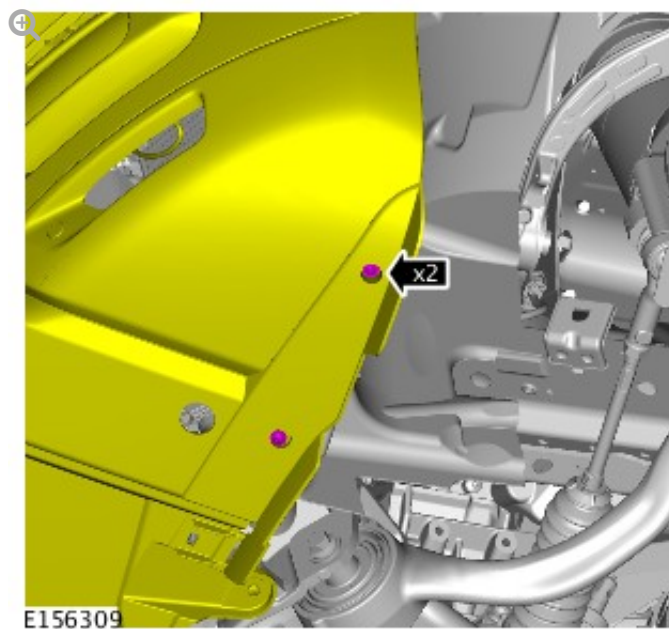


8.

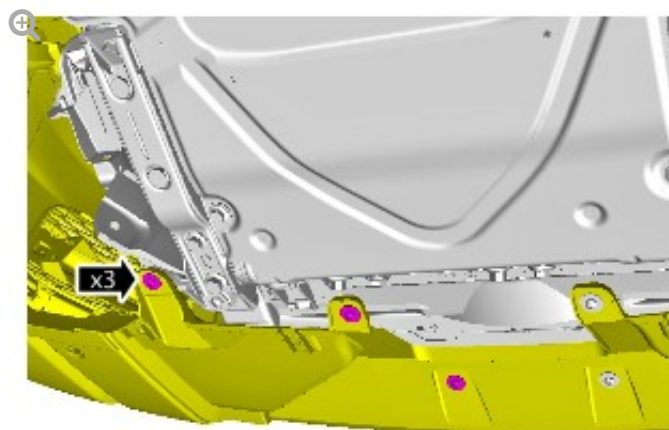

E156907

9.

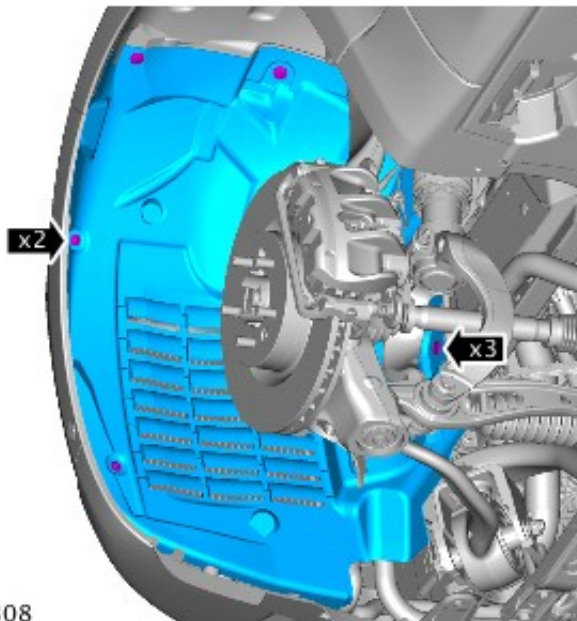


E156308


10.

NOTE:


LH shown.

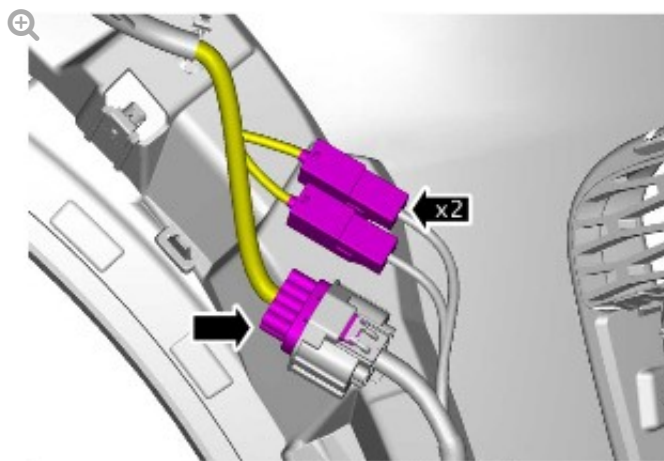

E156294

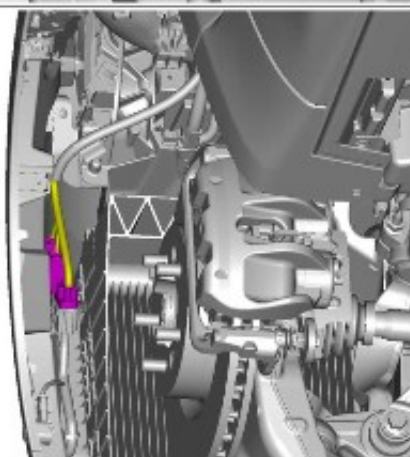

11.


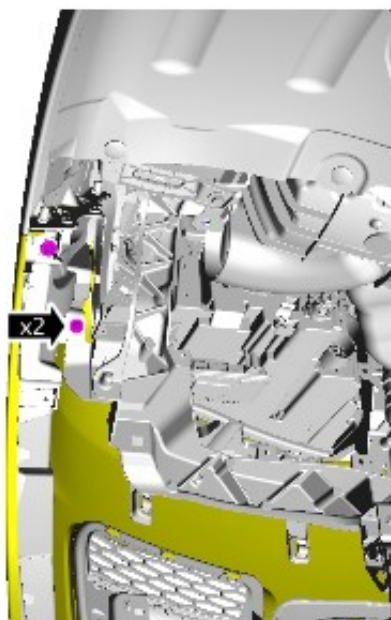


E156782

12.

CAUTIONS:

- Take extra care not to damage the component.
- Take extra care not to damage the surrounding components.

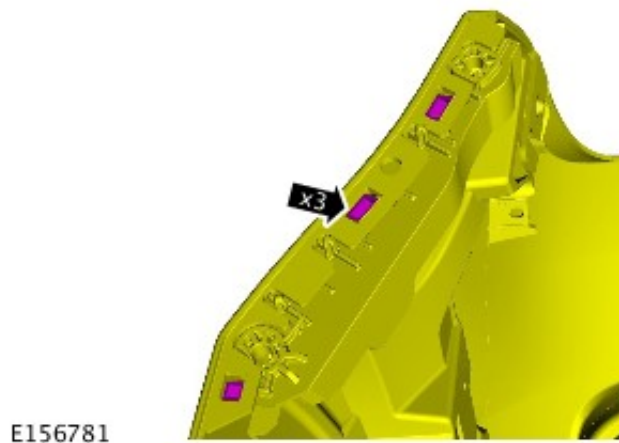
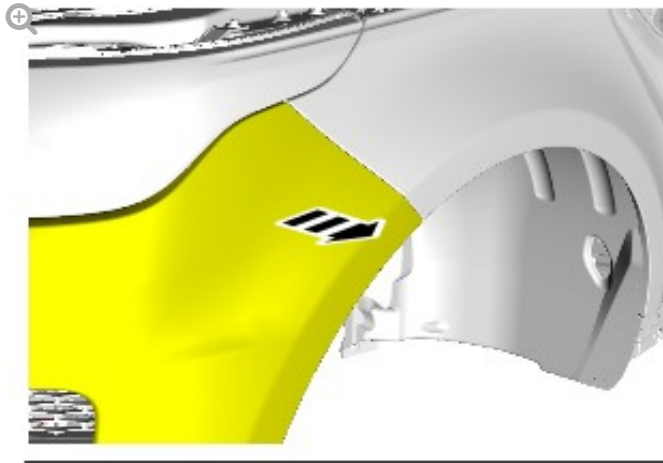


E156781


13.

CAUTION:

Take extra care not to damage the surrounding components.

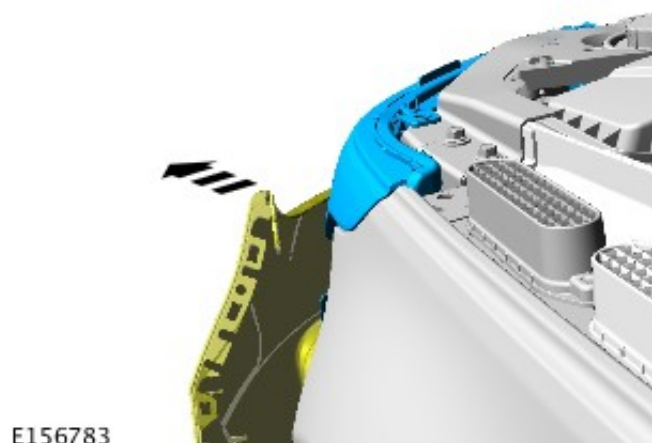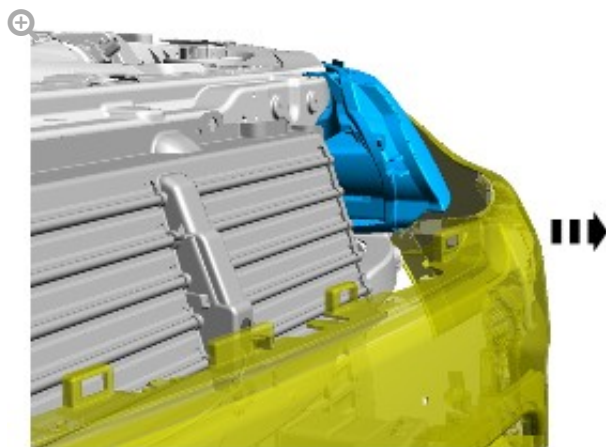


14.

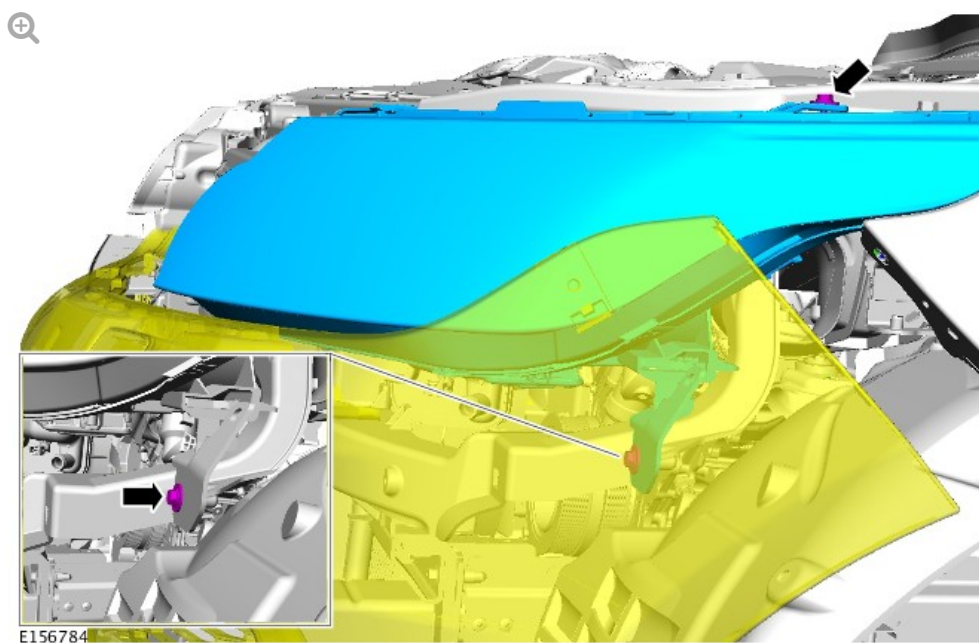

Torque: 5 Nm

15.

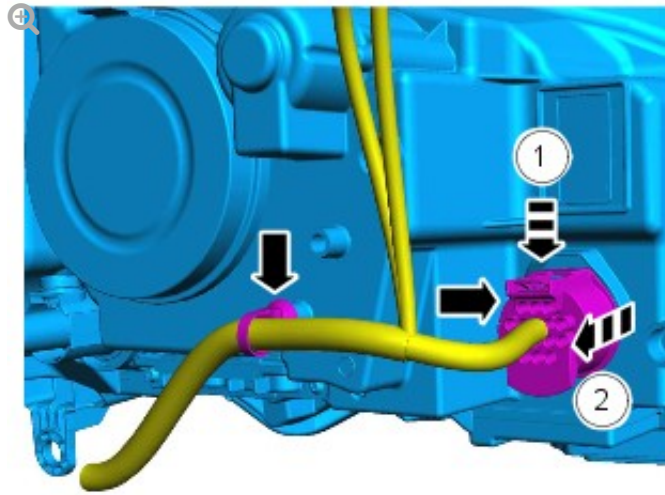

E146807

INSTALLATION

1. To install reverse the removal procedure.
2. Refer to: [Headlamp Adjustment](#) (417-01 Exterior Lighting, General Procedures).