

2016.0 RANGE ROVER (LG), 417-01

EXTERIOR LIGHTING

STOPLAMP SWITCH (G1549882)


REMOVAL AND INSTALLATION

REMOVAL


NOTES:

- Removal steps in this procedure may contain installation details.
 - LHD illustration shown, RHD is similar.
 - Some variation in the illustrations may occur, but the essential information is always correct.
 - Some components shown removed for clarity.
-

1.

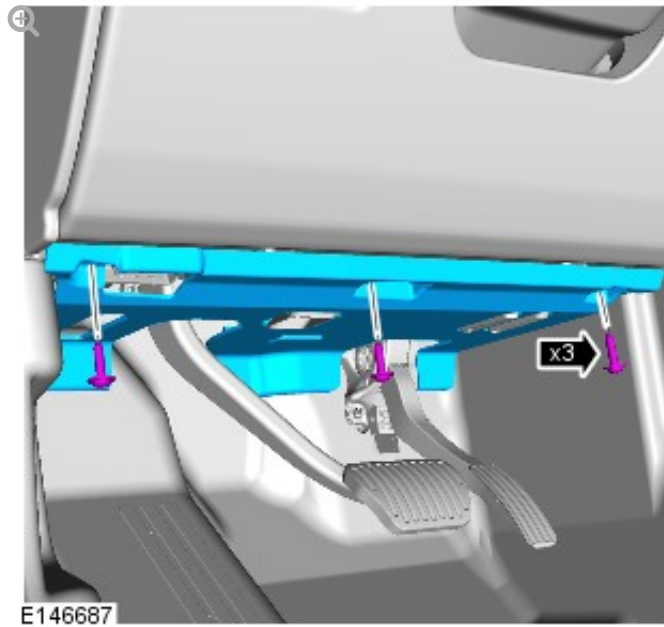


2.

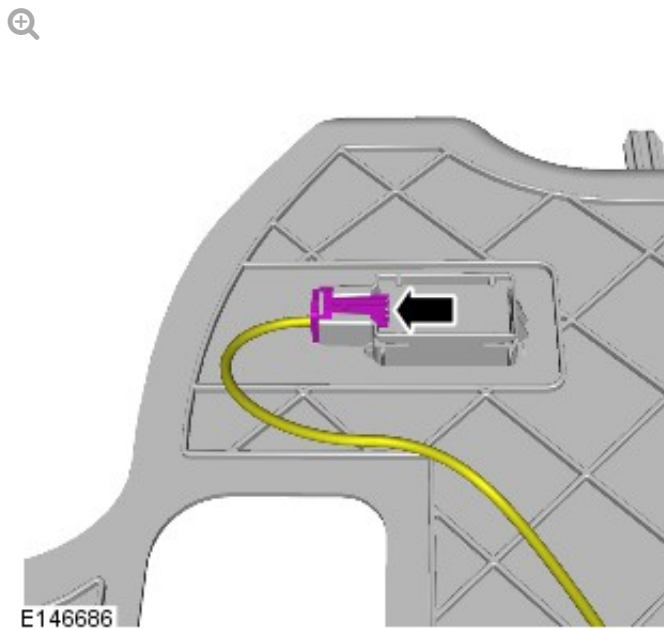

3.

CAUTION:

The brake pedal **MUST NOT** be depressed during this operation. Failure to follow this instruction will result in damage to the stoplamp switch.

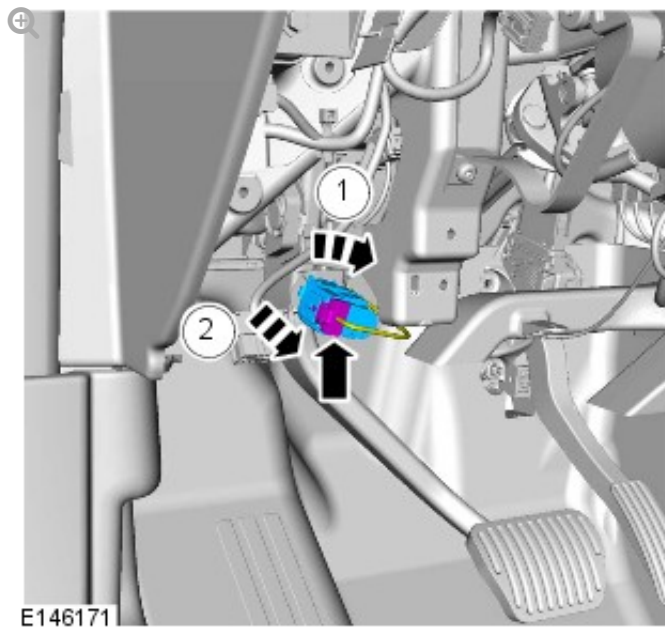


INSTALLATION


1.

CAUTIONS:

- The brake pedal **MUST NOT** be depressed during this operation. Failure to follow this instruction will result in damage to the stoplamp switch.
- Make sure that excessive force is not used when installing the stoplamp switch. Failure to follow this instruction may result in damage to the stoplamp switch.

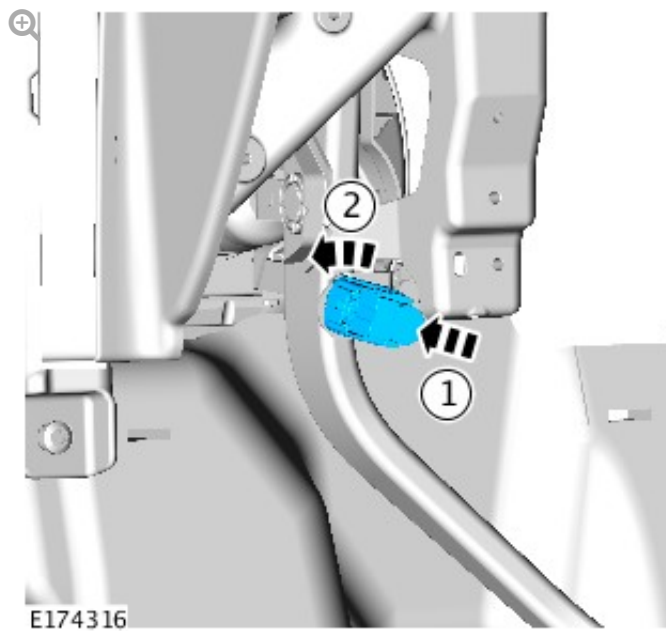

2.

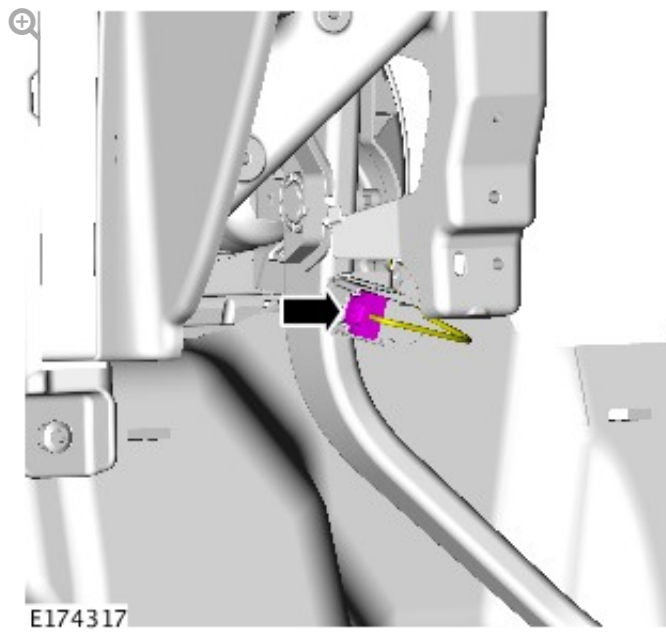


3.

CAUTION:

Make sure that the area around the component is clean and free of foreign material.

NOTE:


If equipped.

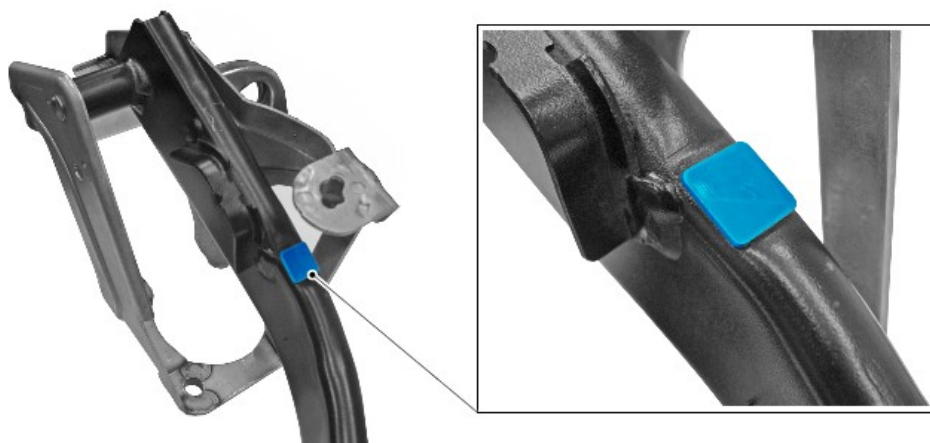

E174250

Inspect the shim and make sure that it is installed in the correct position.

4.

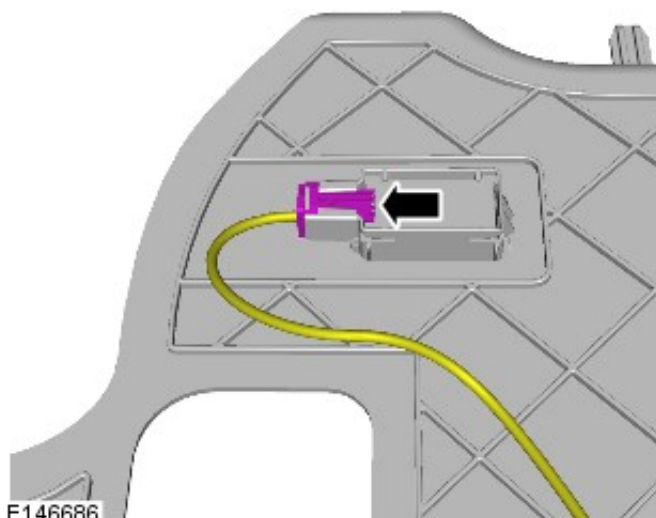

E146686

5.

