

2016.0 RANGE ROVER (LG), 417-02

INTERIOR LIGHTING

SECOND ROW INTERIOR LAMP (G1605005)

REMOVAL AND INSTALLATION

REMOVAL

NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.




Low level light unit

1.

NOTES:

- LH illustration shown, RH is similar.
- This step must be repeated on both sides.

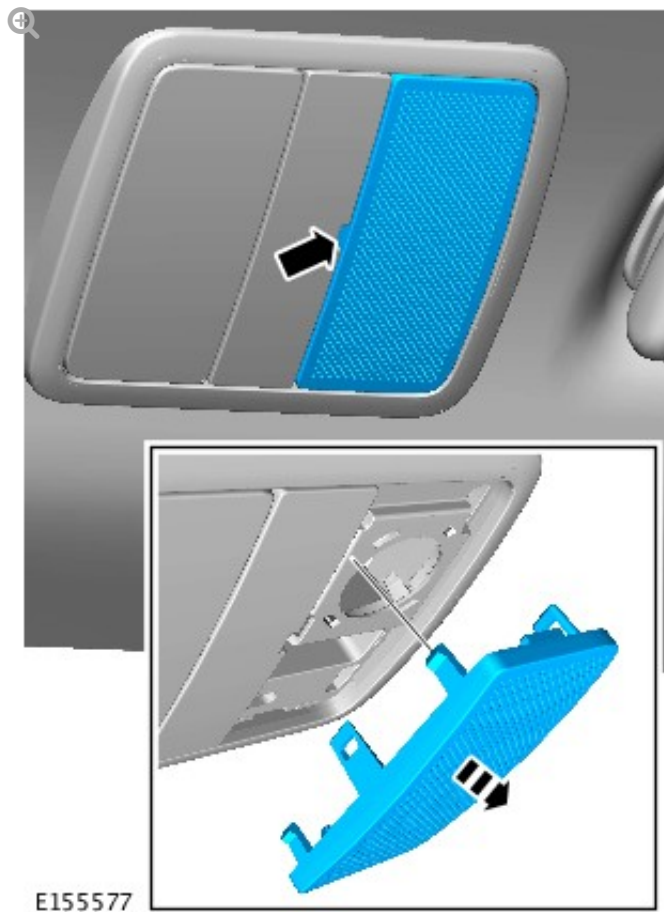


E155577

2.

NOTES:

- LH illustration shown, RH is similar.
- This step must be repeated on both sides.


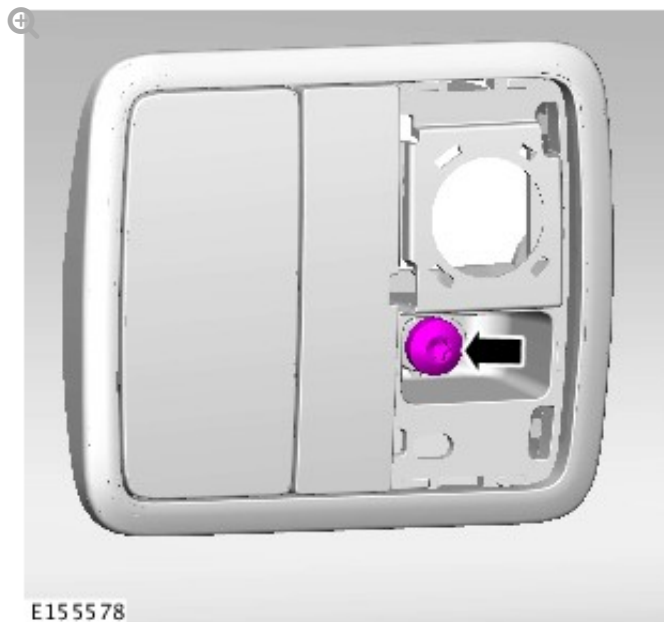


Torque: 6 Nm

3.

NOTES:

- This step must be repeated on both sides.
- LH illustration shown, RH is similar.

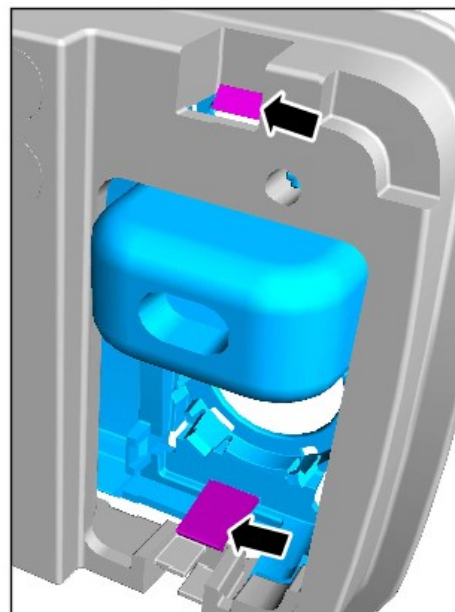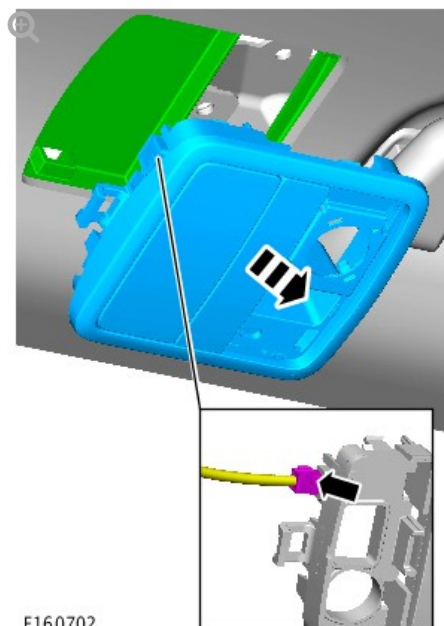




Medium level light unit

4.

NOTES:


- This step must be repeated on both sides.
- RH illustration shown, LH is similar.

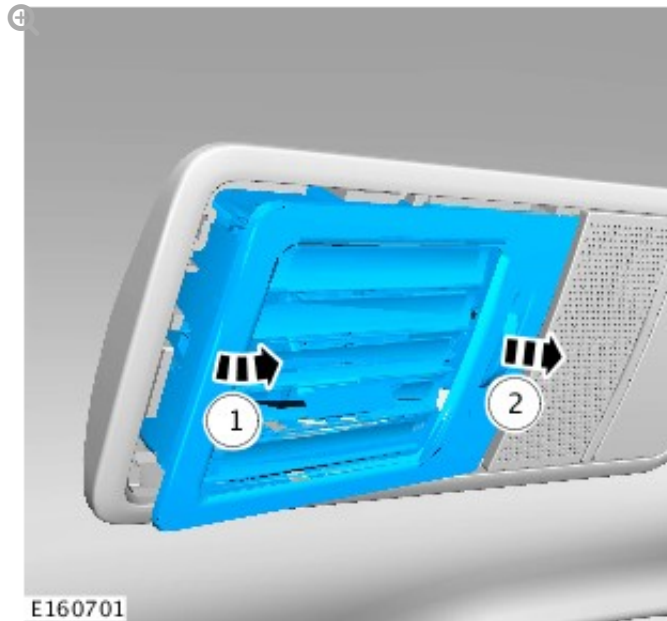

5.

NOTES:

- This step must be repeated on both sides.
- RH illustration shown, LH is similar.

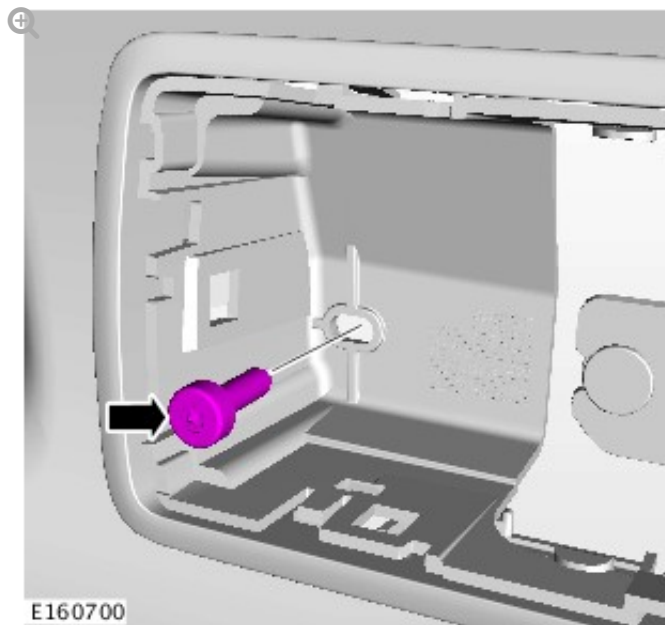


Torque: 6 Nm

6.

NOTES:

- This step must be repeated on both sides.
- RH illustration shown, LH is similar.

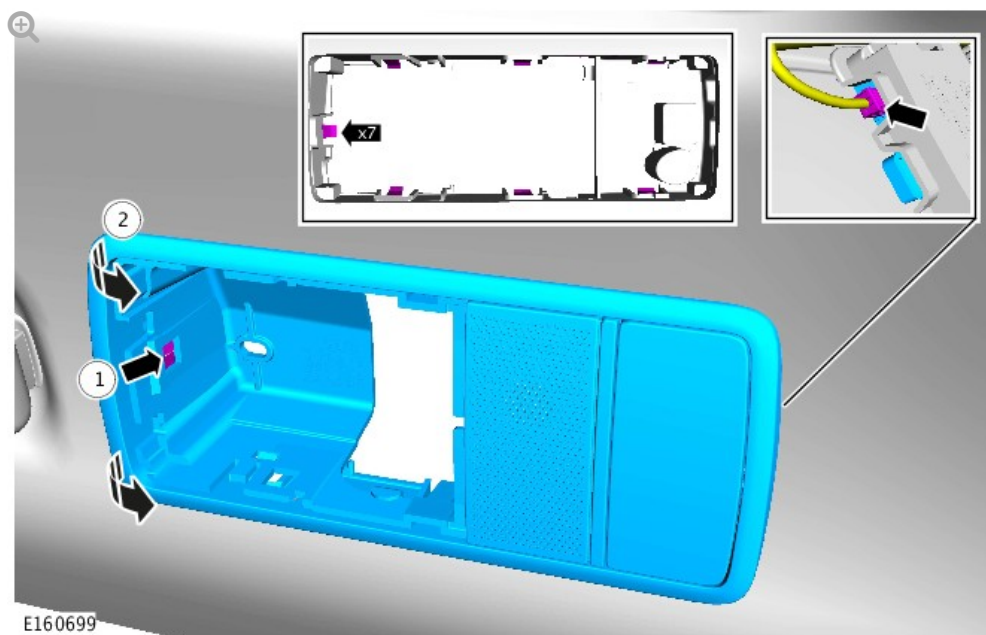




High level light unit

7.

NOTES:


- This step must be repeated on both sides.
- RH illustration shown, LH is similar.

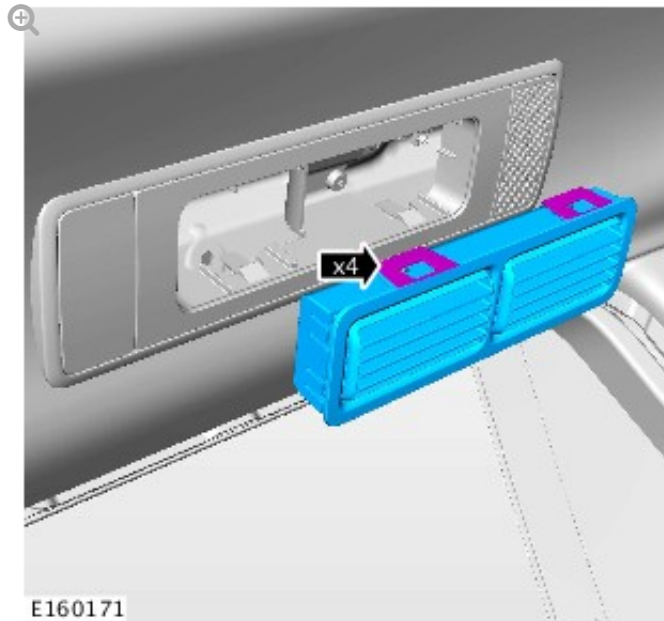

8.

NOTES:

- This step must be repeated on both sides.
- RH illustration shown, LH is similar.

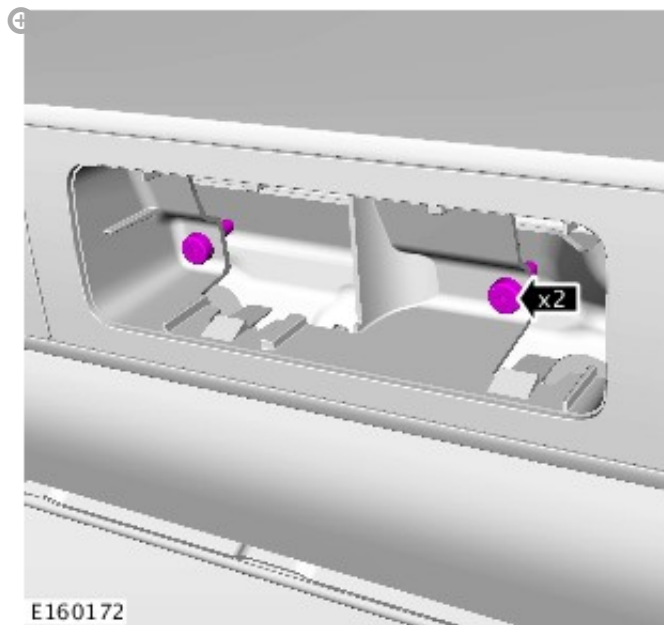


Torque: 6 Nm

9.

NOTE:

RH illustration shown, LH is similar.

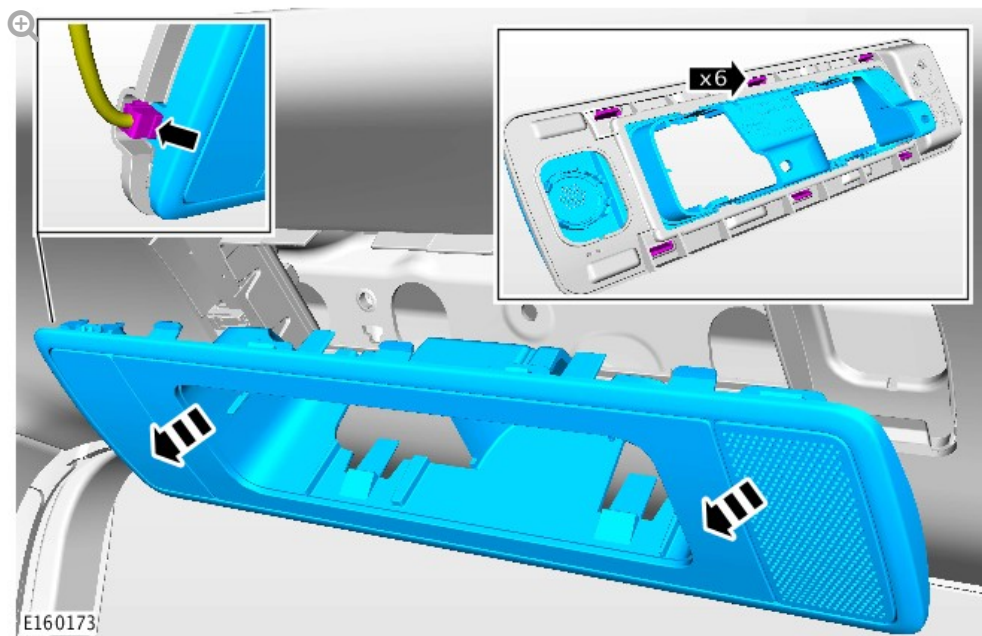

1. To install, reverse the removal procedure.