

2016.0 RANGE ROVER (LG), 418-00

MODULE COMMUNICATIONS NETWORK

DUAL BATTERY JUNCTION BOX (G1561109)



REMOVAL AND INSTALLATION

REMOVAL

NOTE:


Removal steps in this procedure may contain installation details.

1.

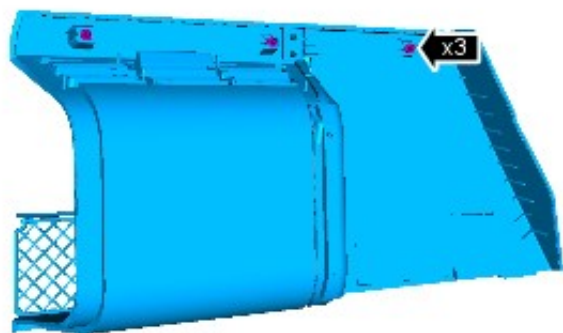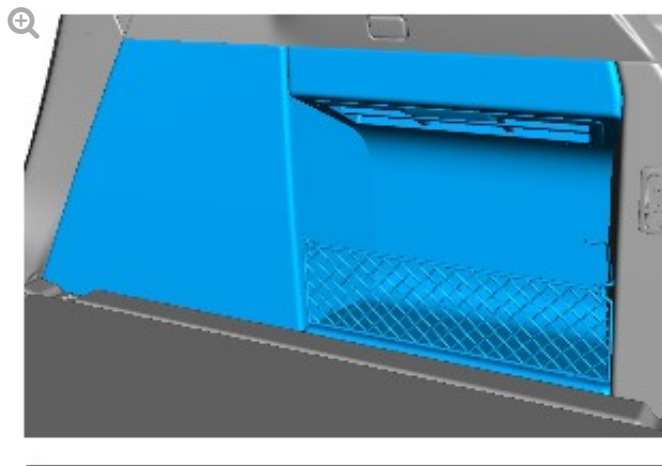

E145529

2.

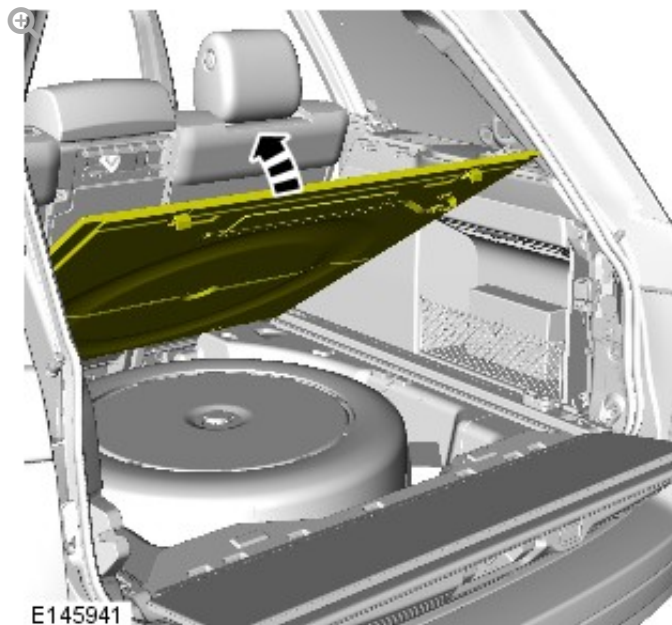


E145941

3.




4. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).


5.

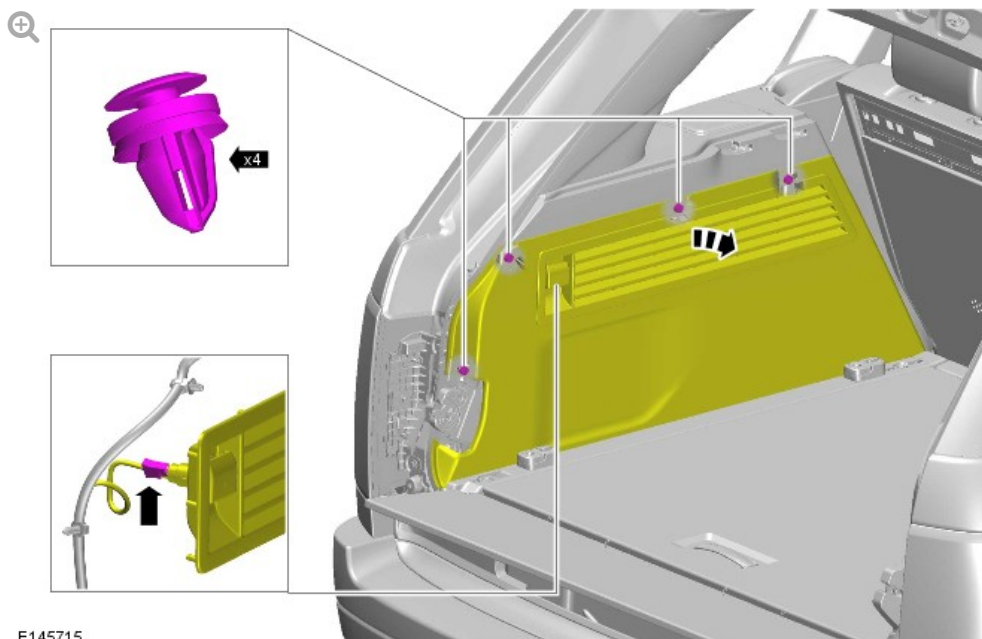


6.

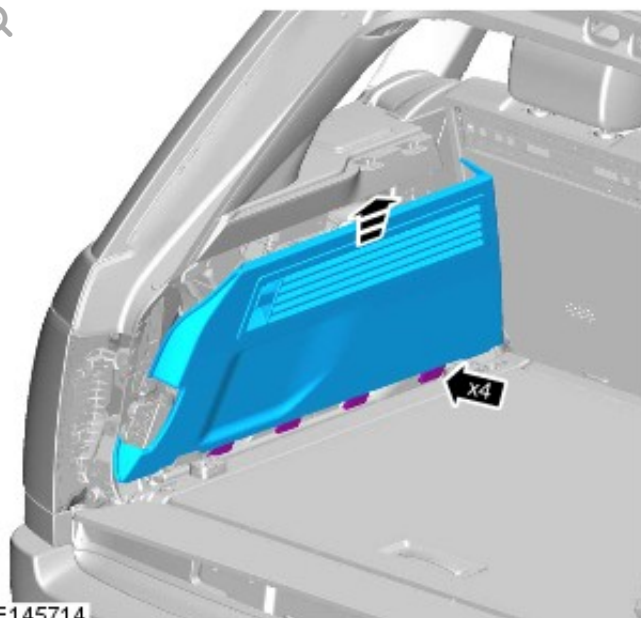


7.

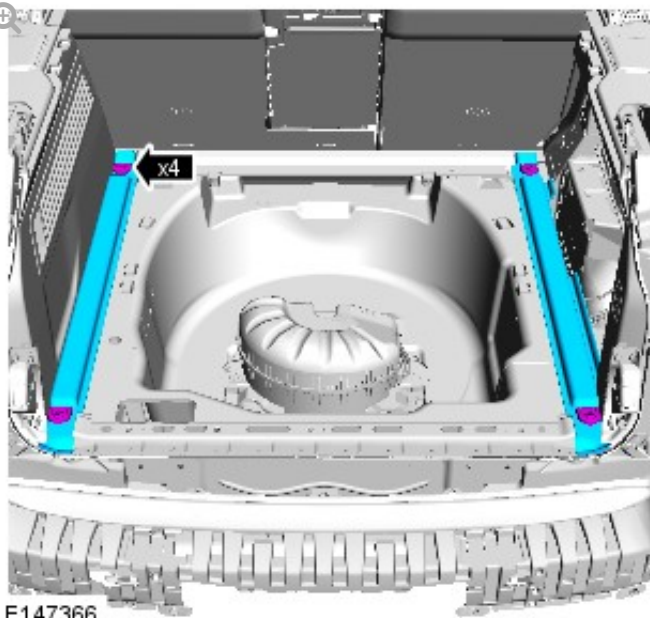


8.

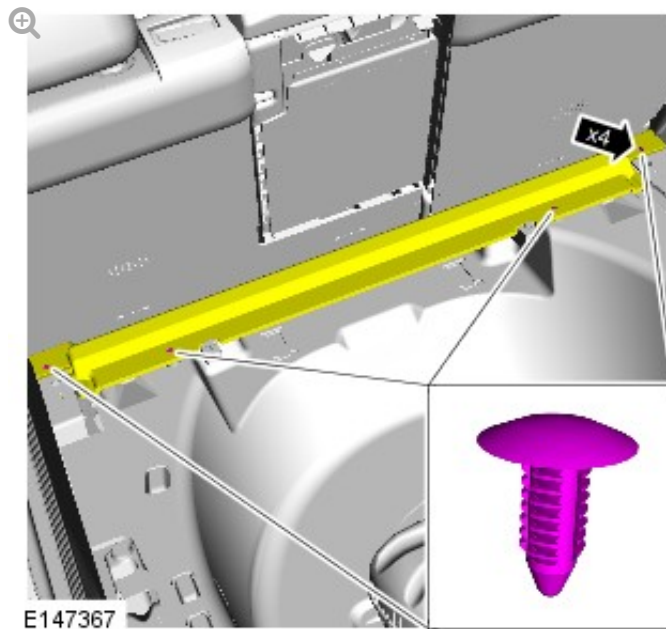


9.

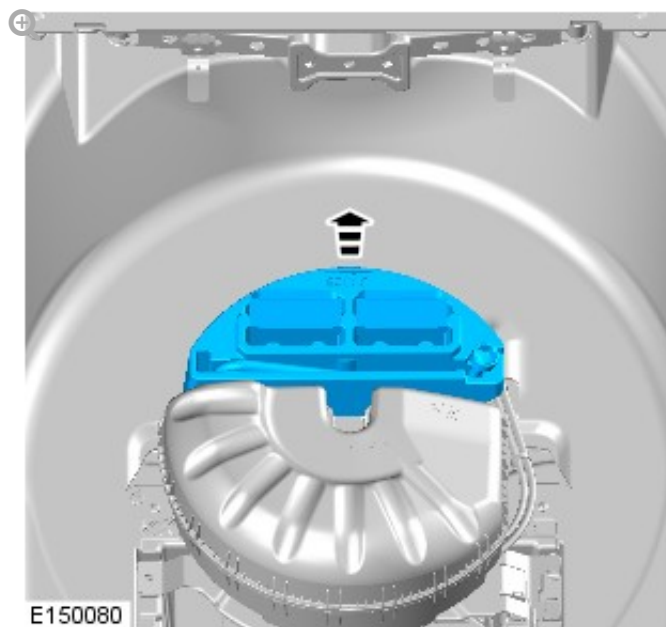

10.

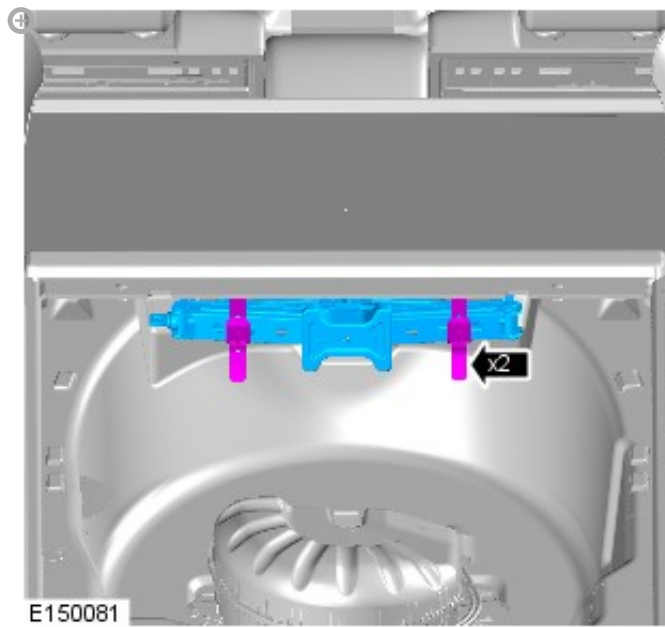

11.

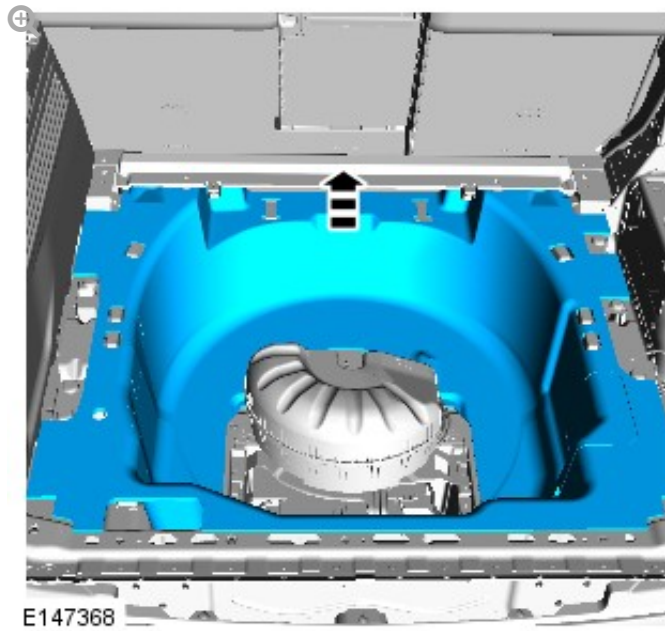


12.




Torque: 9 Nm

13.

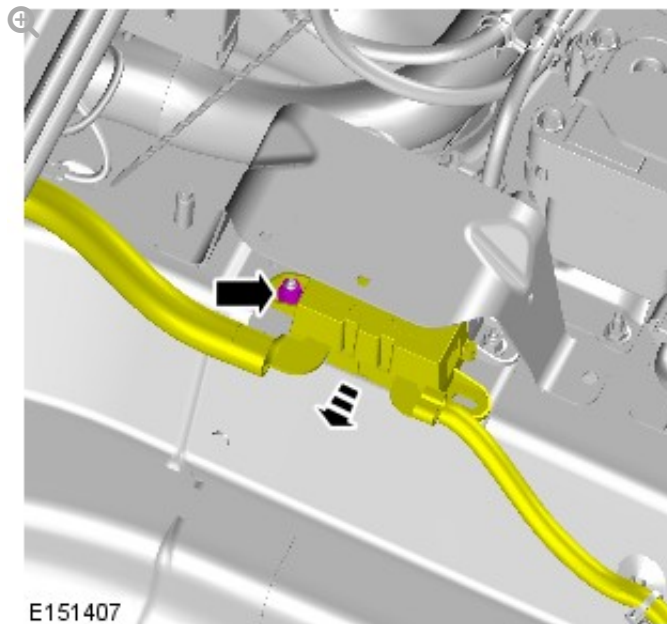


Torque: 9 Nm

14.

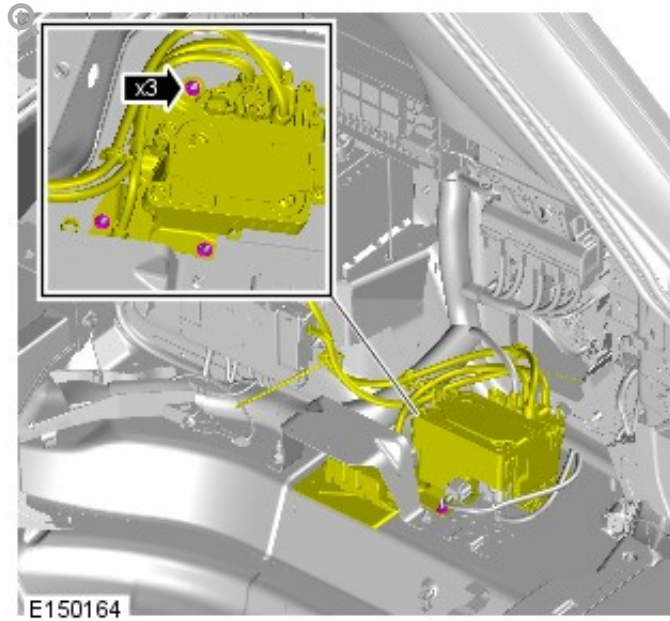


Torque: 9 Nm

15.

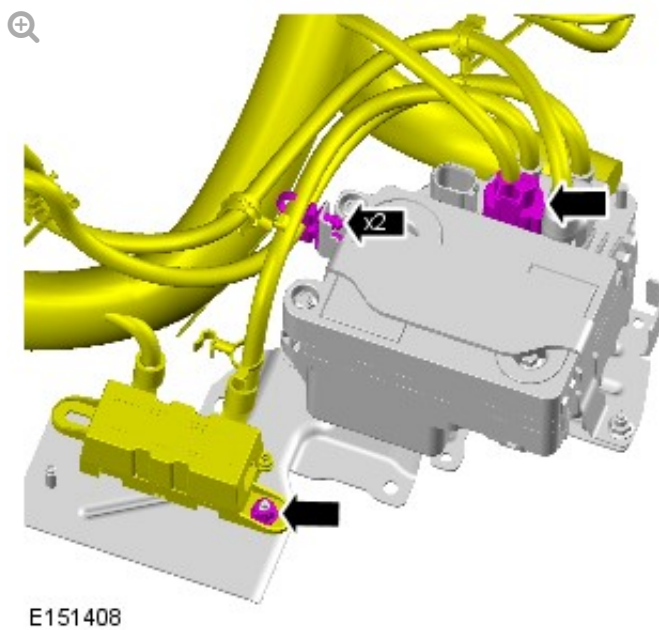

Torque: 9 Nm



16.

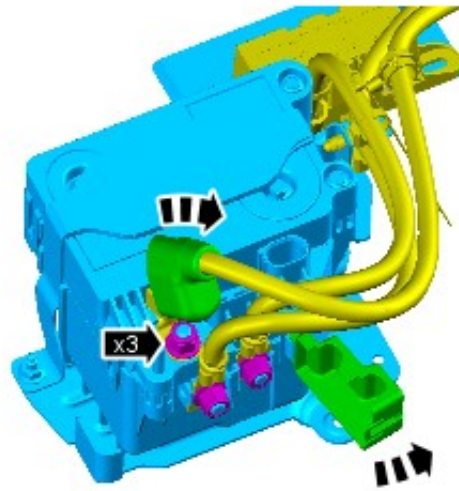

E151406

Torque: 9 Nm

17.

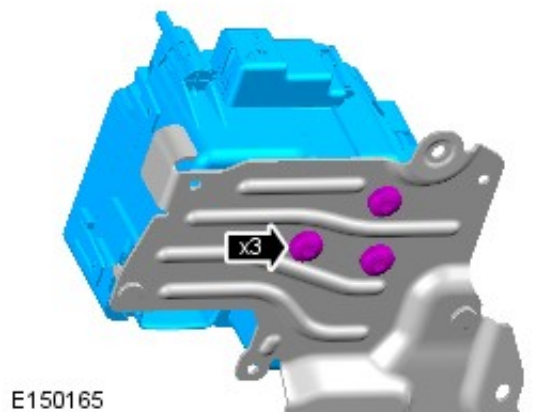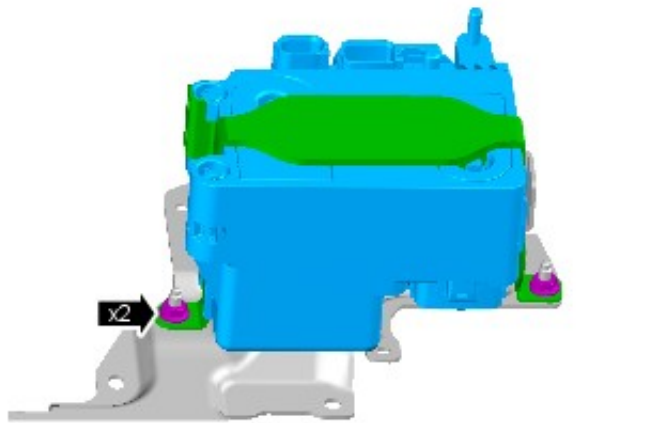

E150165

Torque: 12 Nm

INSTALLATION

1. To install, reverse the removal procedure.
2. If a new component has been installed, configure using Land Rover approved diagnostic equipment.