

2016.0 RANGE ROVER (LG), 418-00

MODULE COMMUNICATIONS NETWORK

DUAL BATTERY MODULE (G1561110)


REMOVAL AND INSTALLATION

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.

1. Refer to: Auxiliary Battery (414-01, Removal and Installation).

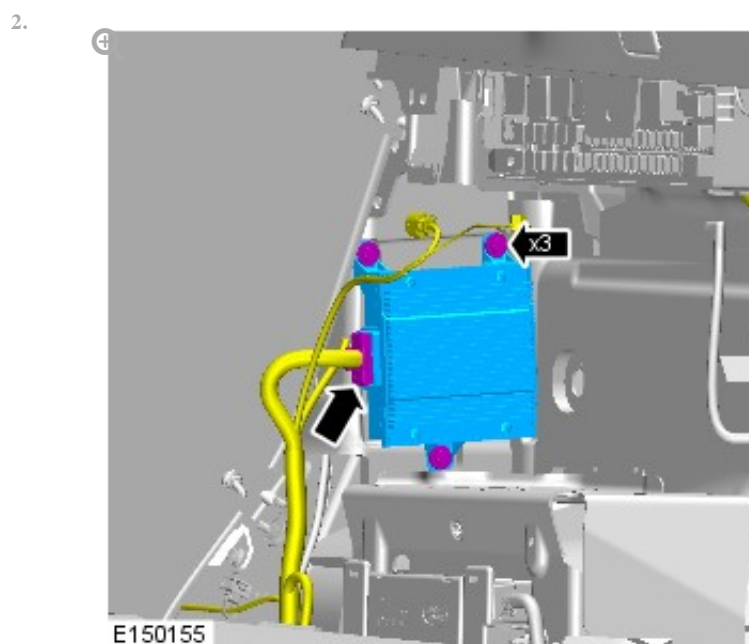

Torque: 4.1 Nm

INSTALLATION

1. To install, reverse the removal procedure.
2. If a new component has been installed, configure using Land Rover approved diagnostic equipment.