

2016.0 RANGE ROVER (LG), 413-13

PARKING AID

FRONT OUTER PARKING AID SENSOR (G1549865)

REMOVAL AND INSTALLATION

REMOVAL

NOTES:

- Removal steps in this procedure may contain installation details.
- LH illustration shown, RH is similar.
- The ignition must be switched off.
- Check the sensor before removing to note if the sensor(s) are painted or unpainted.

1.



WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2. Refer to: [Front Bumper Cover](#) (501-19 Bumpers, Removal and Installation).

3.

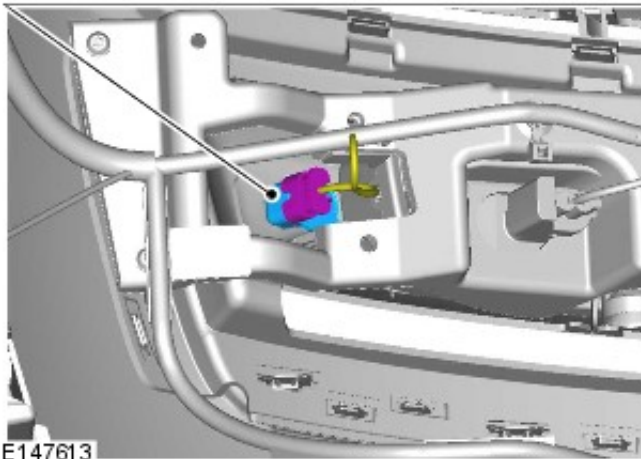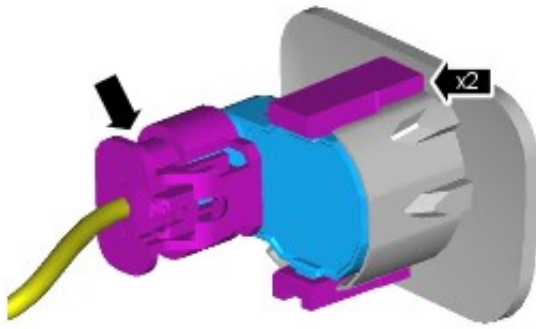

INSTALLATION


1.

CAUTION:

If a new sensor is installed, make sure that the area illustrated is the **only** area painted. Failure to follow this instruction may result in the component malfunctioning.

NOTE:

On vehicles that are equipped with black or unpainted bumpers, the sensor(s) do not require painting.

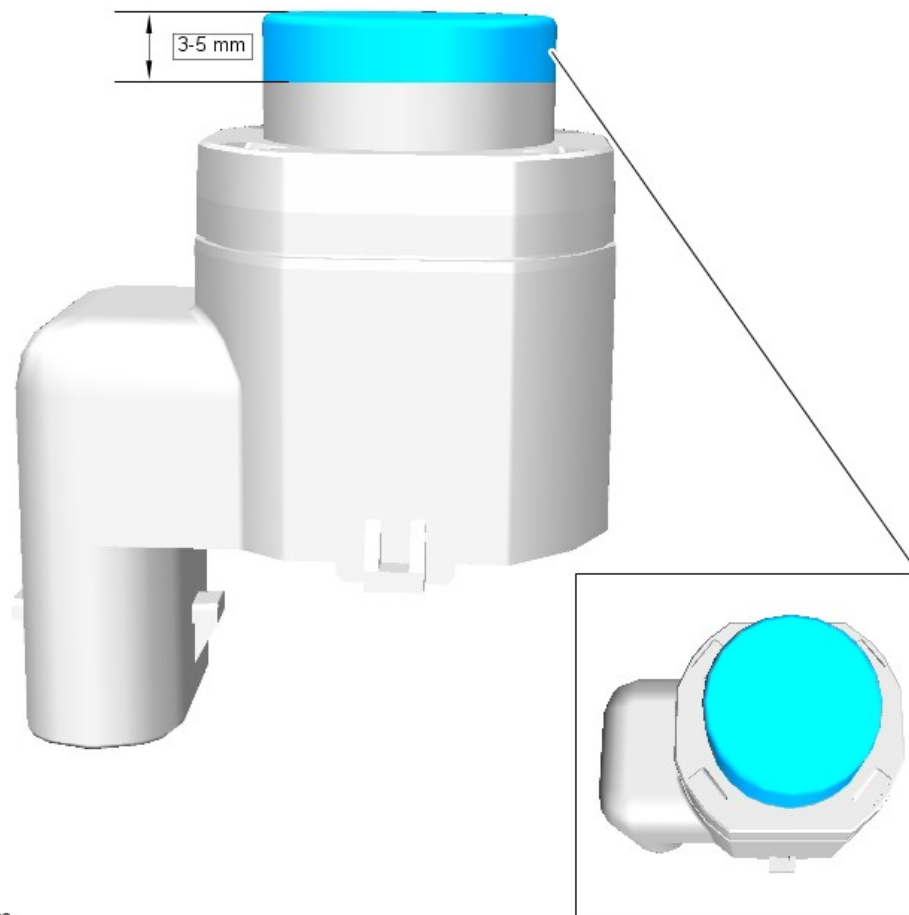

E153132

2. To install, reverse the removal procedure.