

2016.0 RANGE ROVER (LG), 413-13

PARKING AID

PARKING AID MODULE (G1606993)

REMOVAL AND INSTALLATION


REMOVAL

NOTES:

- If a new parking aid module is to be installed, configure the parking aid module using the Land Rover approved diagnostic system.
- Removal steps in this procedure may contain installation details.
- The ignition must be switched off.

1. Refer to: [Keyless Vehicle Module](#) (419-10 Multifunction Electronic Modules, Removal and Installation).
2. Refer to: [Luggage Compartment Upper Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

3.

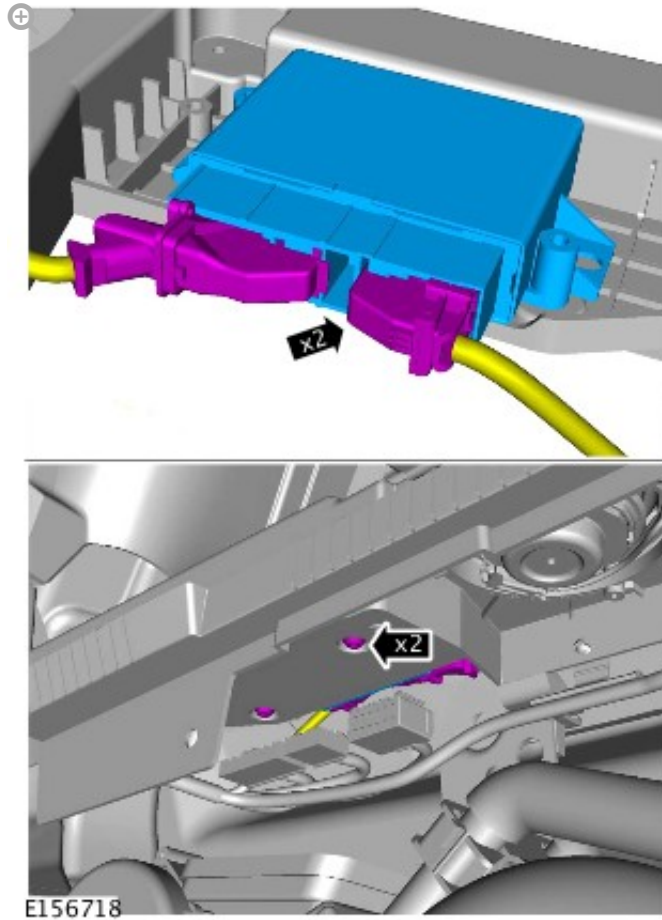

Torque: 10 Nm

INSTALLATION

1. To install, reverse the removal procedure.
2. Using the diagnostic tool, configure the parking aid module.