

2016.0 RANGE ROVER (LG), 413-09

WARNING DEVICES

GENERAL PROXIMITY SENSOR MODULE (G1700111)

REMOVAL AND INSTALLATION


REMOVAL

NOTES:

- Removal steps in this procedure may contain installation details.
- The ignition must be switched off.

1. Refer to: '[C](#)' [Pillar Lower Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

2.

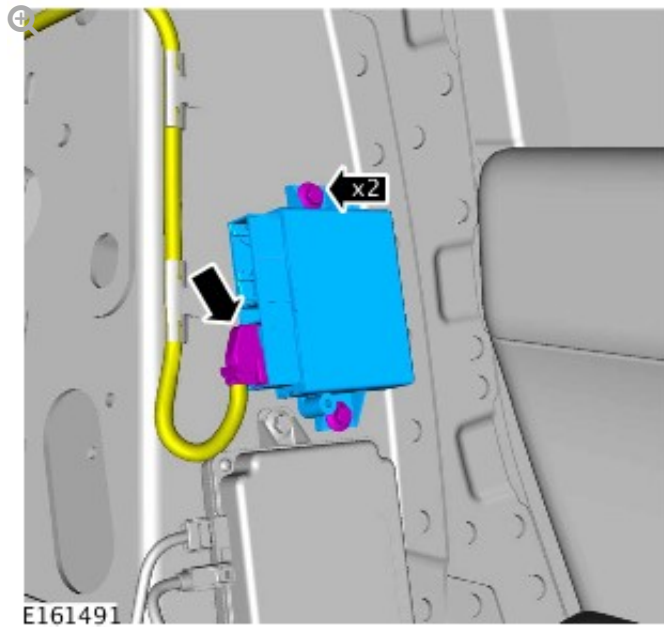

Torque: 10 Nm

INSTALLATION

1. To install, reverse the removal procedure.
2. If a new component has been installed, configure using Land Rover approved diagnostic equipment.