

PUBLISHED: 11-SEP-2012
2015.0 RANGE ROVER (LG), 418-02

WIRING HARNESSES

ENGINE WIRING HARNESS - TDV8 4.4 L DIESEL (G1509770)

REMOVAL AND INSTALLATION

86.70.17	WIRING HARNESS - ENGINE - RENEW	LEFT HAND DRIVE, 4400 CC, TDV8, WITHOUT FUEL FIRED BOOSTER HEATER	7.6	USED WITHINS	
----------	---------------------------------------	--	-----	--------------	--

REMOVAL



NOTES:

- Some illustrations may show the engine removed for clarity.
- Removal steps in this procedure may contain installation details.

1.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.

Refer to: [Secondary Bulkhead Centre Panel - TDV8 4.4L Diesel](#) (501-02 Front End Body Panels, Removal and Installation).

3.

Refer to: [Air Conditioning Compressor - TDV8 4.4L Diesel](#) (412-01A Climate Control, Removal and Installation).

4.

Refer to: [Starter Motor](#) (303-06D Starting System - TDV8 4.4L Diesel, Removal and Installation).

5.

Refer to: [Generator](#) (414-02B Generator and Regulator - TDV8 4.4L Diesel, Removal and Installation).

6.



NOTE:

If equipped.

Refer to: [Fuel Fired Booster Heater](#) (412-02A Auxiliary Climate Control, Removal and Installation).


7. Refer to: [Fuel Filter Element](#) (310-01D Fuel Tank and Lines - TDV8 4.4L Diesel, Removal and Installation).

8.




NOTE:


LHD illustration shown, RHD is similar.

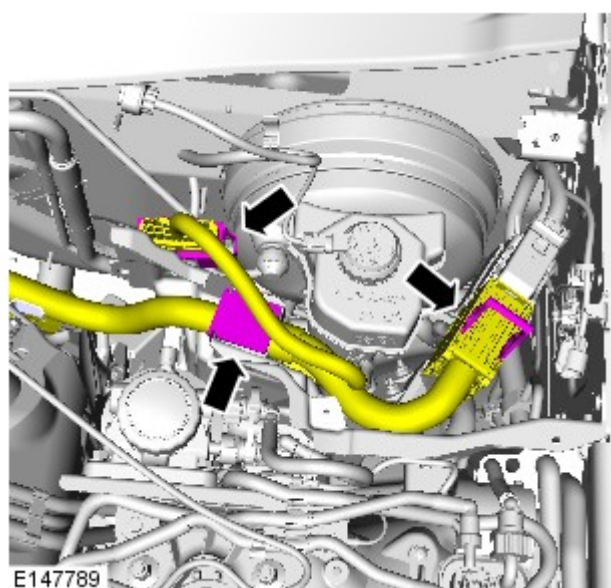


9.

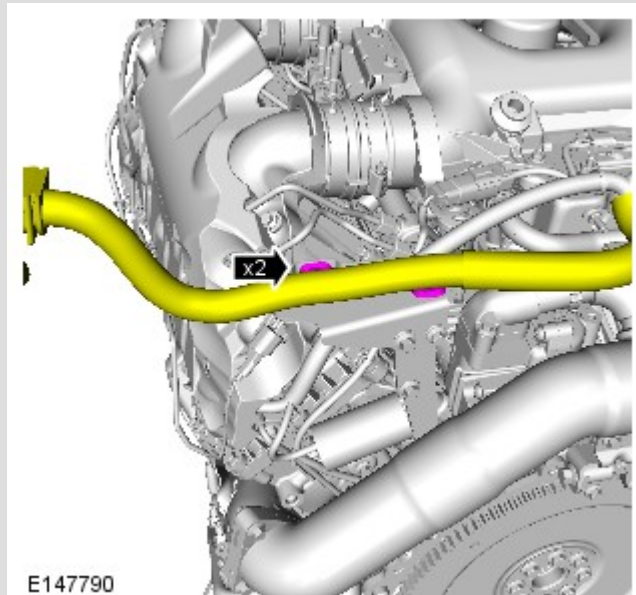


10.

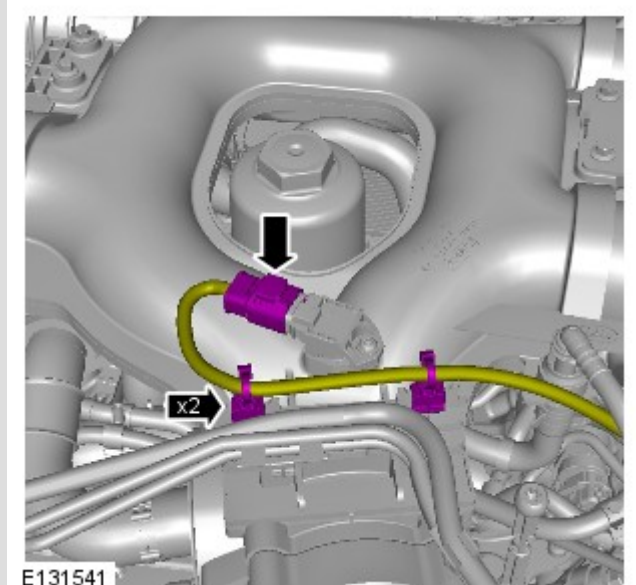


11.

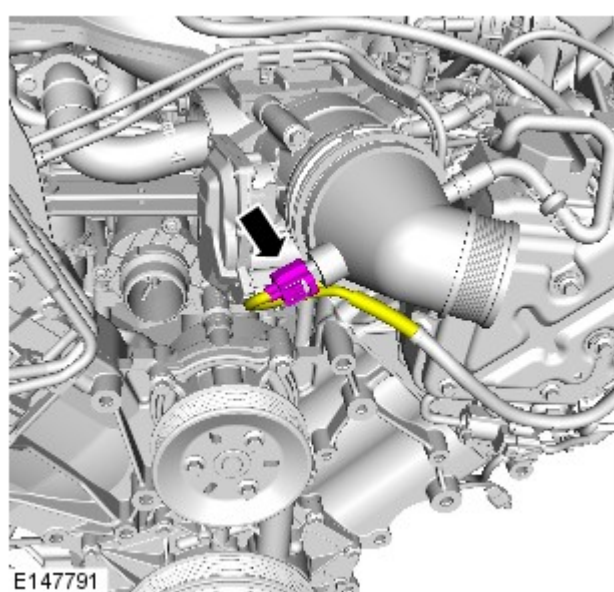

12.

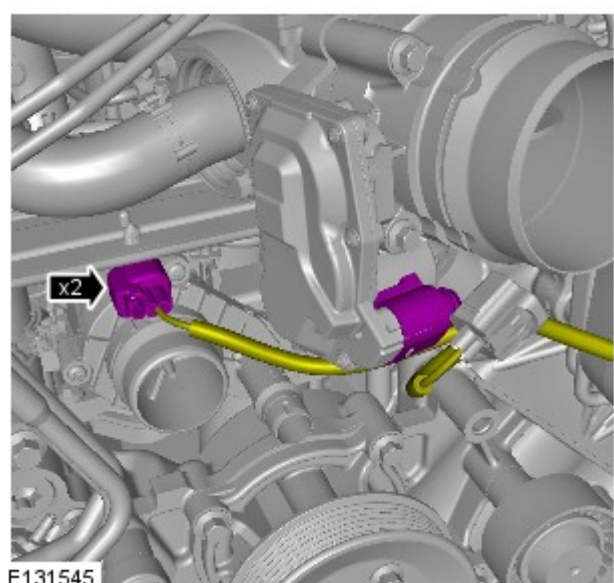


13.

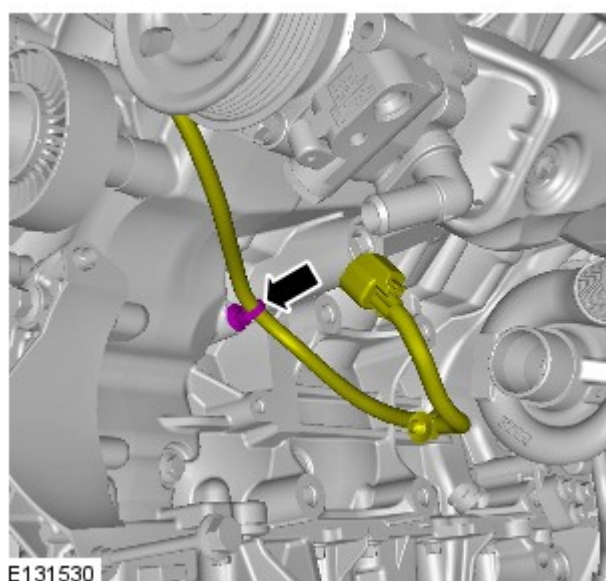


E131530

14.

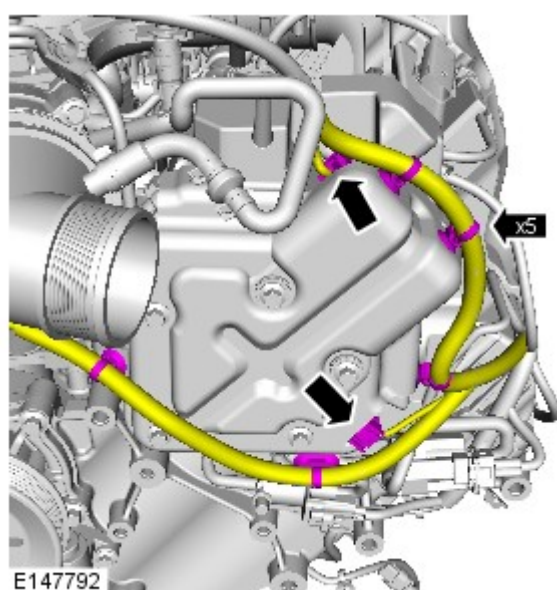


E147792


15.

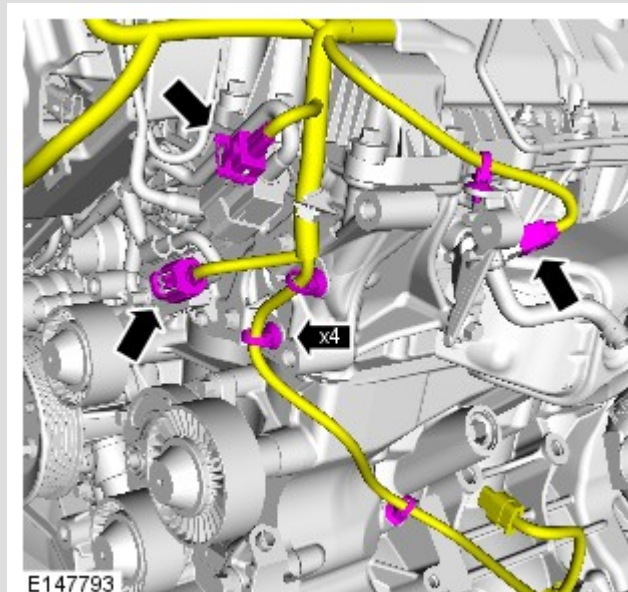

16.

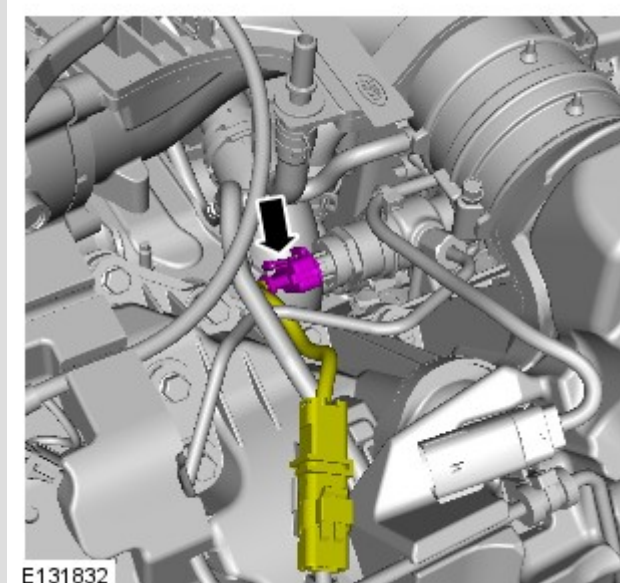


17.

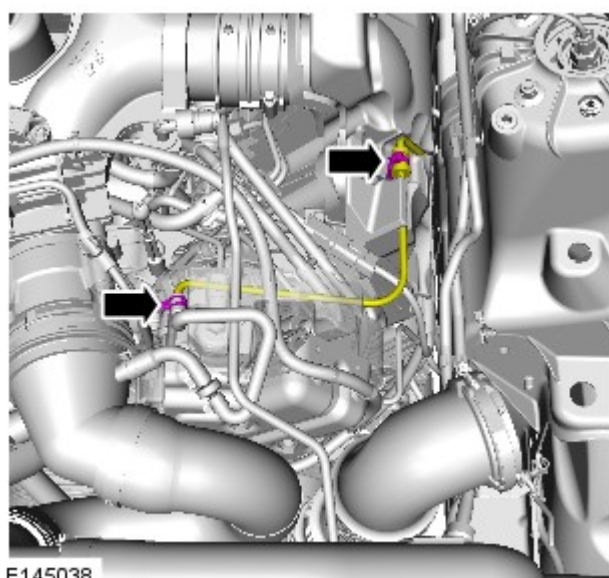

E145038


18.

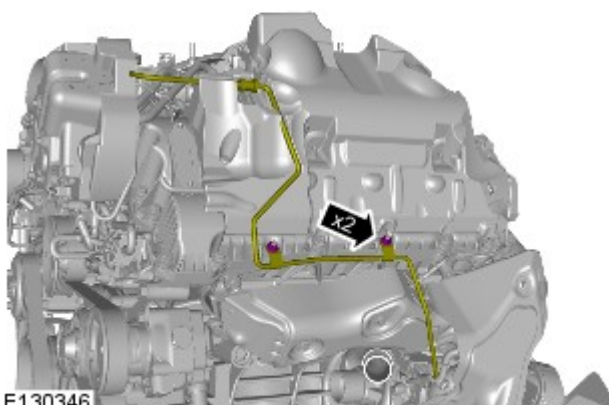

E130346


Torque: 10 Nm

19.


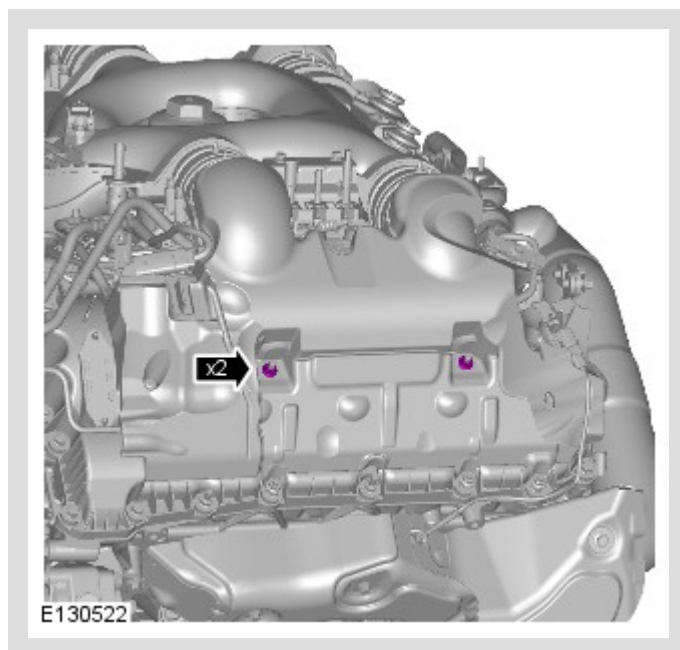



Torque: 6 Nm


20.

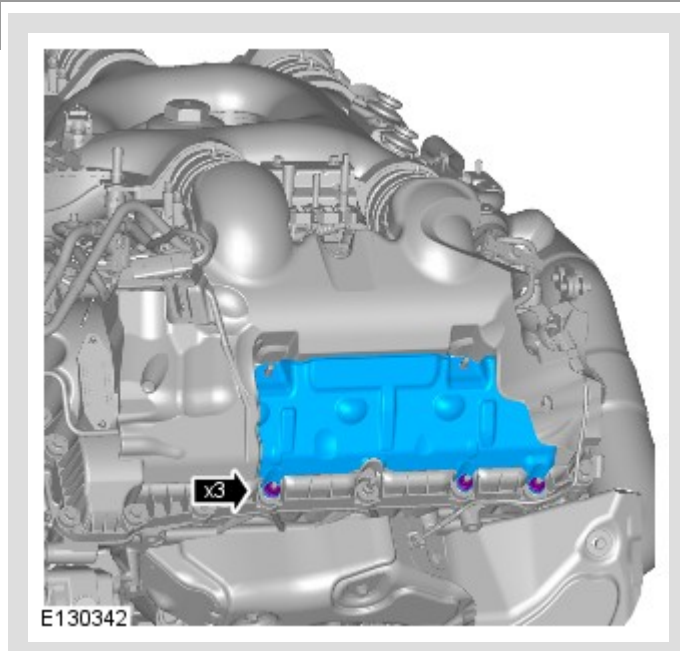


Torque: 10 Nm

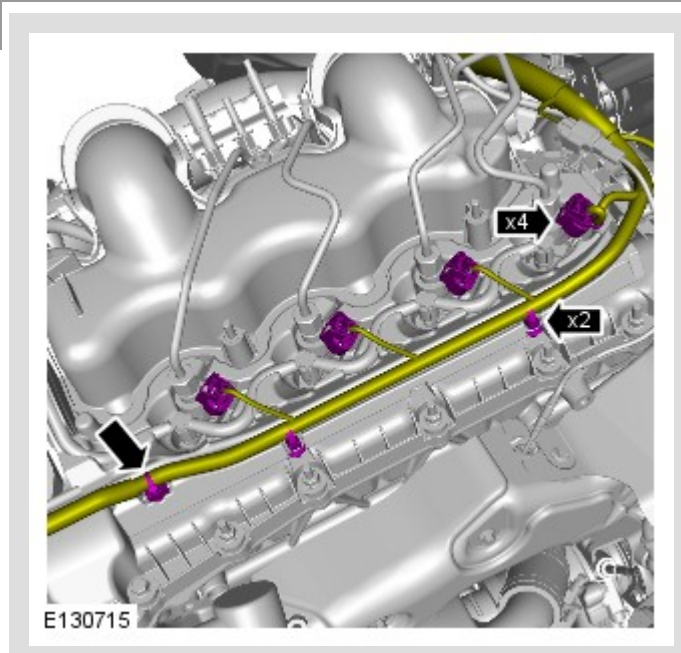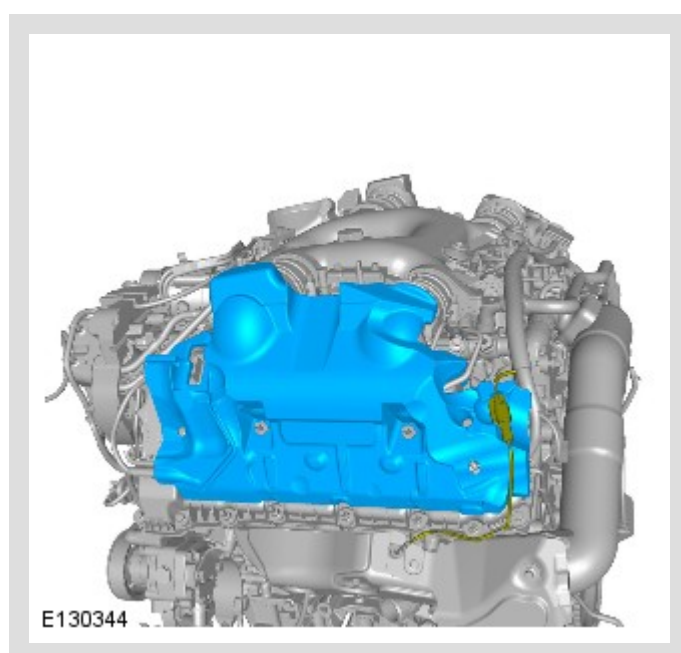

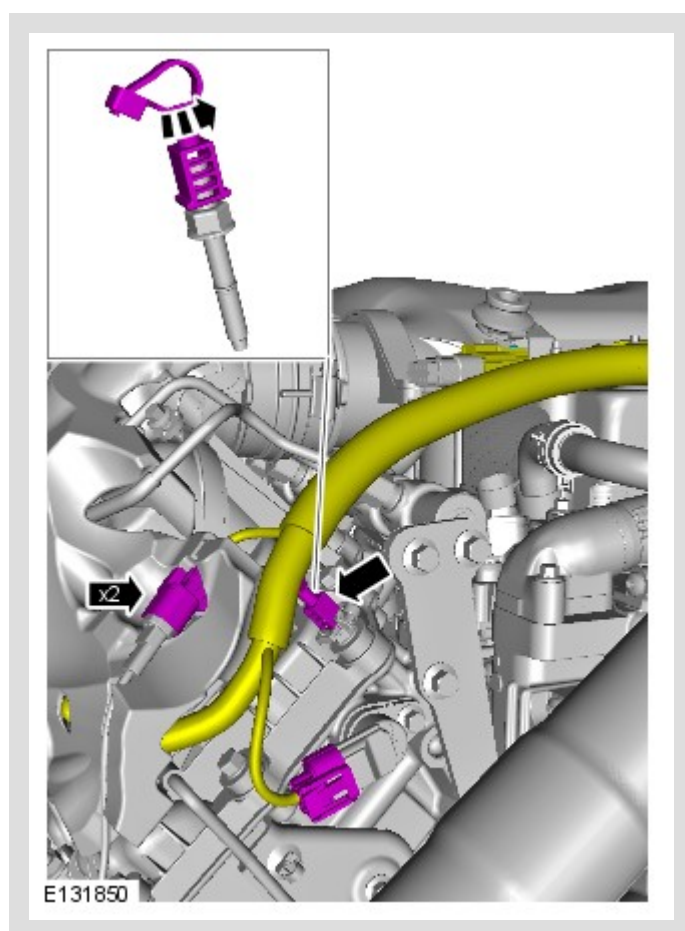


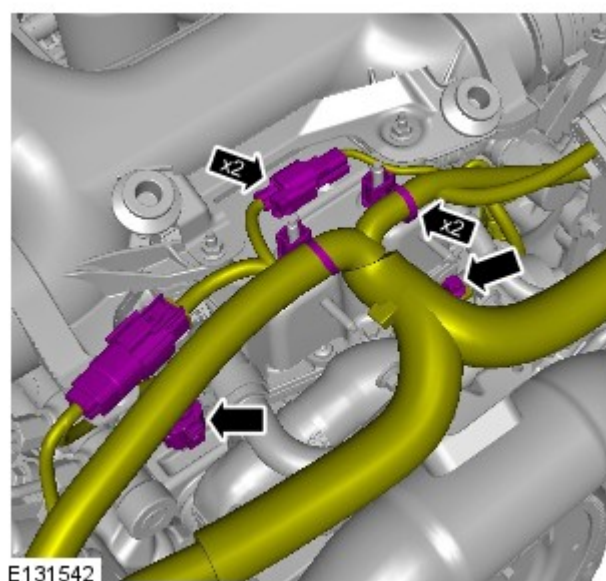

25.

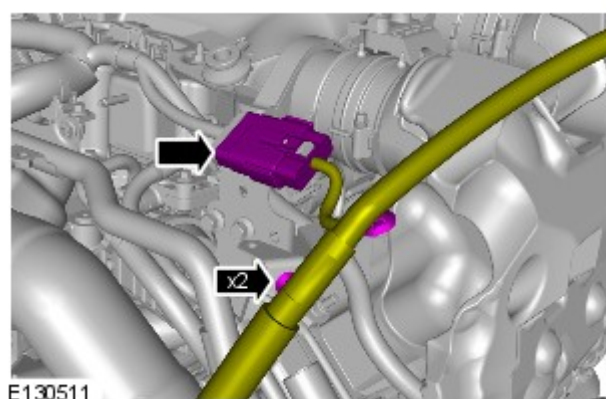


26.

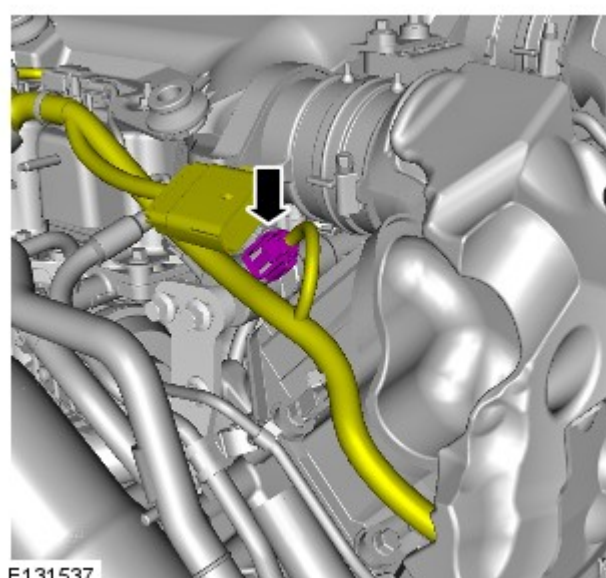

E131537

27.

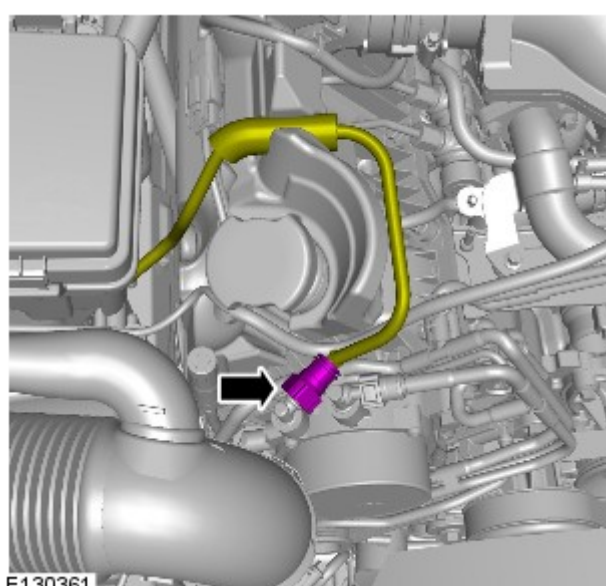


E130361

28.




CAUTION:

LH illustration shown, RH is similar.

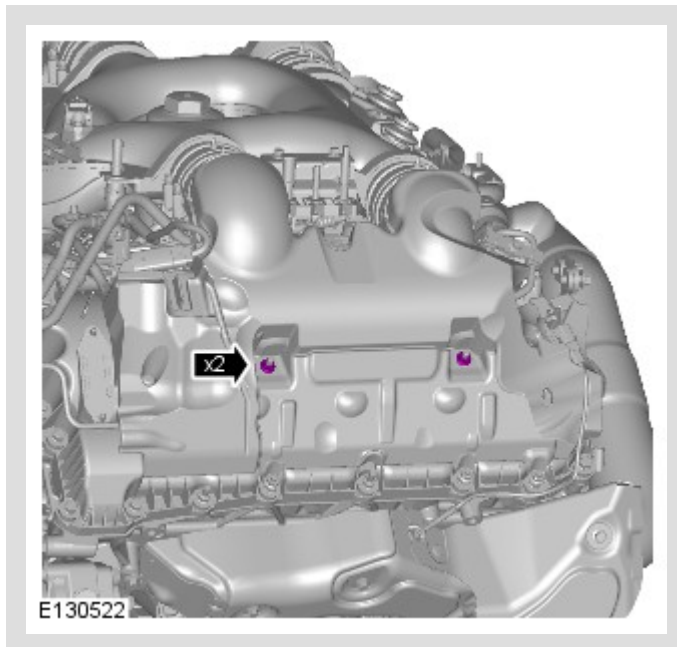


Torque: 6 Nm

29.

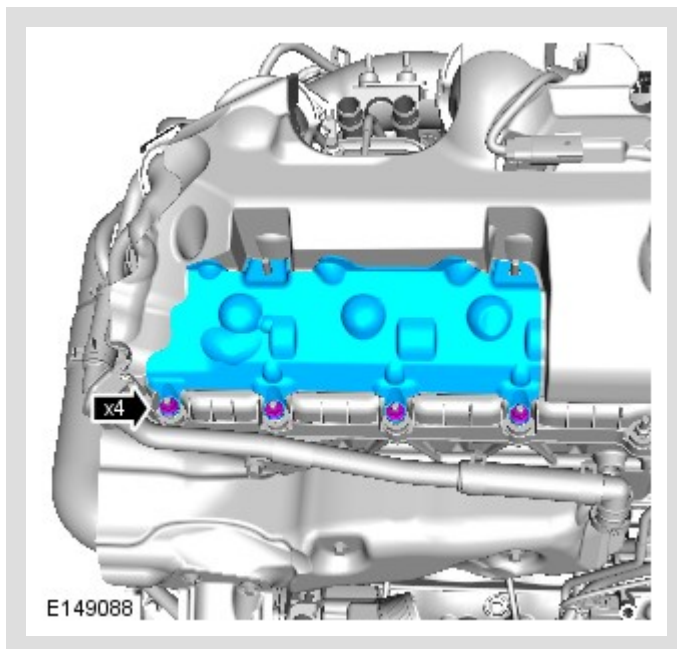


Torque: 10 Nm


30.

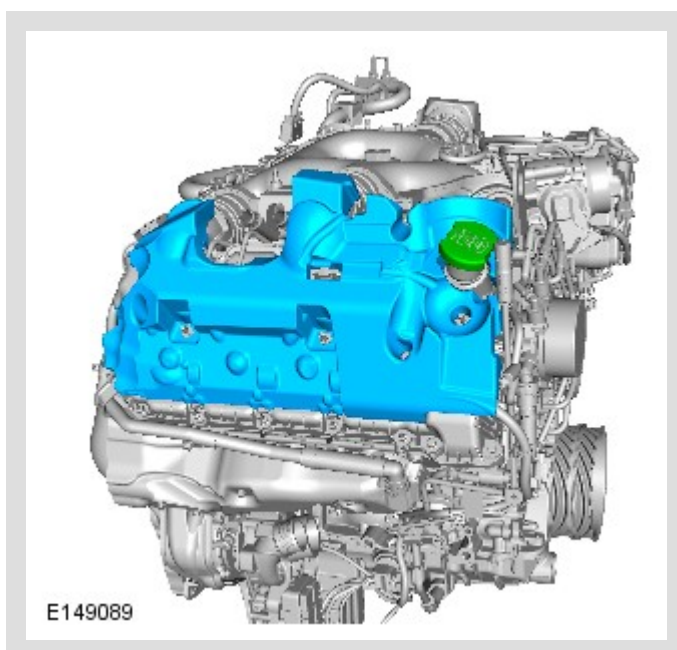


31.

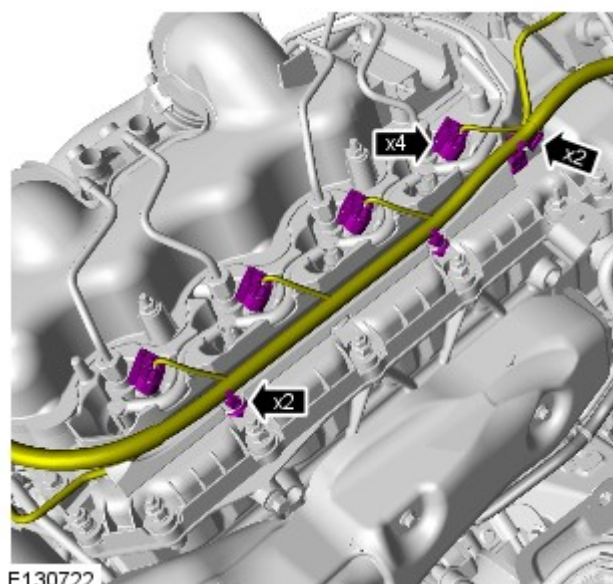


32.

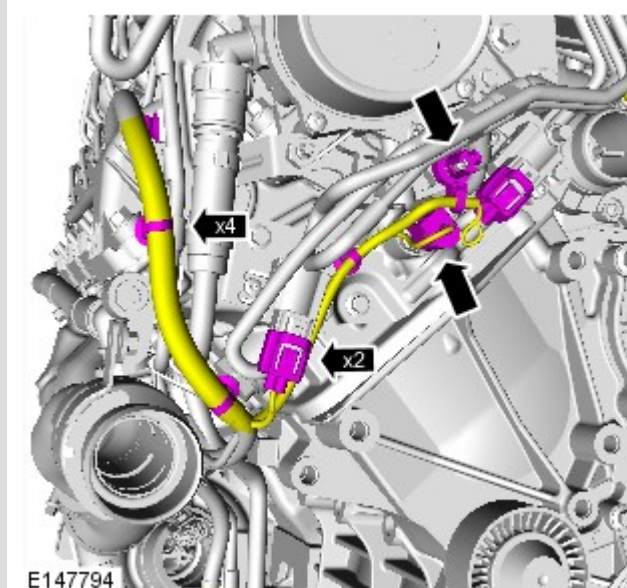

33.

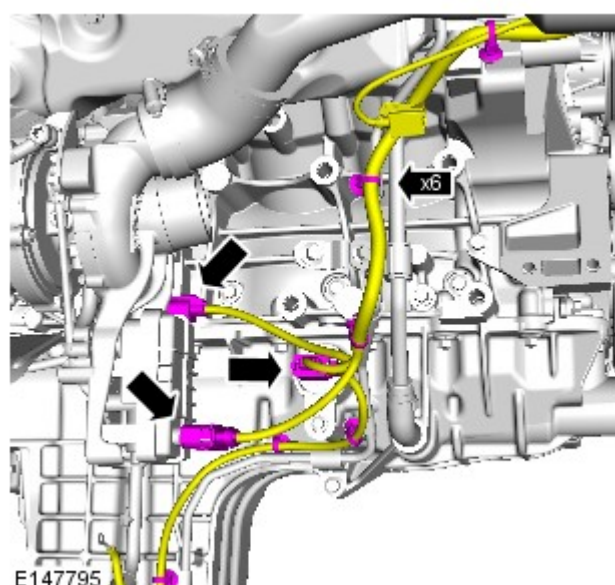

34.

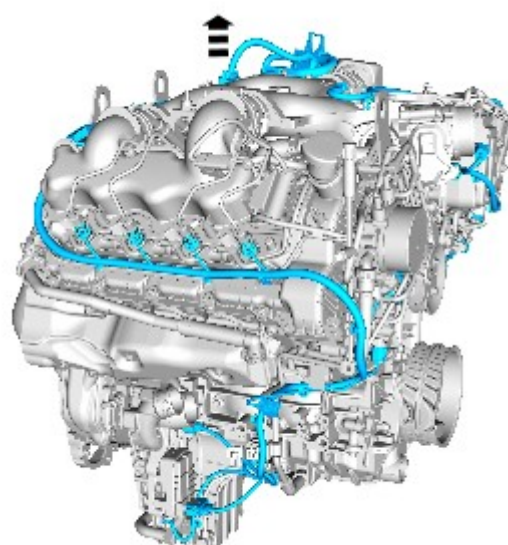

INSTALLATION

1. To install, reverse the removal procedure.