

PUBLISHED: 08-DEC-2014
2014.0 RANGE ROVER (LG), 418-02

WIRING HARNESSES

ENGINE WIRING HARNESS - V8 S/C 5.0L PETROL (G1509771)

REMOVAL



CAUTION:

Note of the routing of the wiring harnesses.



NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.

1. Refer to: Specifications (414-00 Battery and Charging System - General Information, Specifications).

2.



WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3. Refer to: Air Cleaner Outlet Pipe LH (303-12 Intake Air Distribution and Filtering - V8 S/C 5.0L Petrol, Removal and Installation).

4. Refer to: Air Cleaner Outlet Pipe RH (303-12 Intake Air Distribution and Filtering - V8 S/C 5.0L Petrol, Removal and Installation).

5. Refer to: Secondary Bulkhead Center Panel - V8 S/C 5.0L Petrol (501-02 Front End Body Panels, Removal and Installation).


6. Refer to: Cooling System Partial Draining and Vacuum Filling (303-03B, General Procedures).

7. Refer to: Exhaust System (309-00 Exhaust System - V8 S/C 5.0L Petrol, Removal and Installation).


8.

⚠ CAUTION:


Be prepared to collect escaping coolant.

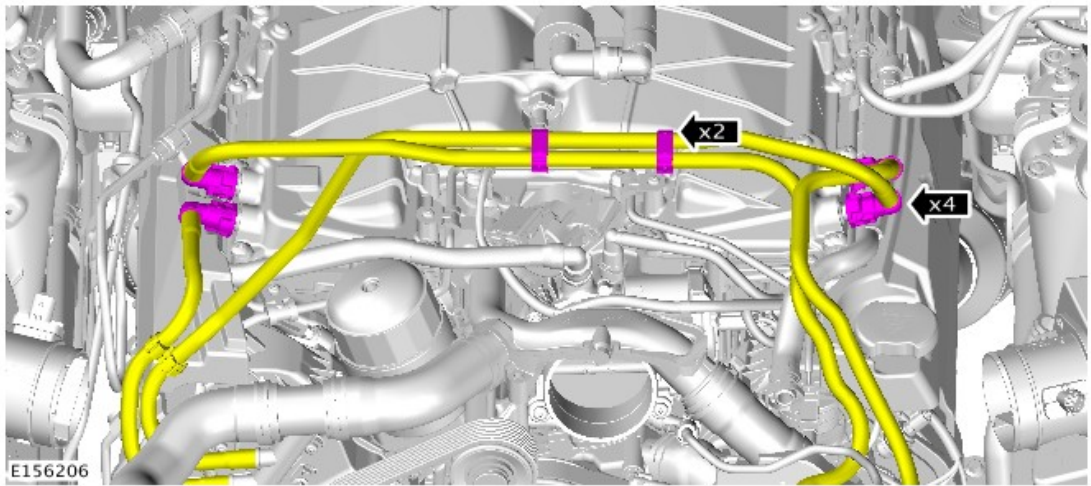


9.

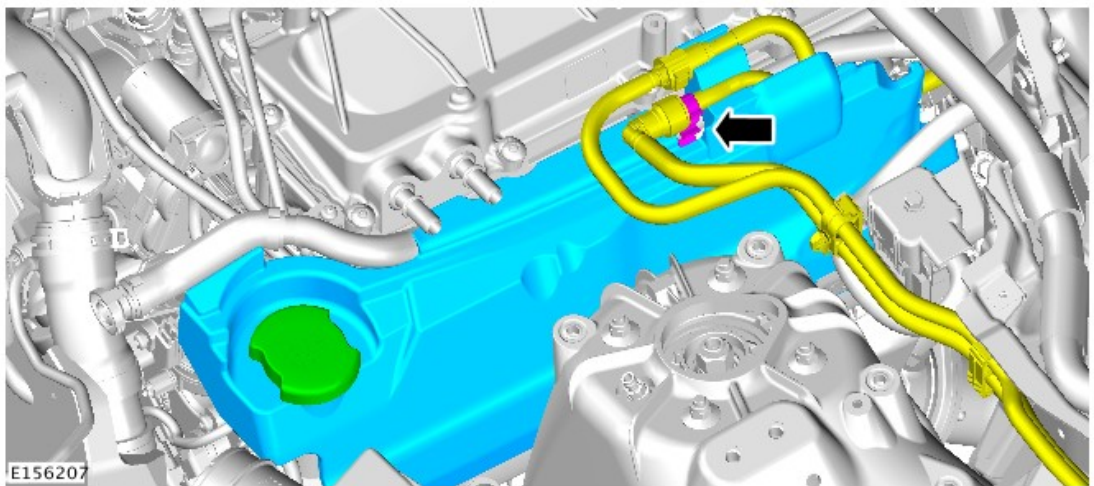


10.

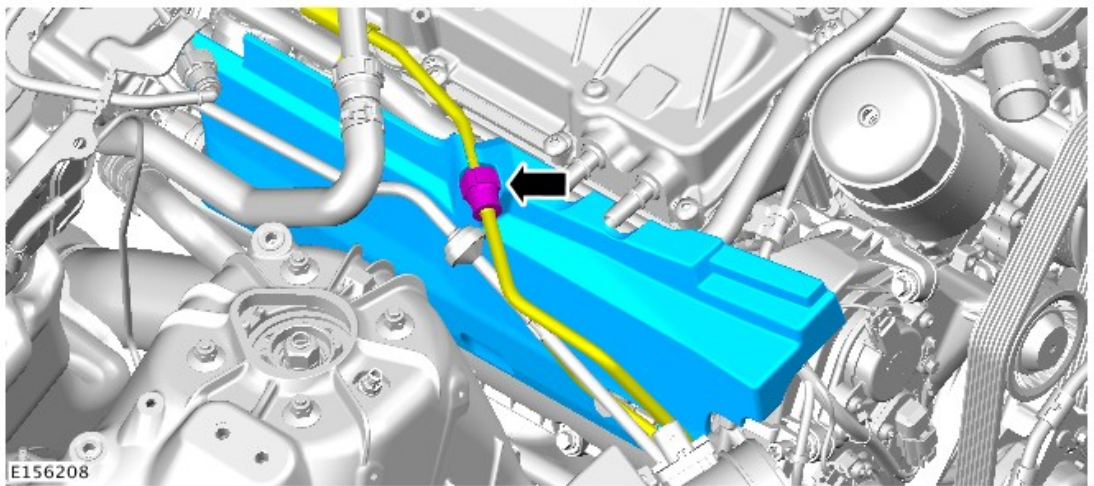


11.

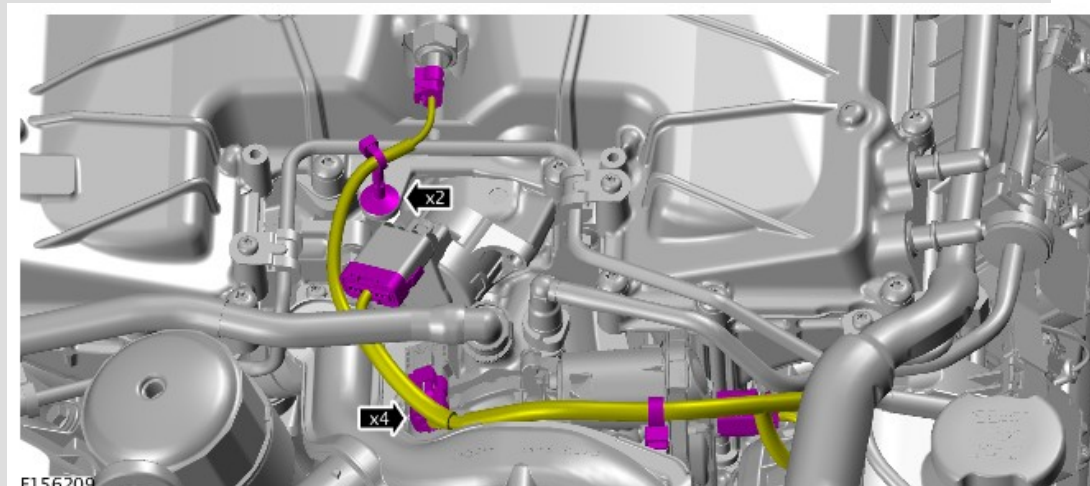

12.

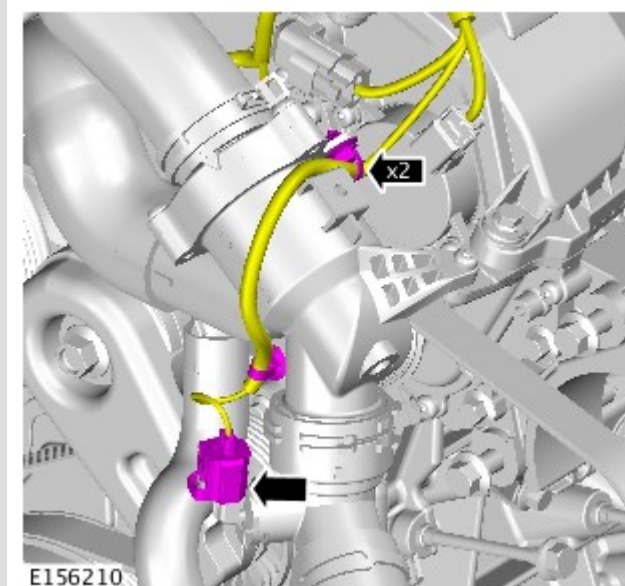


13.

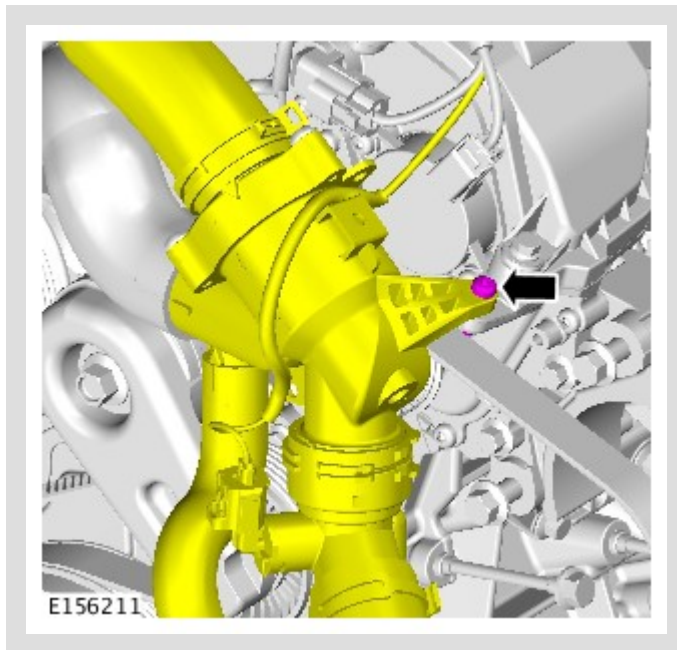


Torque: 10 Nm


14.

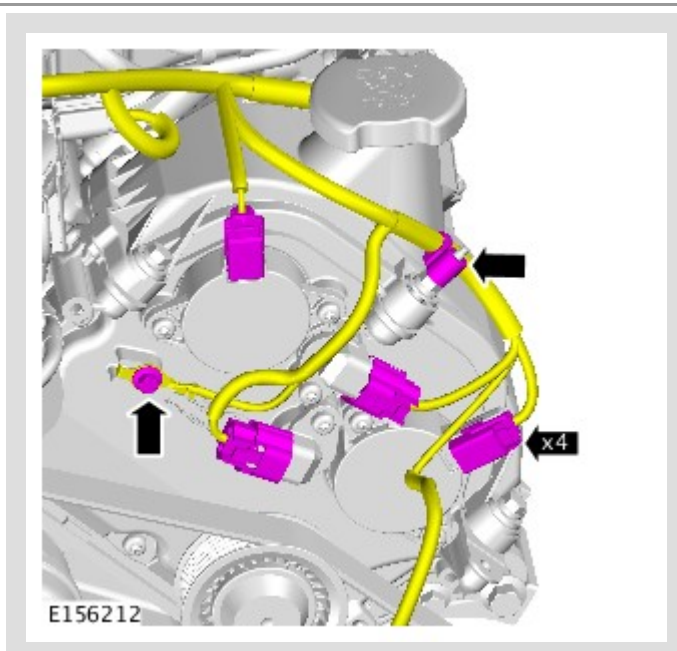


Torque: 10 Nm

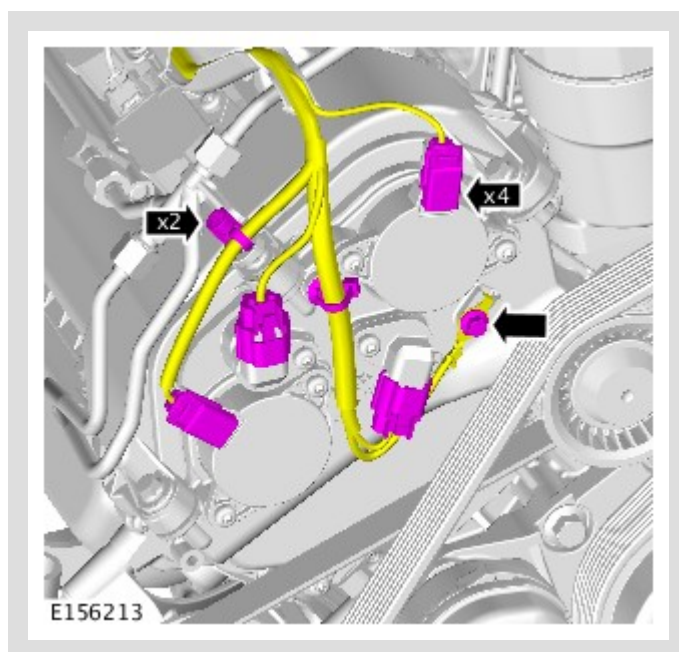


Torque: 10 Nm

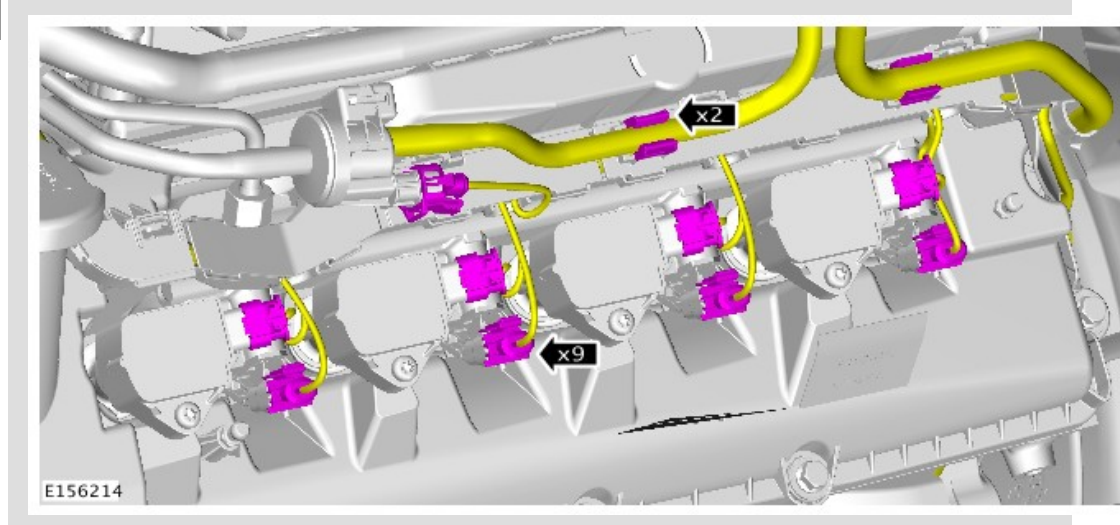


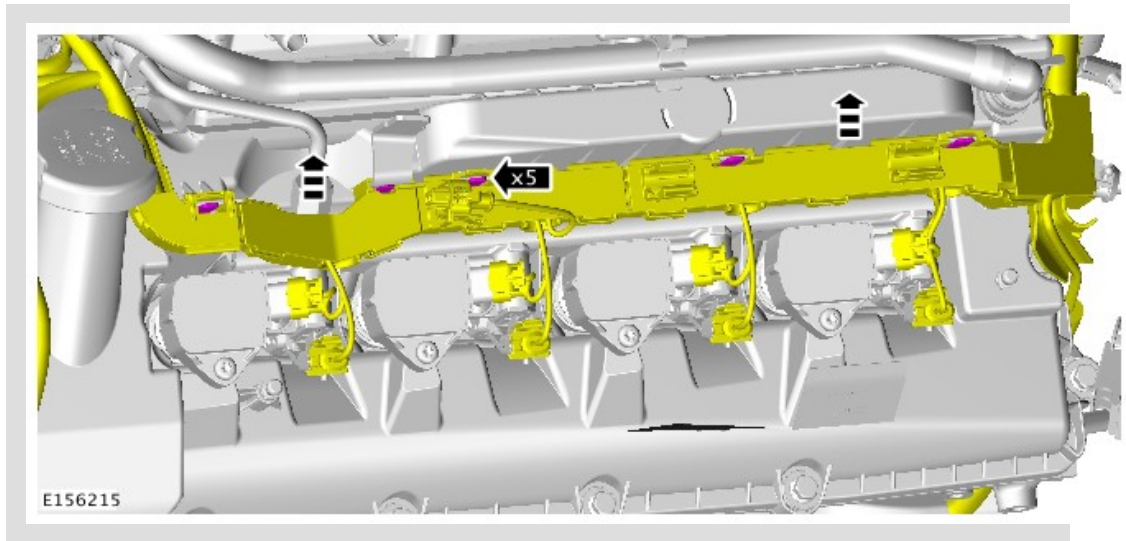


18.

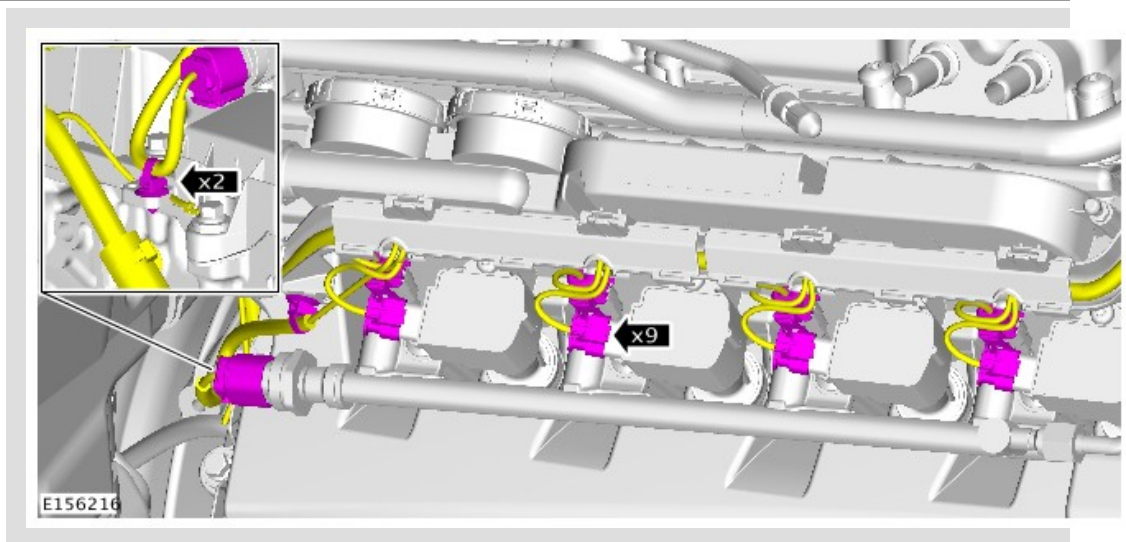

19.

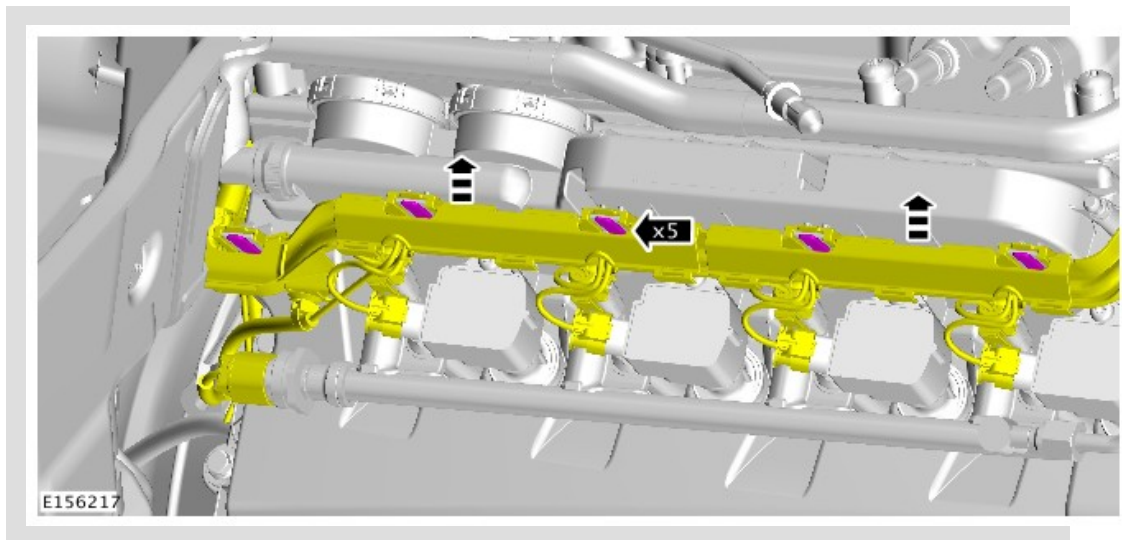


20.

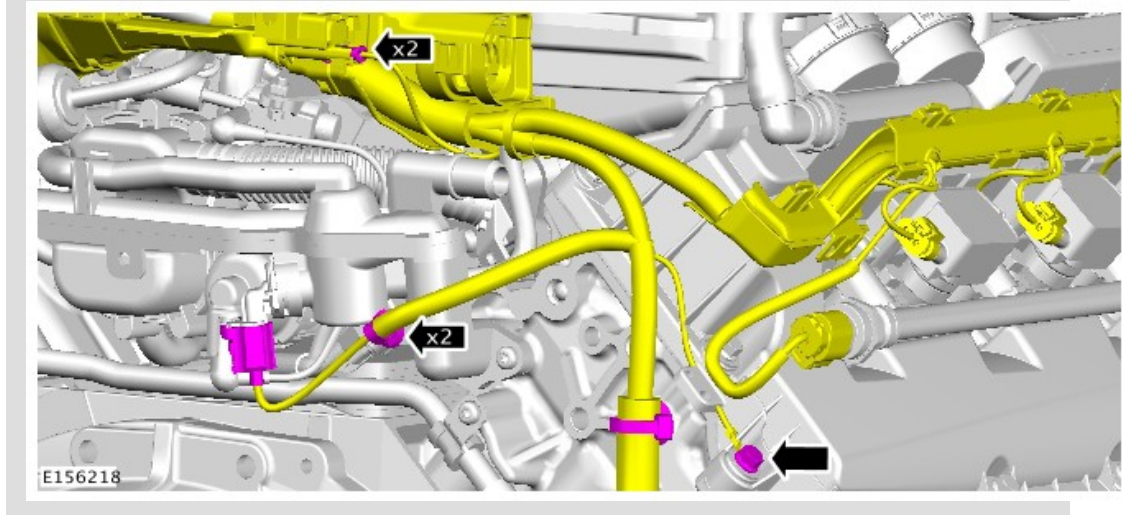


Torque: 13 Nm

21.

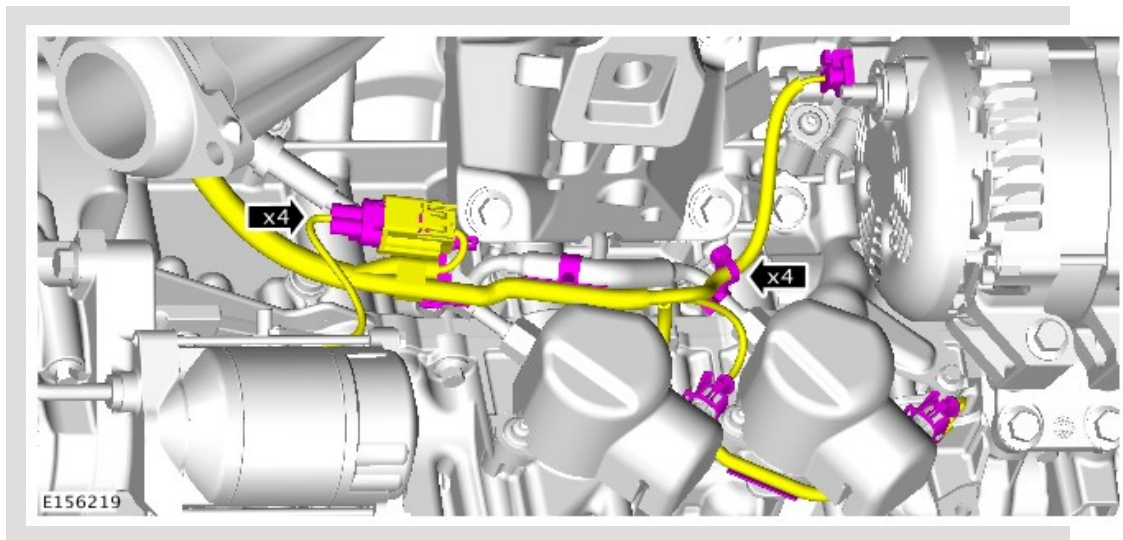

22.

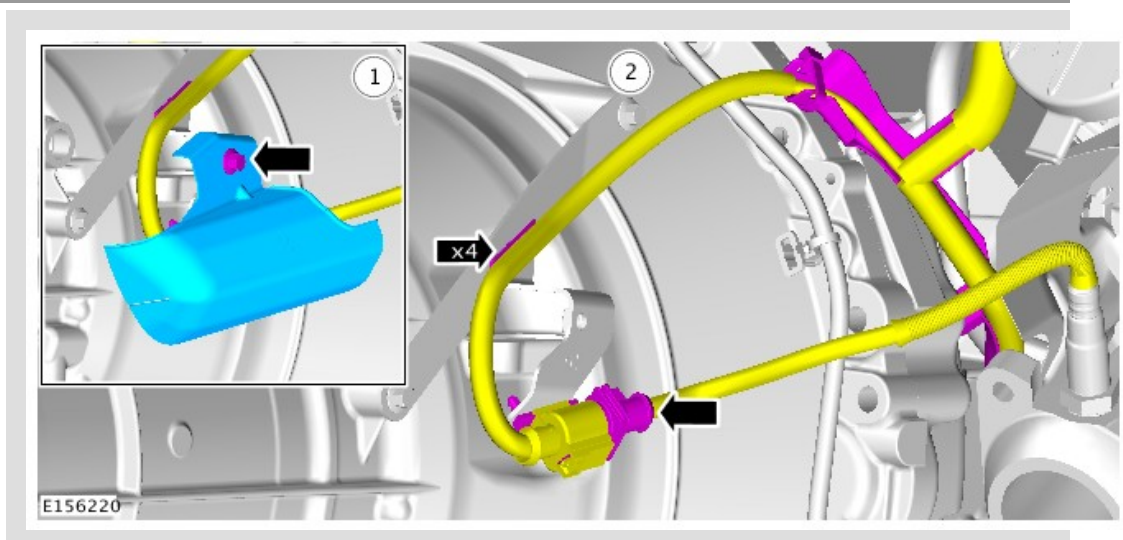


Torque: 11 Nm

23.




24.

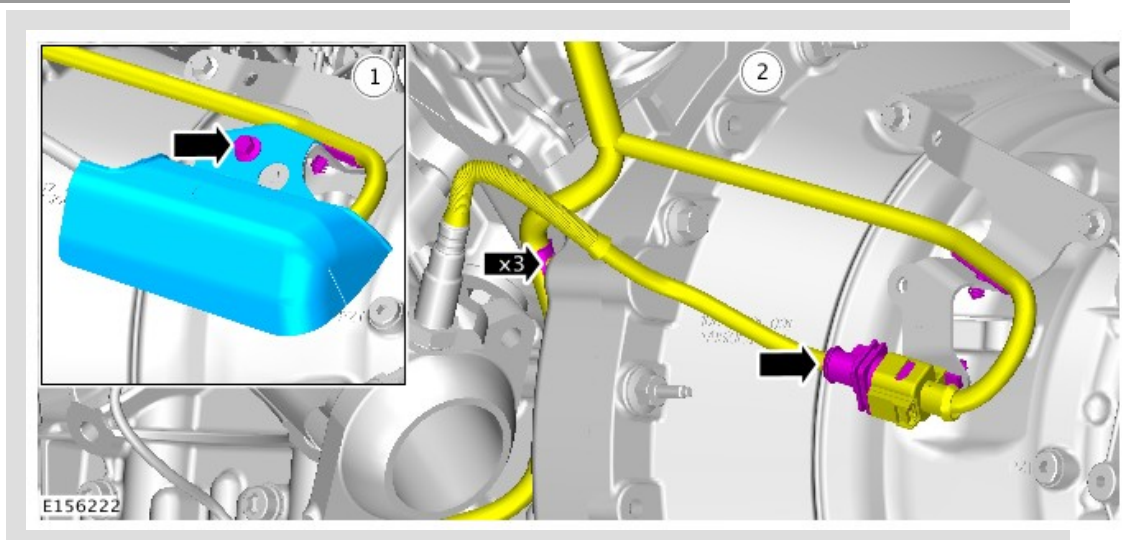


Torque: 11 Nm

25.

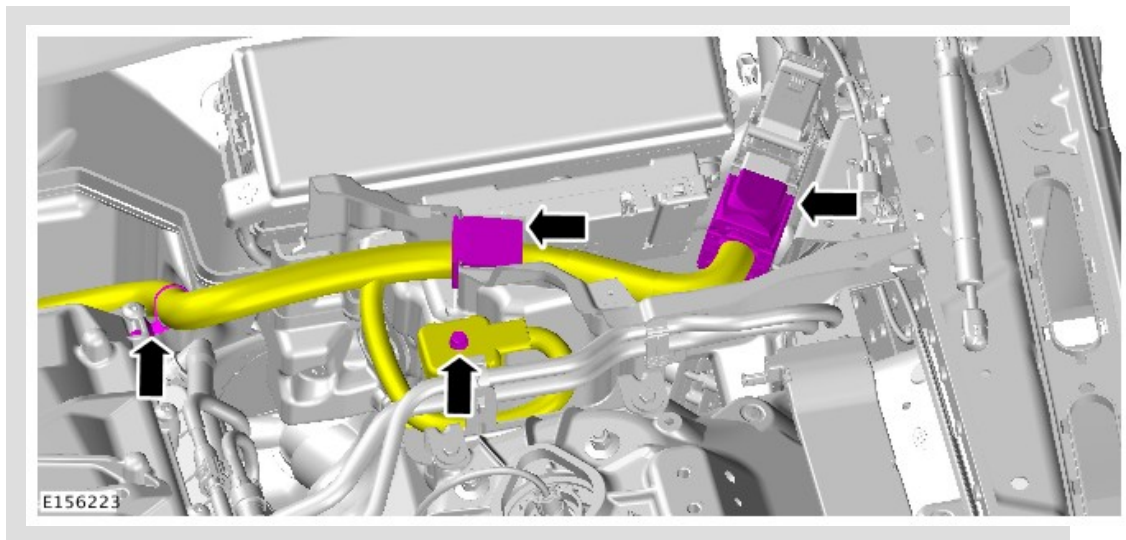


Torque: 7 Nm

26.

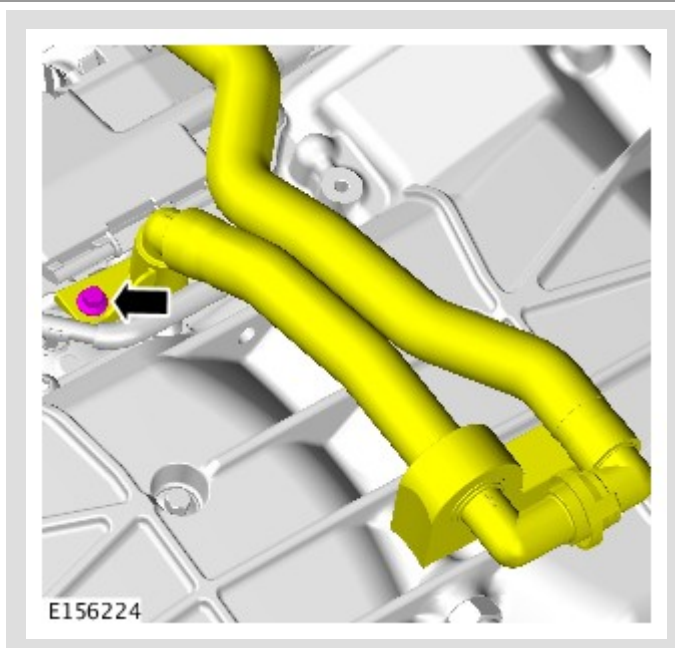

Torque: 10 Nm

27.

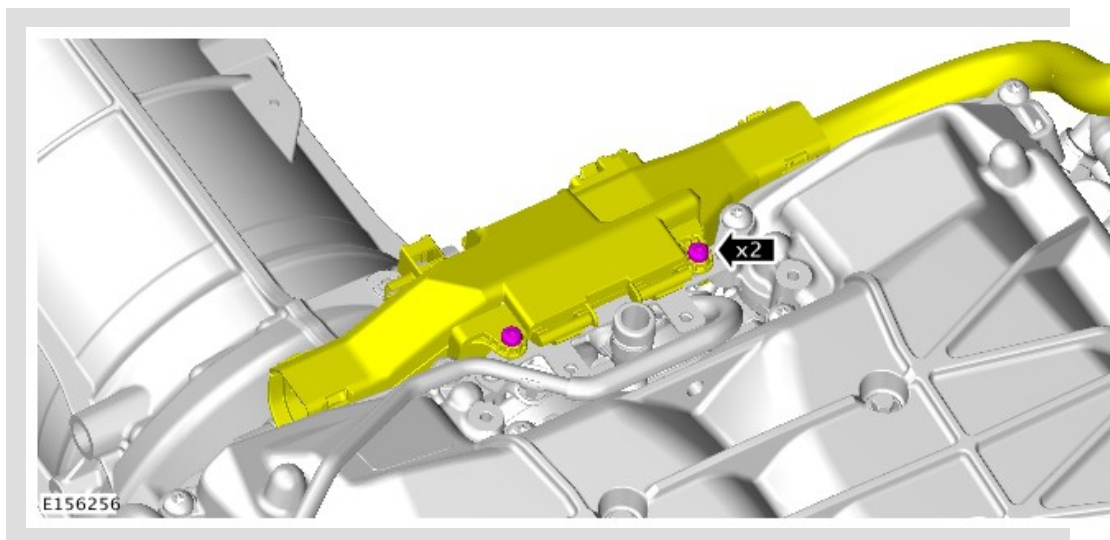


Torque: 10 Nm

28.

⚠ CAUTION:

Be prepared to collect escaping coolant.

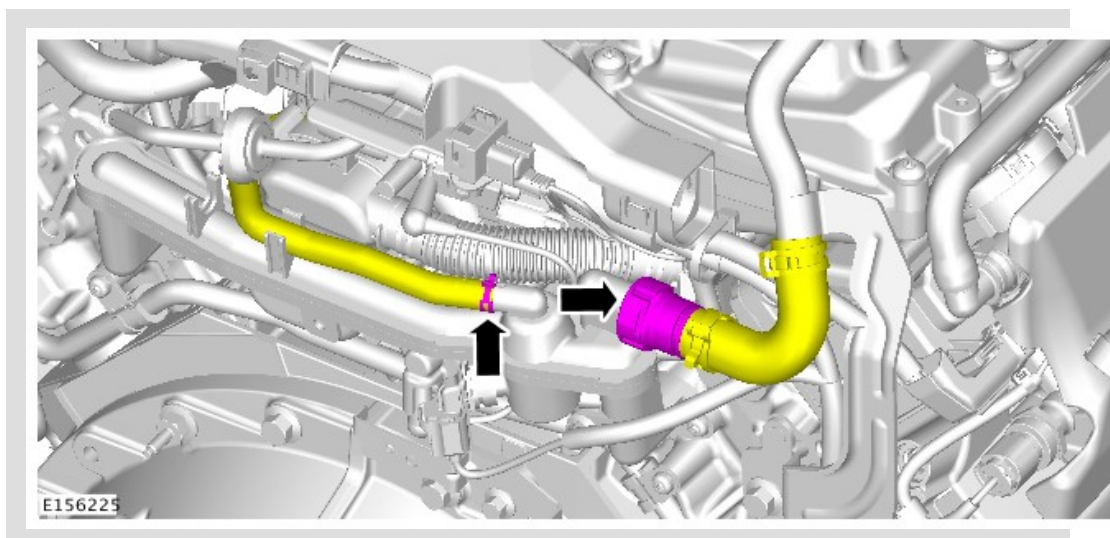


⚠ CAUTION:


Be prepared to collect escaping coolant.

⚠ NOTE:


Install new O-ring seals.

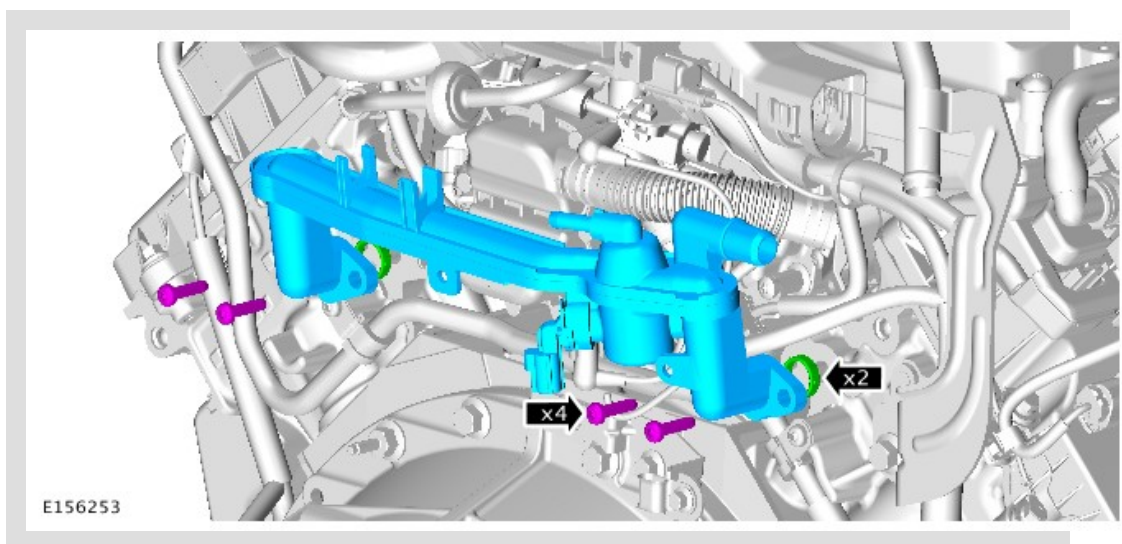

Torque: 10 Nm

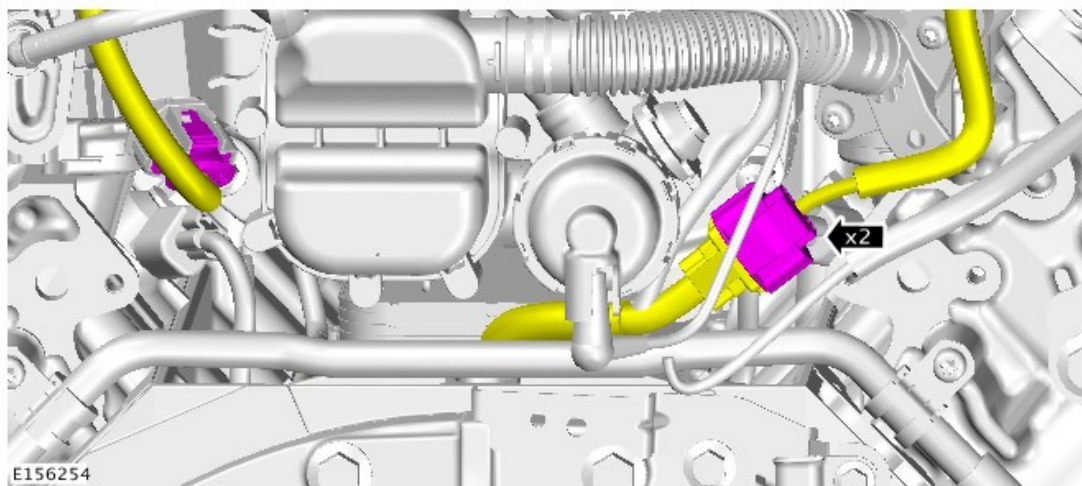

31.

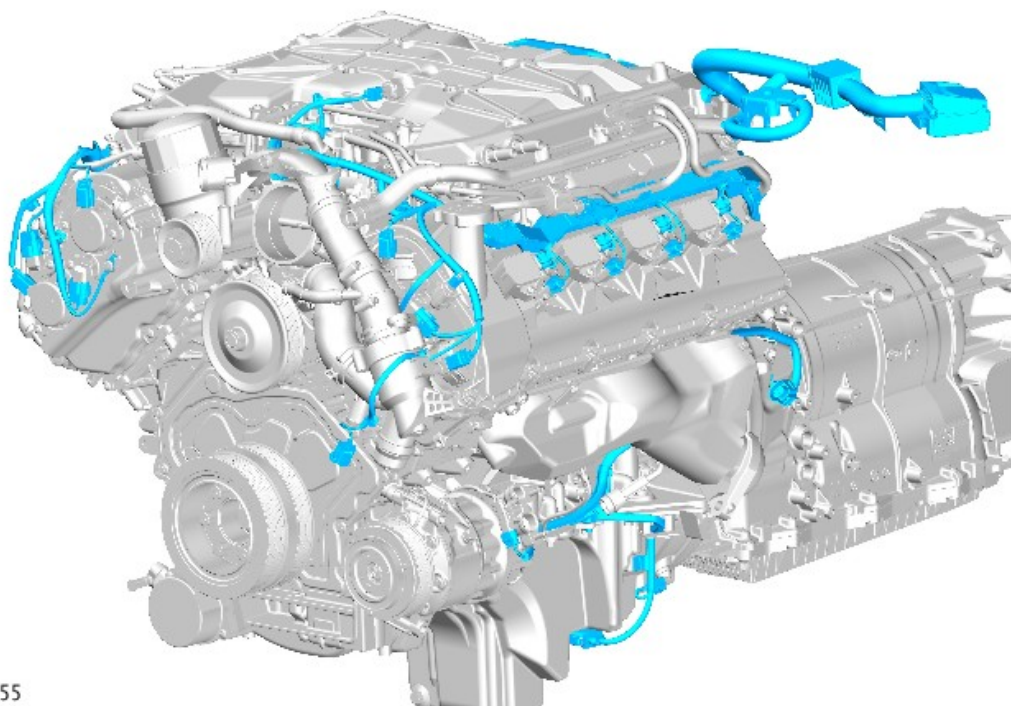

INSTALLATION

1.



CAUTION:

Make sure the the electrical harness is not trapped during the installation.

To install, reverse the removal procedure.