

2016.0 RANGE ROVER (LG), 100-00

GENERAL INFORMATION

DESCRIPTION AND OPERATION

INTRODUCTION

This manual has been written in a format that is designed to meet the needs of technicians worldwide. The objective is to use common formats and include similar content in each manual.

This manual provides general descriptions for accomplishing diagnosis and testing, service and repair work with tested and effective techniques. Following them will help to ensure reliability.

IMPORTANT SAFETY INSTRUCTIONS

Appropriate service methods and correct repair procedures are essential for the safe, reliable operation of all motor vehicles as well as the personal safety of the individual carrying out the work.

Anyone who departs from the instructions provided in this manual must first establish that personal safety or vehicle integrity is not compromised by the choice of method, tools or components.

WARNINGS, CAUTIONS AND NOTES IN THIS MANUAL

WARNING:

Warnings are used to indicate that failure to follow a procedure correctly may result in personal injury.

CAUTION:

Cautions are used to indicate that failure to follow a procedure correctly may result in damage to the vehicle or equipment being used.

NOTE:

Notes are used to provide additional essential information required to carry out a complete and satisfactory repair.

Generic warnings or cautions are in their relevant description and operation procedure within section 100-00. If the generic warnings or cautions are required for a procedure, there will be a referral to the appropriate description and operation procedure.

If a warning, caution or note only applies to one step, it is placed at the beginning of the specific step.

NOTE:

TAS style procedures can be identified by steps that have no accompanying step text and the magenta color of the electrical connectors and fasteners such as nuts, bolts, clamps or clips.

A TAS removal and installation procedure uses a sequence of color illustrations to indicate the order to be followed when removing/disassembling or installing/assembling a component.

Many of the TAS procedures will have the installation information within the removal steps. These procedures will have the following note at the beginning of the procedure:

NOTE:

Removal steps in this procedure may contain installation details.

Items such as O-ring seals, gaskets, seals, self-locking nuts and bolts are to be discarded and new components installed unless otherwise stated within the procedure. Coated nuts or bolts are to be reused, unless damaged or otherwise stated within the procedure.

Specification procedures will contain all technical data that are not part of a repair procedure.

TAS Graphics

Colors used in the graphic are as follows:



- Blue - Indicates the target item, item to be removed/installed or disassembled/assembled
- Green and Brown - Indicates a secondary item that needs to be detached, removed/installed or disassembled/assembled prior to the target item




- Yellow - Component that is touched or affected in a way but remains in the vehicle. It may be detached, attached, moved, modified, checked, adjusted etc.
- Magenta - Indicates electrical connectors and fasteners such as nuts, bolts, clamps or clips
- Pale Blue - is for the special tool(s) and general equipment.

There may be multiple steps assigned to one illustration.

Numbered pointers are used to indicate the number of electrical connectors and fasteners such as nuts, bolts, clamps or clips.

Items in the illustration can be transparent or use cutouts to show hidden detail(s).

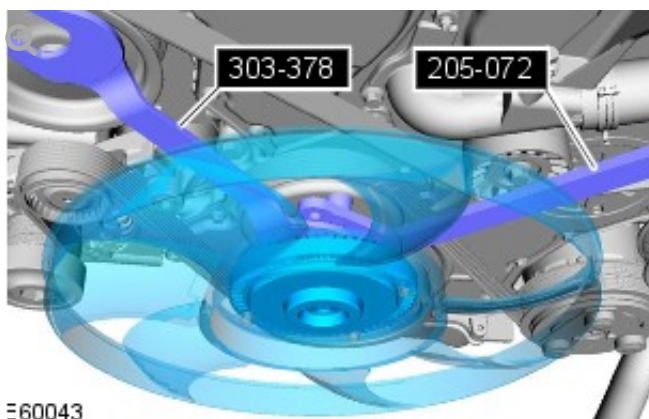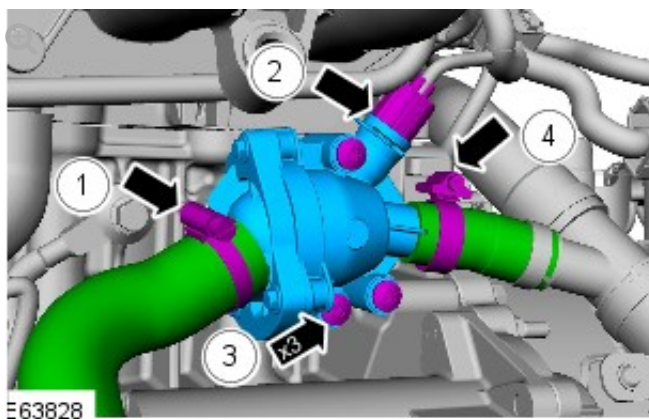


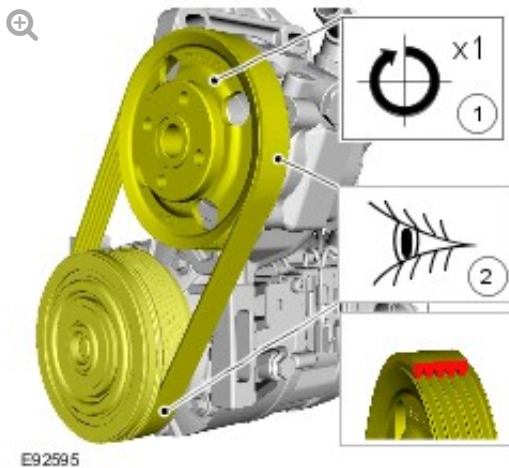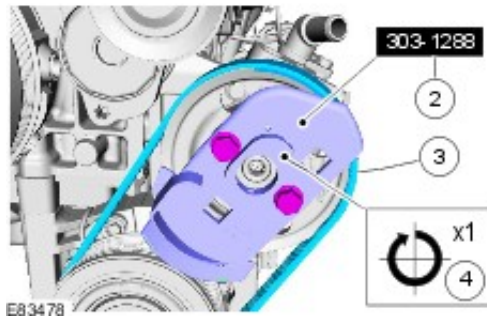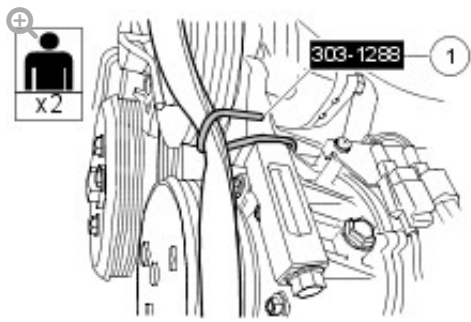

TAS Symbols


Symbols are used inside the graphics and in the text area to enhance the information display. The following paragraphs describe the various types and categories of symbols.

Prohibition symbols advise on prohibited actions to either avoid damage or health and safety related risks.

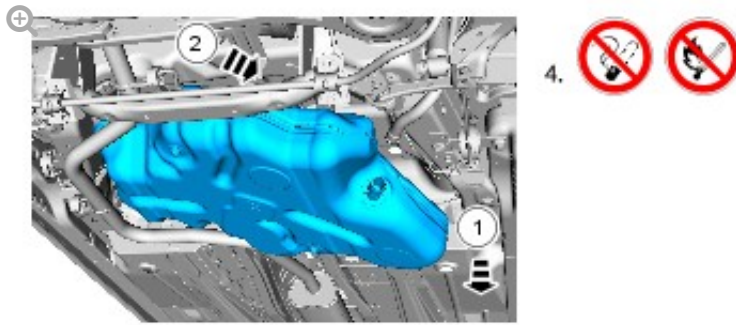


E85026

Health and Safety symbols recommend the use of particular protection equipment to avoid or at least reduce the risk or severity of possible injuries.

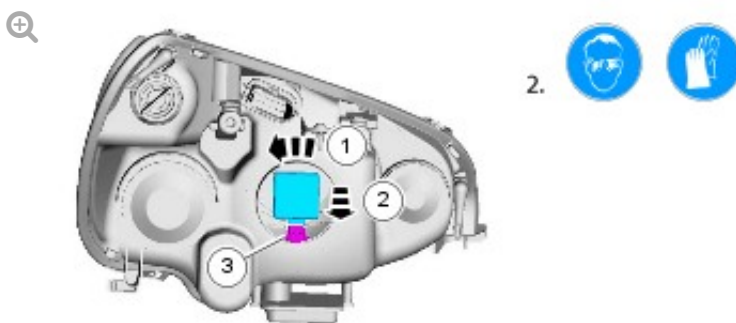

E85027

Warning symbols are used to indicate potential risks resulting from a certain component or area.

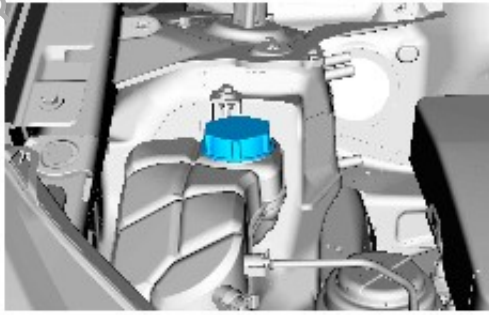


3.



E85028


Instruction symbols are used to apply sealer, lubricant, weight, tape or cleaning detergent to a component.

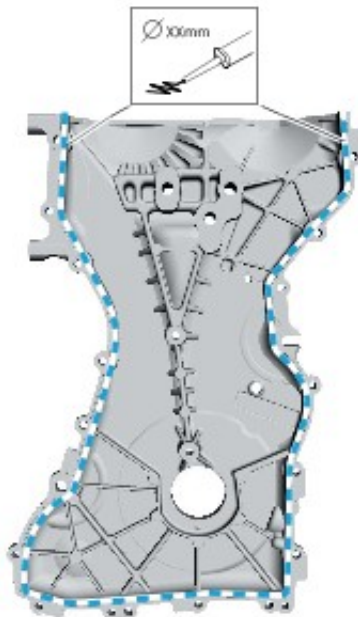


E84834




Location symbols are used to show the location of a component or system within the vehicle.

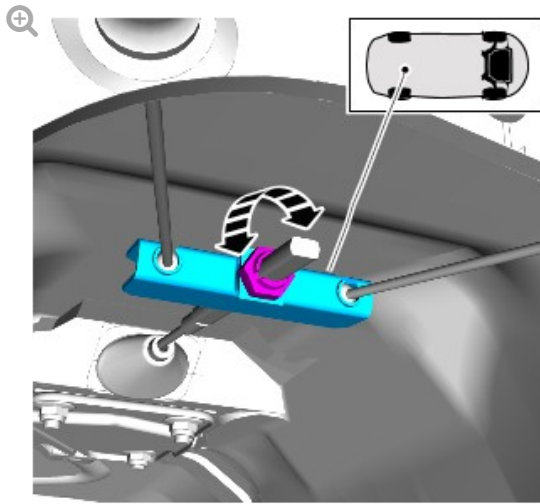


E84835

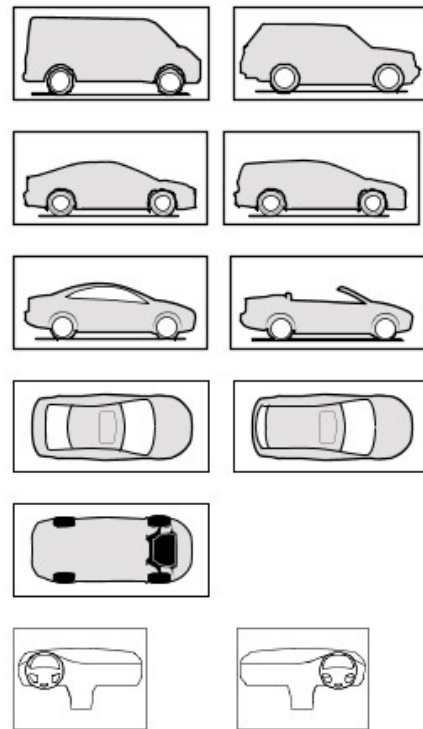

Gearshift lever or selector lever position symbols are used to show which gearshift lever or selector lever position is to be set.


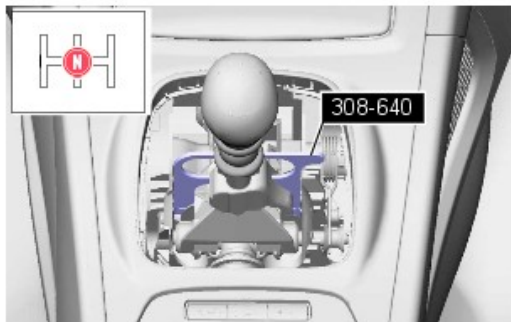


E84836

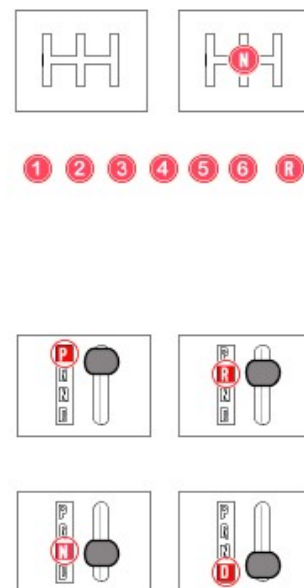


Pointer symbols are used to draw the attention to components and give special instructions such as a required sequence or number of components. The number of components is reflected by the value inside the luty arrow. A sequence number is located inside the circle. Numbers inside circles are also


used to allocate special information such as tightening torques or chemicals to a particular component.

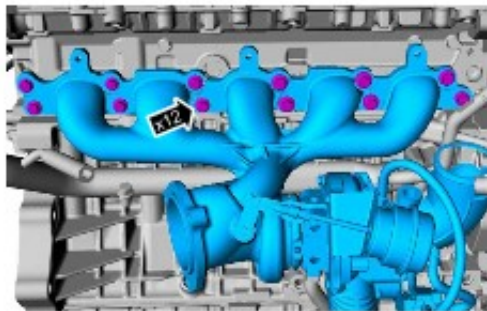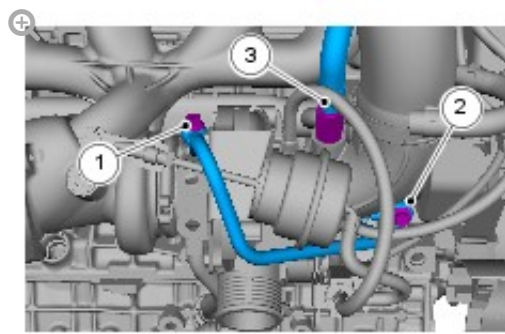


E84837

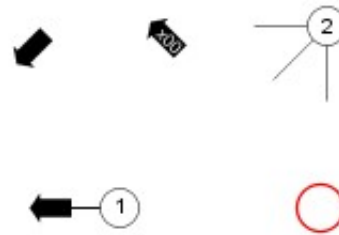

Movement arrows are used to show three dimensional or rotational movements. These movements can include specific values inside the symbol if required.

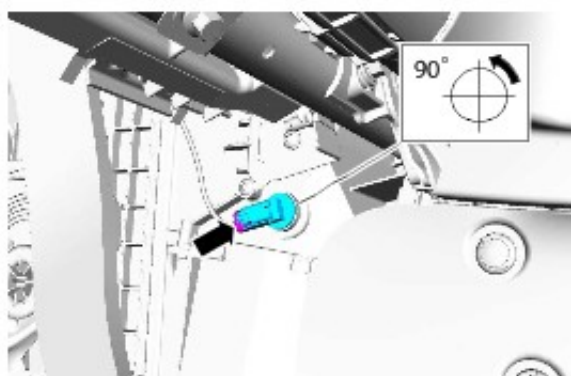


E84838

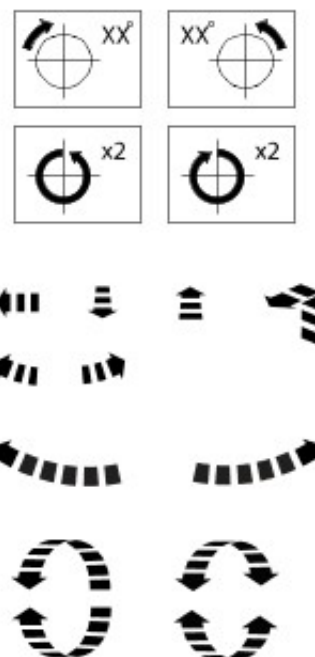


Standard tool symbols recommend the use of certain standard tools. These

tools can include dimension values if required.

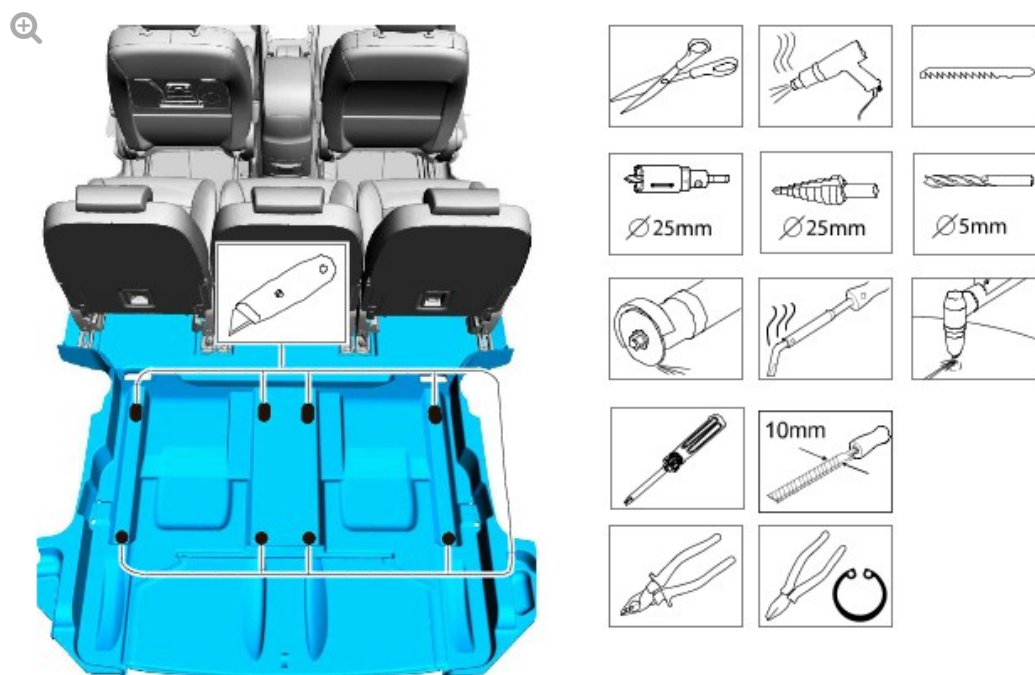


E84839

The following graphic illustrates a set of symbols that are used to provide detailed information on where to apply a material.

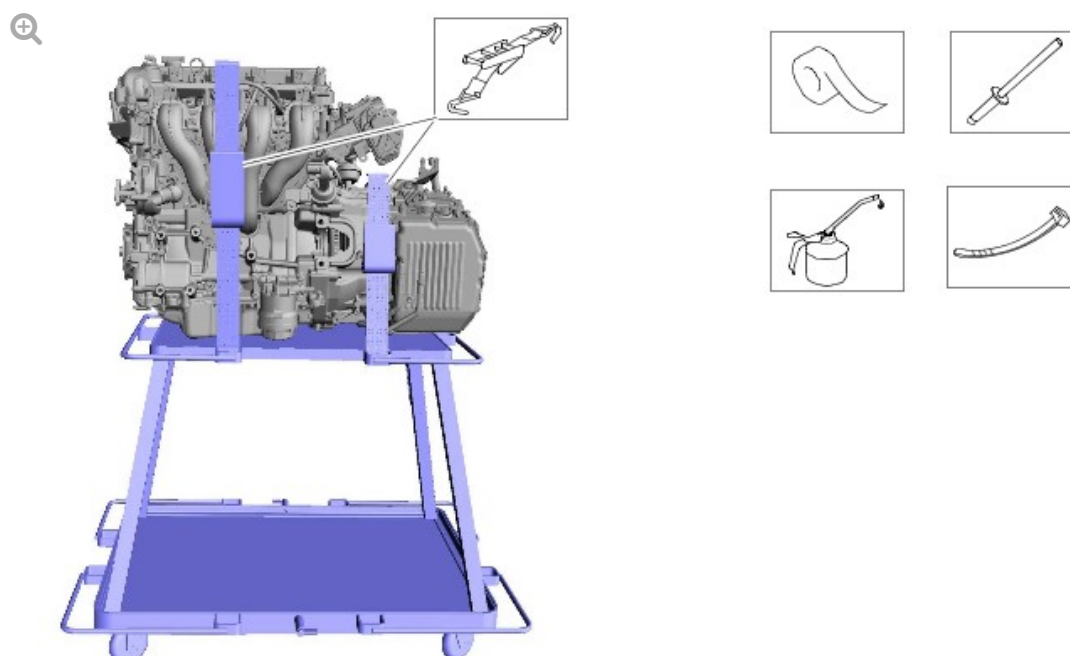


E84840

Measurement symbols provide detailed information on where to carry out a specific measurement. These symbols can include specific values if required.

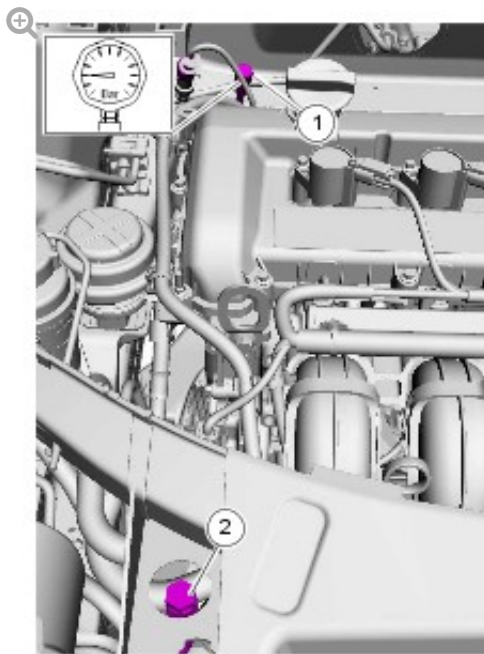

E84841

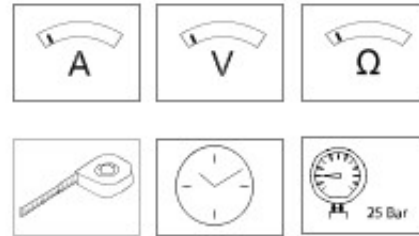

Special Tools and Torque Figure(s)

Special tools will be shown with the tool number in the illustration. The special tool number(s), general equipment, material(s) and torque figure(s) used for the procedure step will be shown in the text column.