

2016.0 RANGE ROVER (LG), 100-02

JACKING AND LIFTING

DESCRIPTION AND OPERATION

GENERAL

WARNING:

Make sure that any jacks or stands that are used to raise the vehicle have sufficient capacity to support the additional weight of the armoured vehicle.

CAUTION:

Do not position jacks or axle stands under the following components:

- Body structure other than any approved jacking or lifting points
- Bumpers
- Fuel lines
- Fuel tank
- Brake lines
- Front or rear suspension arms
- Steering linkage
- Transfer case
- Front or rear differential units
- Transmission

For certain repair operations, it may be necessary to support the engine under the oil pan. In this case, a block of hardwood or a rubber pad must be positioned on the jack lifting pad to protect the oil pan.

VEHICLE JACK

WARNINGS:


- The trolley jack, if supplied with the vehicle is heavy and if handled incorrectly may cause injury. Use extreme caution when lifting or manoeuvring the jack.
- Never work under a vehicle supported by the vehicle jack only.
- The vehicle jack is intended to be used in an emergency for changing a deflated tire. Never use the jack to raise the vehicle for any other purpose. Refer to the Driver Handbook when using the jack supplied with the vehicle. Failure to follow these instructions may result in personal injury.

VEHICLE JACK STOWAGE

If fitted, the trolley jack is located in the luggage compartment.

To release the trolley jack cover, unscrew the two wing-nuts on the side of the cover. The cover can now be removed.

Vehicle jack stowage area

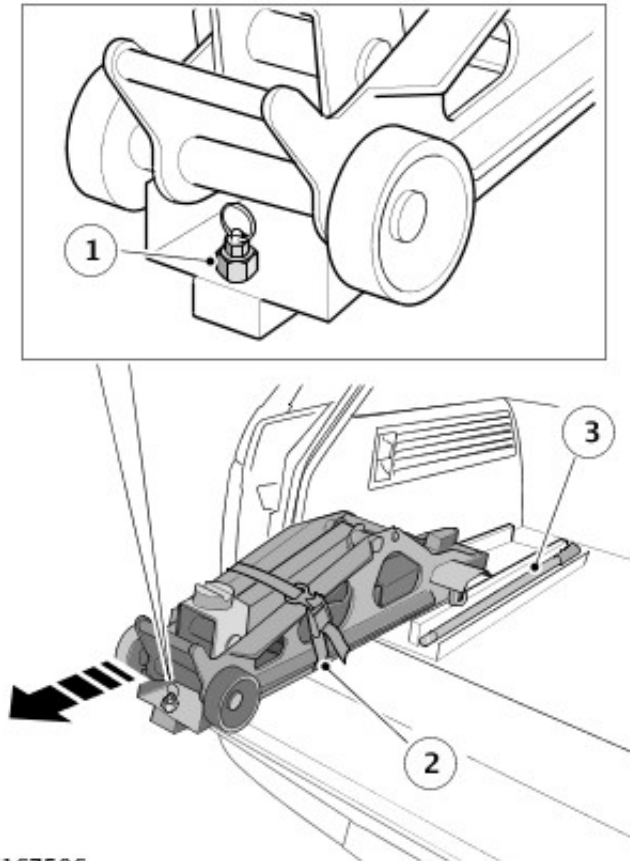

E167506

TO REMOVE THE TROLLEY JACK:

ITEM	DESCRIPTION
1	Lift the pin at the front of the trolley jack cradle and slide the cradle forwards.
2	Release the strap and remove the trolley jack.
3	The trolley jack handle is located in the cradle.

Safety Precautions

The following safety precautions must be observed when raising the vehicle with the vehicle jack:

- Never rely on a jack alone to support a vehicle. Always use suitable stands to provide rigid support.
- When working beneath a vehicle, use a vehicle lift if possible, instead of a jack and stands


- Make sure that the vehicle is standing on firm, level ground before using a jack.
- Do not rely on the parking brake alone; chock the wheels, and if possible put the automatic transmission into 'Park'.
- Check that any lifting equipment used has adequate capacity for the load being lifted and is in correct working order.

WARNINGS:

- The spare wheel is heavy and if handled incorrectly may cause injury. Use extreme caution when lifting or manoeuvring the wheels.
- Remove the spare wheel before using the jack to avoid destabilizing the vehicle when raised.




The jacking and lifting points for the armoured vehicle are the same as the standard vehicle.

Vehicle jacking points

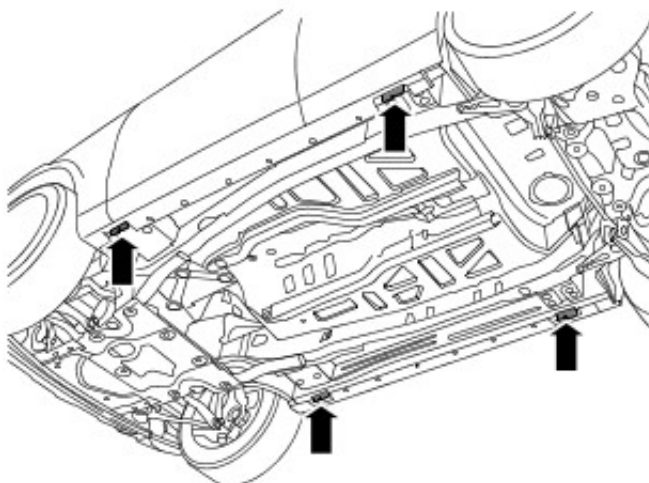

E167507

Jack movement precautions

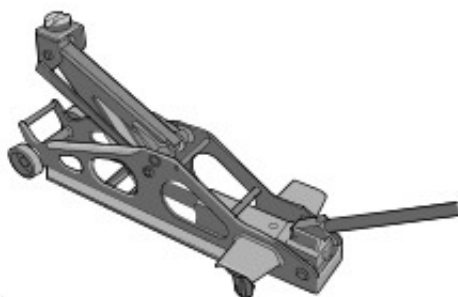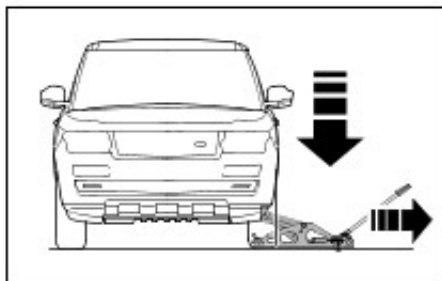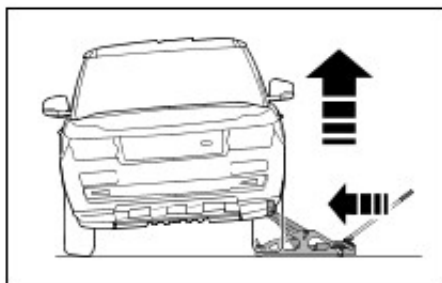

E167508

AS THE LIFTING ARM OF THE TROLLEY JACK IS RAISED OR LOWERED, THE MAIN BODY OF THE JACK WILL MOVE TOWARDS OR AWAY FROM THE VEHICLE:

ITEM	DESCRIPTION
1	Raising the vehicle - the jack moves forwards.
2	Lowering the vehicle - the jack moves backwards.

WARNING:

It is important to clear away any stones and other debris from the ground, that might prevent free movement of the jack. Should the jack not be able to move, it could be damaged or the head of the jack could damage the vehicle jacking point and possibly cause other damage to the vehicle body.

Check that the wheels of the jack are free to rotate, and are not stiff or seized.

Storing the jack after use

With the jack in the fully closed position and the release valve in the open position, remove the jack lever.

VEHICLE WEIGHT

The weight of the vehicle is greater than the standard vehicle. Always make sure that any jacks or lifts are capable of supporting the additional loads.

DESCRIPTION	FRONT	REAR	TOTAL
Gross Vehicle Weight (GVW)	1900 kg	2660 kg	4430 kg
	(4189 lb)	(5864 lb)	(9766 lb)
Approximate EEC kerb weights (full fuel tank)	-	-	3550 kg
			(7826 lb)

NOTE:

GVW is not calculated by adding together maximum front and rear axle loads. The above individual maximum axle weights and gross vehicle weight must not be exceeded.