

2016.0 RANGE ROVER (LG), 100-02

JACKING AND LIFTING


DESCRIPTION AND OPERATION

TOWING/LASHING EYES

CAUTION:

The single towing/lashing eyes at the front and rear of the vehicle are designed for vehicle recovery purposes only and **MUST** not be used to tow a trailer or caravan.

Front towing/lashing eye

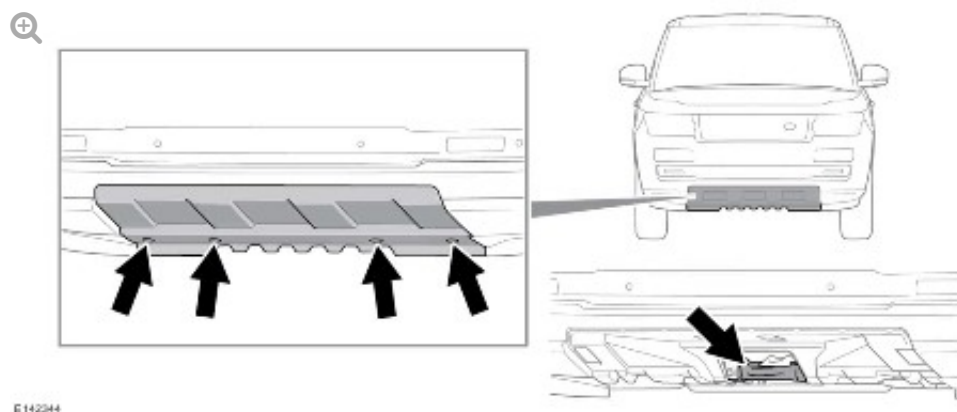

The front towing/lashing eye is accessible after releasing and removing the towing eye access panel:

1. Rotate the retaining clips 90 degrees counter clockwise.
2. Slide the cover forward and release the locking tangs, then remove the


cover.

Reverse the steps above for installation.

CAUTION:

Make sure that during towing, the towing attachment does not contact the front bumper.

Rear towing/lashing eye

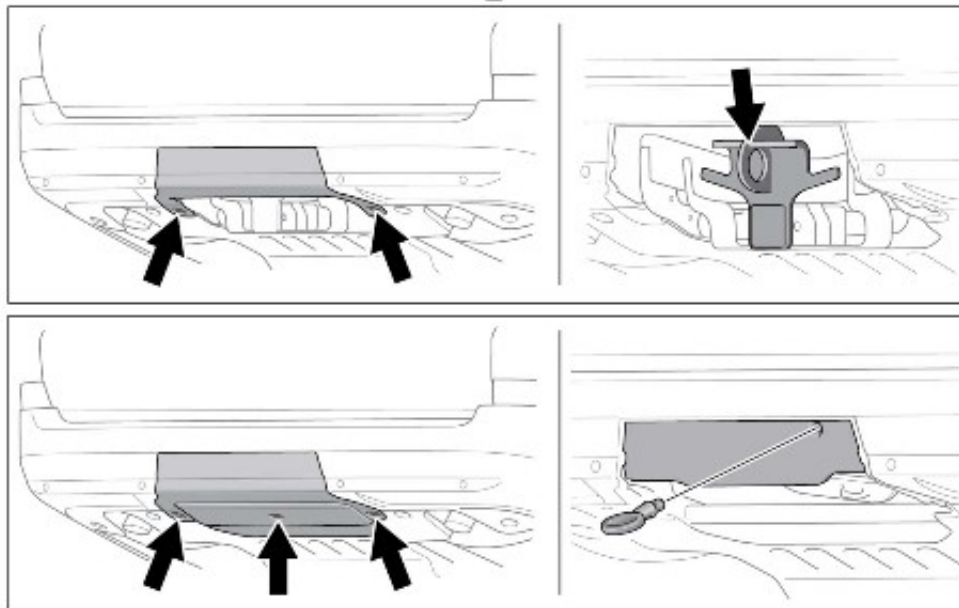

E1436 79

1. Rotate the retaining clips 90 degrees counter clockwise.
2. Rotate the cover and release the locking tangs and remove the cover.
3. Vehicles with deployable towbar requires the towing/lashing eye to be installed that is located in the vehicle tool kit.

4. Vehicles without deployable towbar, secure the towing/lashing eye (rotate counter clockwise).

Reverse the steps above for installation.

TRANSMISSION EMERGENCY PARK RELEASE

During vehicle recovery, it is essential that the transmission emergency park release mechanism is activated.

1. Apply the parking brake.
2. Select P (park) on the automatic transmission selector.
3. Remove the centre console cup holders.
4. Using a suitable tool, remove the access panel.



6. Activate the transmission emergency park release.

- 1 Rotate the locking mechanism 90 degrees counter clockwise.
- 2 Apply the foot brake.
- 3 Pull the transmission emergency park brake release lever up to active

the mechanism.

STEERING COLUMN UNLOCK

During vehicle recovery, the ignition key must remain inside the vehicle and the ignition must be ON.

4 WHEEL TOWING

CAUTIONS:

- Suspended towing of this vehicle **MUST NOT** be attempted. If four wheel towing is not possible, vehicle must be recovered on a suitable trailer.
- The vehicle may be towed for a maximum of 1 hour or 31 miles (50 km) at a maximum speed of 31 mph (50 km/h), these limits **MUST NOT** be exceeded.
- The following procedures must be followed to make sure that the vehicle is towed in a safe condition and damage to the vehicle transmission system is prevented.
- The vehicle tow connections should only be used in normal road conditions, **snatch** recovery must be avoided.
- Only tow the vehicle in a forward direction, with all 4 wheels on the ground. Failure to follow this instruction may result in damage to the transmission.
- **If N (neutral) is selected on the automatic transmission selector and the engine is OFF, the transmission will automatically select P (park) after 10 minutes has elapsed. If the transmission emergency park release is not activated and the vehicle is towed, damage to the transmission may occur.**

NOTE:

If the battery is to be disconnected, the steering column must be unlock prior to disconnection and recovery of the vehicle.

- 1 Make sure that the steering column lock is unlocked.
2. Remove the front towing/lashing eye access panel.

CAUTION:

Make sure that the towing attachment will not contact the front bumper during towing.

3. Secure the towing attachment from the recovery vehicle to the towing/lashing eye.
4. Apply the parking brake.
5. Turn the ignition ON.
6. Apply the footbrake and move the automatic transmission selector to the N - Neutral position.

WARNING:

Do not release the parking brake until towing is about to commence. Whilst towing, do not attempt to start the engine. With the engine switched off, the power assisted steering system and brake booster will be inoperative thereby resulting in an increase in the effort required to turn the steering wheel and apply the brakes.

7. Active the transmission emergency park release.


8. Release the parking brake.

ON COMPLETION OF 4 WHEEL TOWING

WARNING:

Use extreme caution when removing the towing/lashing equipment.
Vehicle movement is possible and may result in injury.

1. Apply the parking brake.
2. Turn the ignition OFF.
3. Select P (park) on the automatic transmission selector.

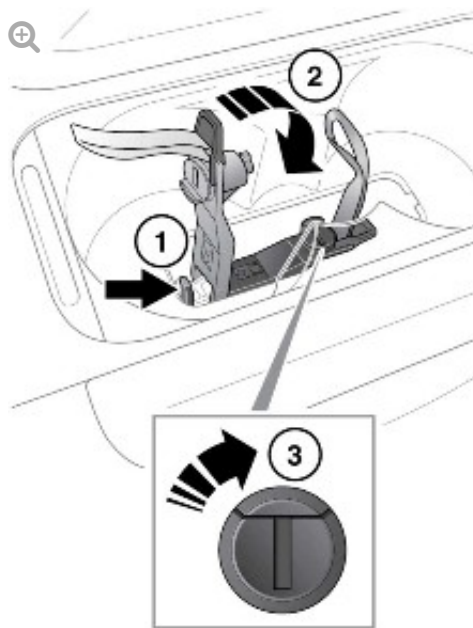

E16 1701

4. Deactivate the transmission emergency park brake release.
 - 1 Using a suitable tool, release the latch.
 - 2 Return the transmission emergency park brake release lever to its original state.
 - 3 Rotate the locking mechanism 90 degrees clockwise.

5. Detach towing equipment from towing/lashing eyes.

6. Install the towing eye access panel.

TRANSPORTING BY TRAILER

WARNING:

Use extreme caution when moving or towing the vehicle. Serious injury or death may occur.


CAUTIONS:

- Always use qualified personnel to carry out the vehicle recovery.
- Make sure that the vehicle is secured correctly.

The recommended method of vehicle recovery/transportation of the vehicle is by a trailer designed for that purpose.

If the vehicle has the electrical systems operational, the vehicle air suspension must be set to **access height** prior to securing the vehicle to the recovery vehicle or trailer. Follow the instructions below to set the **access height**:

ACCESS HEIGHT

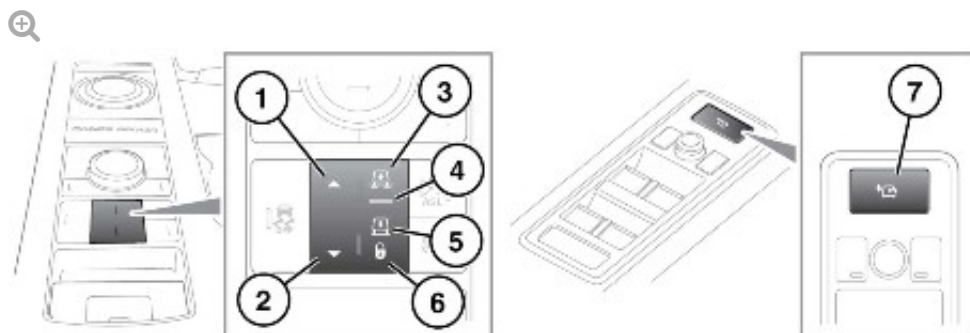

NOTE:

Access height can be selected up to 1 minute after the ignition is OFF, providing that the driver side door has not be opened.

1. Press the access switch (7) on the driver side door window switch.
2. Press the height switch (2) to the down position.
3. If the suspension is the off-road height, then press the height switch (2) down twice. **ACCESS HEIGHT SELECTED** will be displayed in the message centre.
4. Lock the access height by pressing the access switch (7) or height switch (2) down for longer than 1 second. **SUSPENSION LOCKED AT ACCESS HEIGHT** will be displayed in the message centre.

To cancel the access height mode press up on the height switch (2).

OFF-ROAD RECOVERY

It is recommended off-road driving/recovery training is completed prior to attempting off-road recovery.