

2016.0 RANGE ROVER (LG), 303-05

ACCESSORY DRIVE - TDV6 3.0L DIESEL

REAR END ACCESSORY DRIVE

[G1509476]

REMOVAL AND INSTALLATION

12.10.27	BELT - FUEL PUMP DRIVE - RENEW	3000 CC, TDV6	2.9	USED WITHINS	+
----------	--	------------------	-----	-----------------	---

SPECIAL TOOL(S)



303-1117

Timing Peg,
Automatic
Transmission



310-212

Rear End Accessory
Drive (READ) belt
Timing Tool

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 1	Renew Part	Timing belt tensioner

REMOVAL

WARNINGS:

- Do not carry or operate cellular phones when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.
- Do not carry out any repairs to the fuel system with the engine running. The fuel pressure within the system can be as high as 1650 bar (23,931 lb-sq-in). Failure to follow this instruction may result in personal injury.
- Do not smoke or carry lighted tobacco or open flame of any type when working on or near any fuel related components. Highly flammable vapors are always present and may ignite. Failure to follow these instructions may result in personal injury.
- This procedure involves fuel handling. Be prepared for fuel spillage at all times and always observe fuel handling precautions. Failure to follow these instructions may result in personal injury.

CAUTIONS:

- Make sure the workshop area in which the vehicle is being worked on is as clean and as dust free as possible. Foreign matter from work on clutches, brakes or from machining or welding operations can contaminate the fuel system and may result in later malfunction.
- Always carry out the cleaning process before carrying out any repairs to the fuel injection system components. Failure to follow this instruction may result in foreign matter ingress to the fuel injection system.
- Diesel fuel injection equipment is manufactured to very precise tolerances and fine clearances. It is therefore essential that absolute cleanliness is observed when working with these components. Always install blanking plugs to any open orifices or lines. Failure to follow this instruction may result in foreign matter ingress to the fuel injection system.
- Do not disassemble or clean inside the fuel pump, even with an ultrasonic cleaner. Always install a new fuel pump when required.

1. Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).
2. Refer to: [Secondary Bulkhead Centre Panel - TDV6 3.0L Diesel](#) (501-02 Front End Body Panels, Removal and Installation).



3.

WARNING:


Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

4. Refer to: [Starter Motor](#) (303-06A Starting System - TDV6 3.0L Diesel, Removal and Installation).

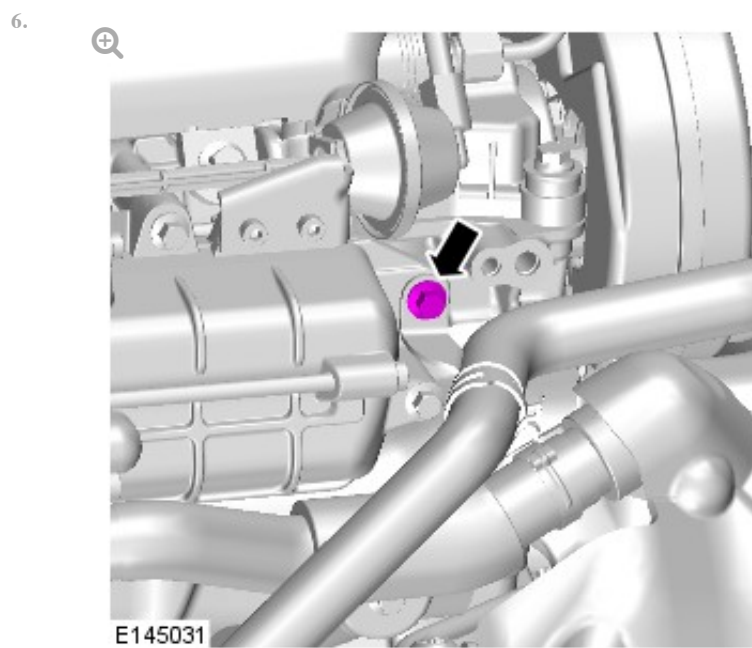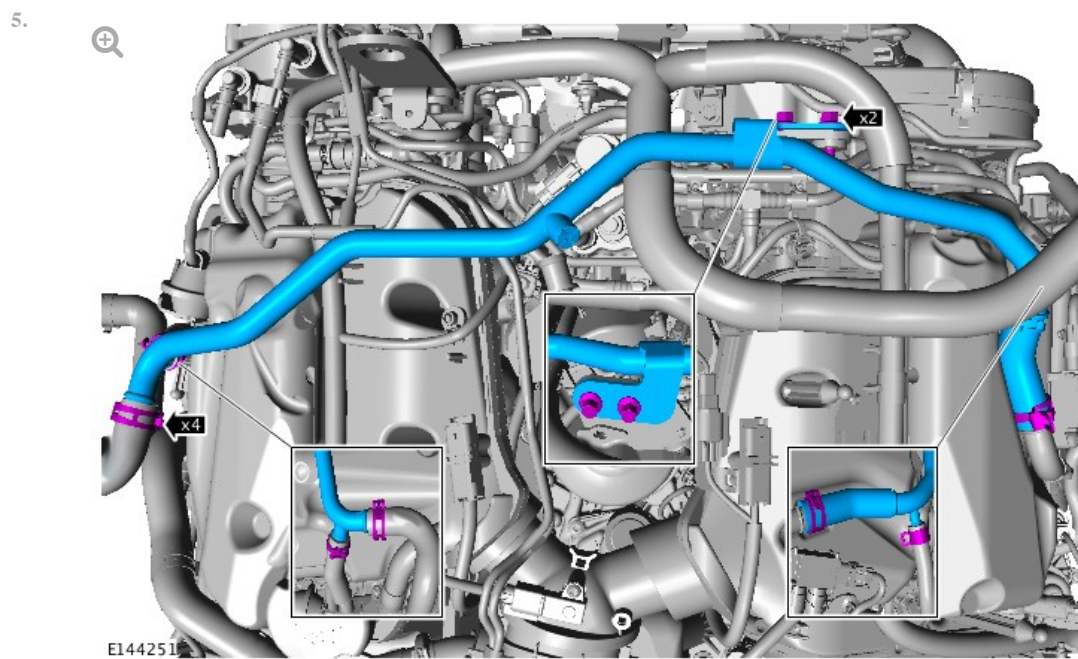


7.

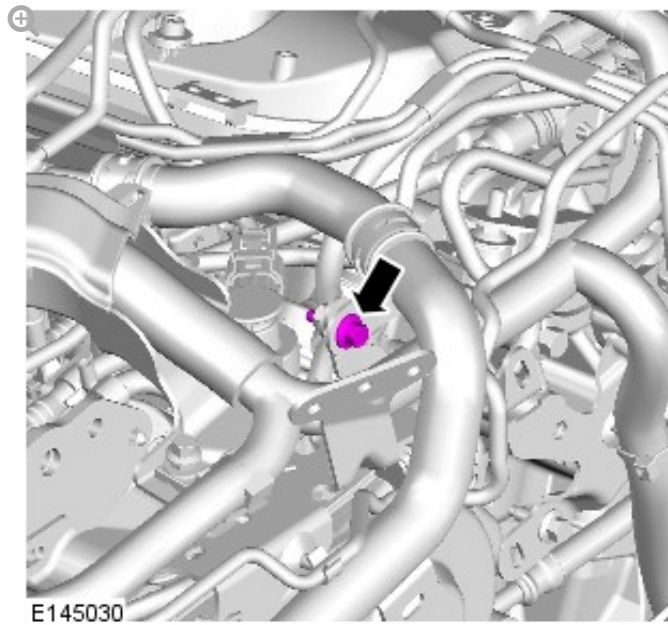

8.

NOTE:


Engine shown removed for clarity.

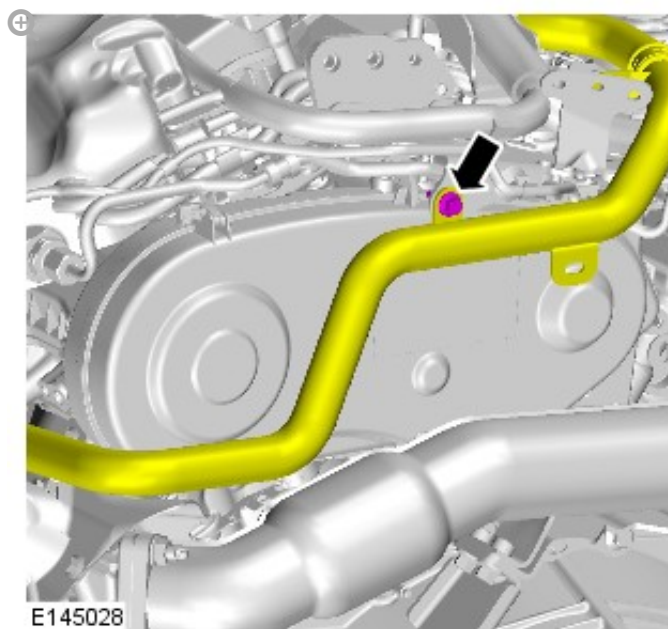


9.

NOTE:

Engine shown removed for clarity.

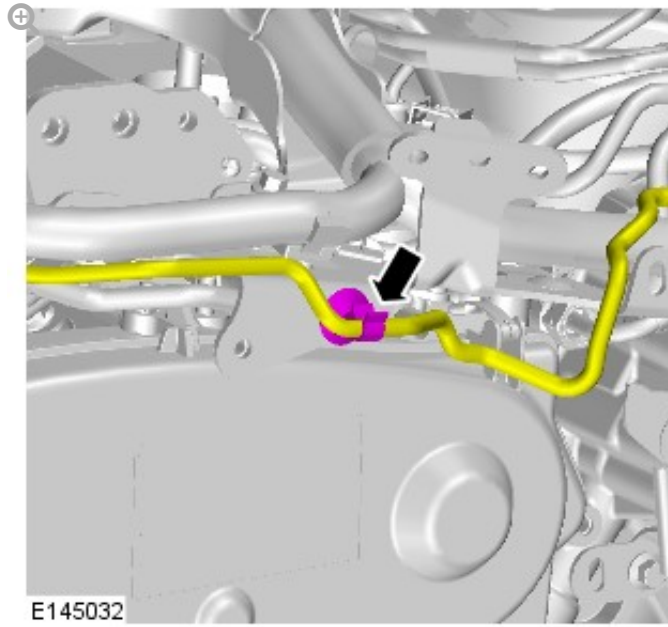


10.

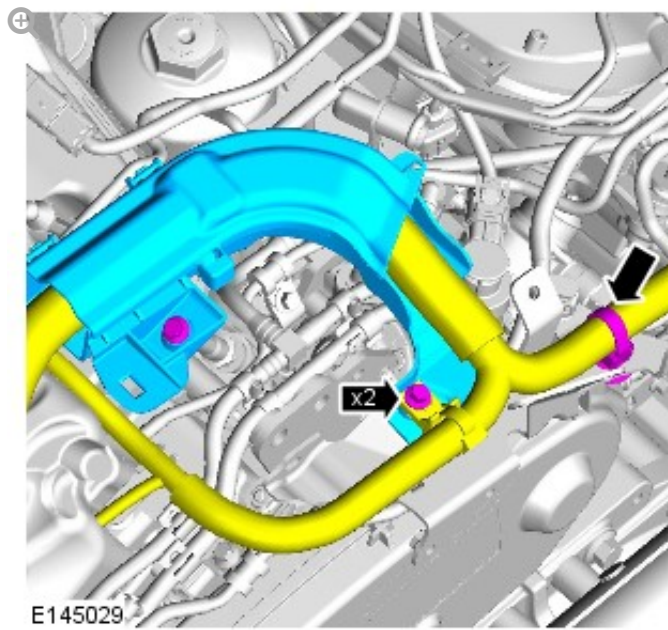

11.

NOTE:


Engine shown removed for clarity.

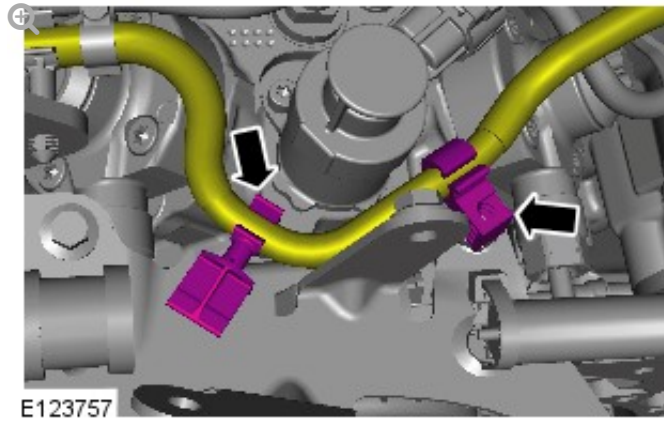


12.

NOTE:

Engine shown removed for clarity.

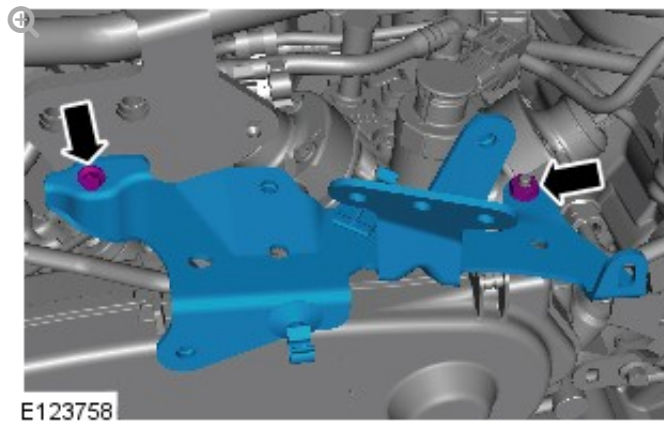

13.

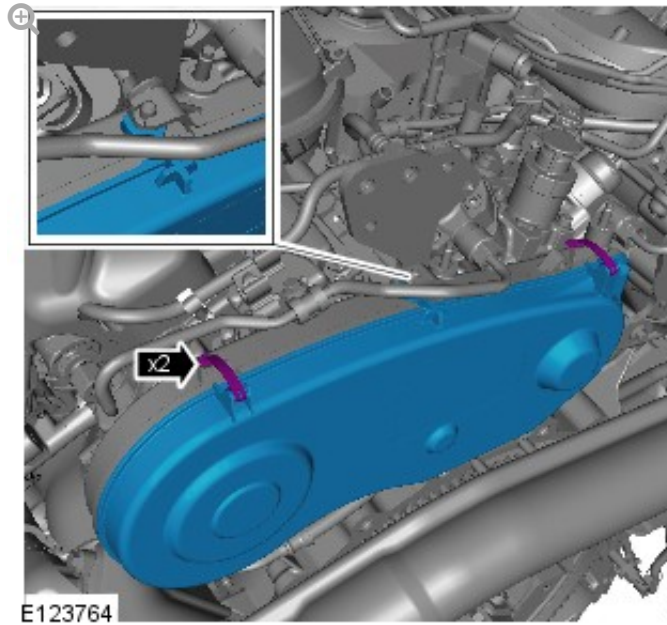


14.

CAUTION:

Only rotate the crankshaft clockwise.

NOTES:


- This step requires the aid of another technician.
- Engine shown removed for clarity.

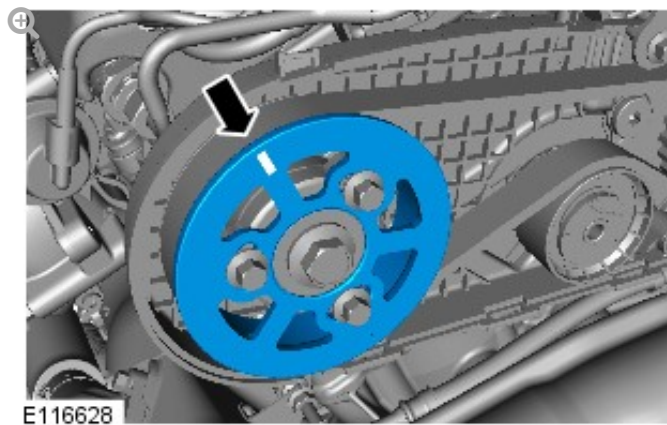


Rotate the crankshaft until the mark on the rear camshaft pulley is in

the illustrated position.

15.

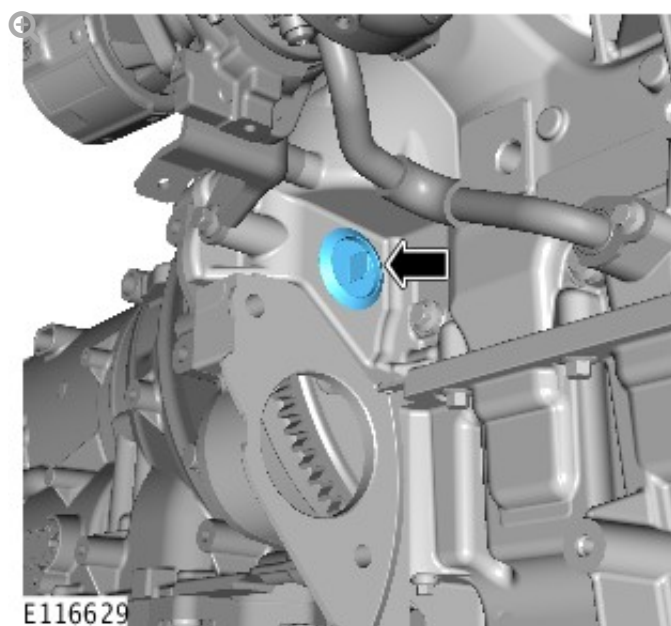


16.

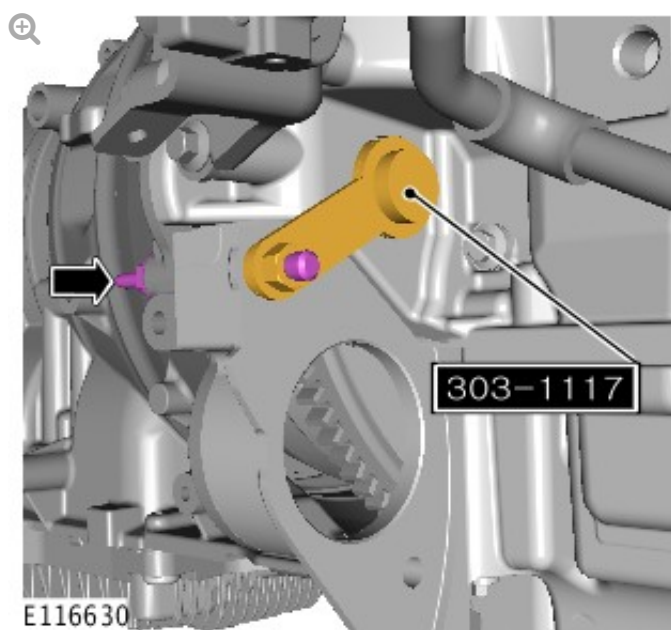

- Install the special tool.
- *Special Tool(s):* [303-1117](#)


17.

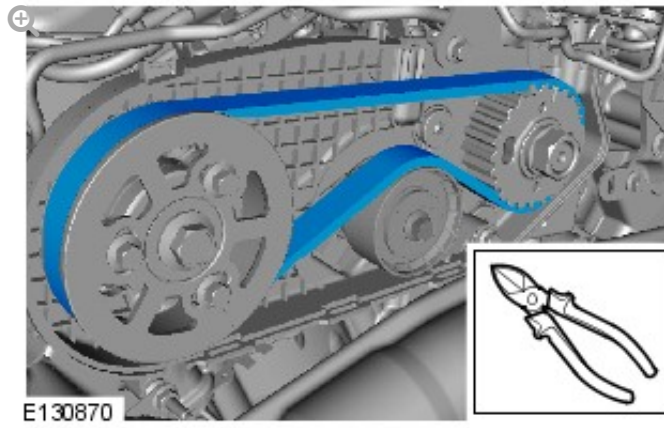

18.

CAUTION:


Discard the component.

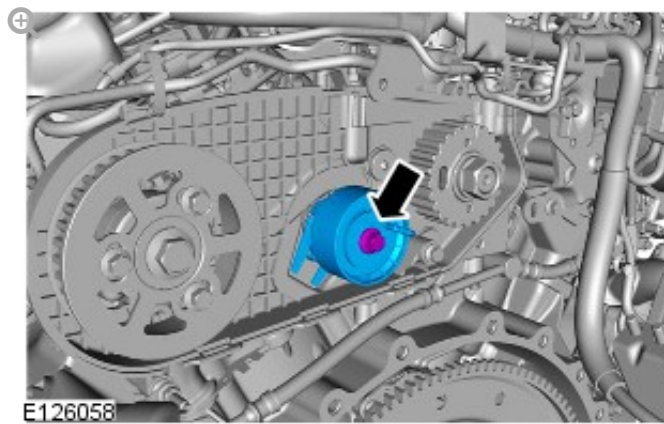

19.

NOTE:

Do not loosen the bolts more than 2 turns.

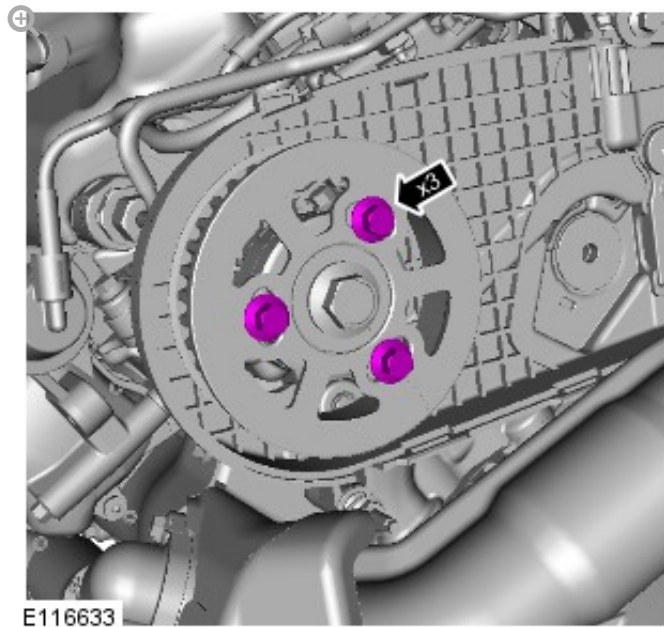

INSTALLATION


1.

CAUTION:

Make sure that the READ belt tensioner tang is correctly located to the READ belt rear cover. Failure to follow this instruction may result in damage to the engine.

NOTE:

Make sure that the READ belt tensioner locking pin is not removed until the READ belt is fully installed.

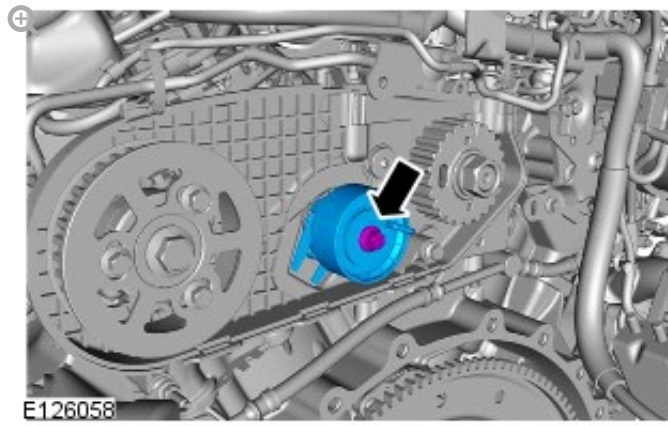


Renew Part: *Timing belt tensioner.*

Torque: 23 Nm


2.

NOTE:

Make sure the new READ belt is correctly seated onto the fuel pump pulley.

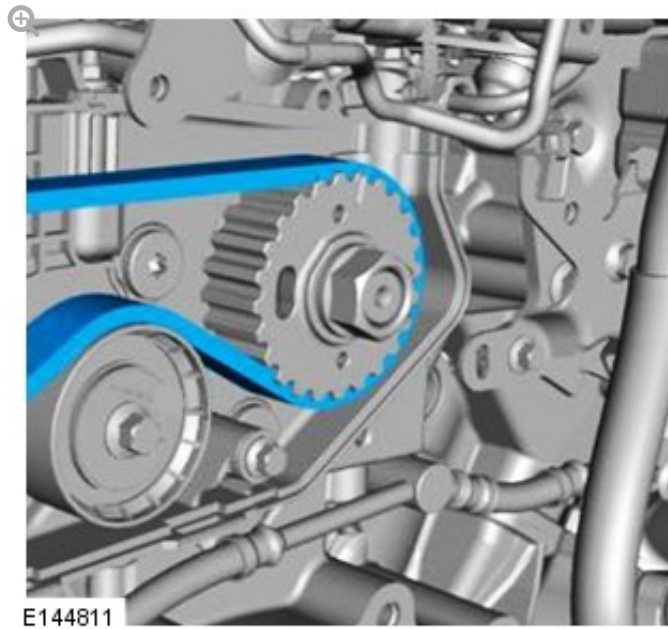

3.

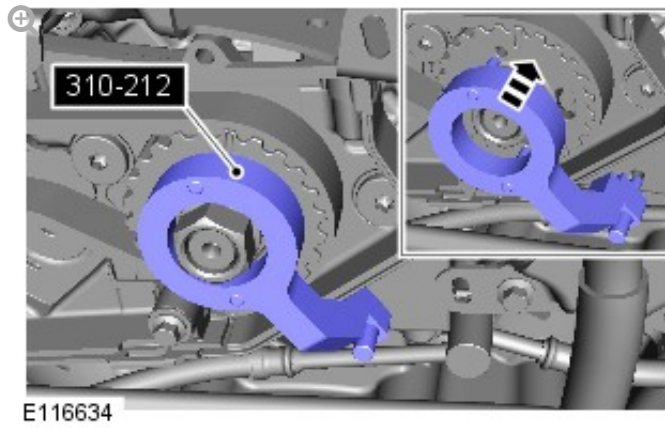


- Install the special tool.
- *Special Tool(s):* [310-212](#)

4.

NOTES:

- The READ rotates in a counter-clockwise direction when viewed from the rear of the engine.
- Make sure the new READ belt is correctly seated onto the camshaft and fuel pump pulleys.

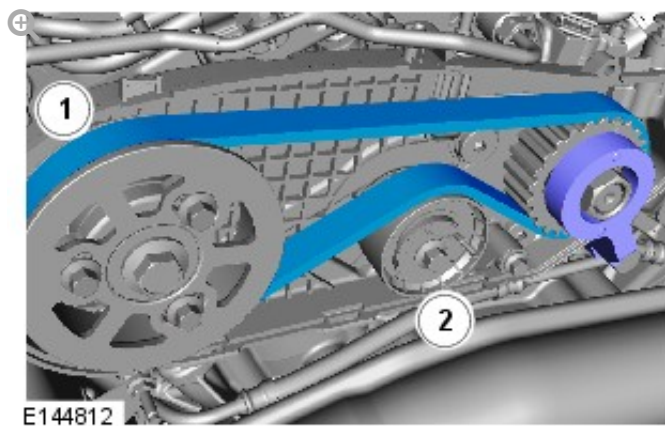


Install the READ belt onto the camshaft pulley (1) and on to the tensioner (2).

5.

NOTE:

Make sure that the READ belt tensioner locking pin is not removed until the READ belt is fully installed.

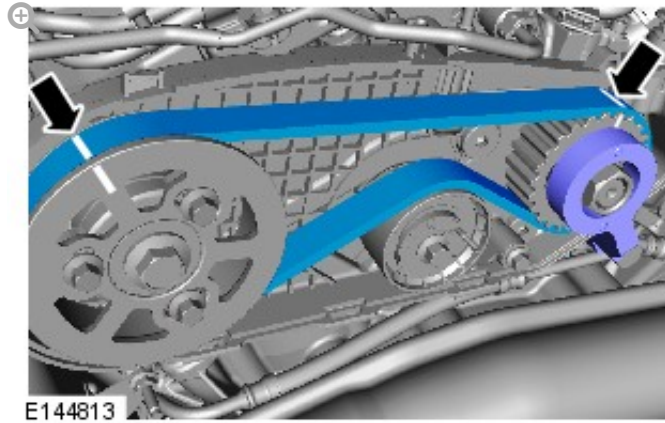


Make sure that the rear end accessory drive (READ) belt is aligned with the marks on the rear camshaft pulley and fuel injection pump pulley as illustrated.

6.

NOTE:


Engine shown removed for clarity.

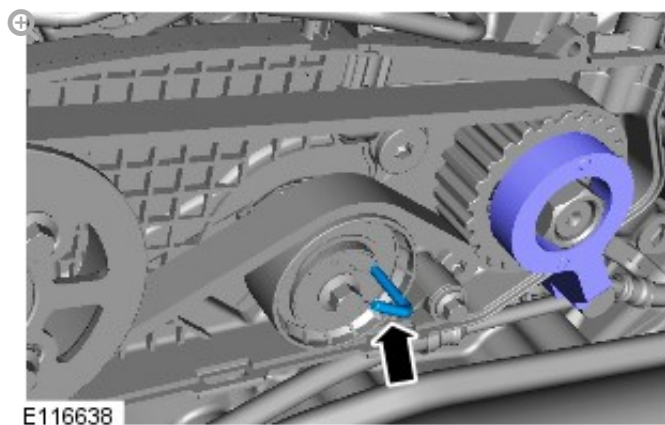

7.

NOTE:

Engine shown removed for clarity.

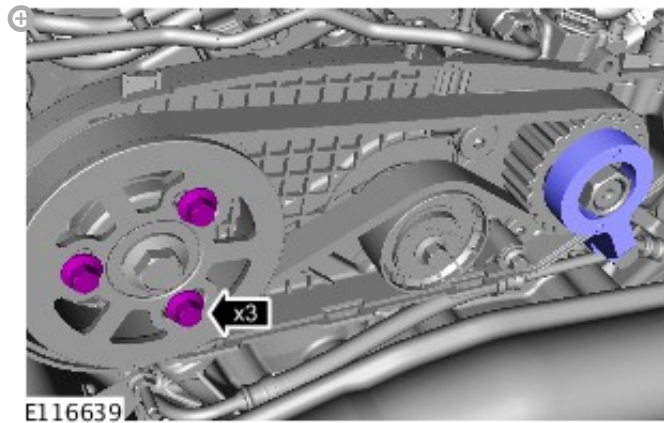


Torque: 23 Nm

8.


NOTE:

Engine shown removed for clarity.

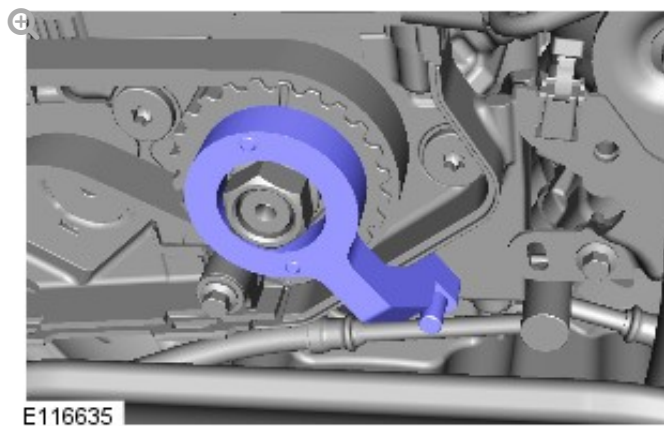

- Remove the special tool.
- *Special Tool(s):* [310-212](#)


9.

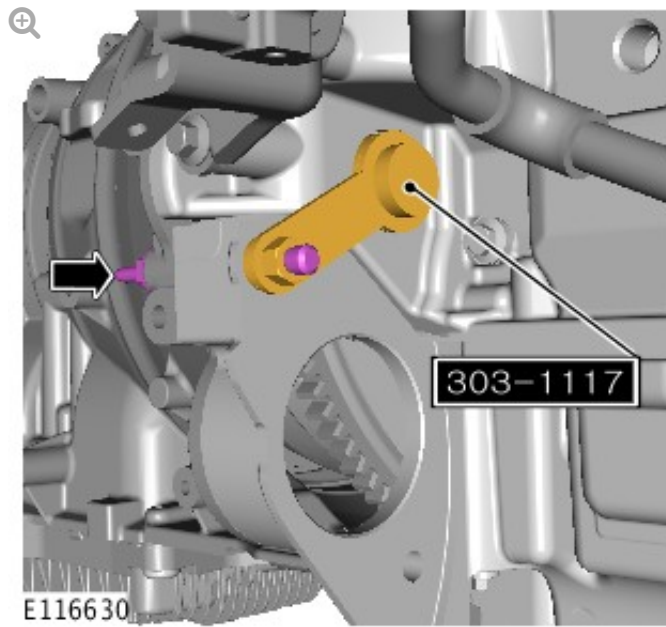


Remove the special tool.

Special Tool(s): [303-1117](#)

10.

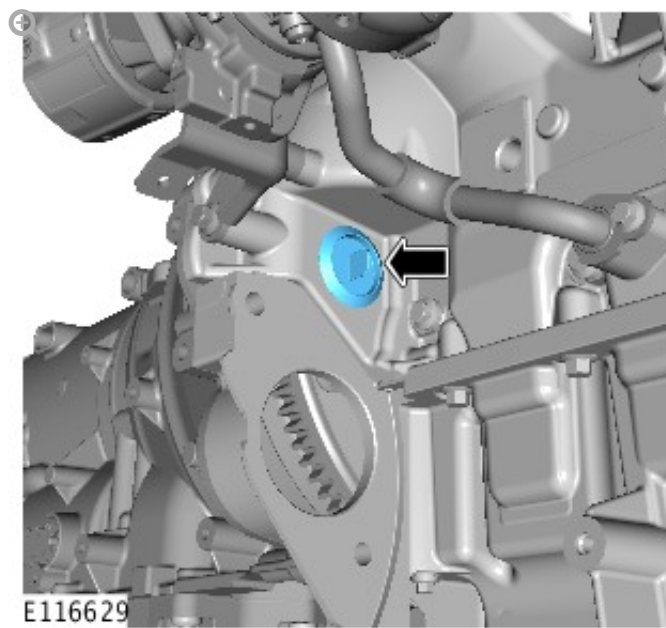


11.

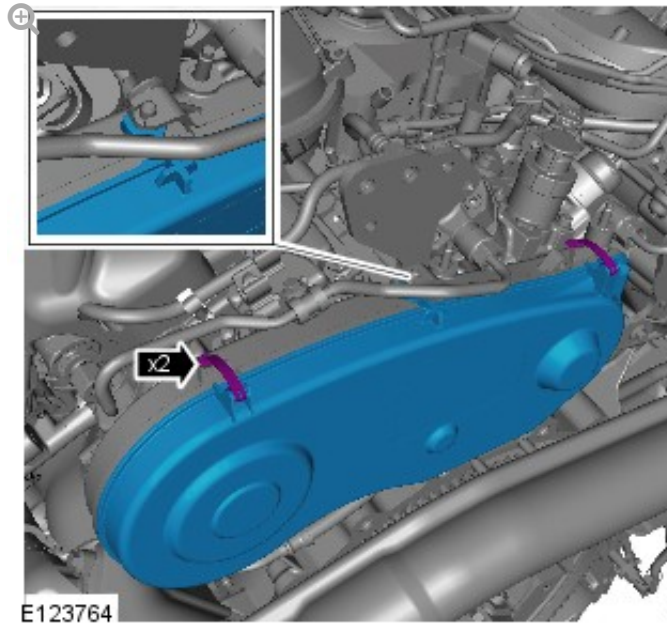

12.

NOTE:

Engine shown removed for clarity.

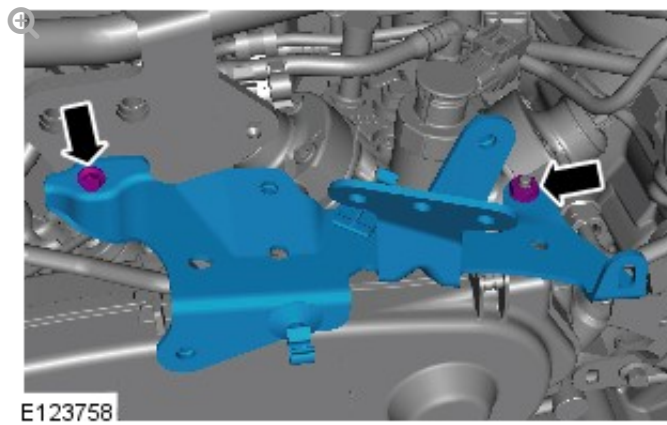


- *Torque: 10 Nm*


13.

NOTE:

Engine shown removed for clarity.

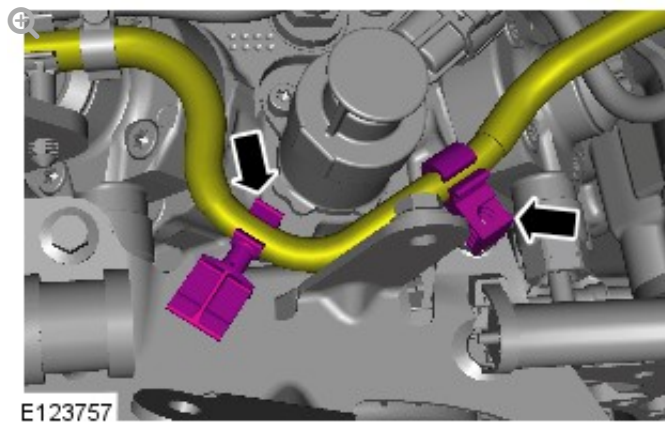

14.

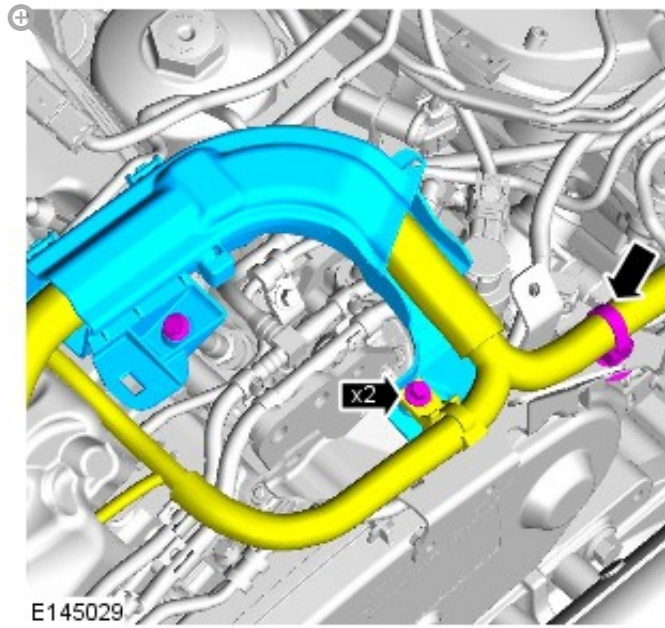


- *Torque: 5 Nm*


15.

NOTE:


Engine shown removed for clarity.

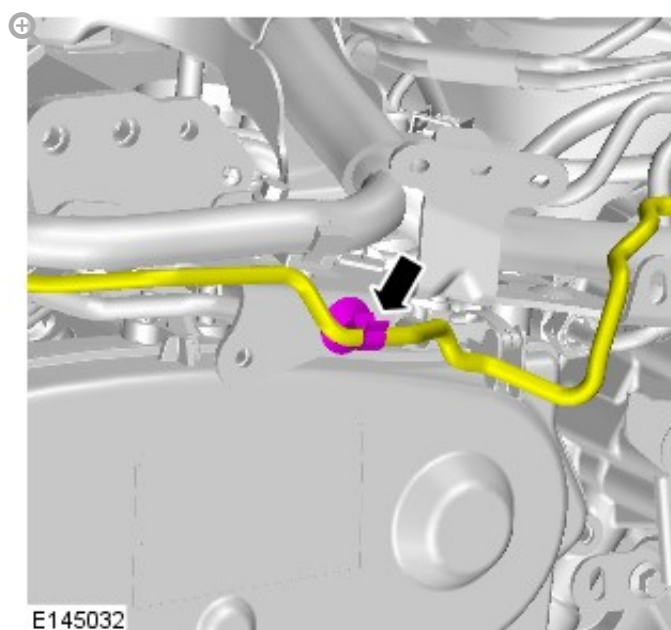

16.

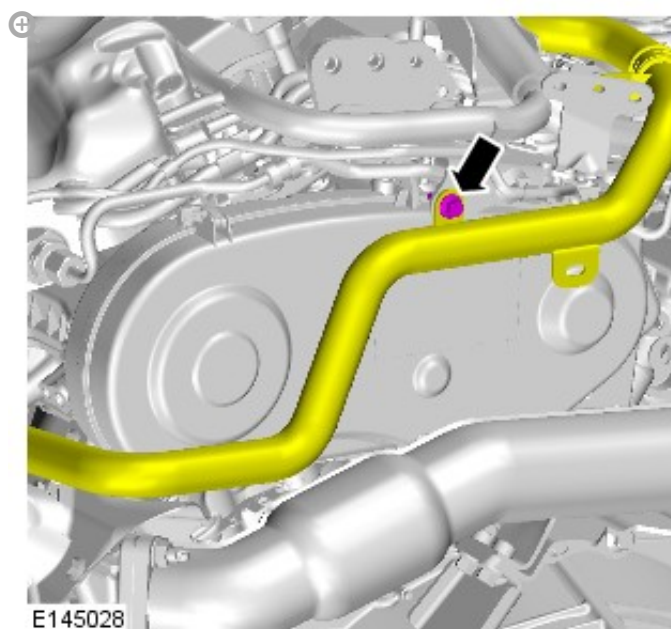


17.

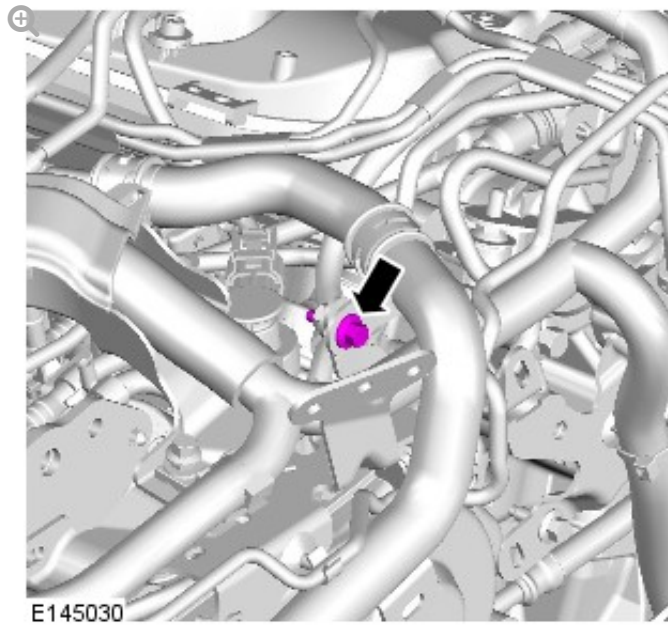


- *Torque: 10 Nm*

18.

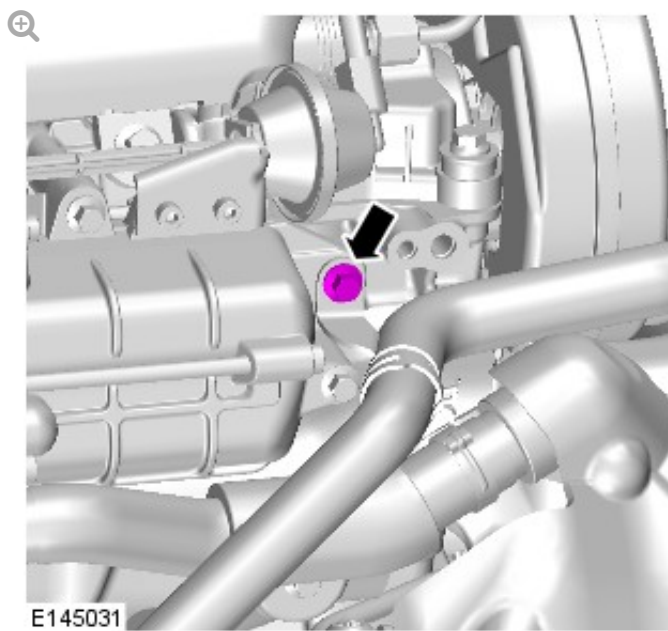

- *Torque: 10 Nm*

19.

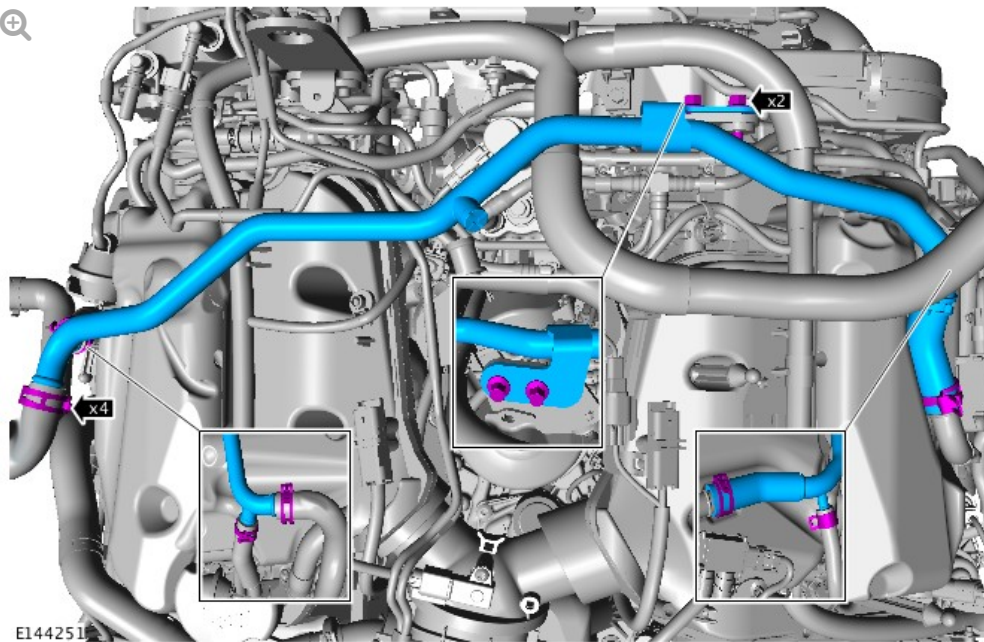

- *Torque: 10 Nm*

20. Refer to: [Starter Motor](#) (303-06A Starting System - TDV6 3.0L Diesel, Removal and Installation).
21. Refer to: [Secondary Bulkhead Centre Panel - TDV6 3.0L Diesel](#) (501-02 Front End Body Panels, Removal and Installation).
22. Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).