

PUBLISHED: 31-AUG-2017
2015.0 RANGE ROVER (LG), 307-01

AUTOMATIC TRANSMISSION/TRANSAXLE - VEHICLES WITH: 8HP70 8-SPEED
AUTOMATIC TRANSMISSION AWD

TRANSMISSION - TDV8 4.4L DIESEL



(G1509721)

INSTALLATION

44.20.01	GEARBOX - RENEW	4400 CC, TDV8, WITH PARTICULATE FILTER	6.5	USED WITHINS	
----------	--------------------	---	-----	-----------------	--

INSTALLATION

SPECIAL TOOL(S)

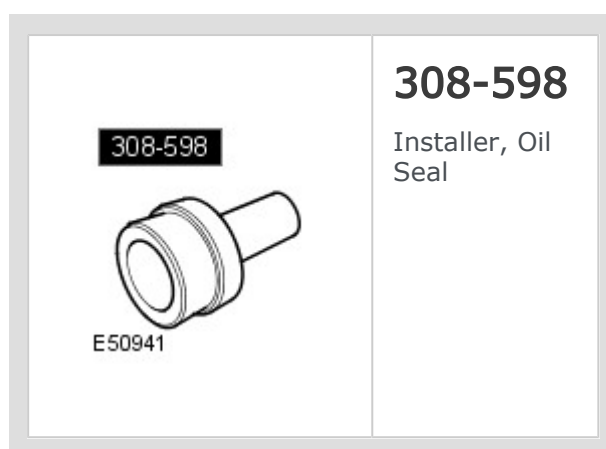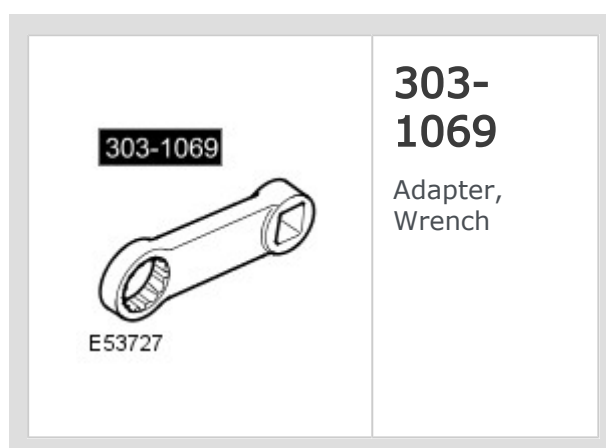

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME	
Step 4	Renew Part	Transfer case front output shaft oil seal	1
Step 14	Renew Part	Torque converter bolts	1
Step 21	Renew Part	Transmission fluid cooler tubes to transmission O-ring seals	1


 **NOTES:**

- Some variation in the illustrations may occur, but the essential information is always correct.
- Some illustrations may show the transmission removed for clarity.

1.

 **NOTE:**

This step is only required if a new component is installed.

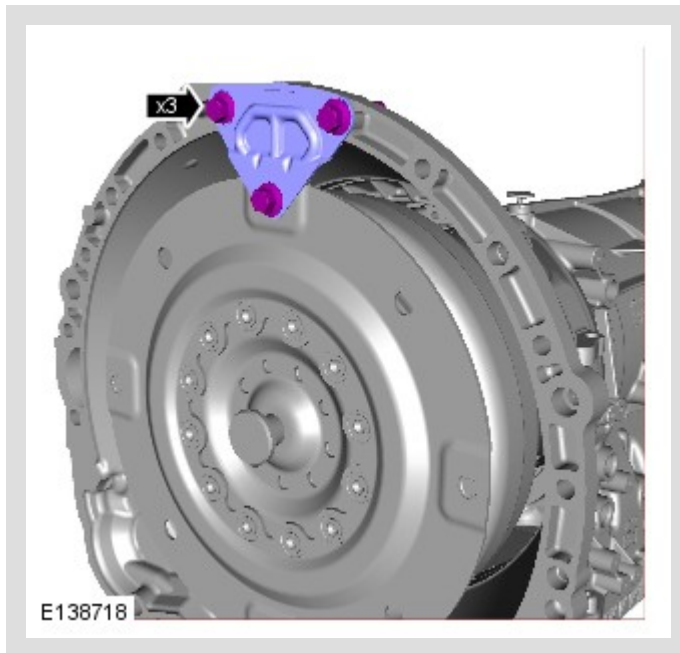


2.



NOTE:

Make sure that the torque converter is fully engaged to the transmission.

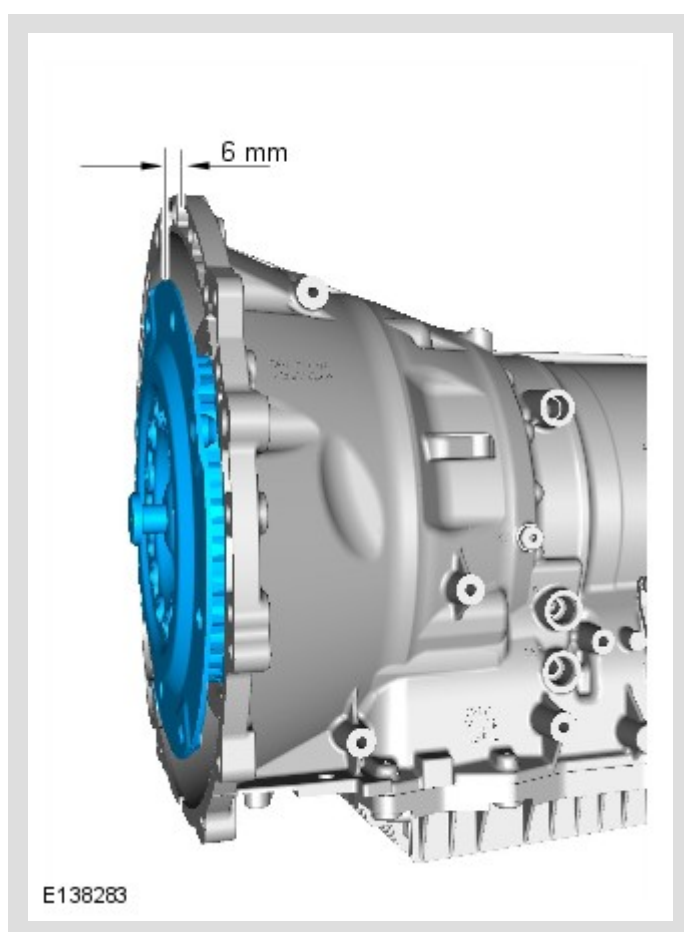

3.


⚠ CAUTION:

Oil seals must be fitted dry.

⚠ NOTES:

- This step is only required if previously removed.

- Make sure that this component is installed to the noted removal position.

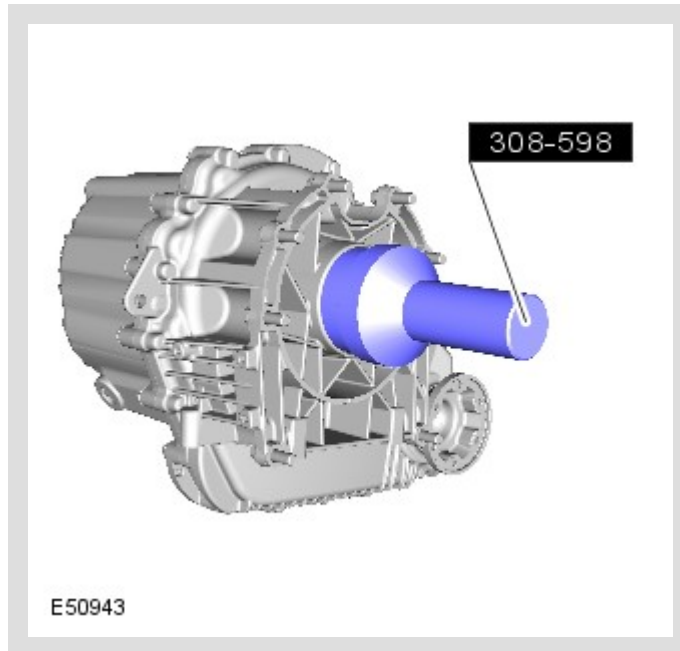


Special Tool(s): [308-598](#)

4.



NOTE:

This step is only required if previously removed.

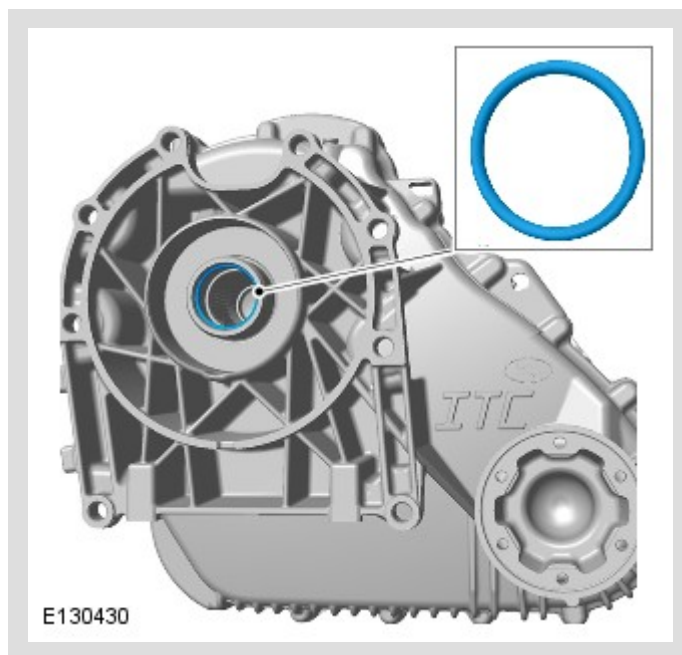

Install a new O-ring seal.


Renew Part: *Transfer case front output shaft oil seal : 1* .

5.



NOTE:

This step is only required if previously removed.

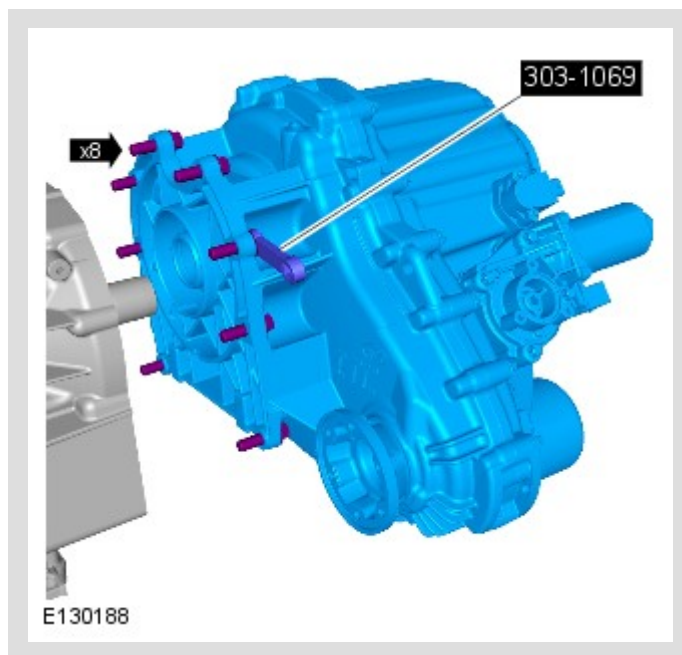

- *Special Tool(s):* 303-1069
- Clean the component mating faces.
- Lubricate input shaft splines with 'Weicon TL7391' grease.
- *Torque:* 45 Nm

6.




CAUTIONS:

- Remove the blanking plugs.
- To prevent water ingress and subsequent transmission damage, make sure that the breather is fully pushed home into the transmission casing. The white line around the circumference of the pipe should not be visible when correctly installed.



NOTE:

This step is only required if previously removed.

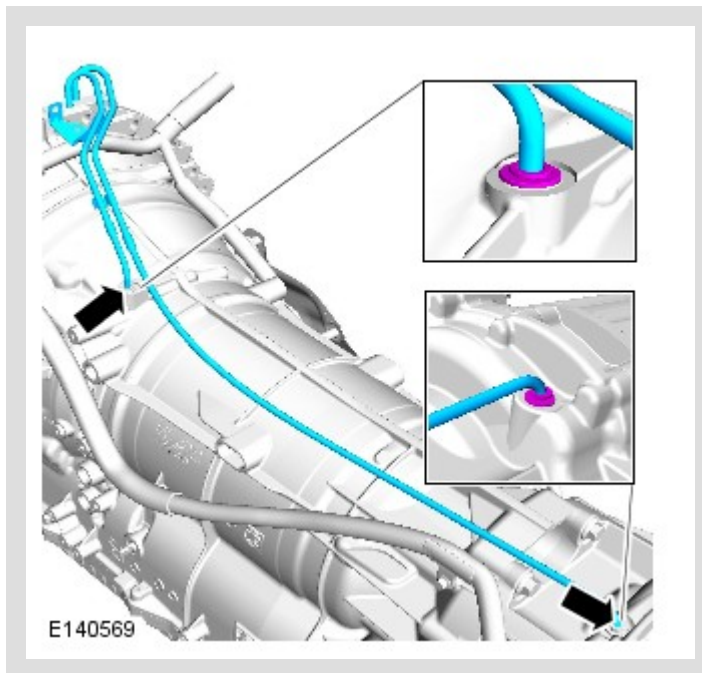


7.



NOTE:

This step is only required if previously removed.

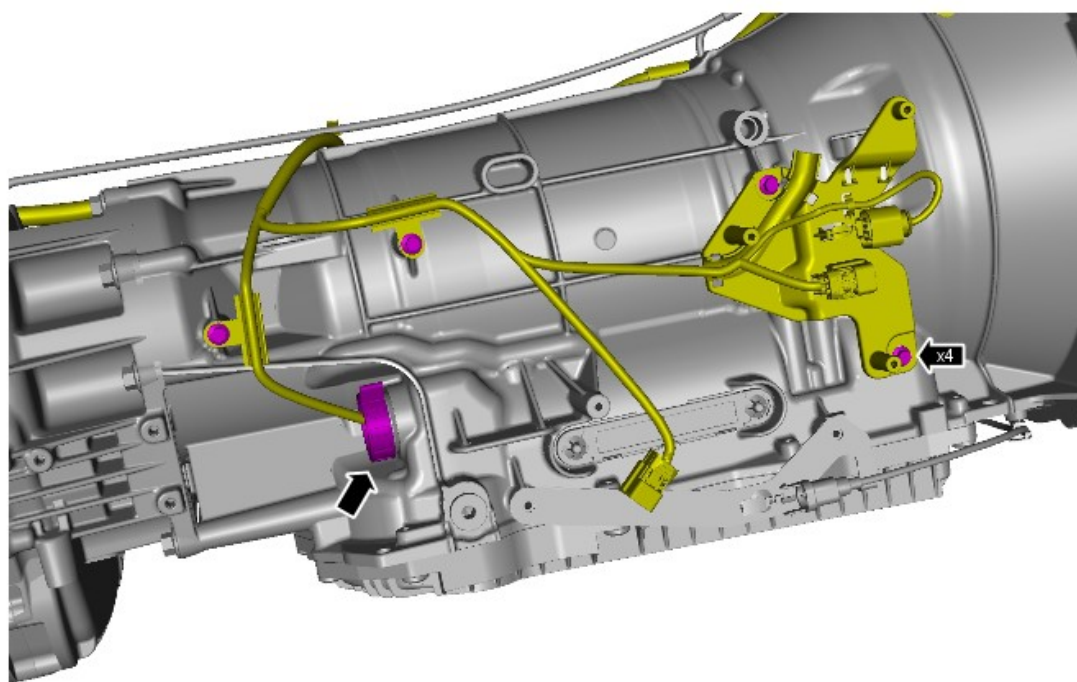

E148754


Torque: 8 Nm

8.



NOTE:

This step is only required if previously removed.

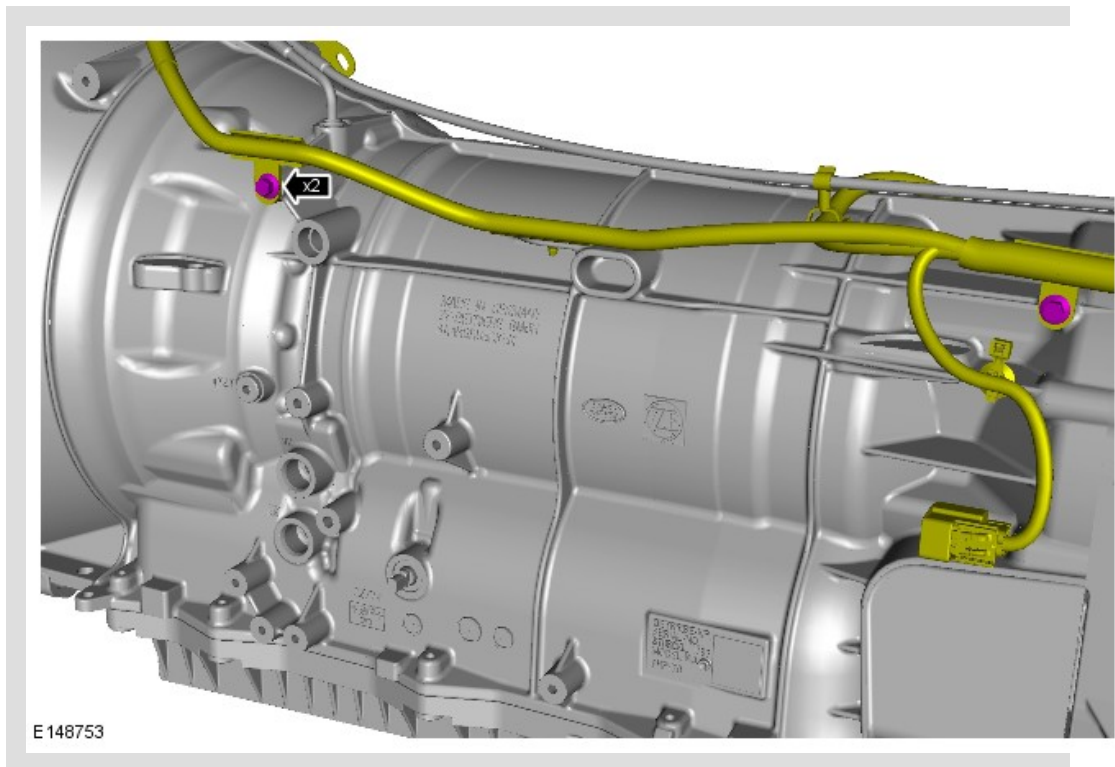


Torque: 10 Nm

9.



NOTE:

This step is only required if previously removed.

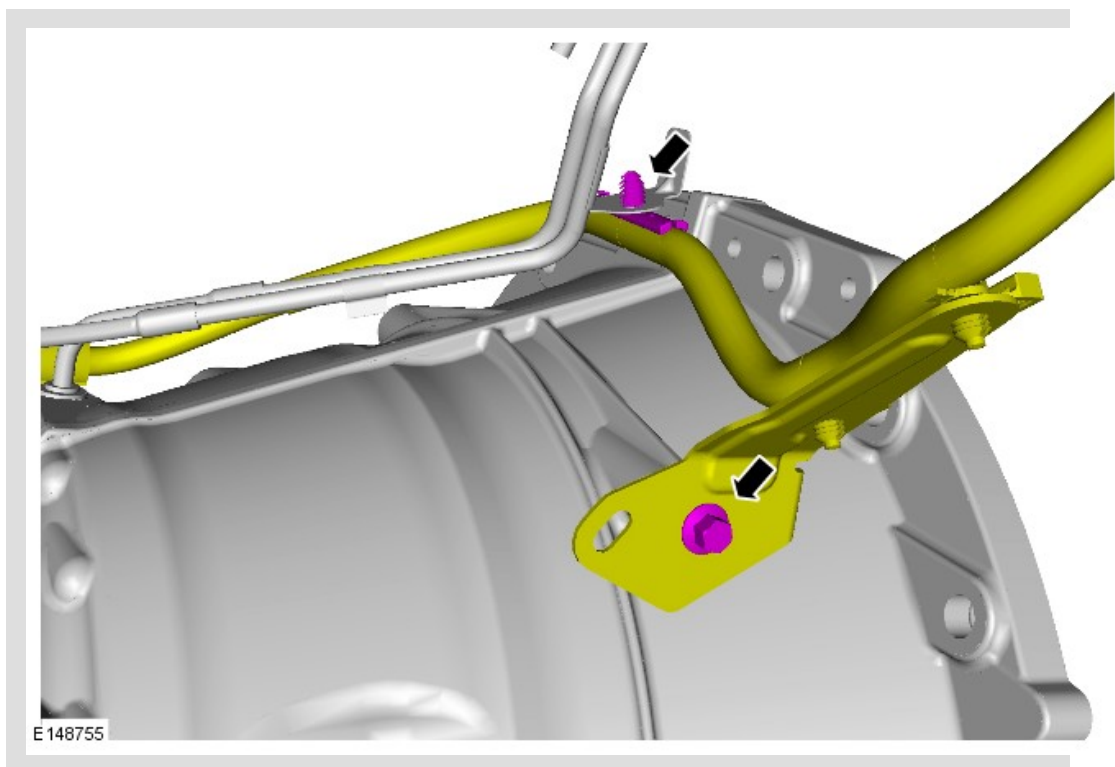

Torque: 12 Nm

10.



WARNING:

Make sure that the transmission is secured with suitable retaining straps.




CAUTIONS:

- Apply grease of the correct specification to the torque converter spigot.
- Make sure that the torque converter remains in the transmission.


- Remove and discard the cable ties securing the torque converter.

 NOTE:


This step requires the aid of other technicians.

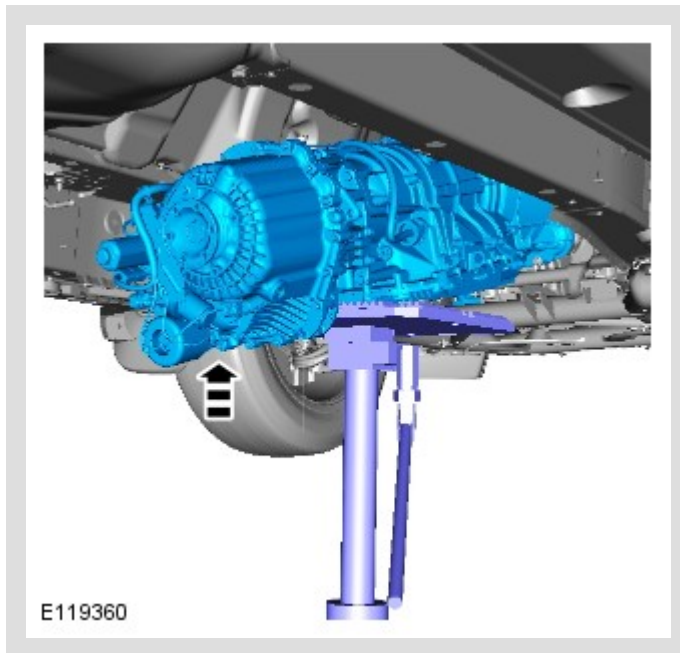

Using a suitable hydraulic jack, support the transmission.

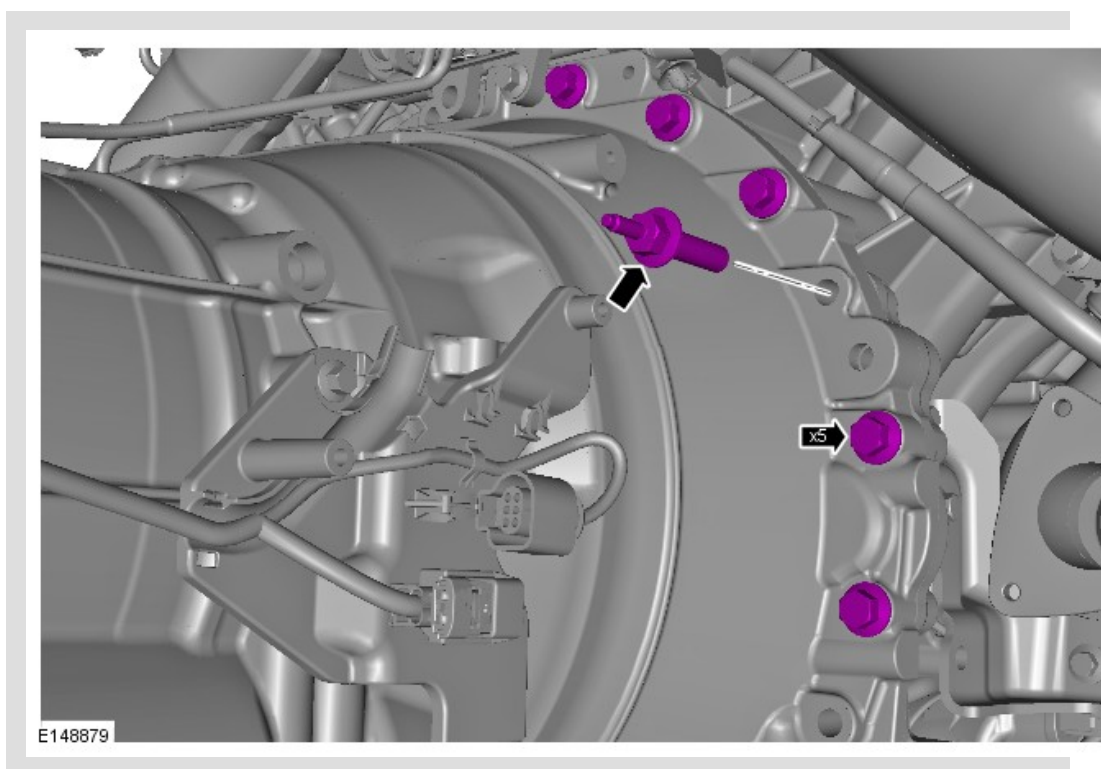


Torque: 40 Nm

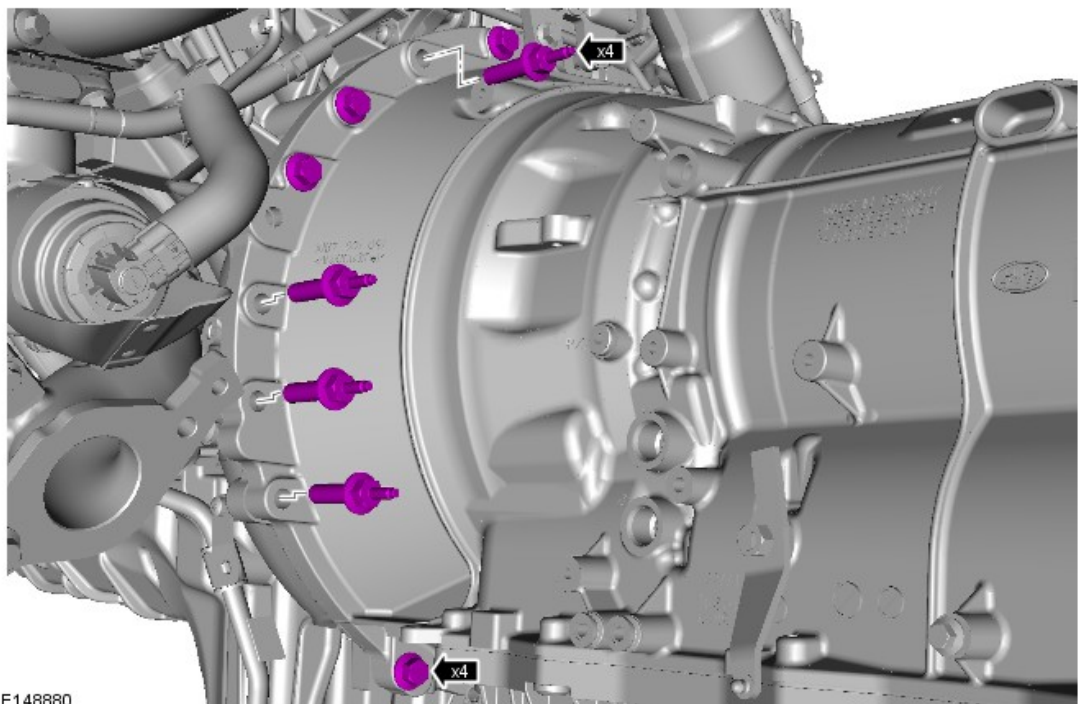

Torque: 40 Nm

13.

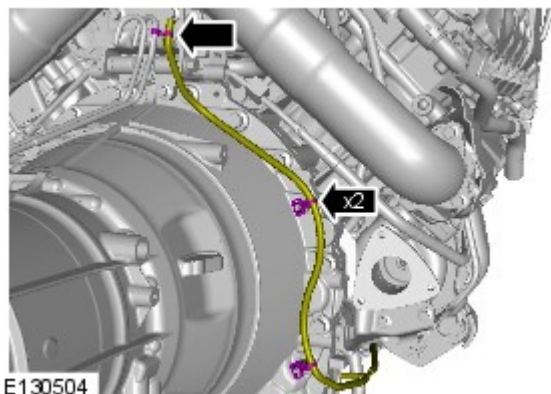


14.



CAUTION:


Only rotate the crankshaft clockwise.

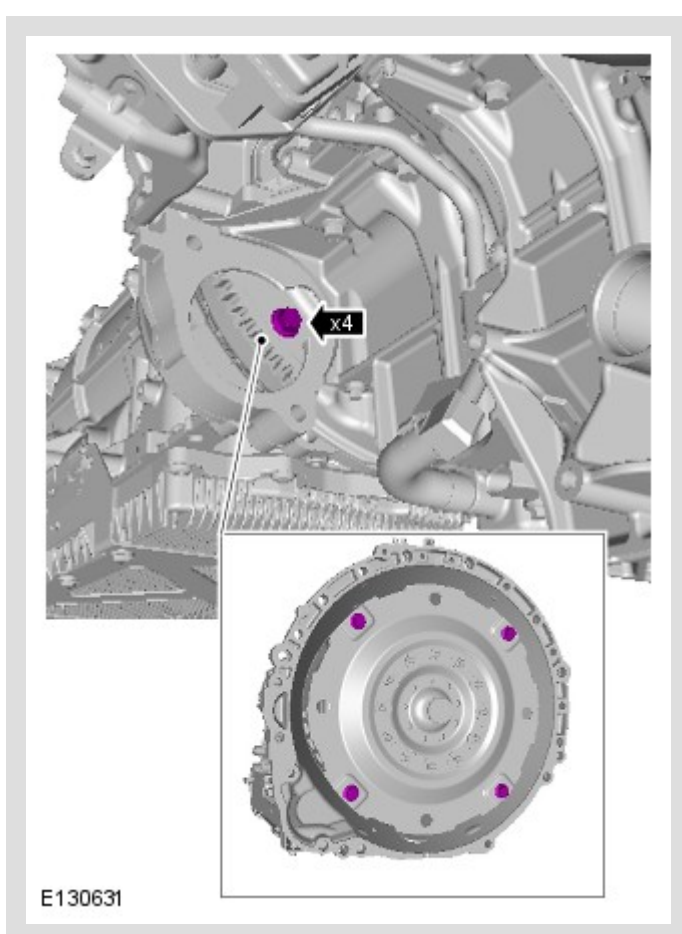

Renew Part: *Torque converter bolts* : 1 .


Torque: **63 Nm**

15.

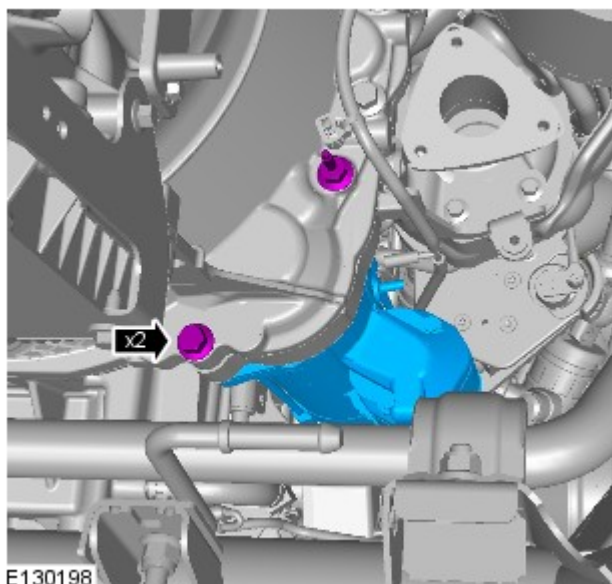

Torque: 45 Nm

16.


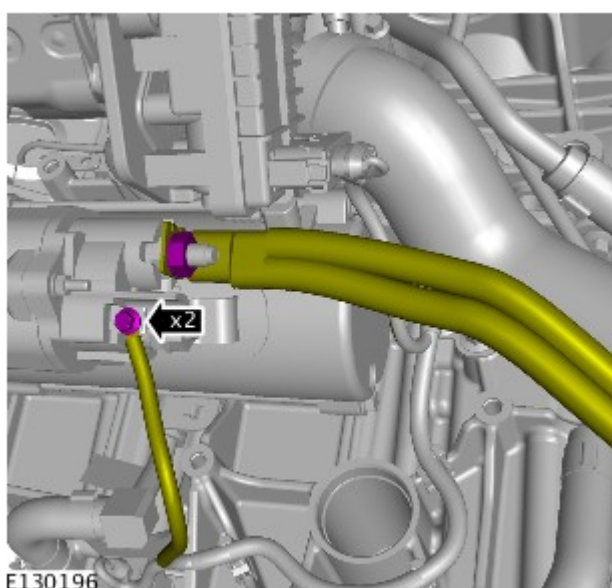


Torque:


M8 25 Nm

M5 3 Nm


17.

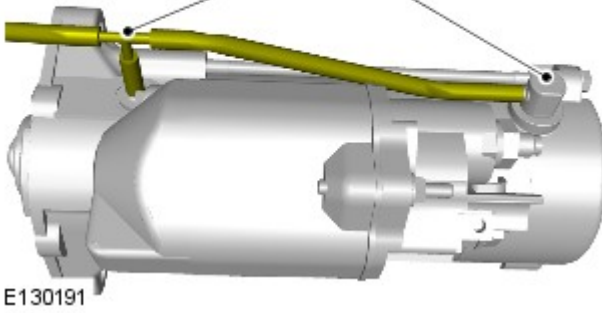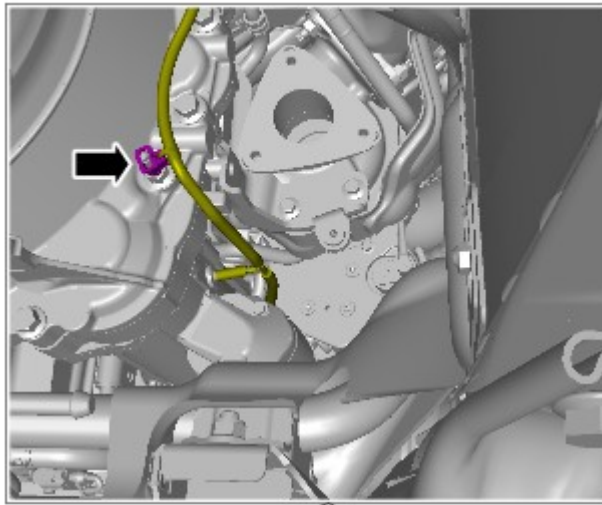


18.

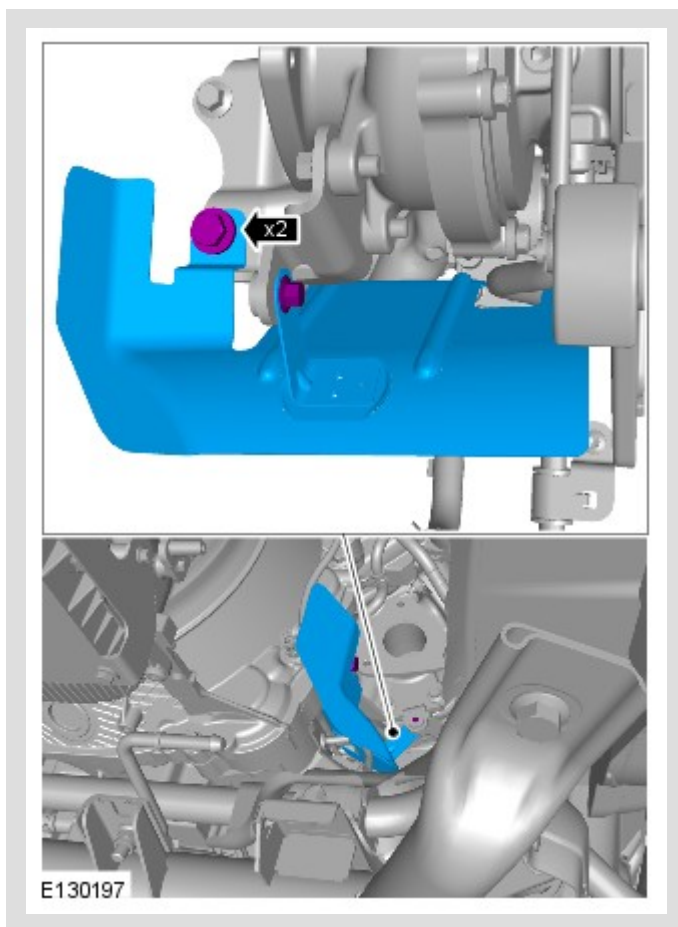

Torque: 10 Nm

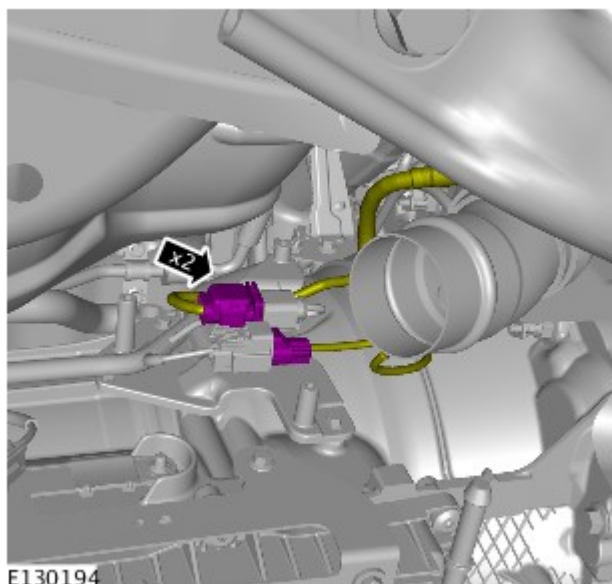

20.

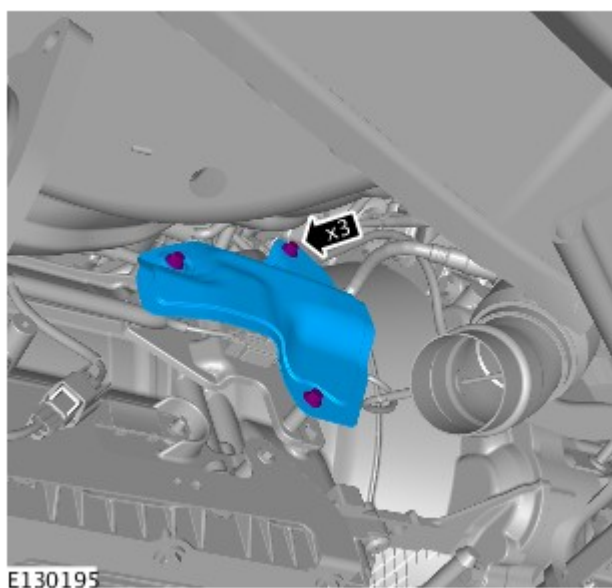


Torque: 10 Nm

**WARNING:**


Be prepared to collect escaping fluids.

**CAUTION:**


Install new O-ring seals.

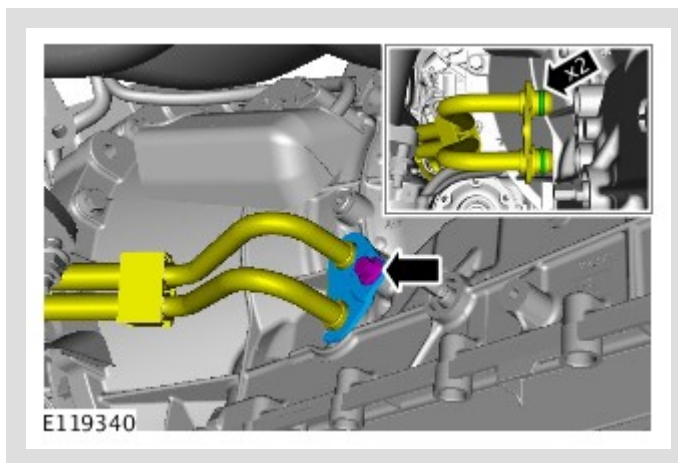

Renew Part: *Transmission fluid cooler tubes to transmission O-ring seals : 1 .*
Torque: 22 Nm

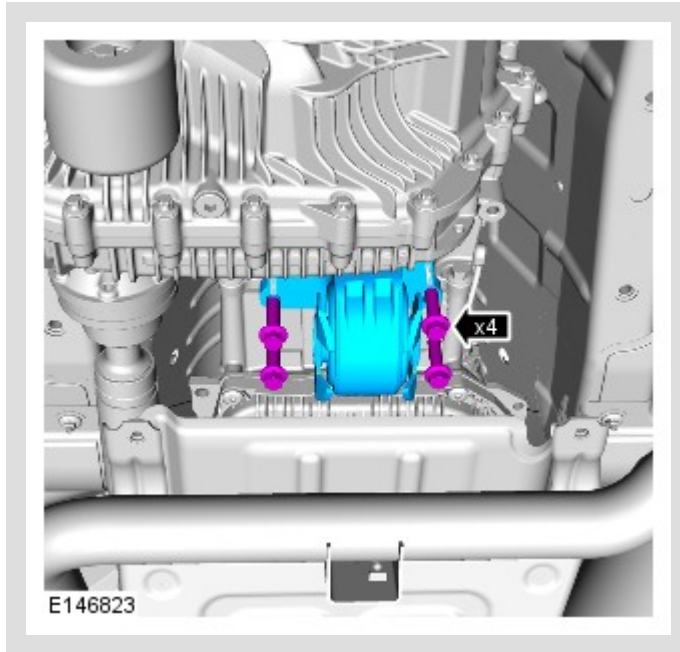

Torque: 60 Nm

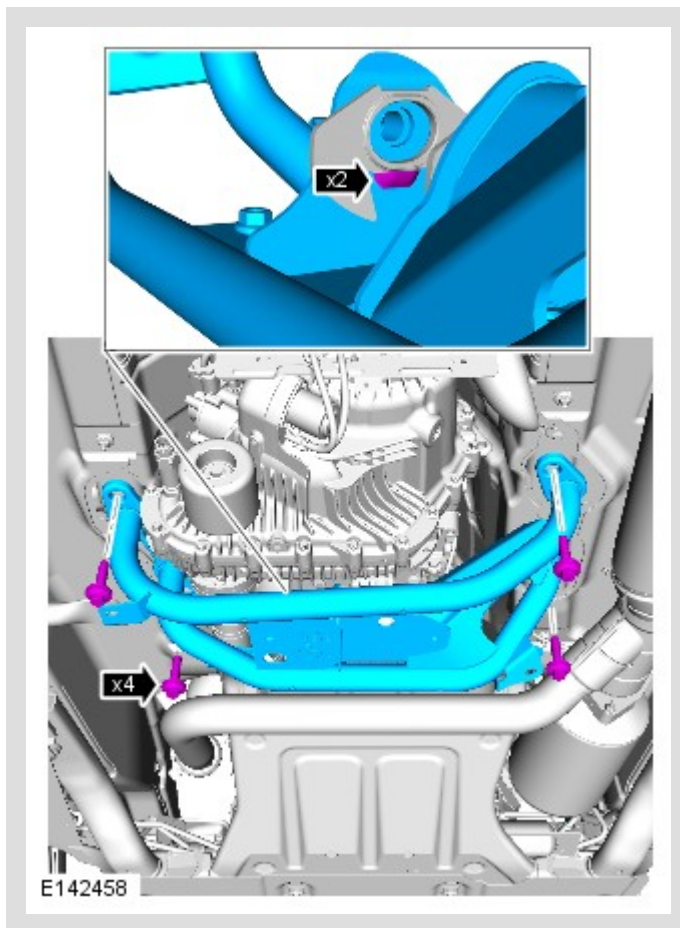


Torque: 110 Nm

24.




CAUTION:

Make sure that the components are installed to the noted position in the removal steps.

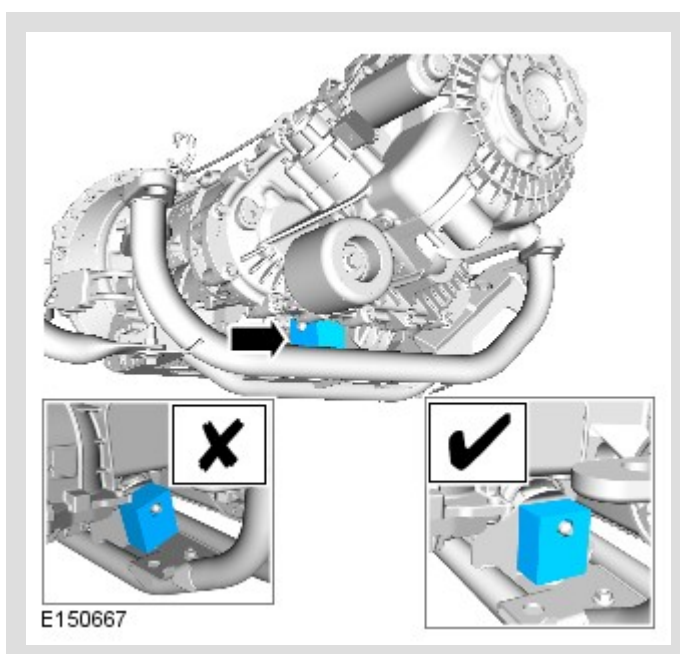


25.

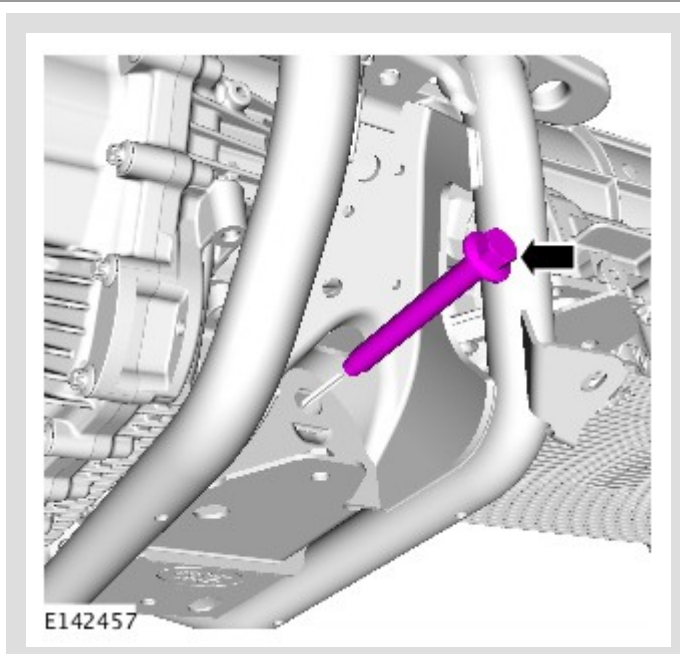

Torque: 175 Nm


26.

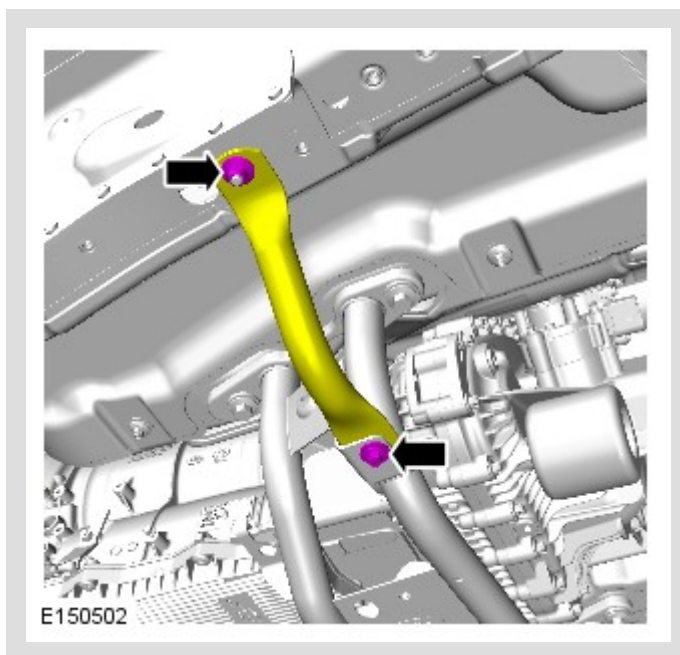

Torque:

M8 nut **20 Nm**

M8 bolt **24 Nm**

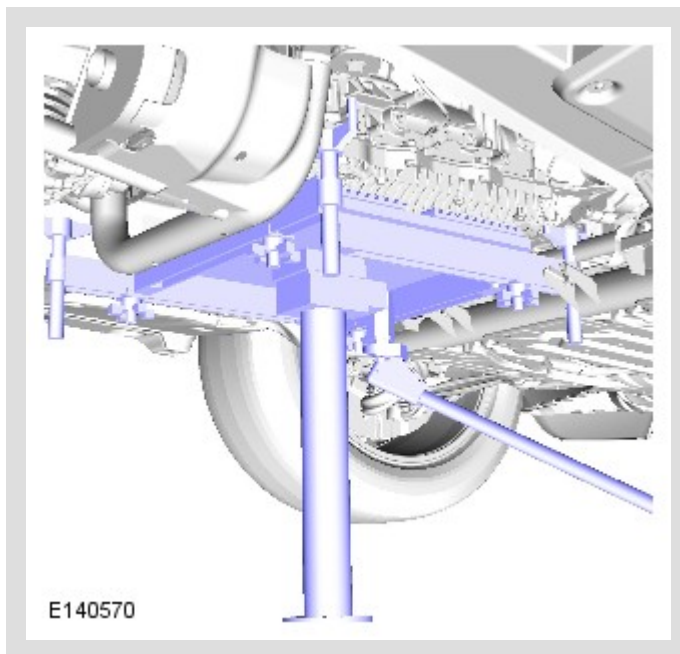


Remove the jack supporting the transmission.

28.



NOTE:

Vehicles with diesel particulate filter (DPF).

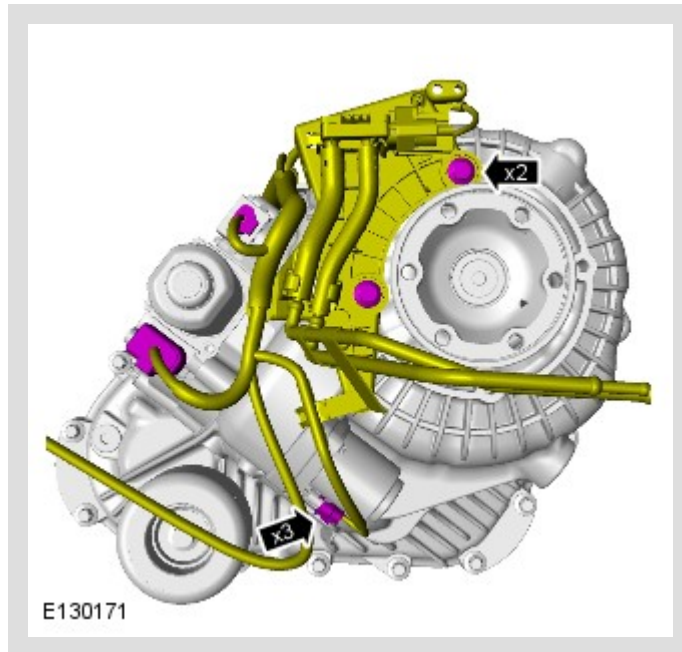


Torque: 25 Nm

29.





NOTE:

Vehicles without diesel particulate filter (DPF).

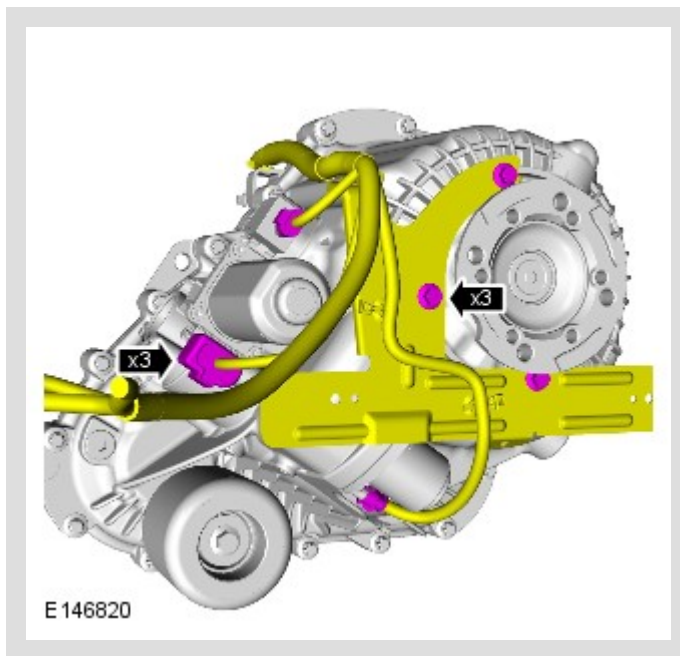


Torque: 25 Nm

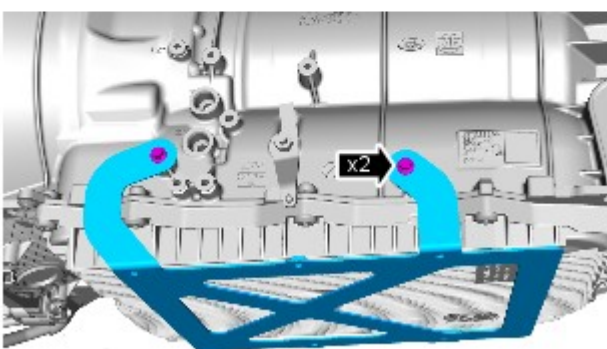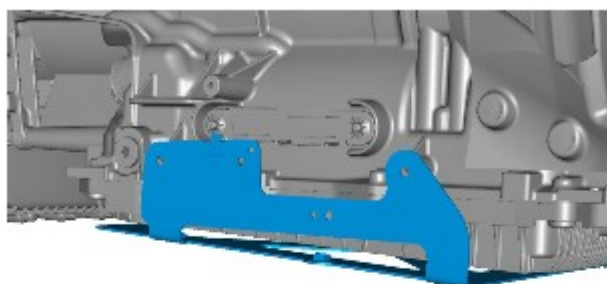

E148881


Torque: 10 Nm

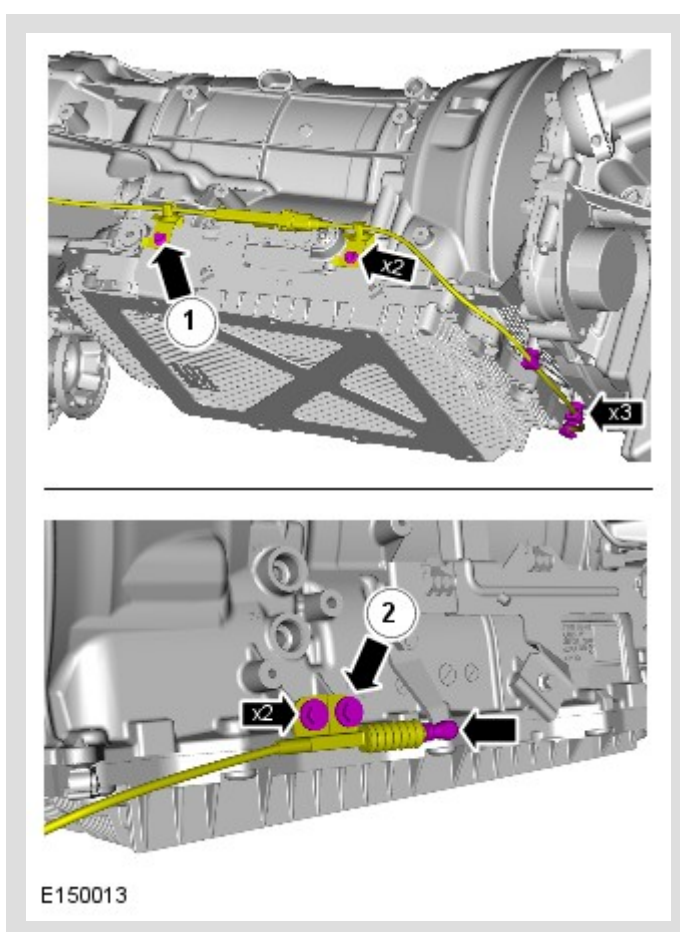


■ *Torque:*

Upper bolts (1) **10 Nm**

Lower bolts (2) **11 Nm**

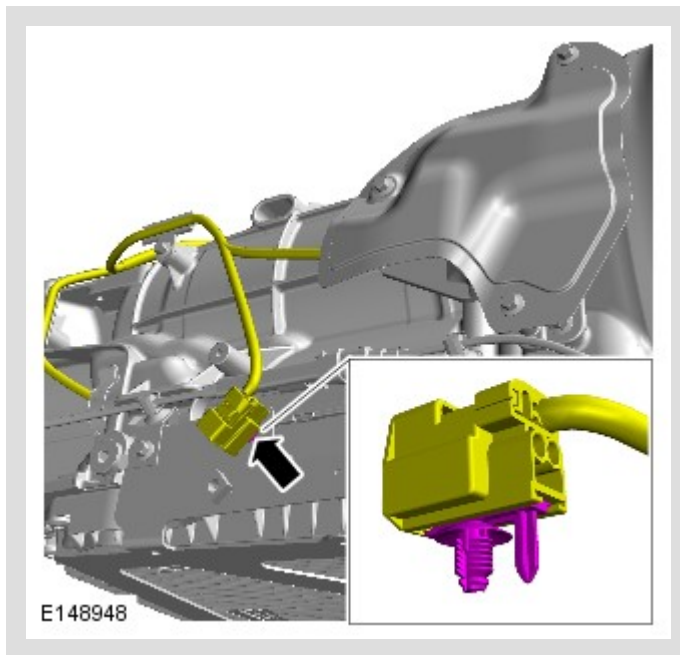


33.

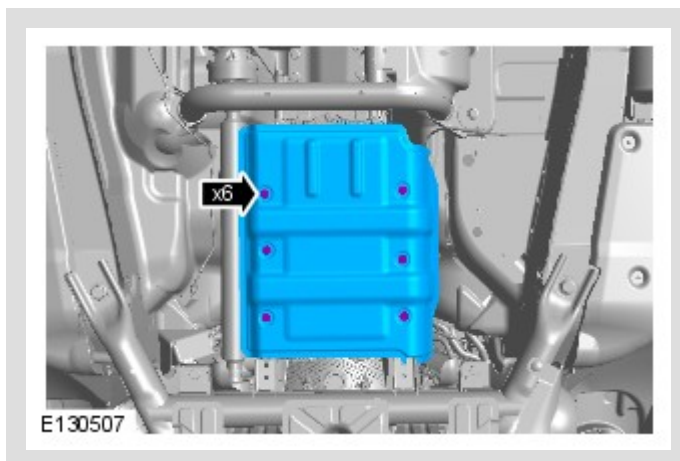


Torque: 10 Nm

34.

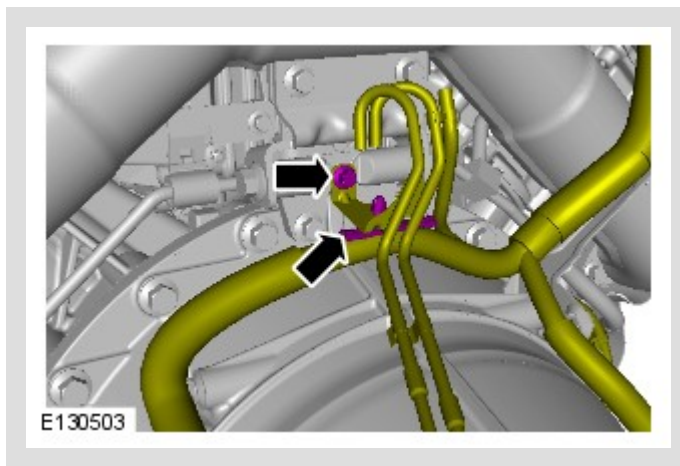

Torque: 8 Nm

35.

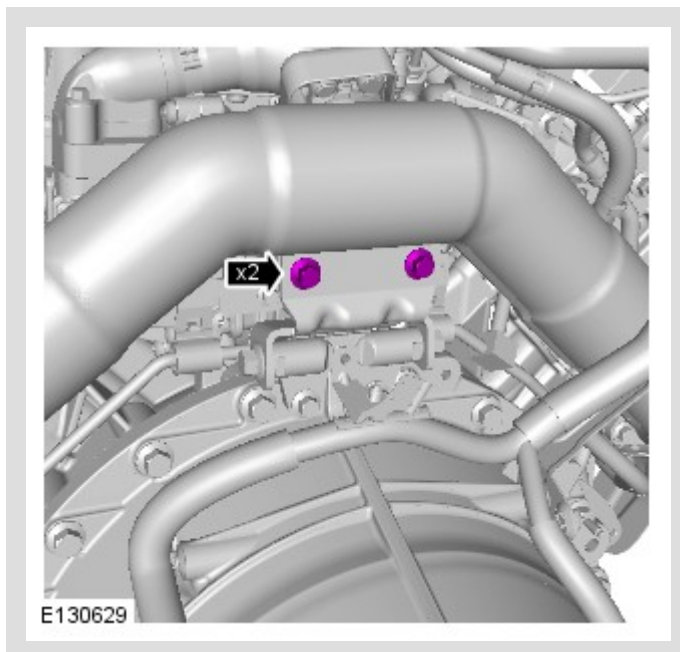

Torque: 10 Nm


36.

Refer to: [Rear Driveshaft - TDV8 4.4L Diesel](#) (205-01 Driveshaft, Removal and Installation).


-
37. Refer to: [Exhaust System - Vehicles With: Diesel Particulate Filter \(DPF\)](#) (309-00D Exhaust System - TDV8 4.4L Diesel, Removal and Installation).
Refer to: [Exhaust System - Vehicles Without: Diesel Particulate Filter \(DPF\)](#) (309-00D Exhaust System - TDV8 4.4L Diesel, Removal and Installation).

-
38. Refer to: [Front Driveshaft - TDV8 4.4L Diesel](#) (205-01 Driveshaft, Removal and Installation).

39.

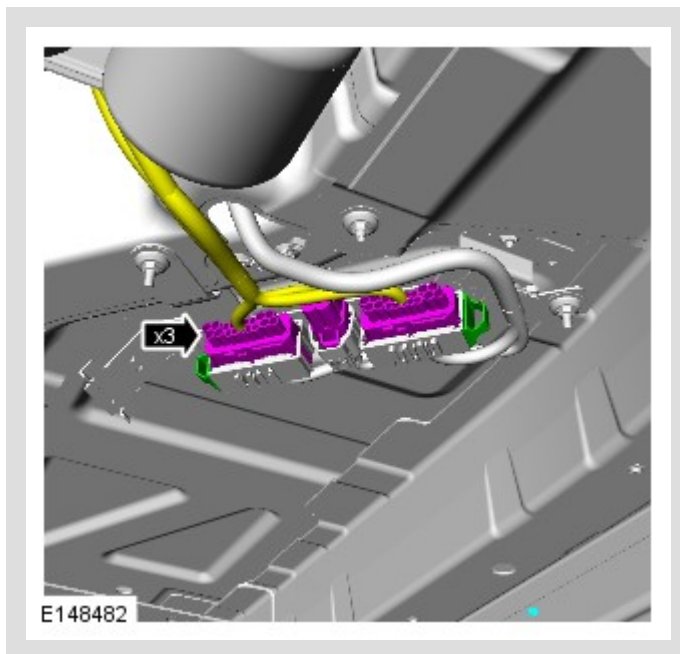

40.

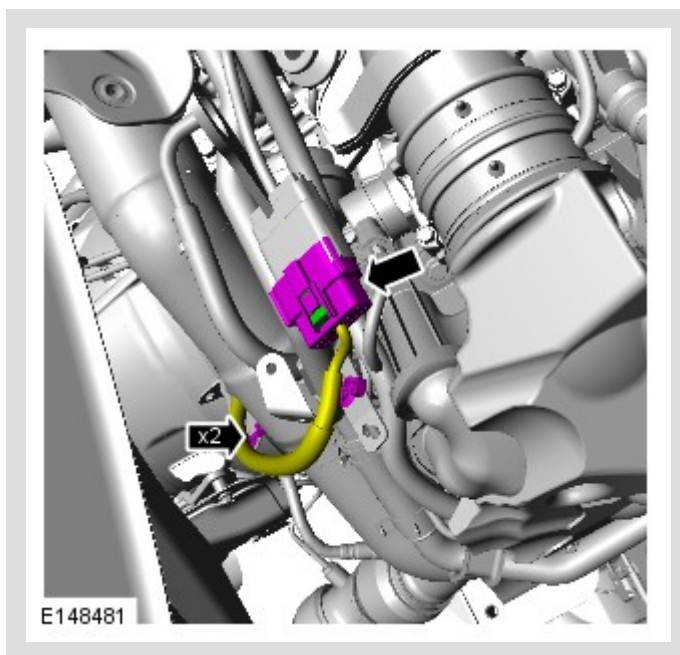

-
41. Refer to: [Secondary Bulkhead Centre Panel - TDV8 4.4L Diesel](#) (501-02 Front End Body Panels, Removal and Installation).

-
42. Connect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

-
43. Carry out a transmission fluid level check.
Refer to: [Transmission Fluid Level Check - TDV6 3.0L Diesel - Gen 2/TDV6 3.0 L Diesel - Gen 1.5/TDV8 4.4L Diesel](#) (307-01B Automatic Transmission /Transaxle - Vehicles With: 8HP70 8-Speed Automatic Transmission AWD, General Procedures).

