

PUBLISHED: 24-AUG-2017
2015.0 RANGE ROVER (LG), 307-01

AUTOMATIC TRANSMISSION/TRANSAXLE - VEHICLES WITH: 8HP70 8-SPEED
AUTOMATIC TRANSMISSION AWD

TRANSMISSION - TDV8 4.4L DIESEL


(G1509718)



REMOVAL

44.20.01	GEARBOX - RENEW	4400 CC, TDV8, WITH PARTICULATE FILTER	6.5	USED WITHINS	
----------	--------------------	---	-----	-----------------	--

REMOVAL

SPECIAL TOOL(S)

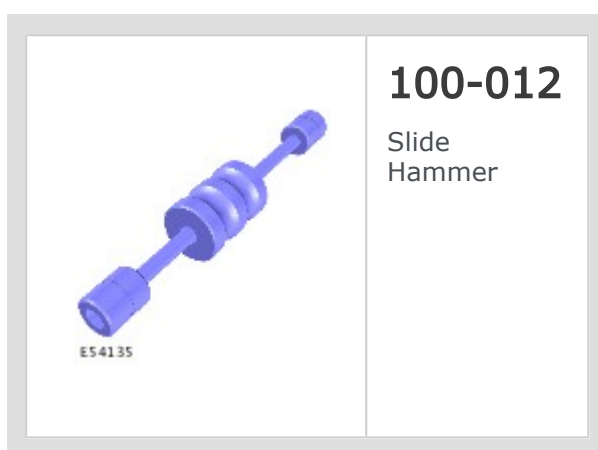

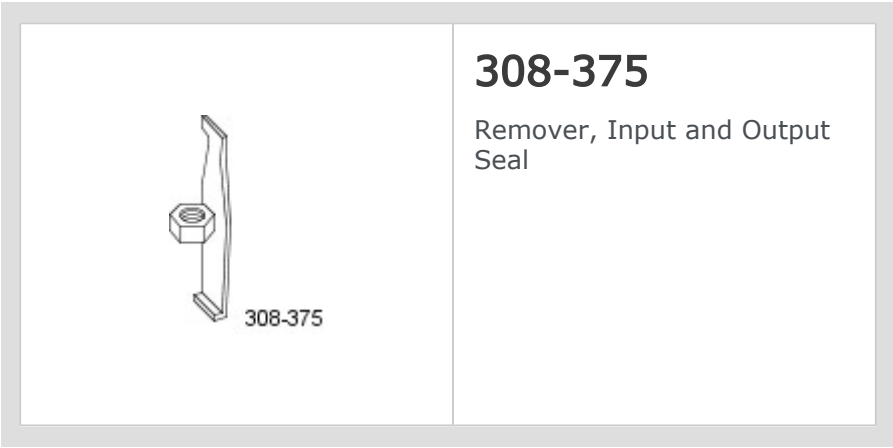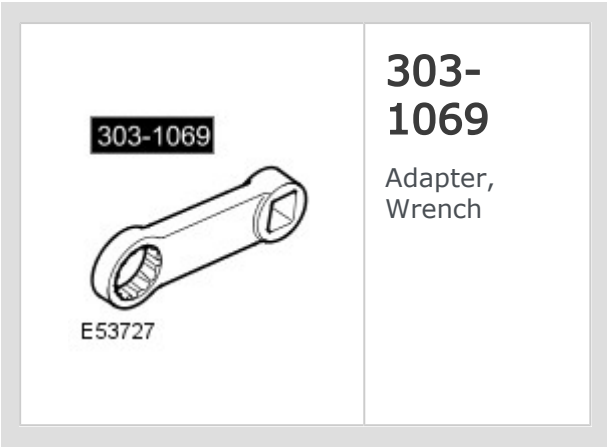

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME	
Step 31	Renew Part	Torque converter bolts	1

NOTES:


- Some variation in the illustrations may occur, but the essential information is always correct.
- Some illustrations may show the transmission removed for clarity.

1.
- Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2. Refer to: [Secondary Bulkhead Centre Panel - TDV8 4.4L Diesel](#) (501-02 Front End Body Panels, Removal and Installation).

3.

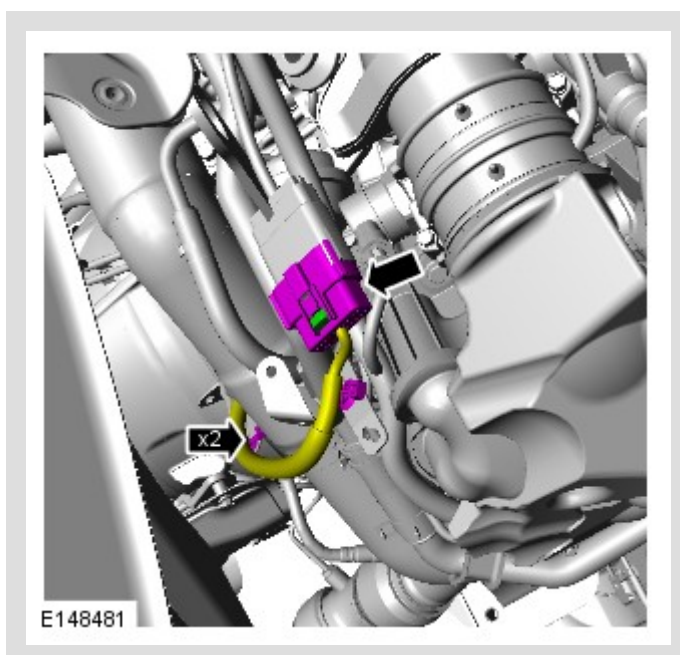

4.




WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

5.

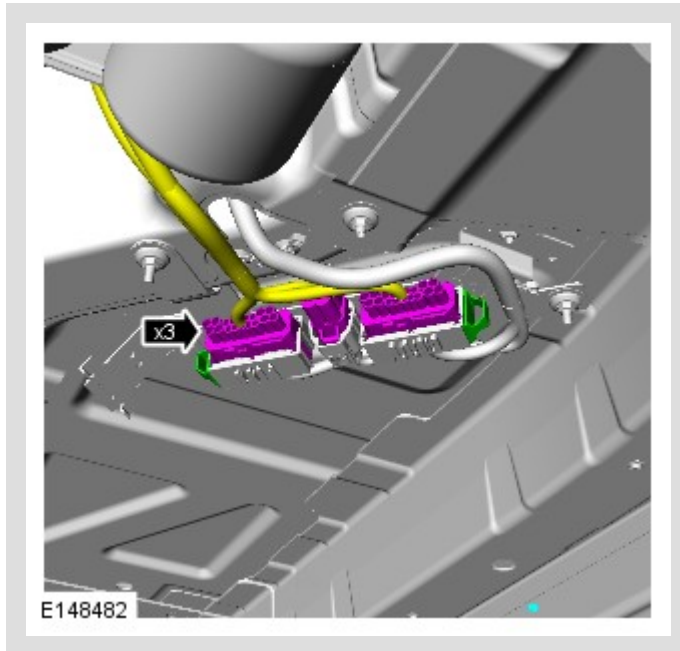


6. Refer to: [Front Driveshaft - TDV8 4.4L Diesel](#) (205-01 Driveshaft, Removal and Installation).


7. Refer to: [Exhaust System - Vehicles With: Diesel Particulate Filter \(DPF\)](#) (309-00D Exhaust System - TDV8 4.4L Diesel, Removal and Installation).
Refer to: [Exhaust System - Vehicles Without: Diesel Particulate Filter \(DPF\)](#) (309-00D Exhaust System - TDV8 4.4L Diesel, Removal and Installation).

8. Refer to: [Rear Driveshaft - TDV8 4.4L Diesel](#) (205-01 Driveshaft, Removal and Installation).


9.

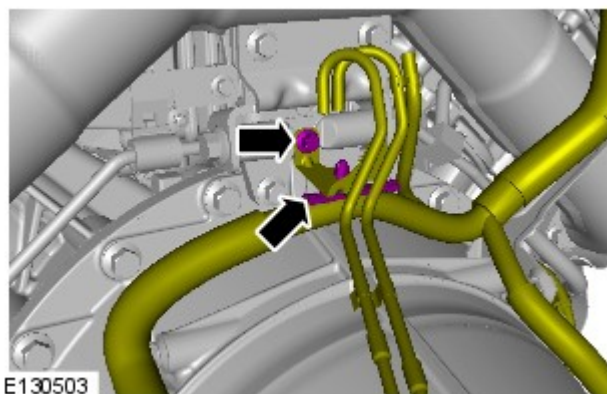


10.

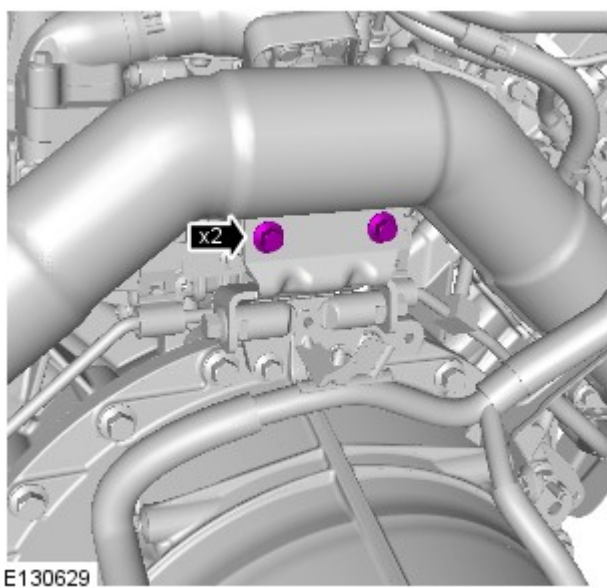


11.


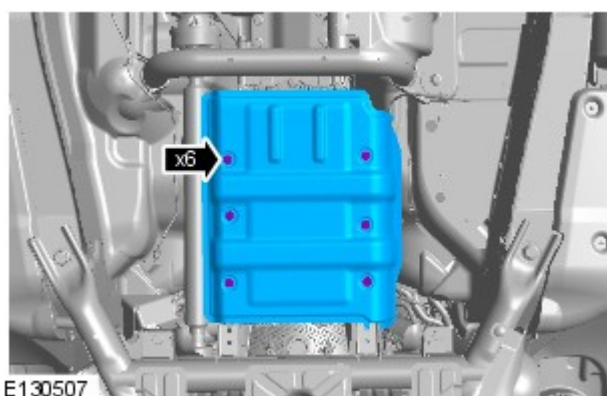


12.

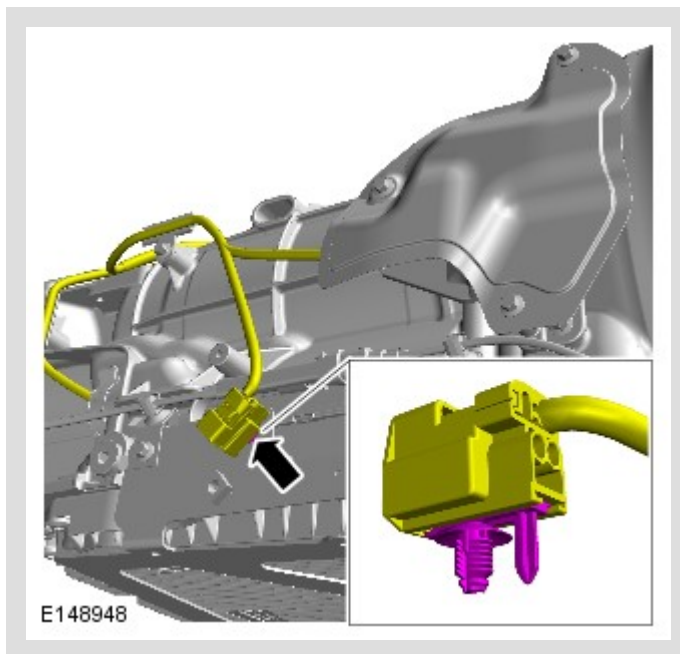

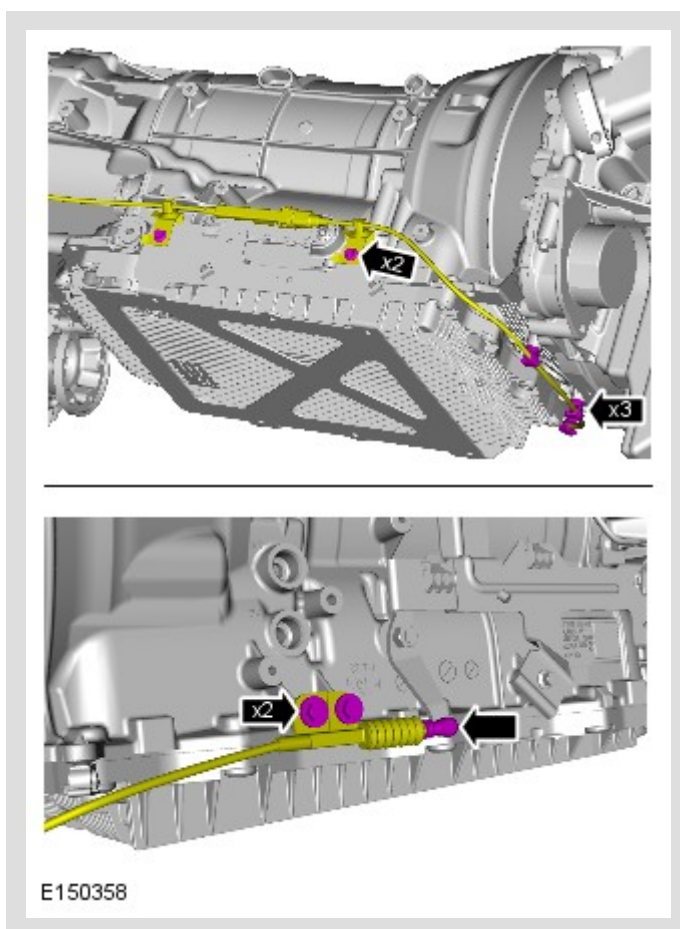

- Secure the cable to the floor using suitable cable ties.

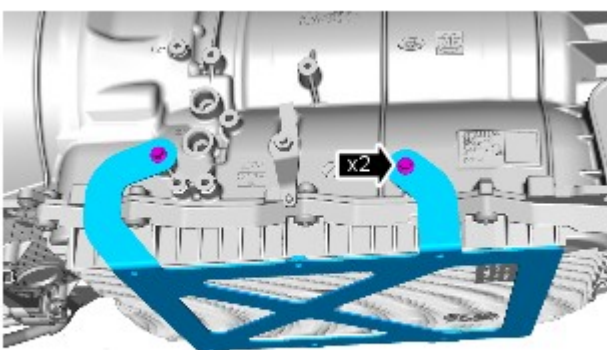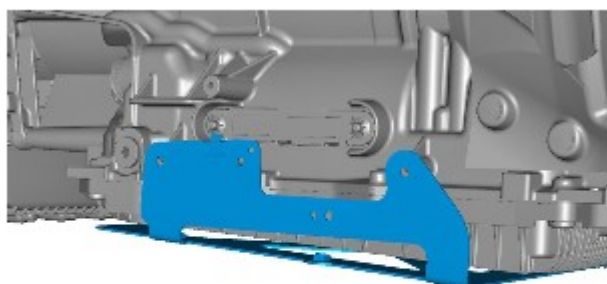


E148881

15.



NOTE:

Vehicles with diesel particulate filter (DPF).

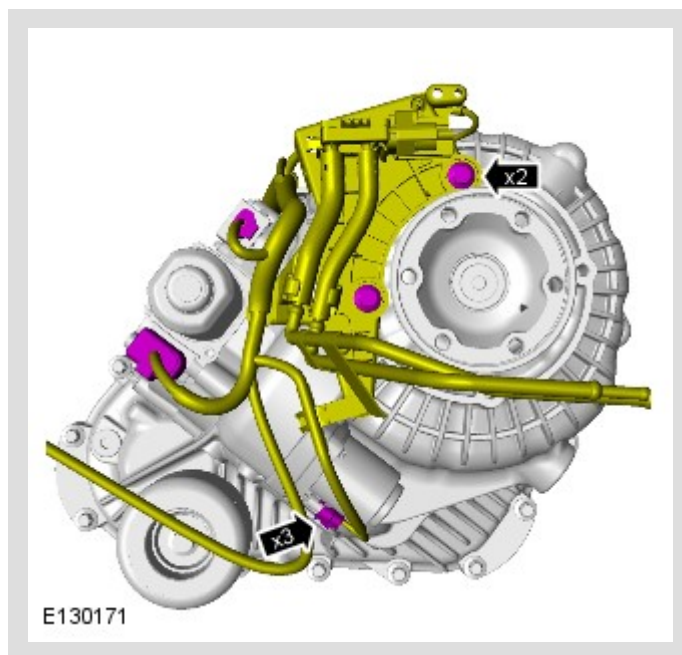


16.




NOTE:

Vehicles without diesel particulate filter (DPF).

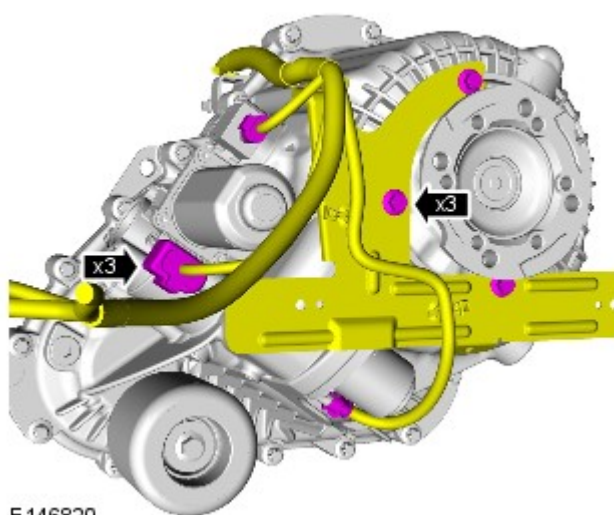


E 146820

17.

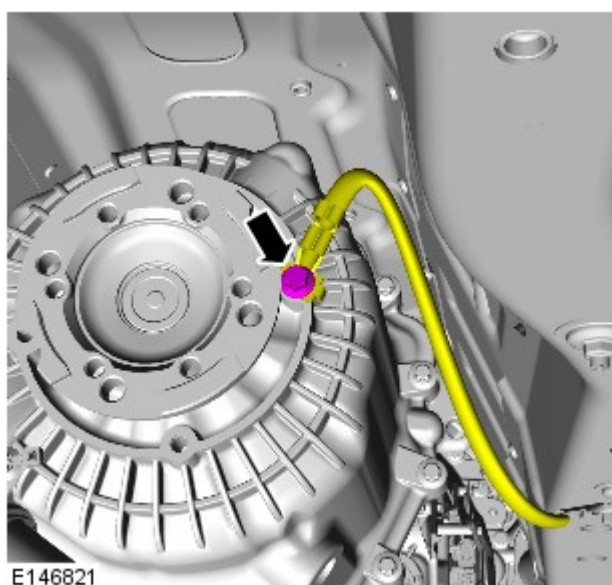


E 146821

18.

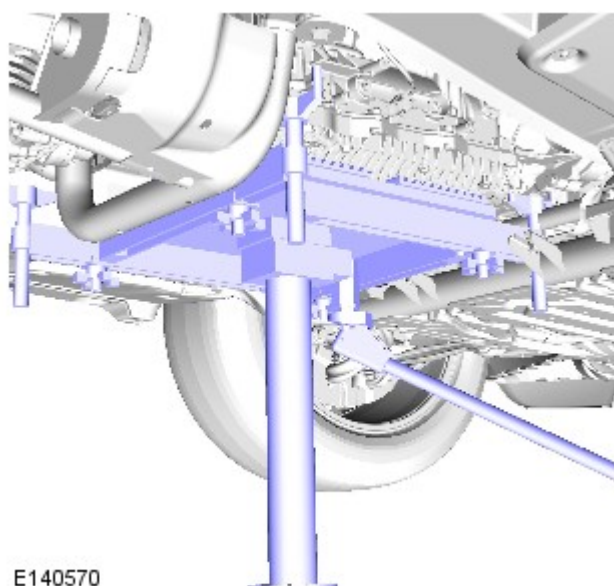


Using a transmission jack, support the transmission.

19.

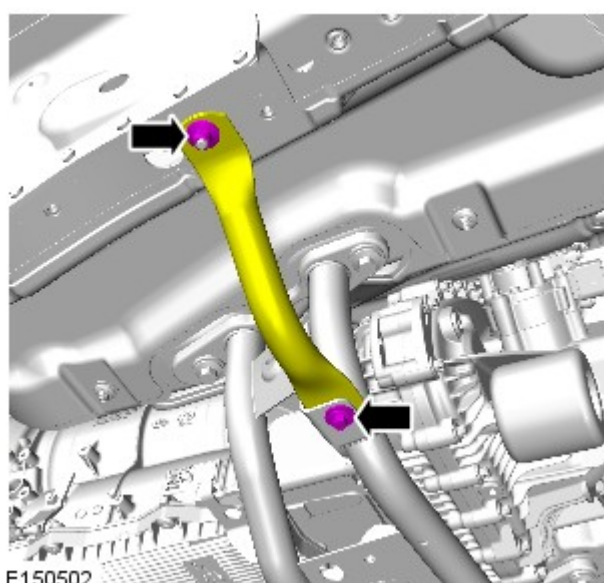

20.

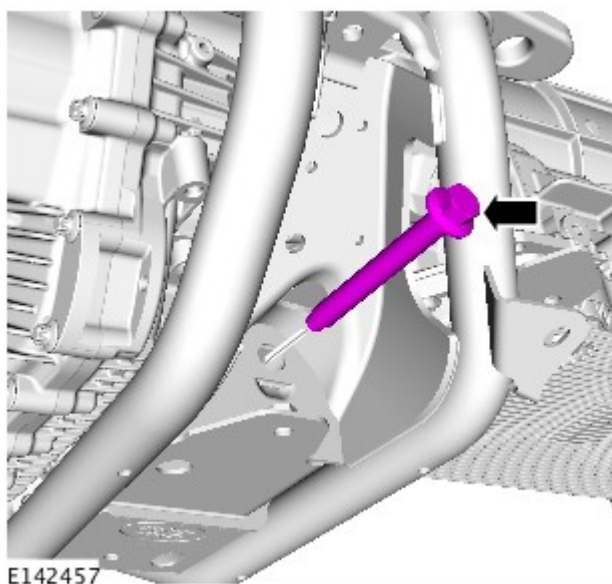


21.





NOTE:

Note the orientation of the component prior to removal

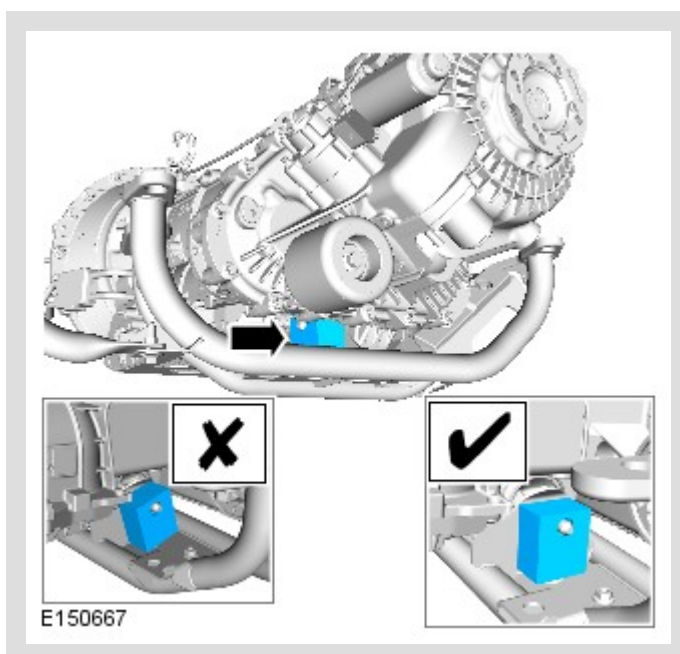

22.

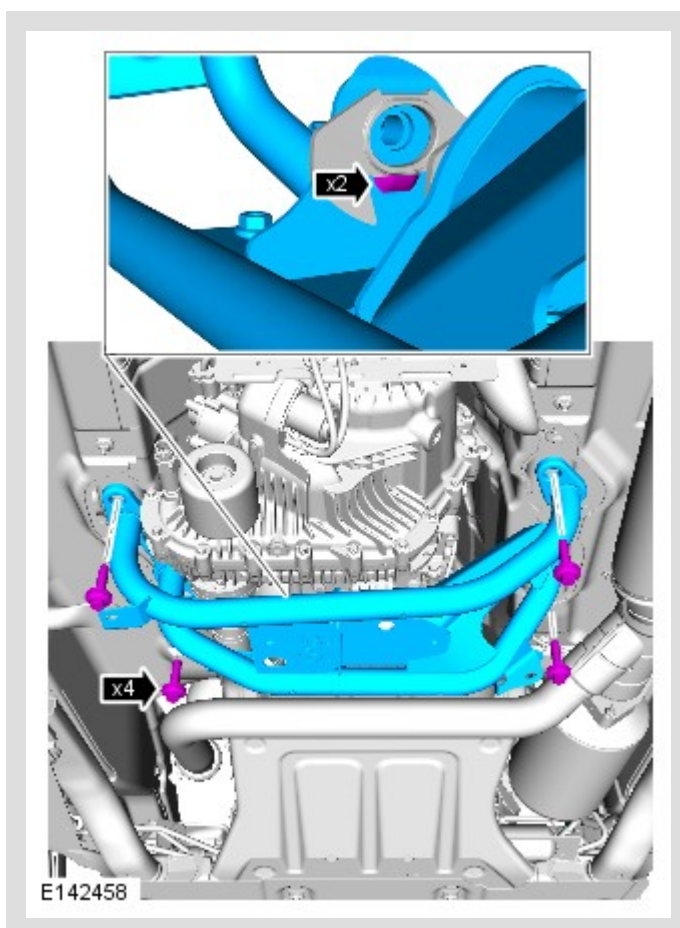

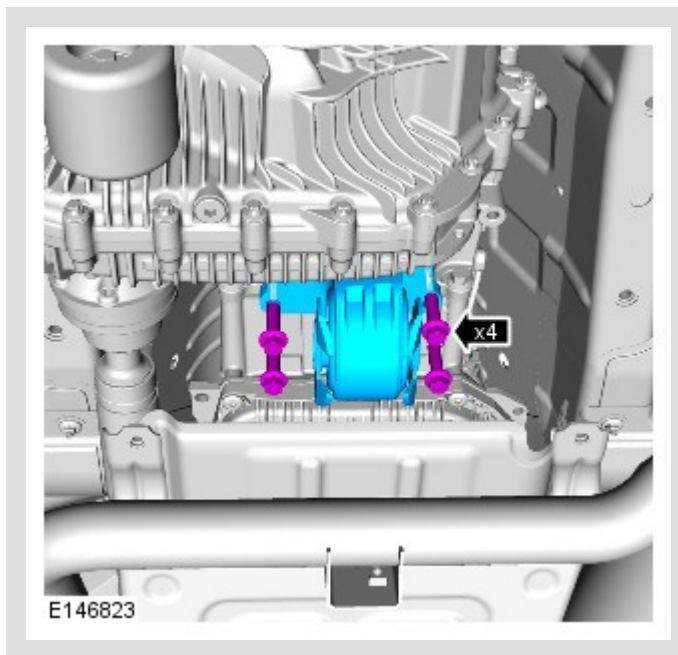**WARNING:**


Be prepared to collect escaping fluids.

**CAUTION:**


Make sure that all openings are sealed. Use new blanking caps.

**NOTE:**


Remove and discard the O-ring seals.

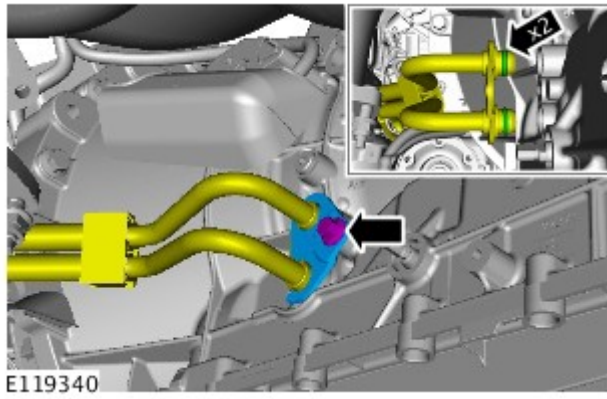


25.


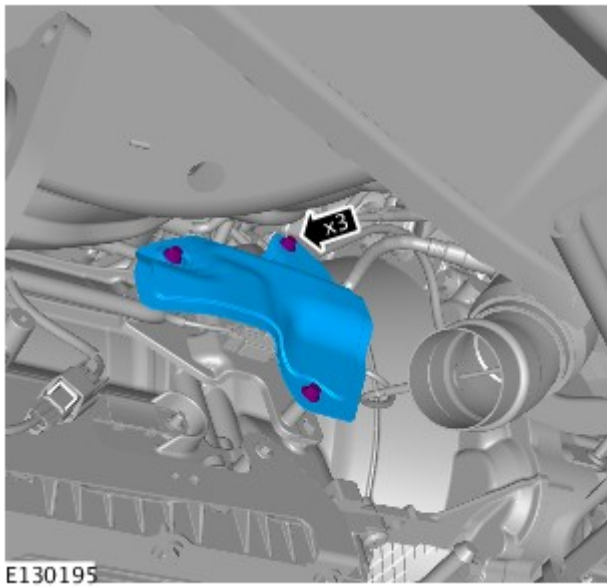


26.

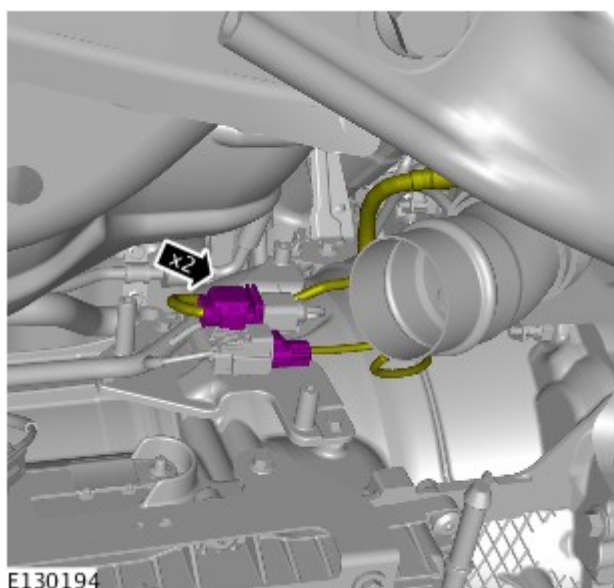


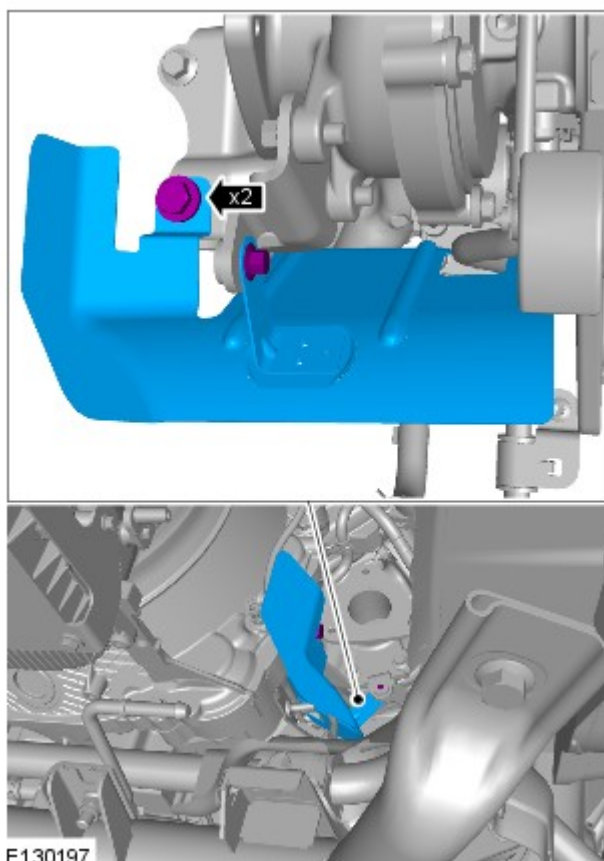


E130197

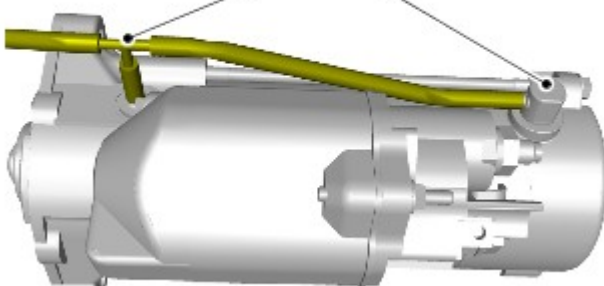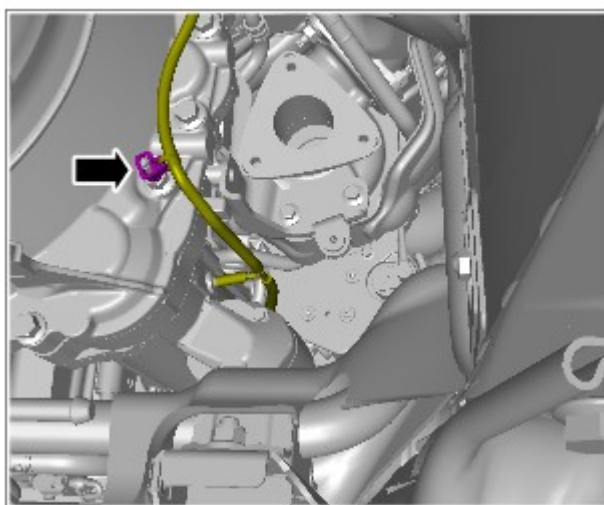

E130191

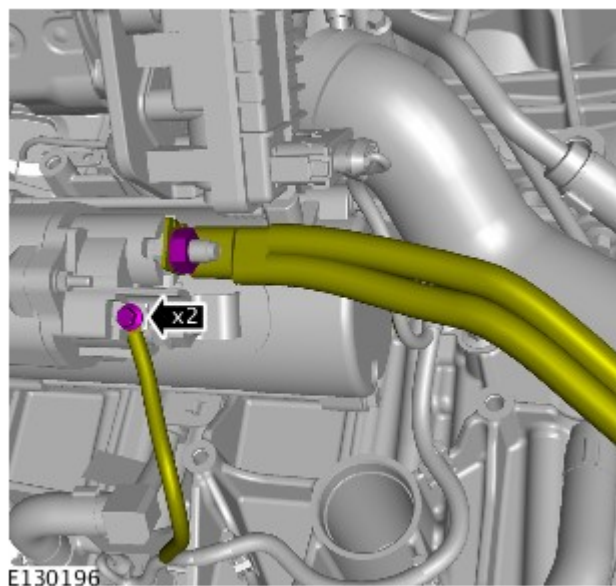


30.

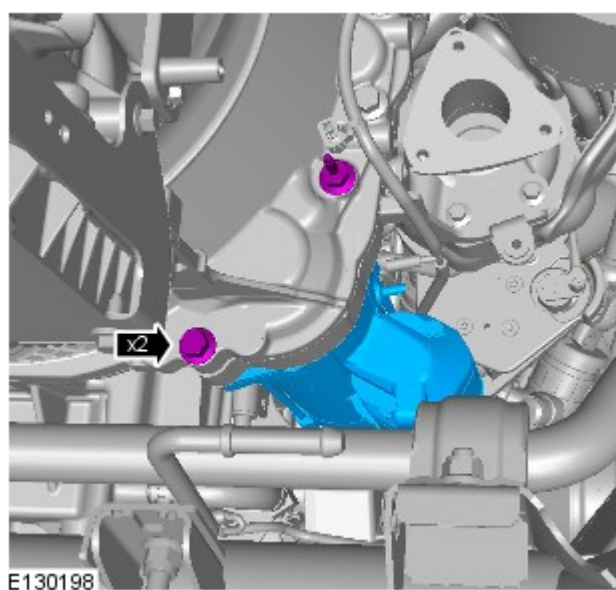

**CAUTIONS:**


- Only rotate the crankshaft clockwise.
- Discard the bolts

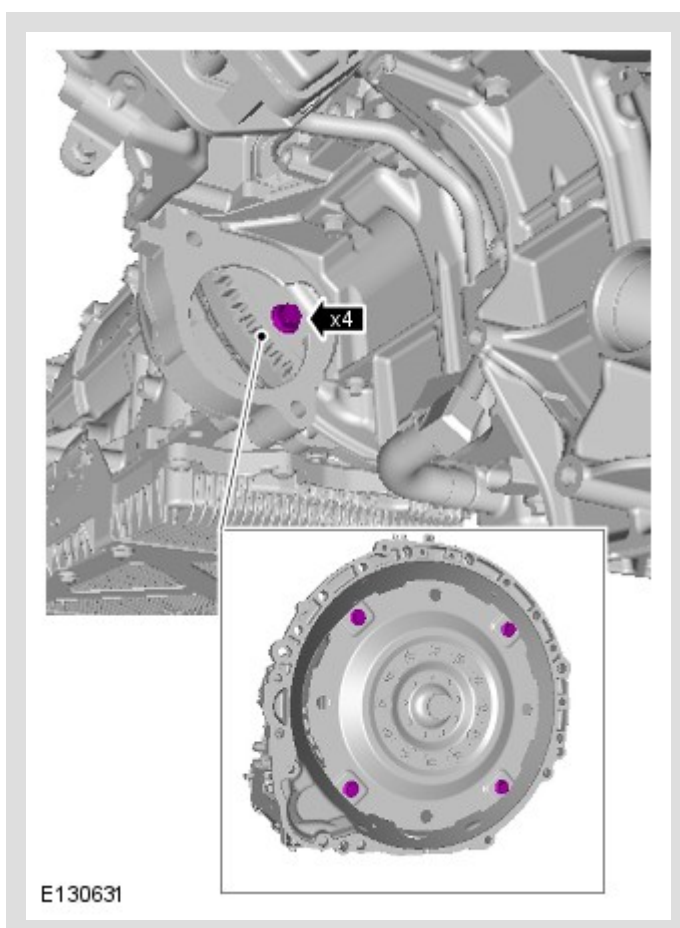


Renew Part: *Torque converter bolts : 1 .*

**WARNING:**


Make sure that the transmission is secured with suitable retaining straps.

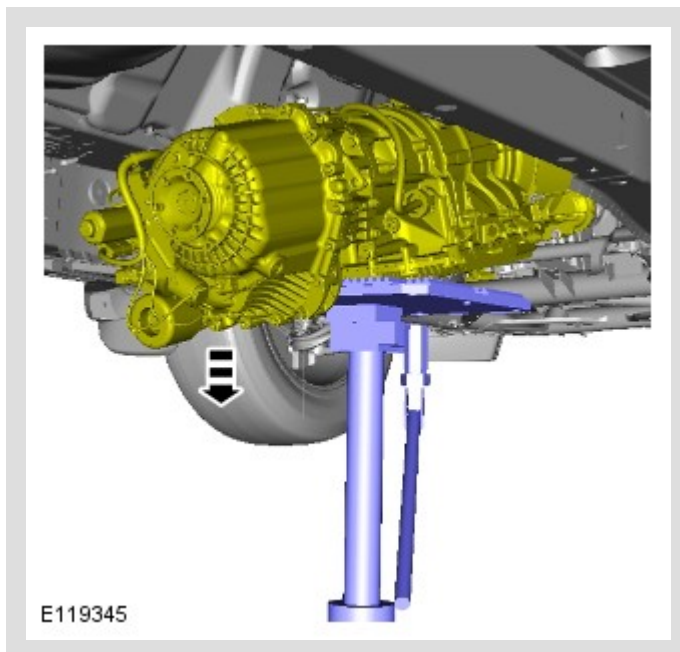


- Using a suitable wooden block, support the engine on the subframe.
- Lower the engine and transmission avoiding any contact with the bulkhead and body panels.

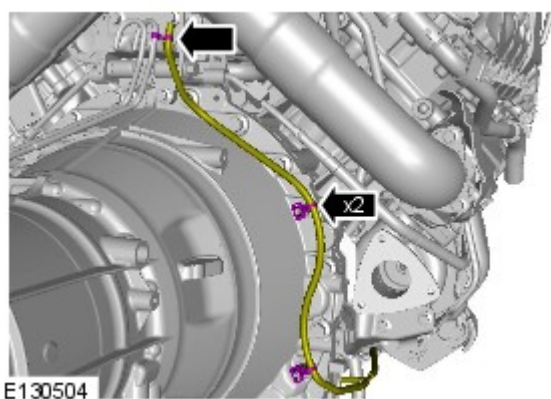

34.

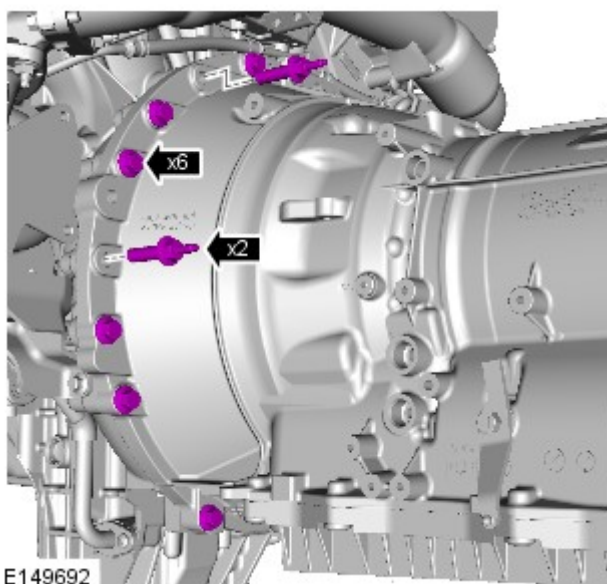

35.

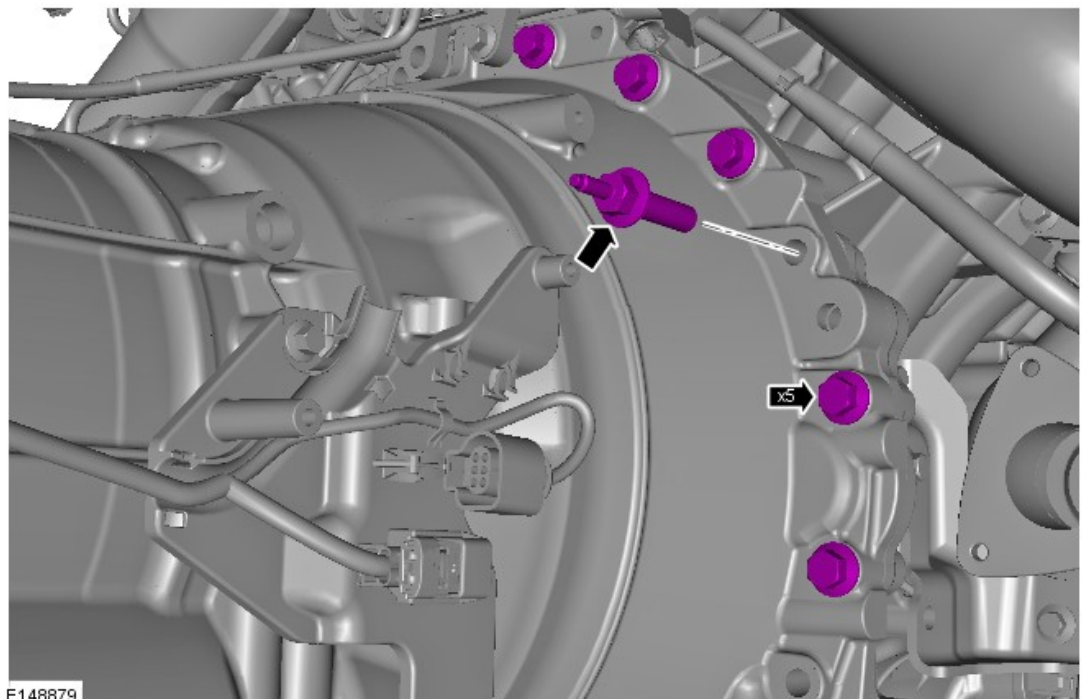

36.




WARNING:


This step requires the aid of another technician.




CAUTIONS:


- Make sure that the torque converter remains in the transmission.
- Secure the torque converter to the transmission using suitable cable ties.

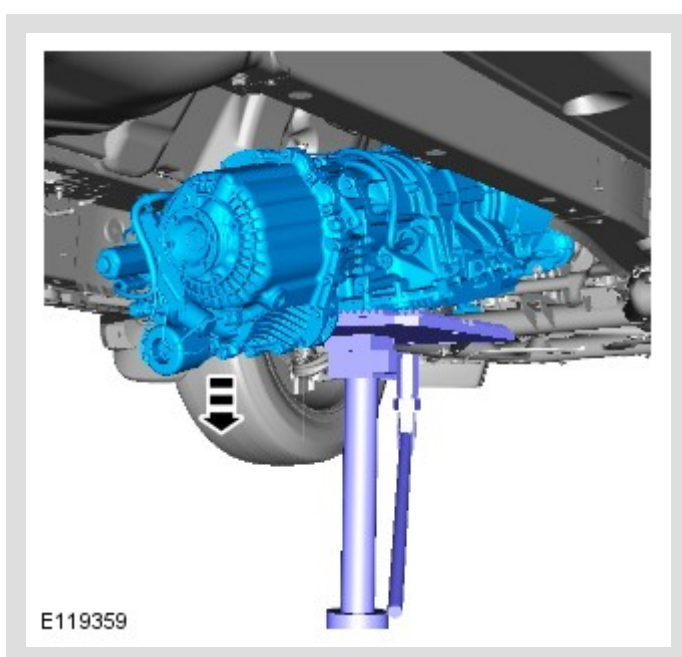

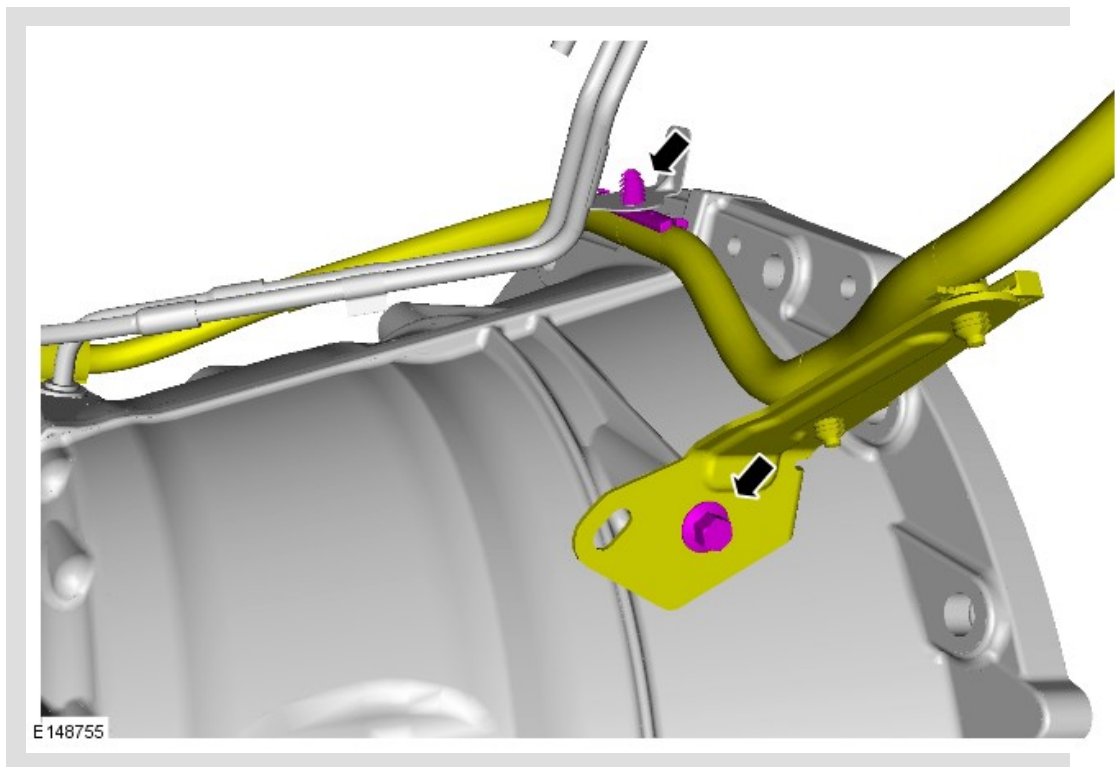

Do not disassemble further if removed for access only.

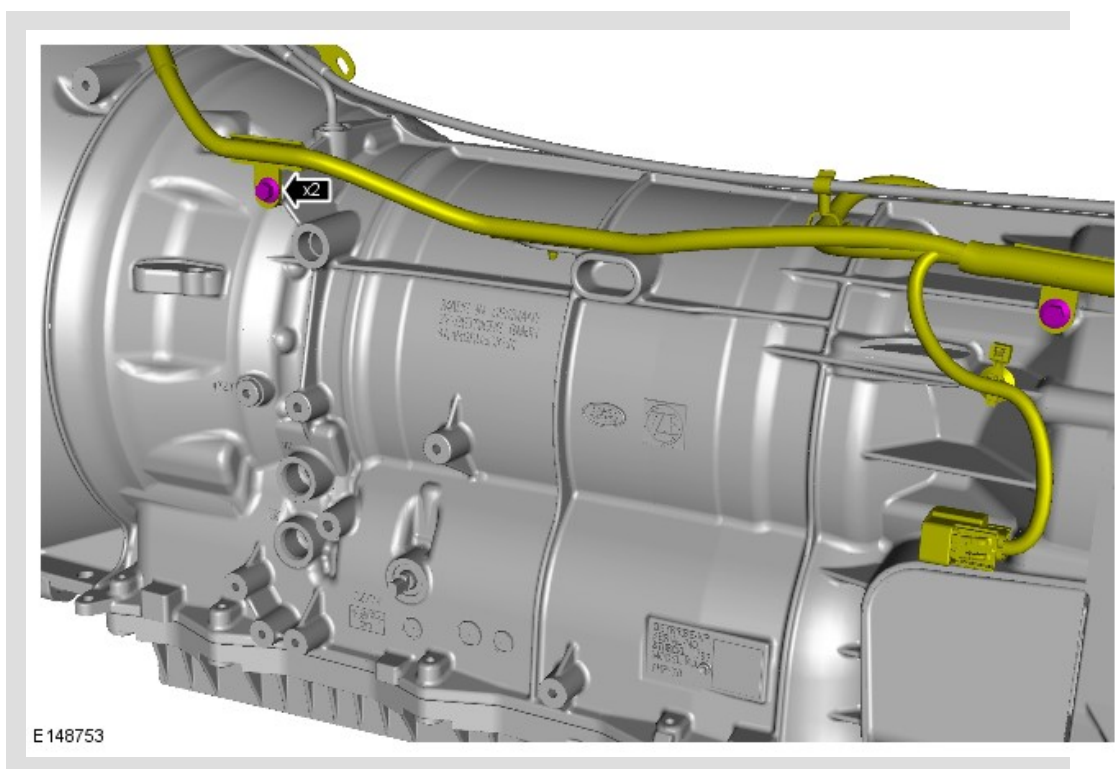


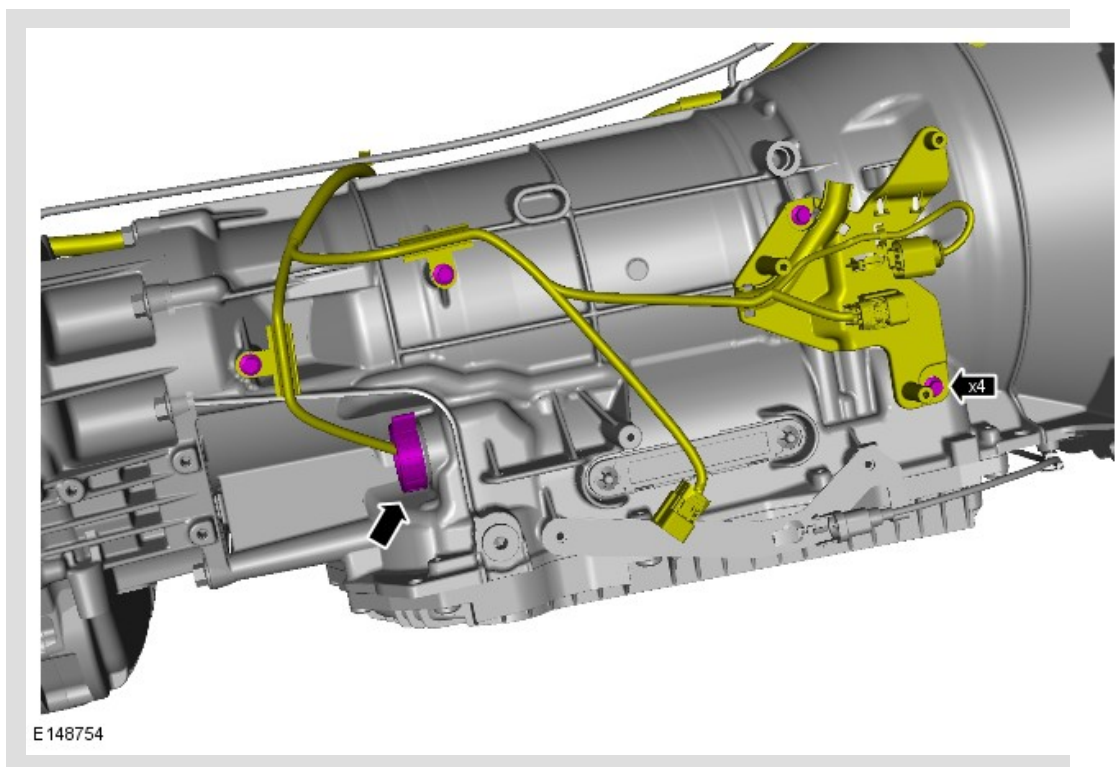


40.

⚠ CAUTION:

Always plug any open connections to prevent contamination.

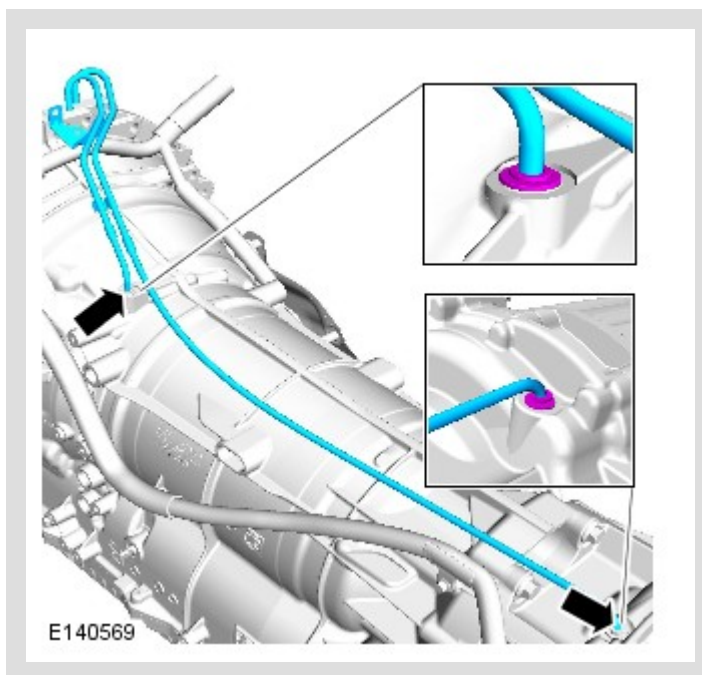

41.

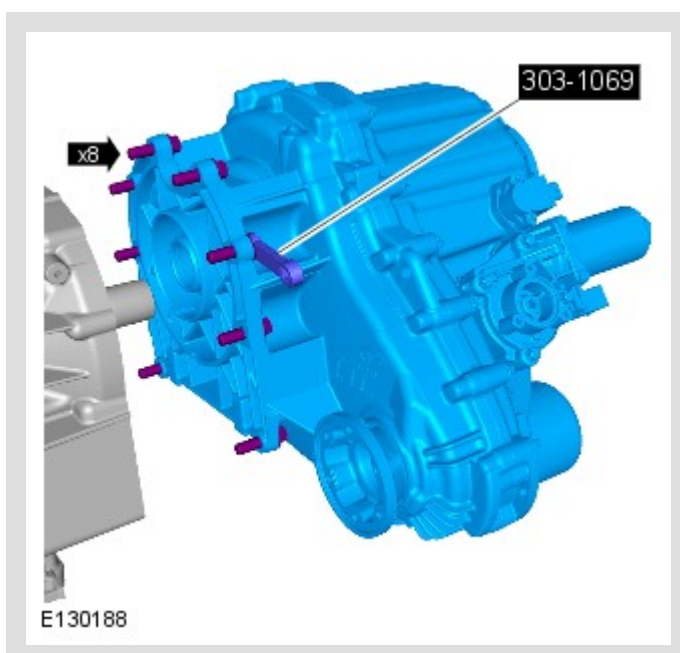


Special Tool(s): 303-1069

42.

ⓘ CAUTION:


Do not carry out this step if a new transfer box is to be installed.

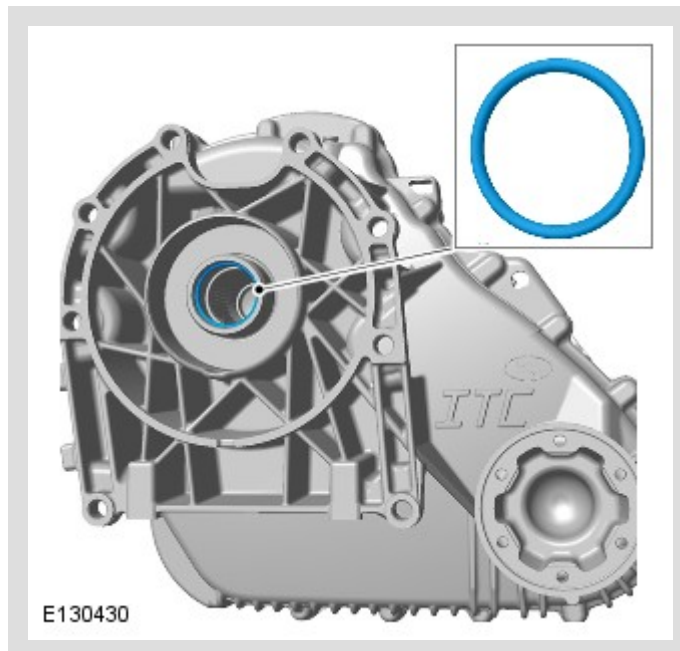

43.

ⓘ CAUTIONS:

- Care must be taken to avoid damage to the seal register and running surface.
- Do not carry out this step if a new transfer box is to be installed.
- Note the fitted position of the component prior to removal.

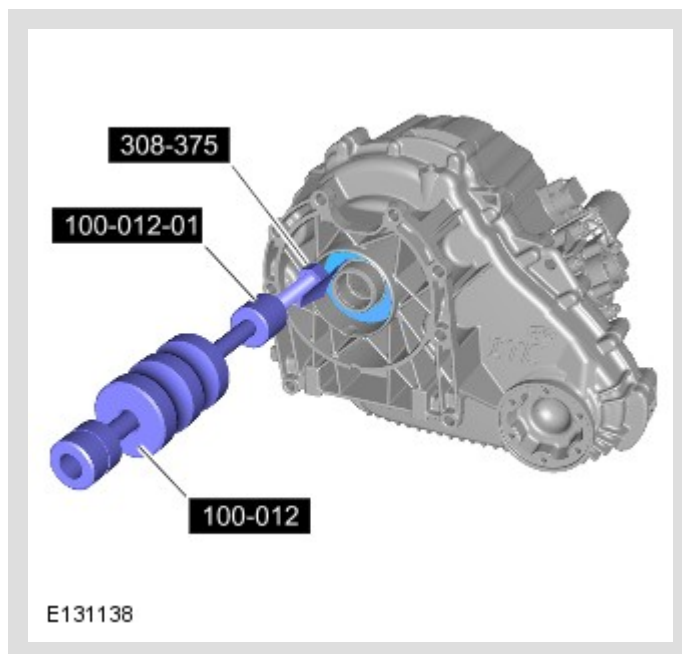

- *Special Tool(s):* 100-012 , 100-012-01 , 308-375