

PUBLISHED: 31-AUG-2017
2014.0 RANGE ROVER (LG), 307-01


AUTOMATIC TRANSMISSION/TRANSAXLE - VEHICLES WITH: 8HP70 8-SPEED
AUTOMATIC TRANSMISSION AWD

**TRANSMISSION - V6 S/C 3.0L PETROL
/V8 N/A 5.0L PETROL/V8 S/C 5.0L
PETROL** (G1509719)

REMOVAL

REMOVAL

SPECIAL TOOL(S)

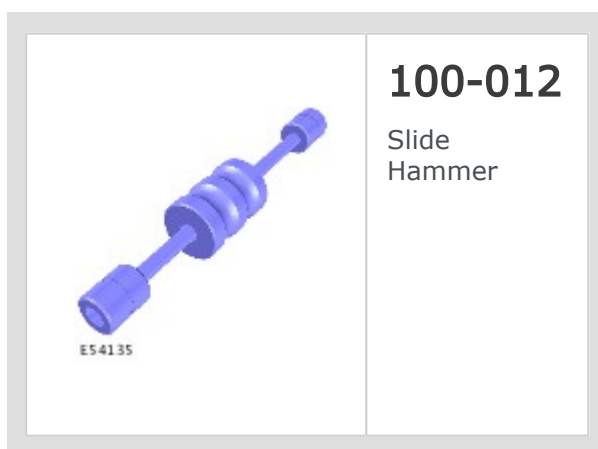

303-1069




E53727

303-1069

Adapter,
Wrench

303-114

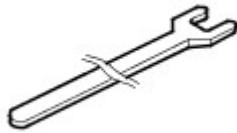

E46076

303-1142

Viscous Coupling
Wrench

303-1143



E55382

303-1143

Viscous Coupling Holding Tool



308-375

308-375

Remover, Input and Output Seal


NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Some illustrations may show the transmission removed for clarity.

1. Disconnect the battery ground cable.
Refer to: Specifications (414-01 Battery, Mounting and Cables, Specifications).

2. Refer to: Air Cleaner Outlet Pipe T-Connector (303-12 Intake Air Distribution and Filtering - V8 S/C 5.0L Petrol, Removal and Installation).



3.

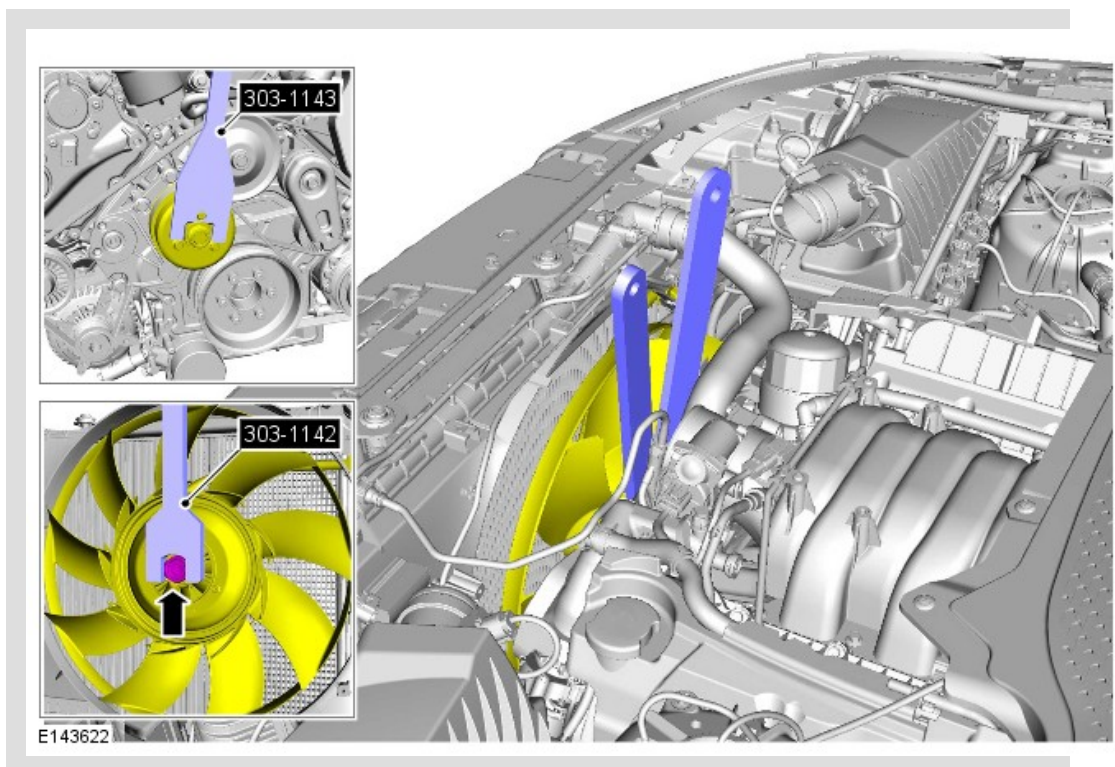

- *Special Tool(s):* [303-1143](#)
- *Special Tool(s):* [303-1142](#)
- *Torque:* **65 Nm**

4. Refer to: Front Driveshaft - V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0 L Petrol (205-01 Driveshaft, Removal and Installation).
5. Refer to: Rear Driveshaft - V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0 L Petrol (205-01 Driveshaft, Removal and Installation).

6.

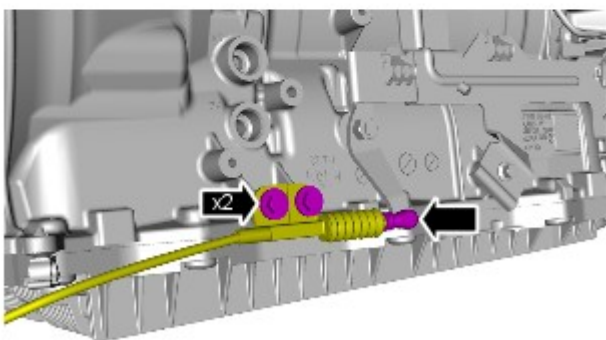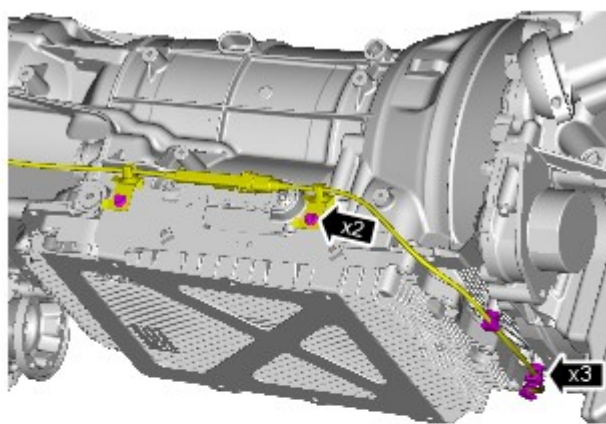



E150358

- Secure with 2 cable ties.

7.

 NOTE:

Install new retaining clips.

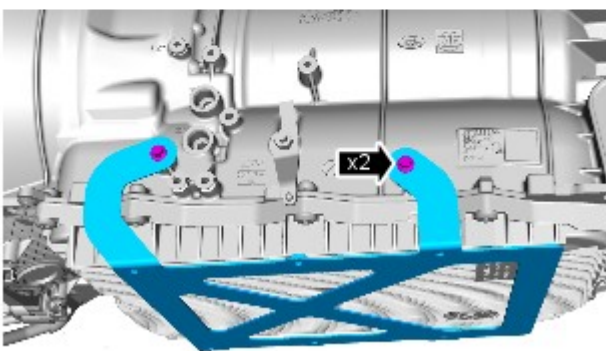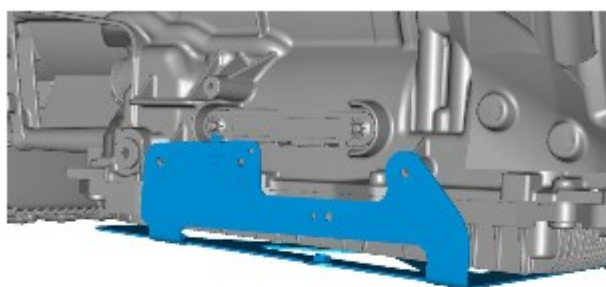


E148881


8.


 **NOTE:**


Using a suitable transmission jack support the differential case.

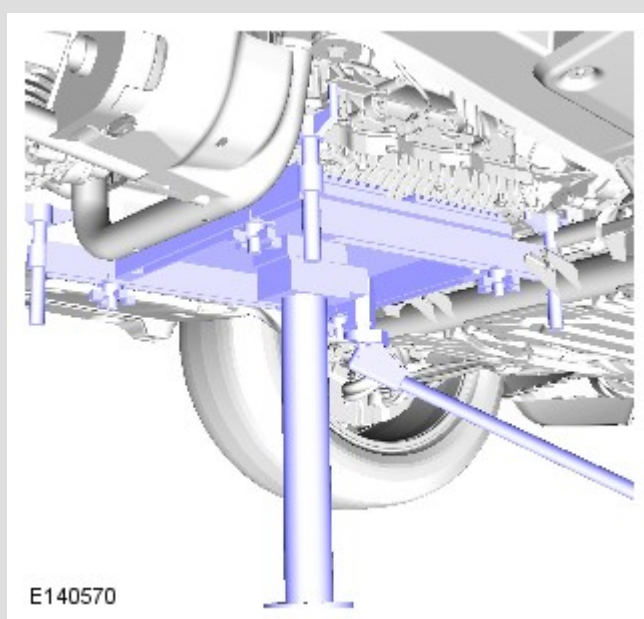


9.

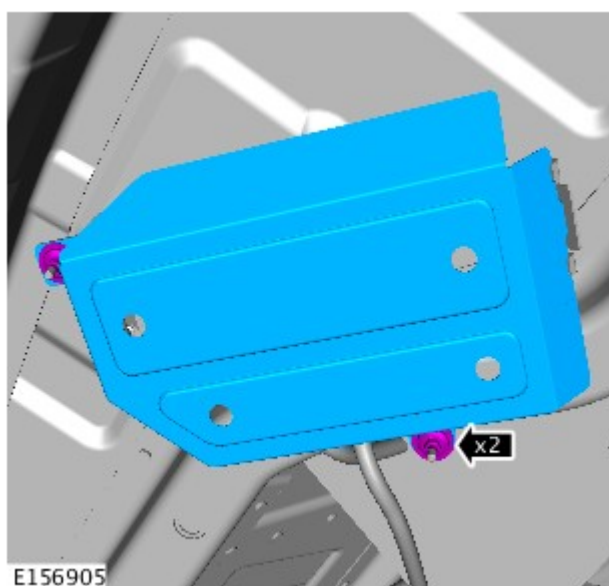

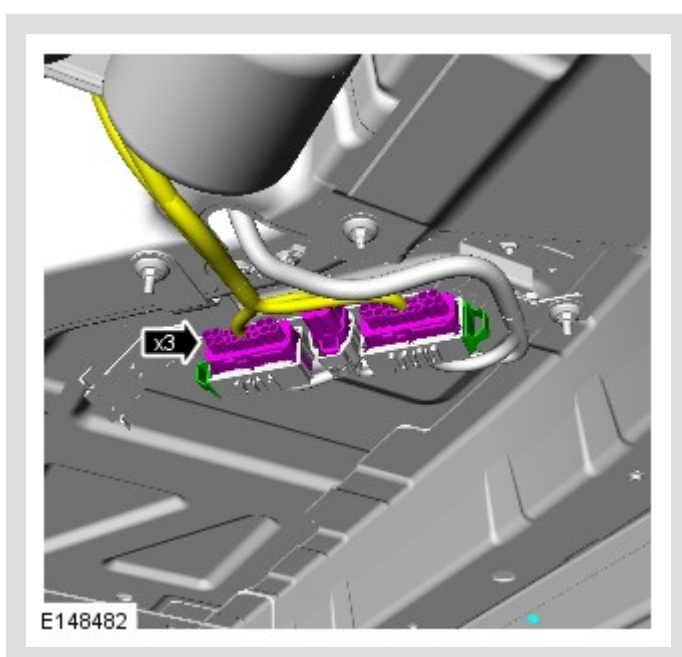

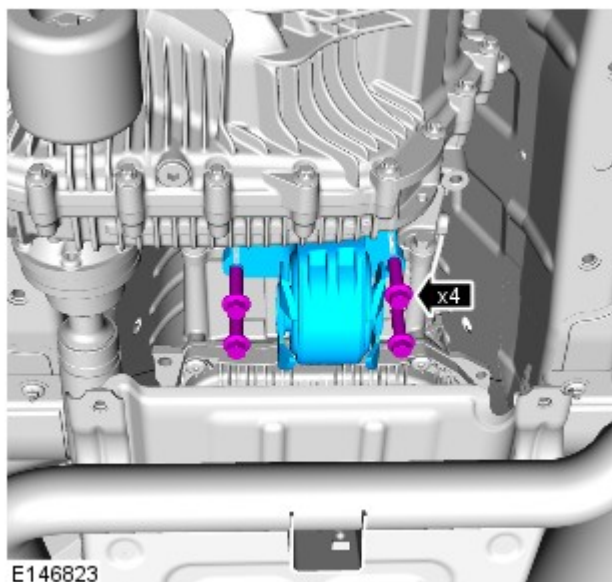


12.

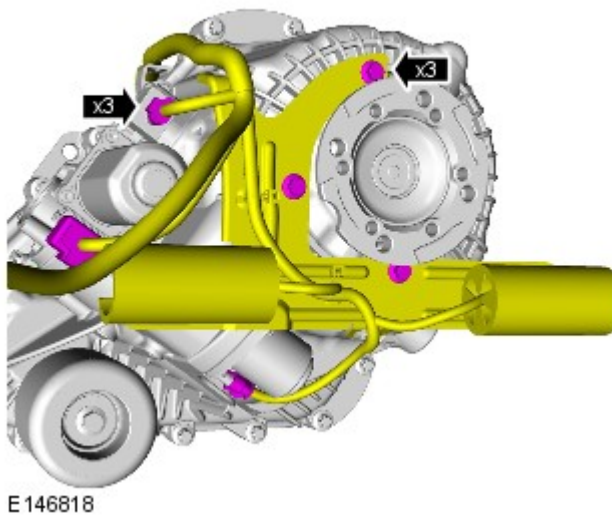


13.

⚠ CAUTIONS:


- Be prepared to collect escaping fluids.
- Before disconnecting any components, make sure the area is clean and free from foreign material. When disconnected all openings must be sealed.

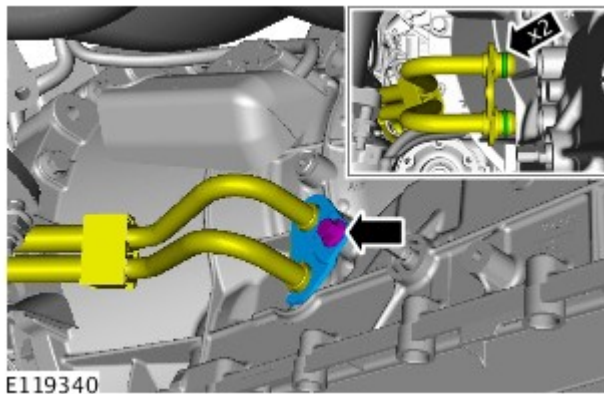

14.

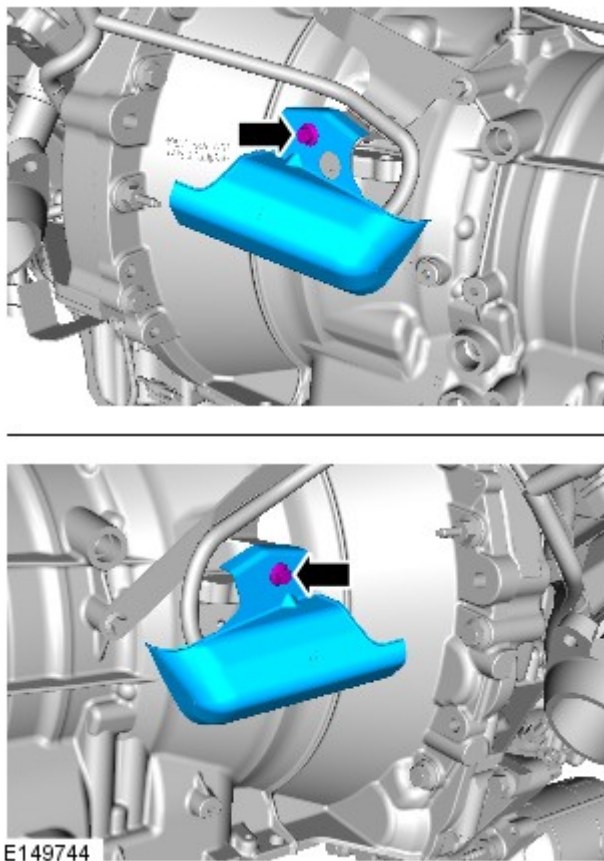


15.

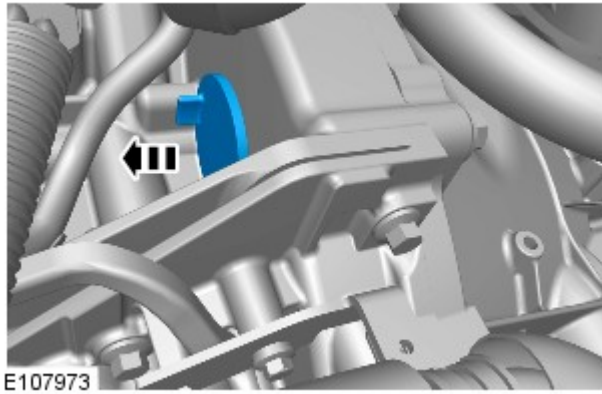

16.

**CAUTIONS:**


- Only rotate the crankshaft clockwise.
- Discard the bolts.

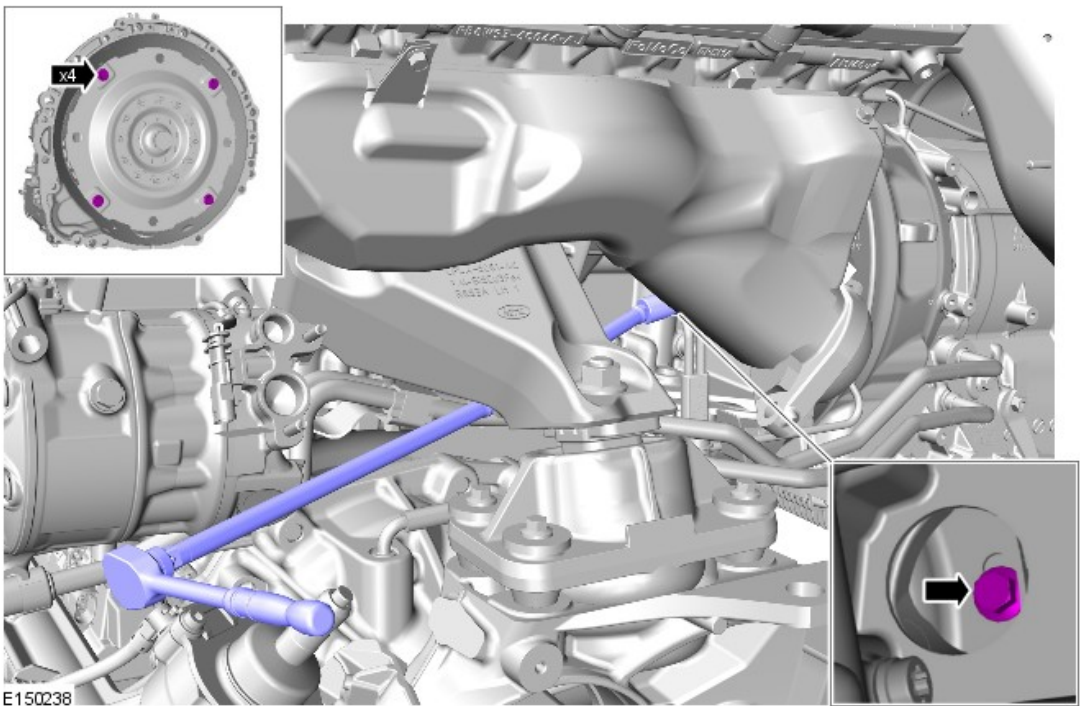

17.


**WARNING:**

Make sure that the transmission is secured with suitable retaining straps.

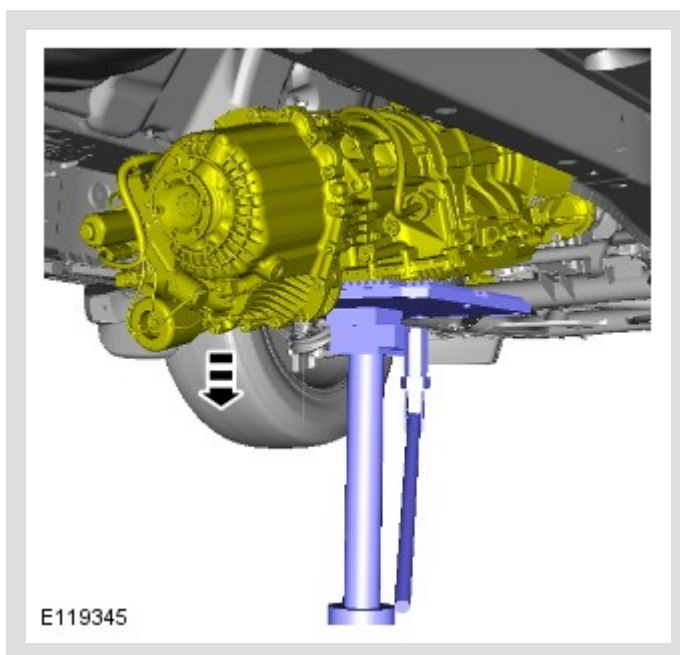


Lower the rear of the transmission for access.

18.

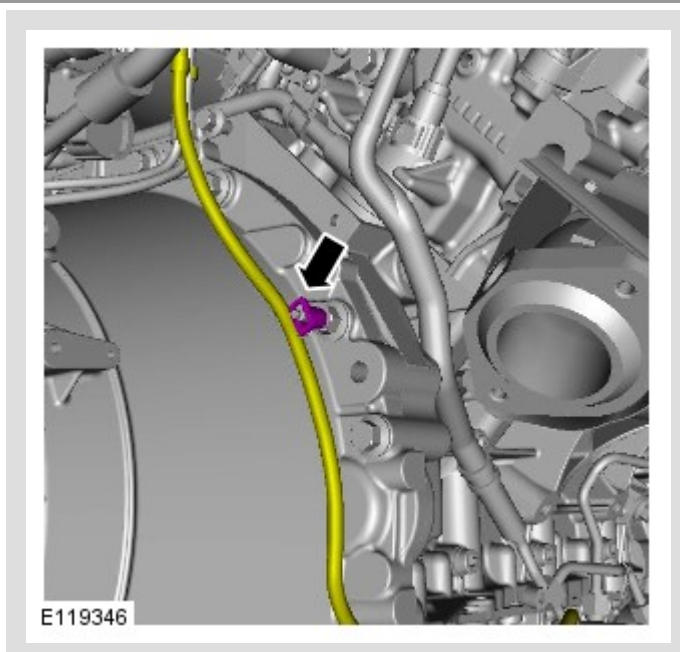


19.

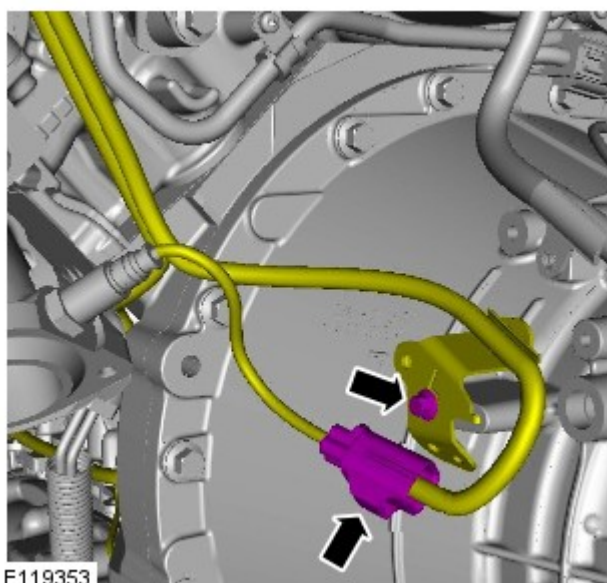



E119353

20.

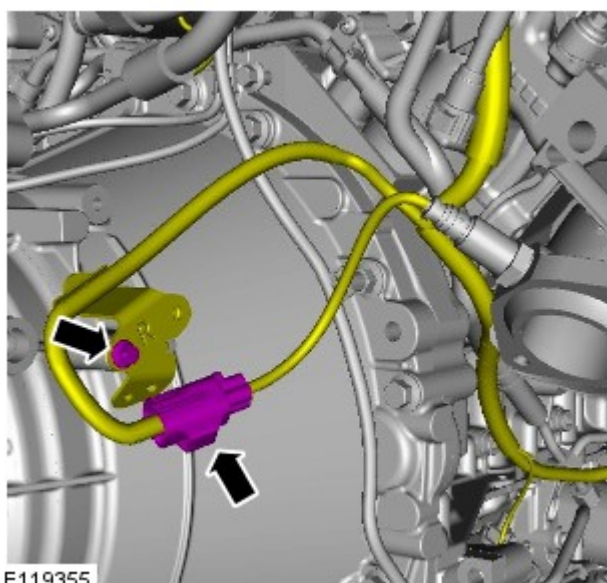


E119355

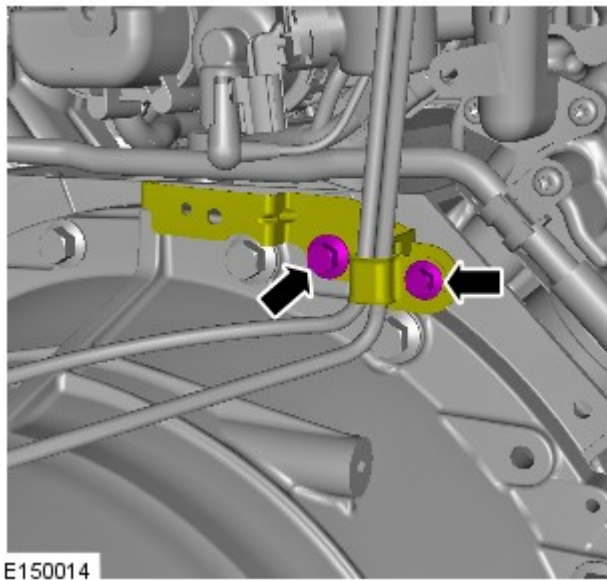

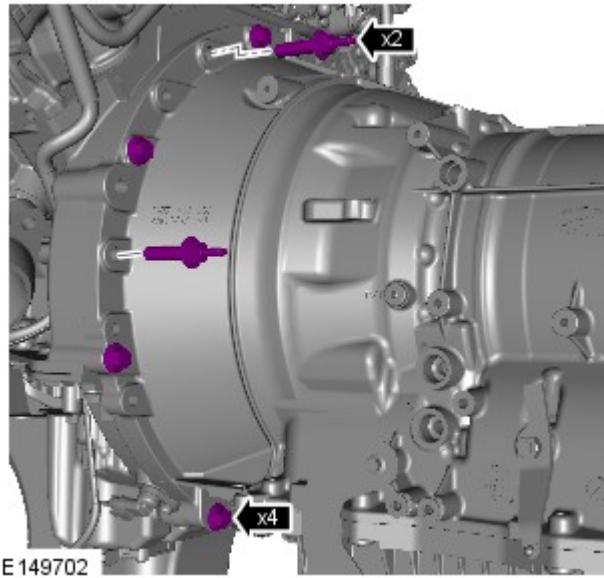

23.

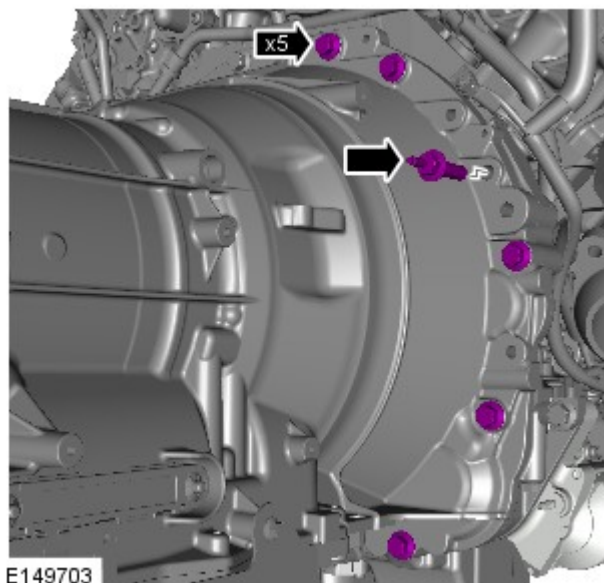

**WARNING:**


This step requires the aid of another technician.

**CAUTION:**

Make sure that the torque converter remains in the transmission.

**NOTE:**


Secure the torque converter to the transmission using suitable cable ties.

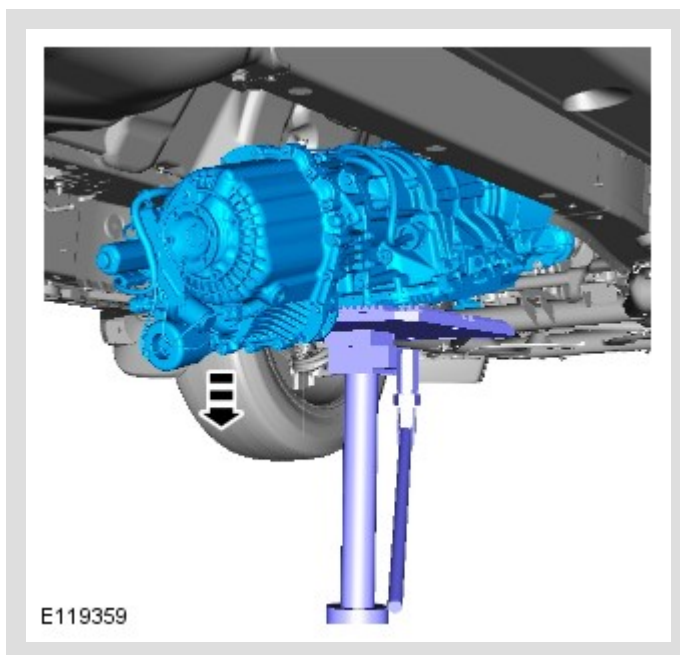


25.


 NOTE:

Do not disassemble further if the component is removed for access only.

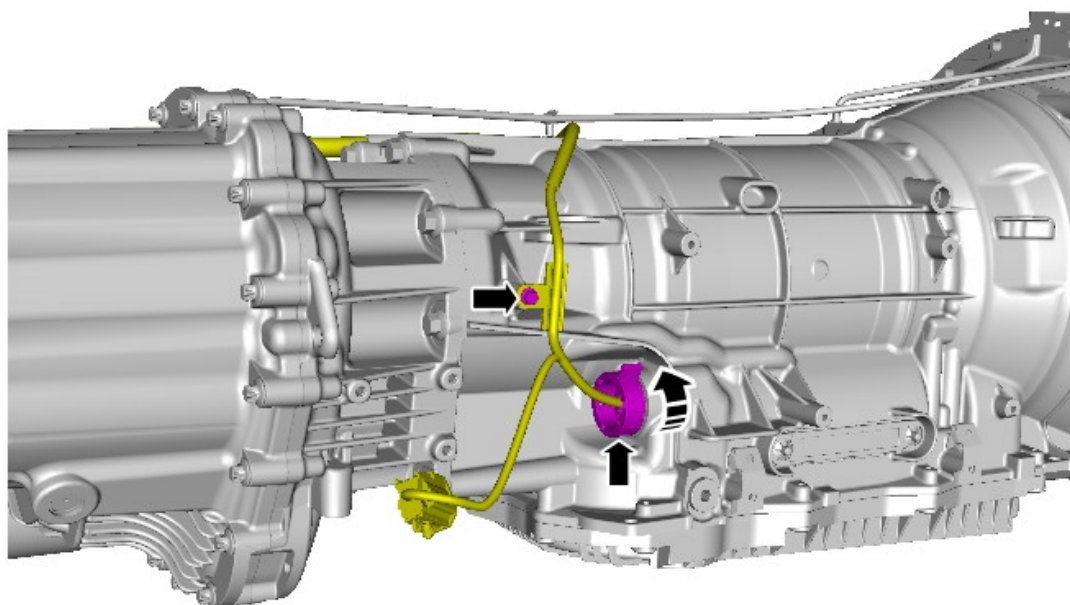

E149706

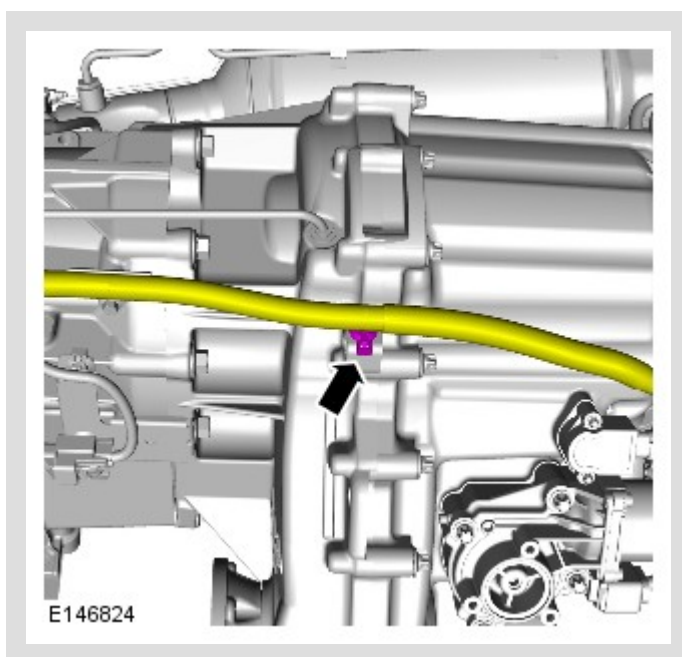

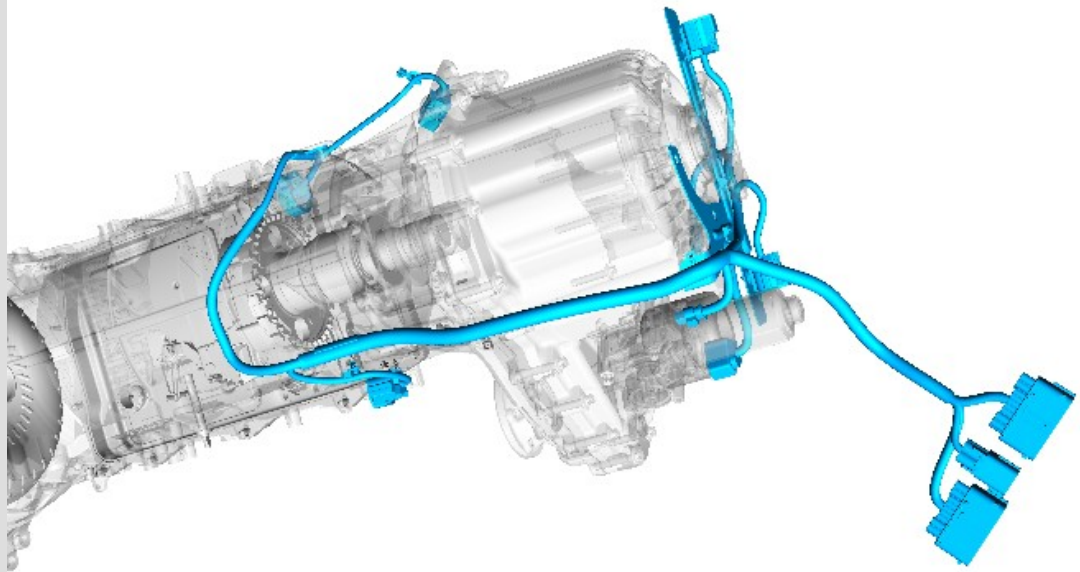


E158845


28.



CAUTION:


Always plug any open connections to prevent contamination.

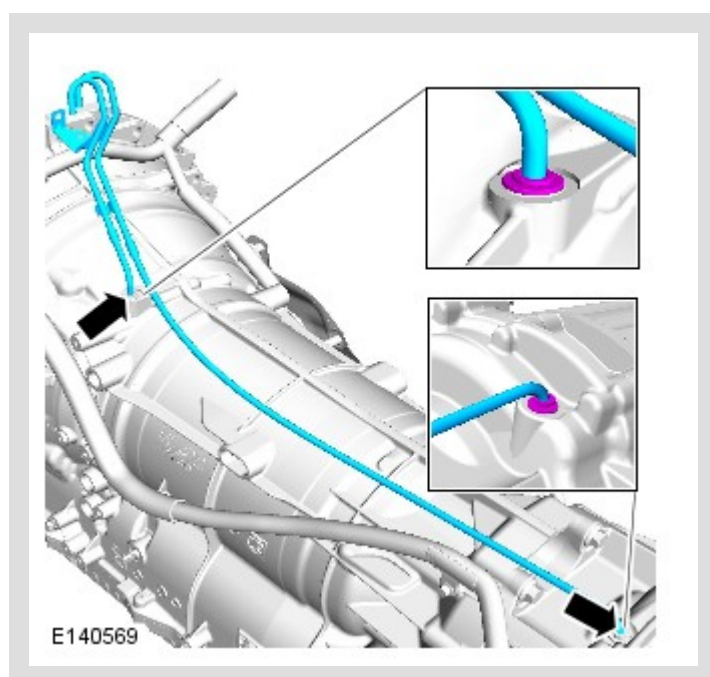

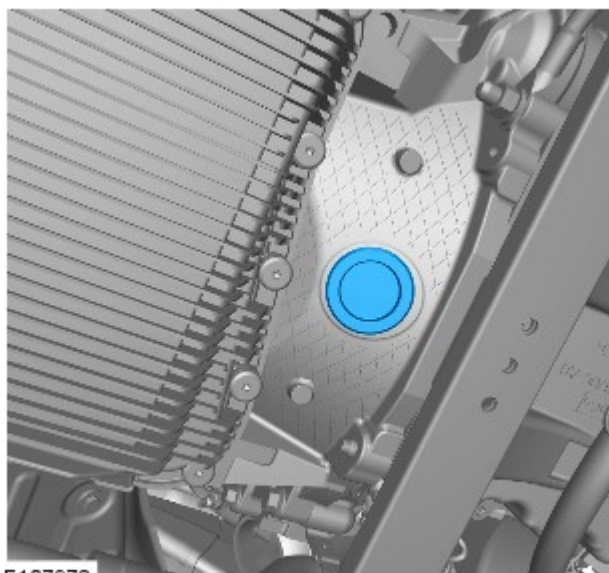

E107972

30.

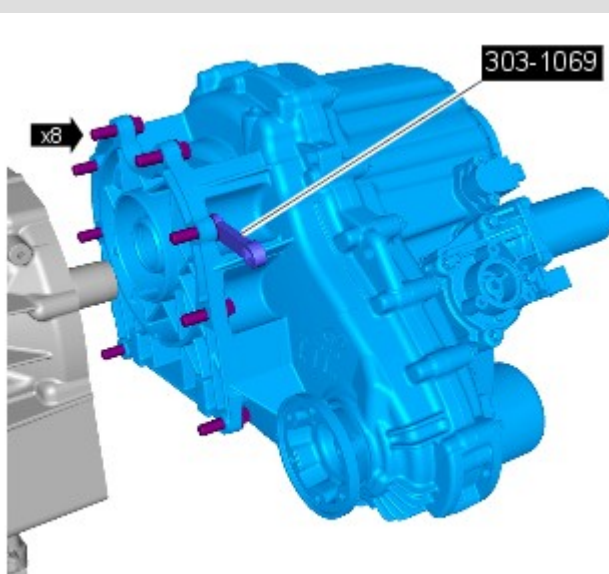


E130188

31.

⚠ CAUTION:


Do not carry out this step if a new transfer box is to be installed.

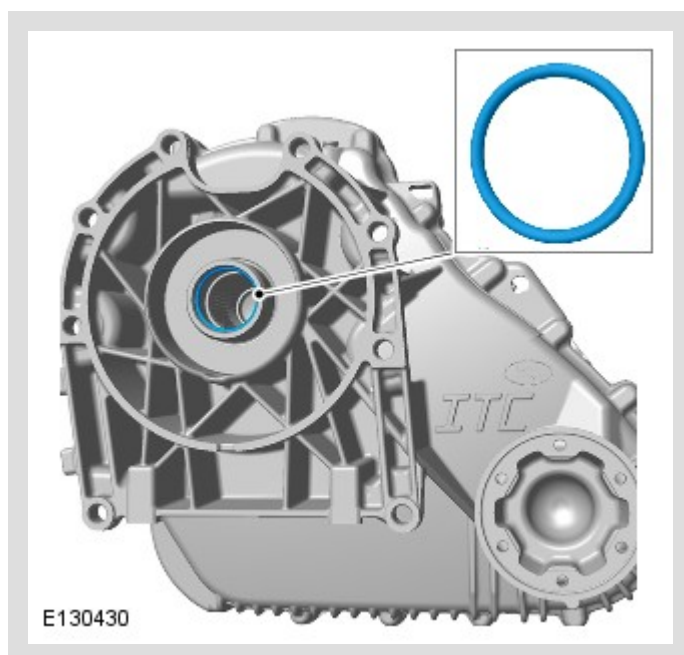

32.

⚠ CAUTIONS:

- Care must be taken to avoid damage to the seal register and running surface.
- Note the fitted position of the component prior to removal.

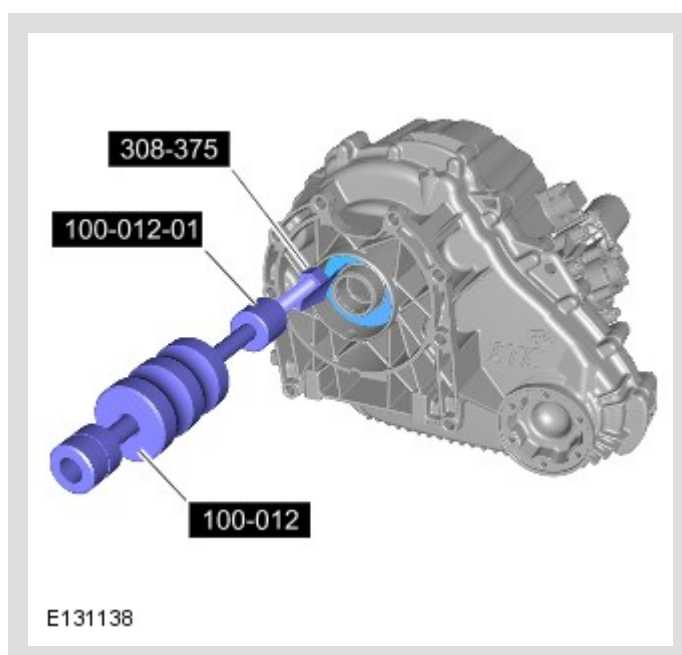

- *Special Tool(s):* 100-012 , 100-012-01 , 308-375