

PUBLISHED: 24-AUG-2017
2014.0 RANGE ROVER (LG), 307-01


AUTOMATIC TRANSMISSION/TRANSAXLE - VEHICLES WITH: 8HP70 8-SPEED
AUTOMATIC TRANSMISSION AWD

**TRANSMISSION - V6 S/C 3.0L PETROL
/V8 N/A 5.0L PETROL/V8 S/C 5.0L
PETROL** (G1509722)

INSTALLATION

INSTALLATION

SPECIAL TOOL(S)

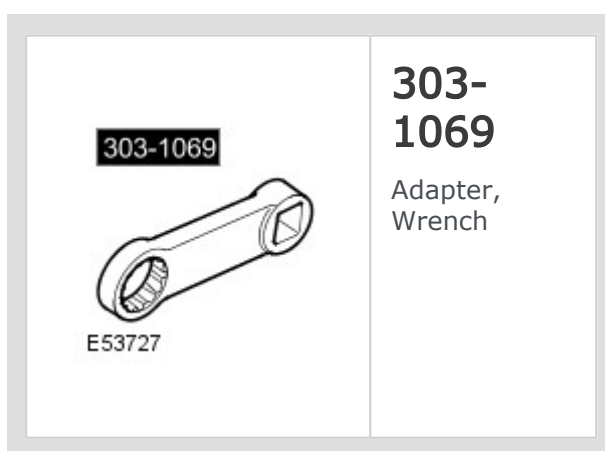

303-1143



E55382

303-1143

Viscous Coupling Holding Tool

308-598



E50941

308-598

Installer, Oil Seal

PART(S)

STEP	PART NAME	QUANTITY
Step 4	Transfer case input shaft oil seal	1
Step 18	Torque converter bolts	4
Step 21	Transmission casing O-ring seals	2
Step 28	Retaining clip	3


NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Some illustrations may show the transmission removed for clarity.

1.

 NOTE:

This step is only required if a new component is installed.

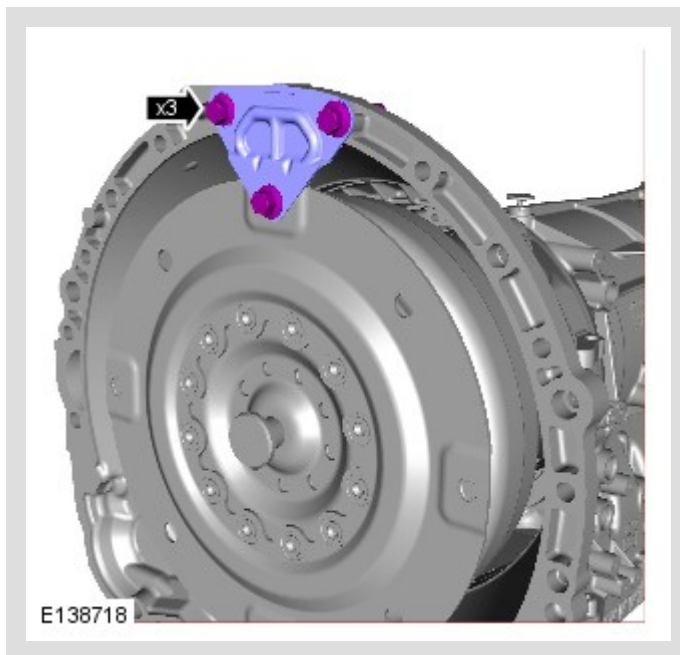


Remove the torque converter retainer.

2.

 NOTE:

Make sure that the torque converter is fully engaged to the transmission.

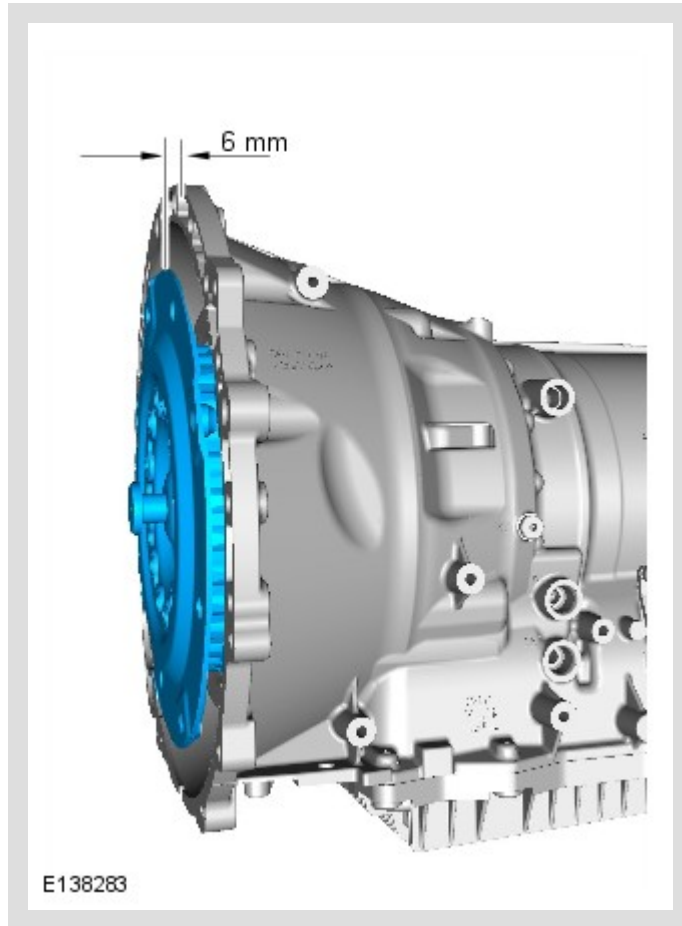


3.

⚠ CAUTION:

Oil seals must be fitted dry.

⚠ NOTES:

- This step is only required if previously removed.
- Make sure that this component is installed to the noted removal position.

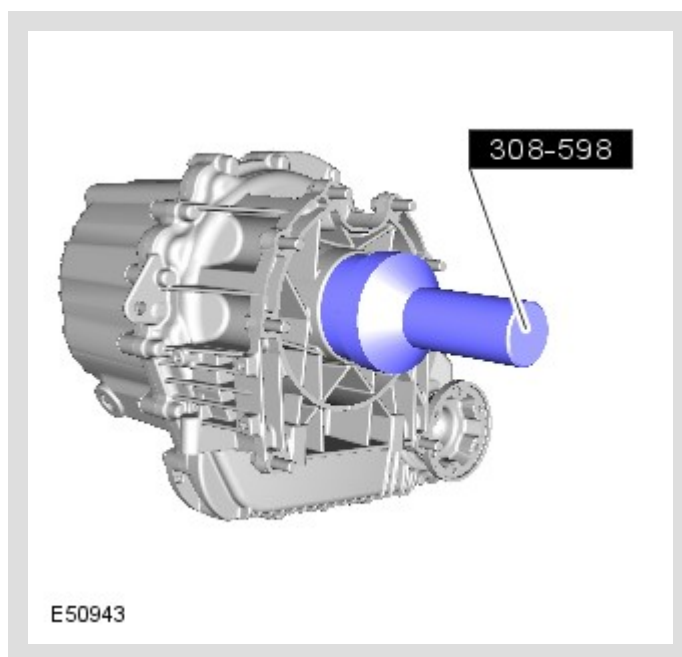


Special Tool(s): [308-598](#)


4.

 NOTE:


Install a new O-ring seal.

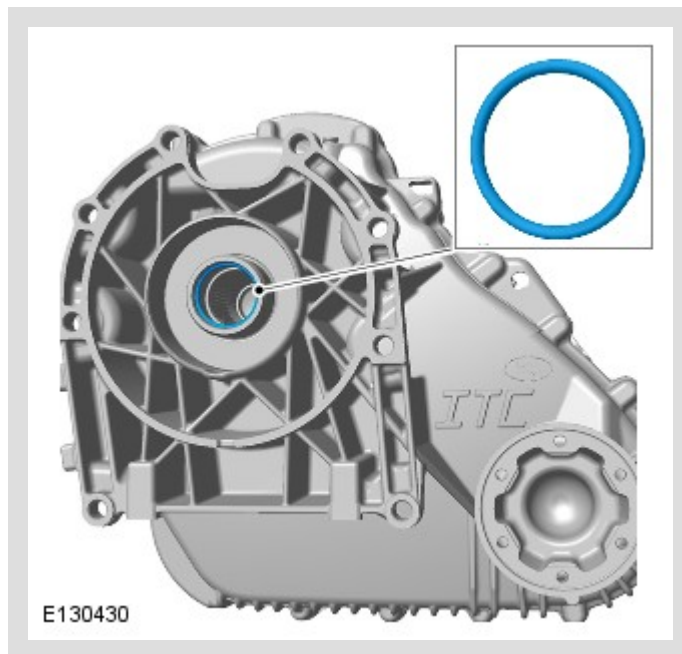


Renew Part: *Transfer case input shaft oil seal* Quantity: 1 .

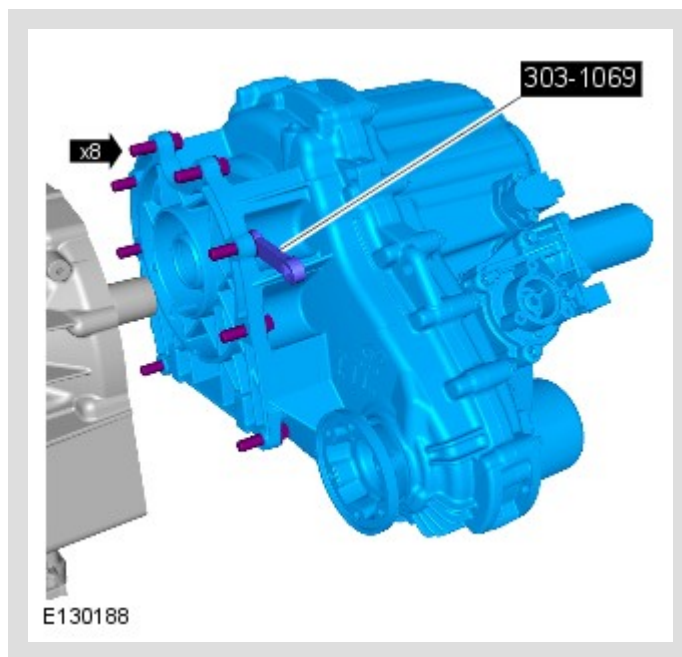



- *Special Tool(s):* [303-1069](#)
- Clean the component mating face.
- Lubricate input shaft splines with 'Weicon TL7391' grease.
- *Torque:* **45 Nm**

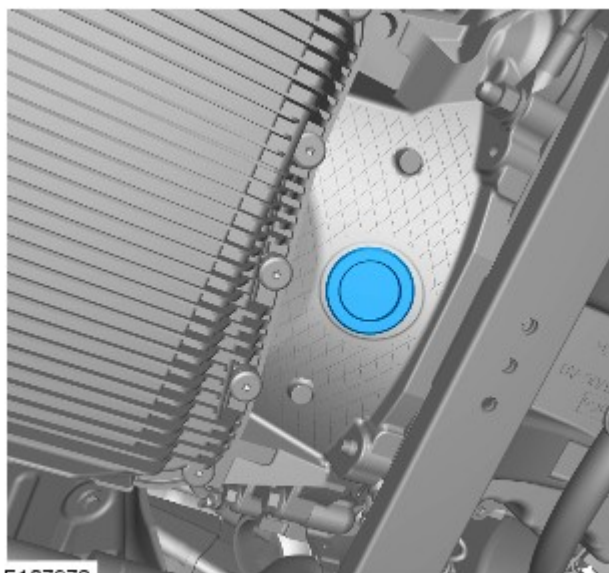

E107972

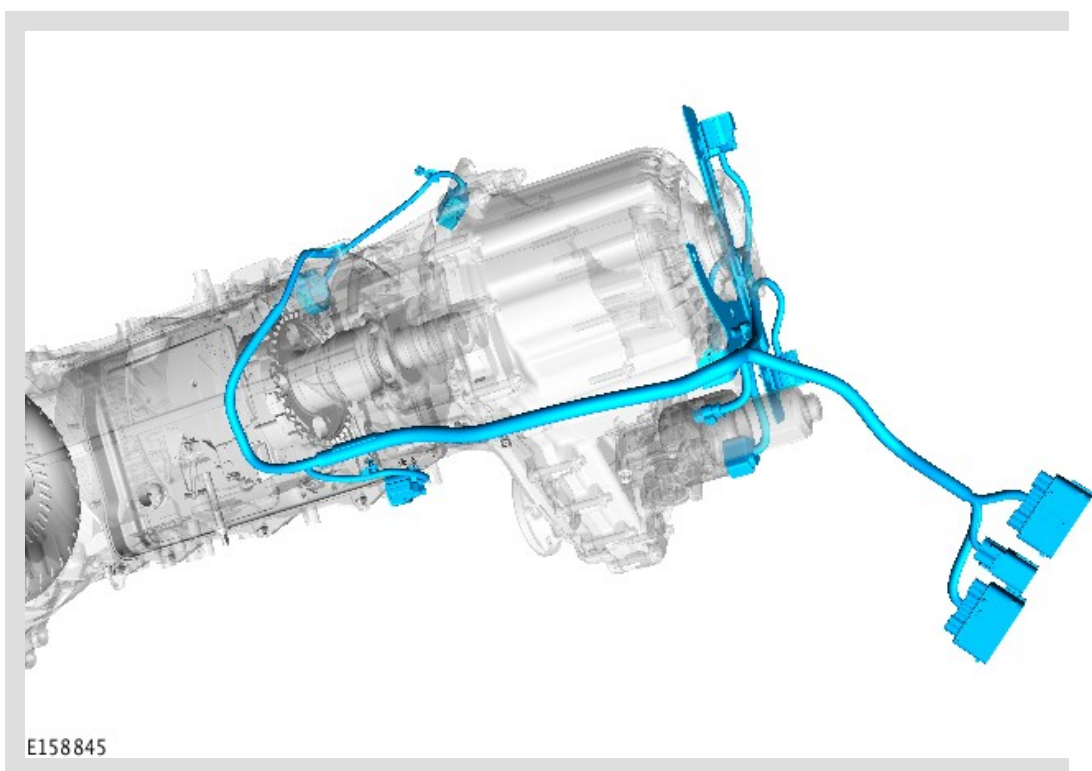

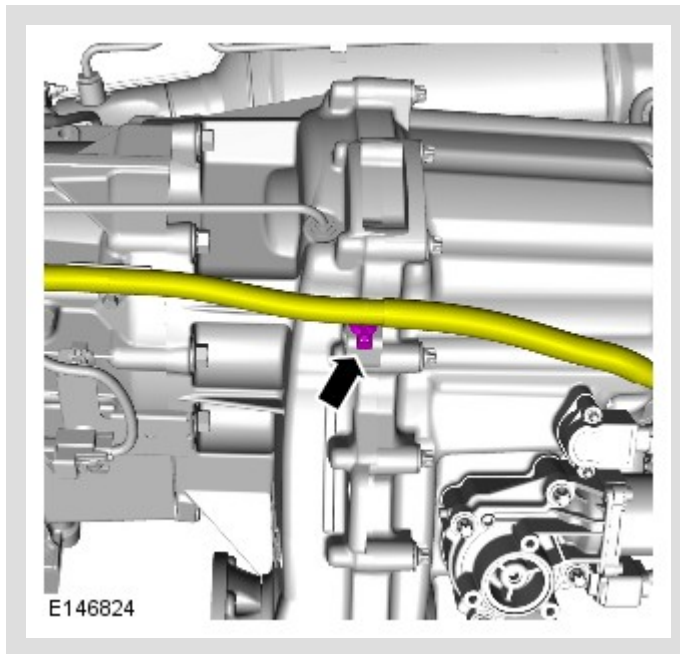

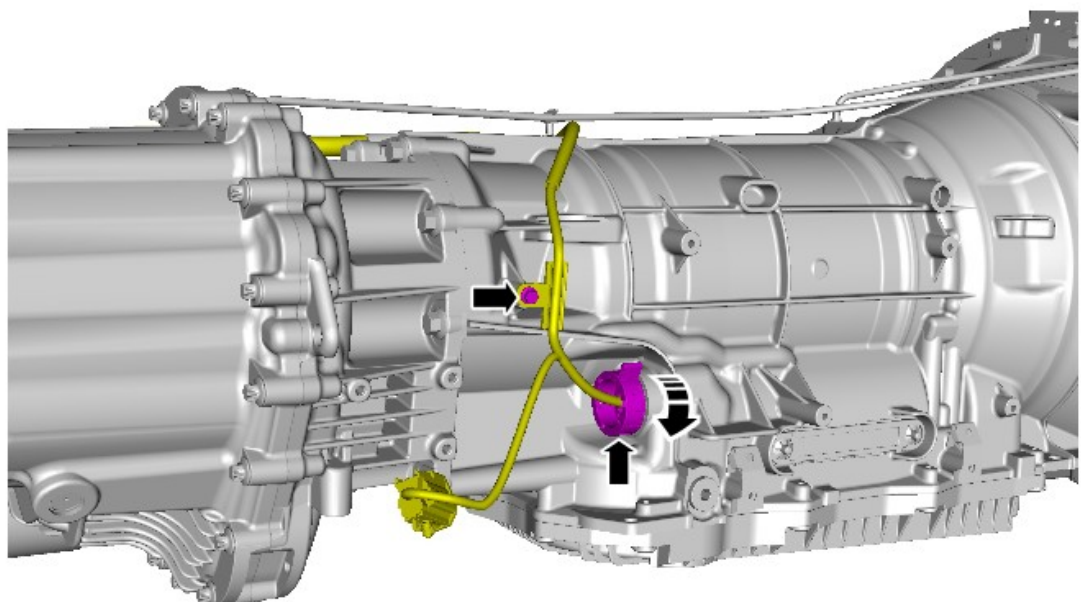

E149992


Torque: 8 Nm

10.



CAUTIONS:

- To prevent water ingress and subsequent transmission damage, make sure that the breather is fully pushed home into the transmission casing. The white line around the circumference of the pipe should not be visible when correctly installed.
- Remove the blanking plugs.

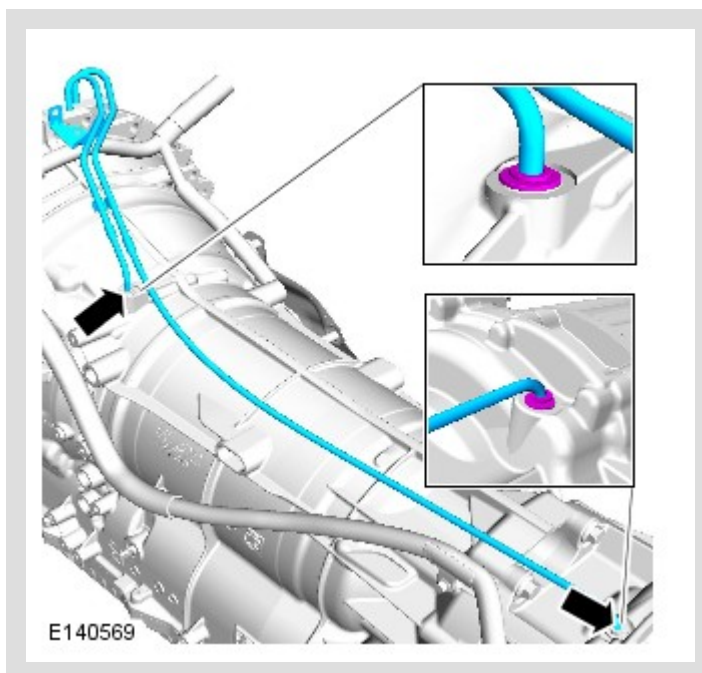

11.




WARNING:

Make sure that the transmission is secured with suitable retaining straps.




CAUTIONS:


- Apply grease of the correct specification to the torque converter spigot.
- Make sure the torque converter remains connected to the transmission.

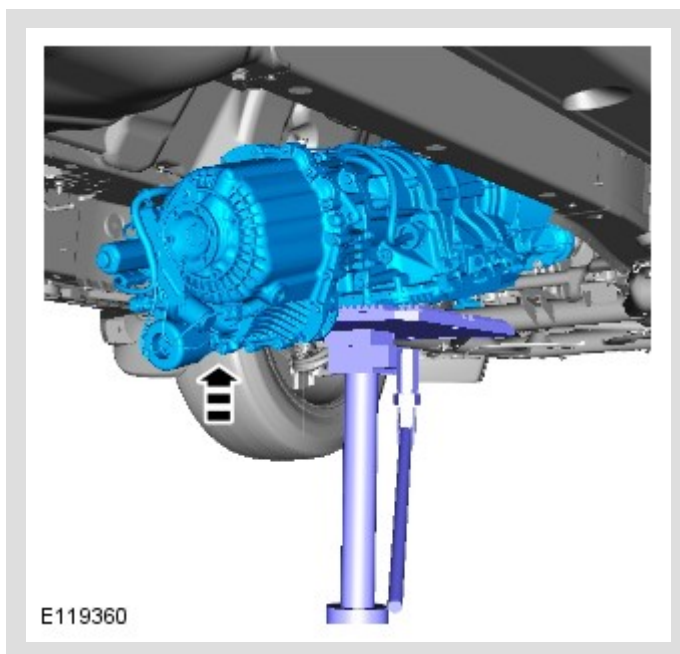


Using a suitable hydraulic jack, support the transmission.

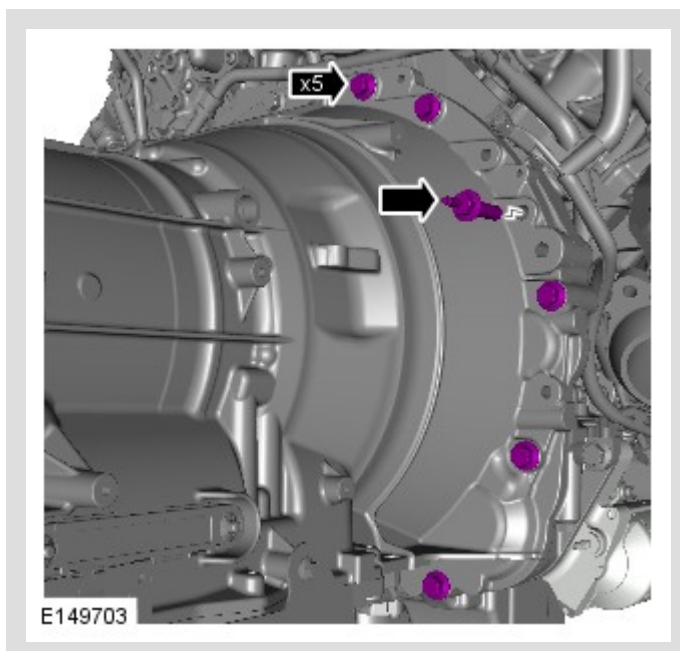

Torque: 40 Nm

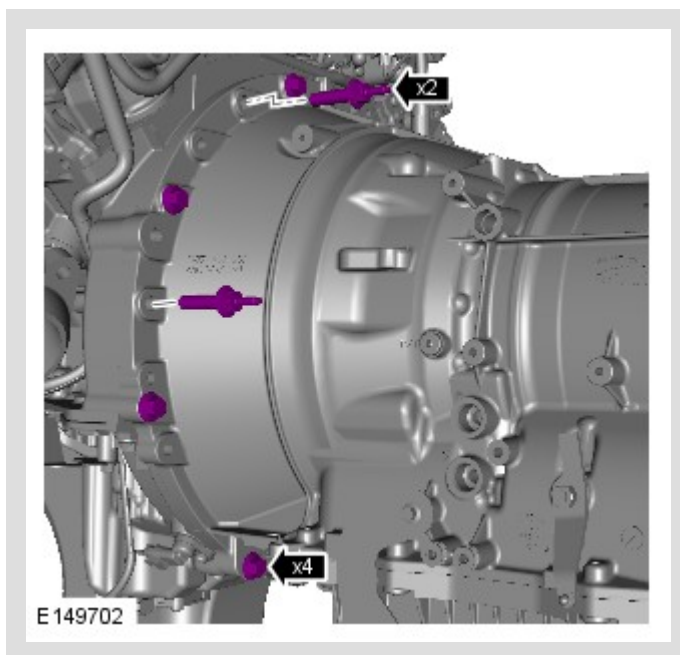


Torque: 40 Nm

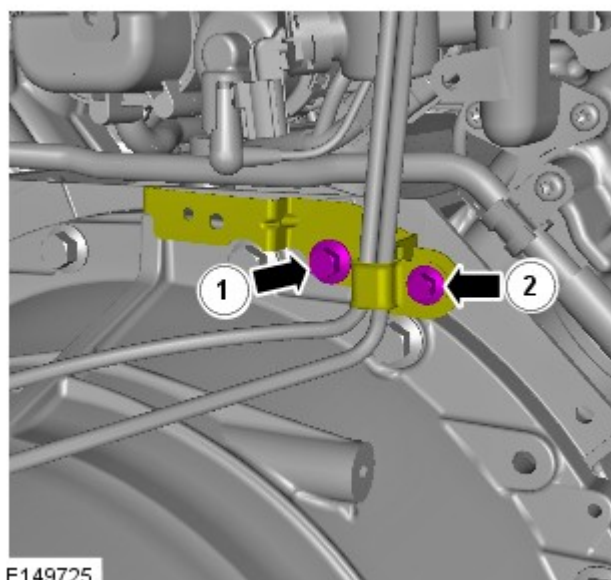


Torque:

M8 20 Nm

M6 10 Nm

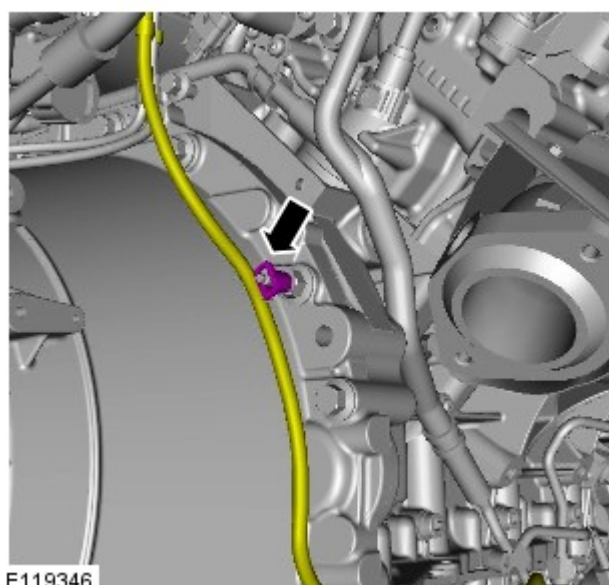


16.

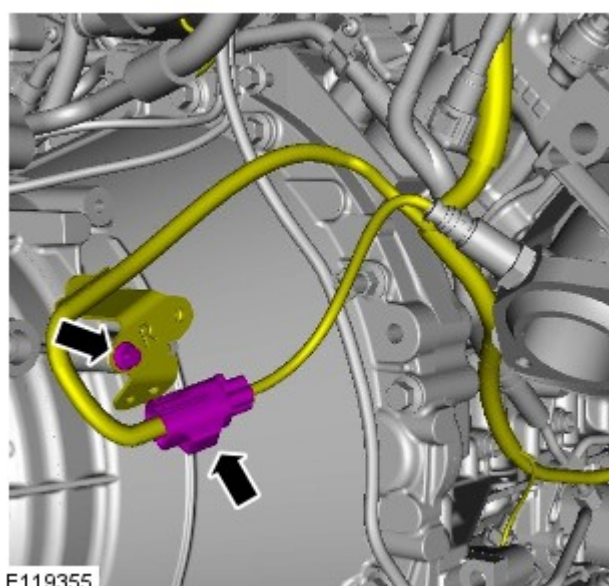

Torque: 10 Nm

17.

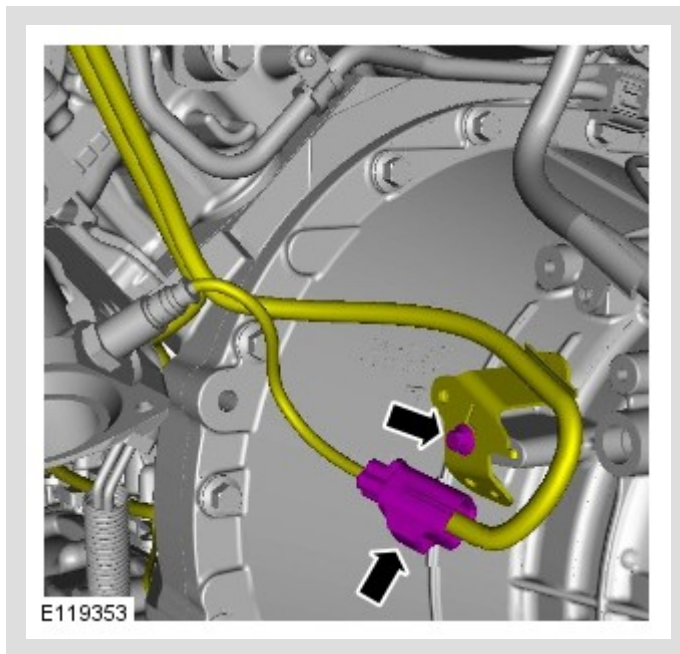


Torque: 10 Nm

18.



CAUTIONS:


- Only rotate the crankshaft clockwise.
- Install new bolts

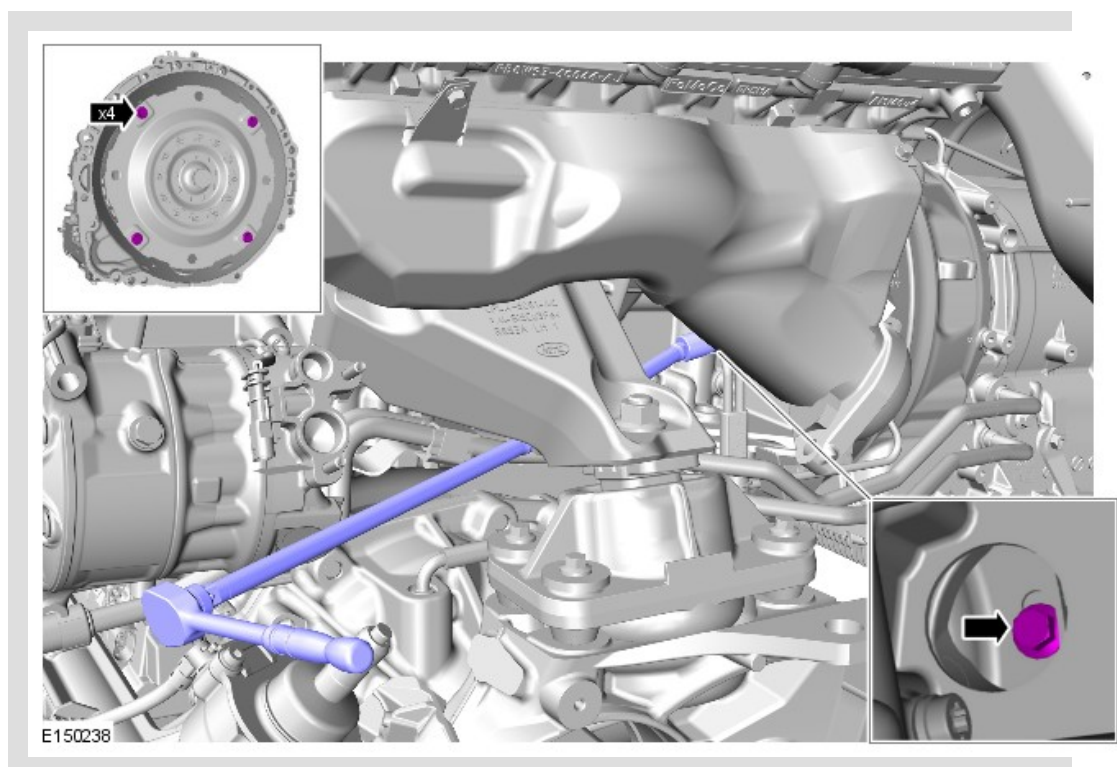


Renew Part: *Torque converter bolts* Quantity: 4 .

Torque: 63 Nm

19.

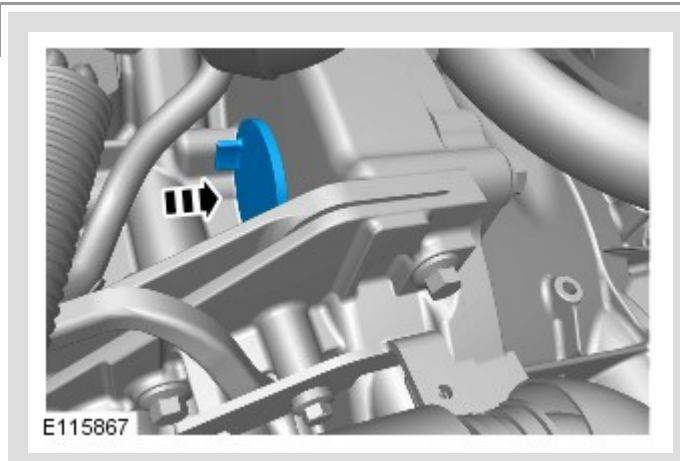


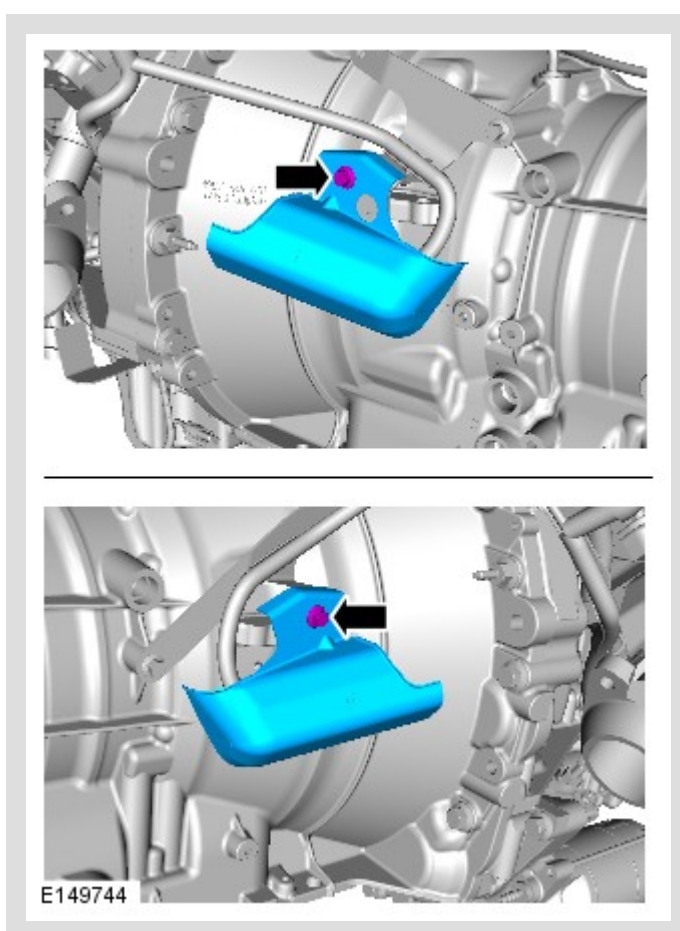

Torque: 15 Nm

⚠ CAUTIONS:


- Be prepared to collect escaping fluids.
- Install new o-ring seals

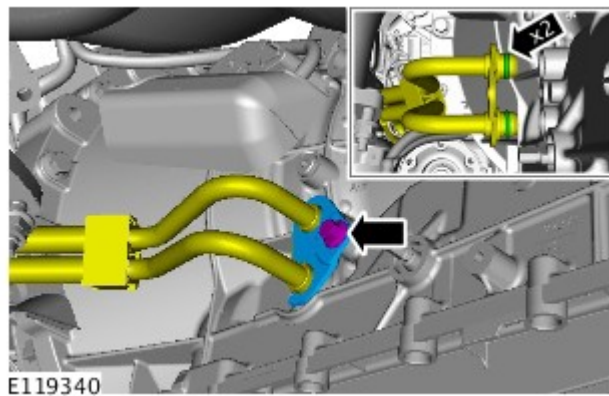

Renew Part: *Transmission casing O-ring seals* Quantity: 2 .


Torque: 22 Nm

22.

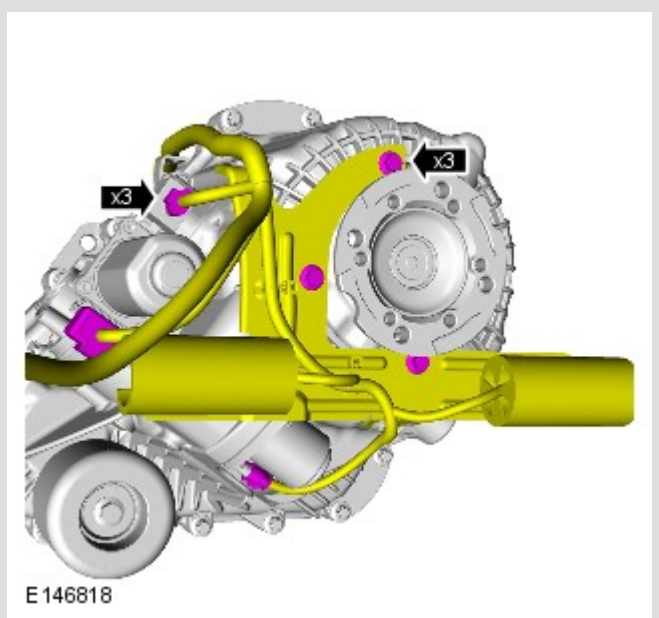


Torque: 25 Nm


23.

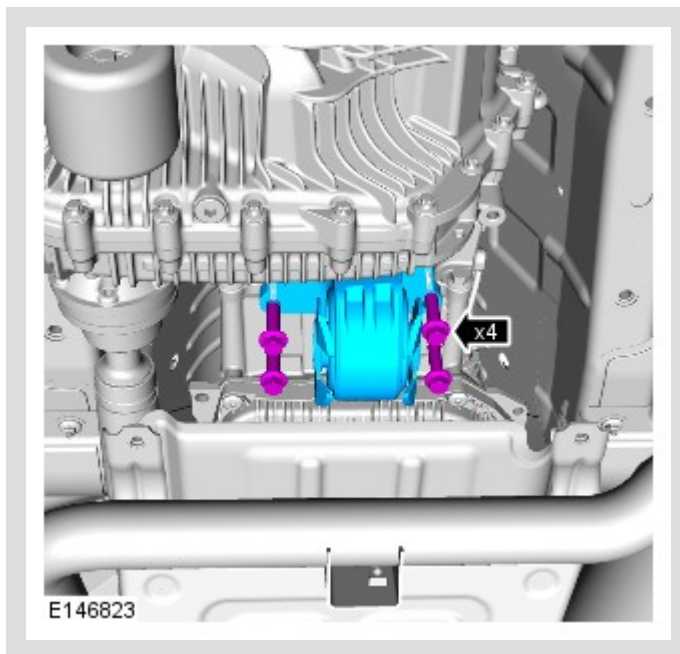

Torque: 60 Nm

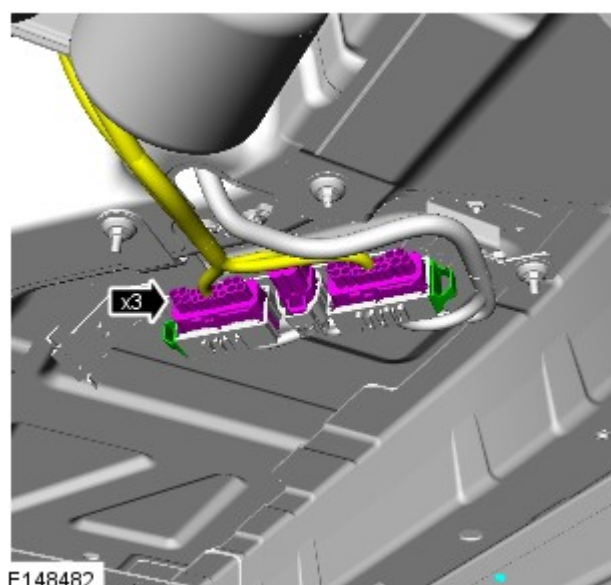


25.

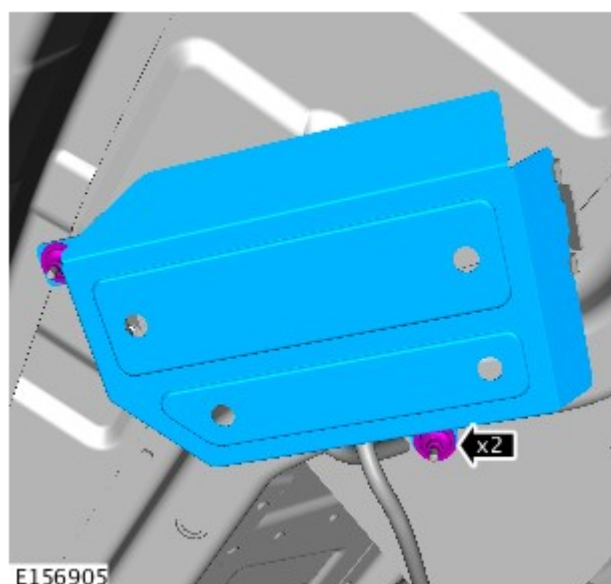



Torque: 9 Nm

26.

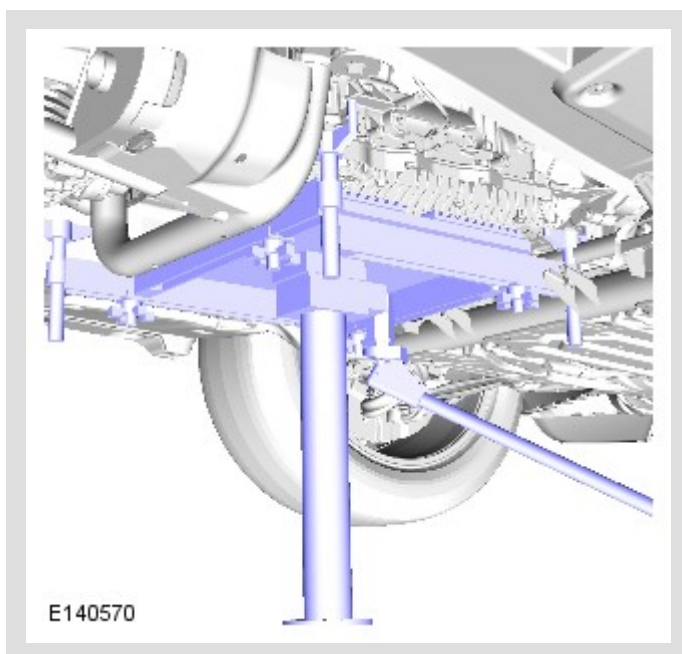

Support the transmission.

27.

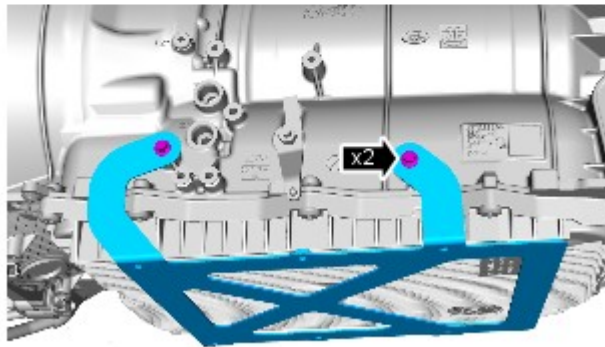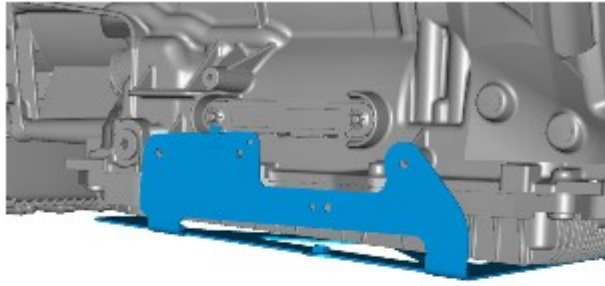


E148881

Torque: 9 Nm

28.

 **NOTE:**

Install new retaining clips.

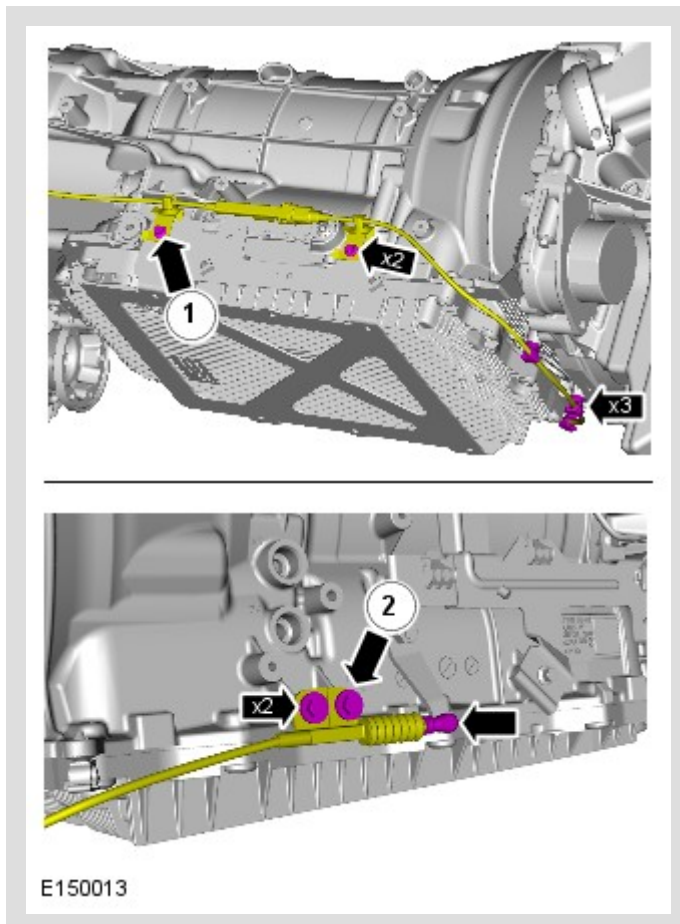

Renew Part: [Retaining clip](#) Quantity: **3** .


Torque: **9 Nm**

29. Refer to: Rear Driveshaft - V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0 L Petrol (205-01 Driveshaft, Removal and Installation).

30. Refer to: Front Driveshaft - V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0 L Petrol (205-01 Driveshaft, Removal and Installation).

31. Lower the vehicle.

32.

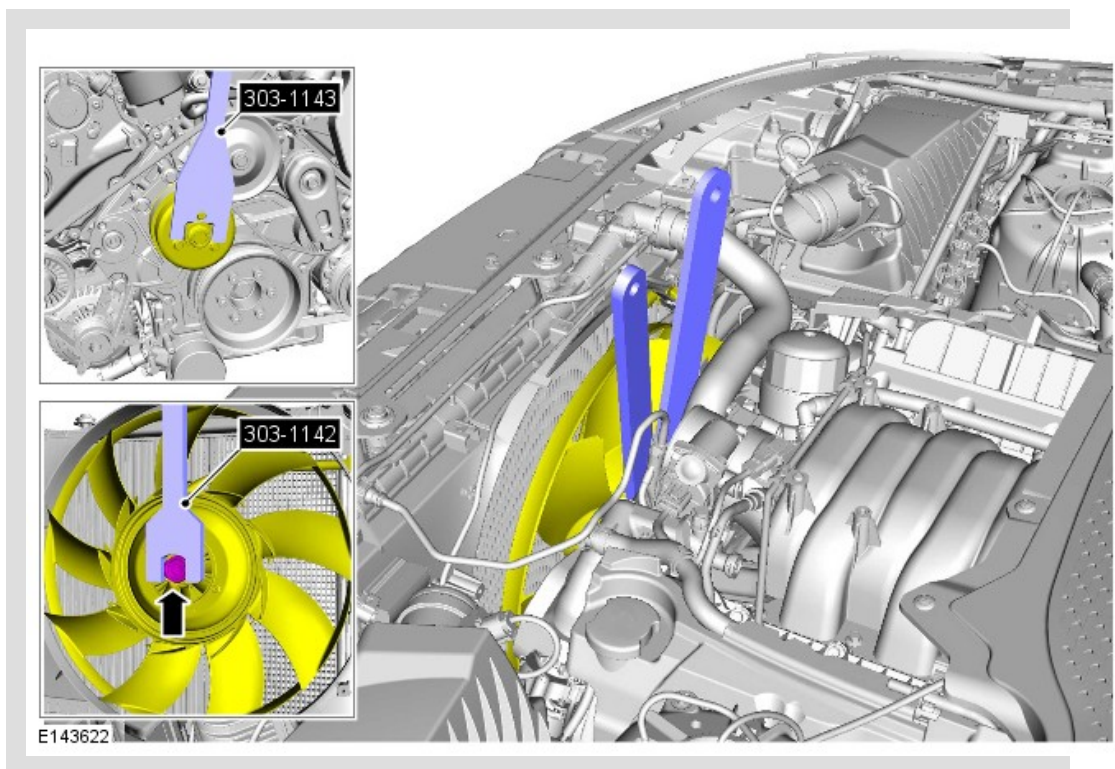

- *Special Tool(s):* [303-1143](#)
- *Special Tool(s):* [303-1142](#)
- *Torque:* **65 Nm**

33. Refer to: Air Cleaner Outlet Pipe T-Connector (303-12 Intake Air Distribution and Filtering - V8 S/C 5.0L Petrol, Removal and Installation).

34. Install the battery ground cable.
Refer to: Specifications (414-01 Battery, Mounting and Cables, Specifications).

35. Carry out a transmission fluid level check.

Refer to: Transmission Fluid Level Check - V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol (307-01 Automatic Transmission/Transaxle - Vehicles With: 8HP70 8-Speed Automatic Transmission AWD, General Procedures).