

2016.0 RANGE ROVER (LG), 307-01

AUTOMATIC TRANSMISSION/TRANSAXLE - VEHICLES WITH: 8HP70 8-SPEED AUTOMATIC TRANSMISSION AWD

TRANSMISSION CONTROL MODULE AND MAIN CONTROL VALVE BODY (G1509714)

REMOVAL AND INSTALLATION

44.24.05	GASKET- OIL/FLUID PAN - RENEW	3000 CC, TDV6, DIESEL	1.4	USED WITHINS	+
44.24.05	GASKET- OIL/FLUID PAN - RENEW	8HP45	1.2	USED WITHINS	+
44.40.01	VALVE BODY ASSEMBLY - RENEW	3000 CC, TDV6, DIESEL	1.9	USED WITHINS	+

SPECIAL TOOL(S)



JLR-308-844

Remover/Installer,
Transmission
Control Module
Electrical Connector

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Step 5	Renew Part	Transmission control module and main control valve body bolts
Step 6	Renew Part	Transmission control module and main control valve body bolts
Step 8	Renew Part	Transmission control module and main control valve body bolts

REMOVAL

WARNING:

Be prepared to collect escaping fluids.

CAUTION:

Make sure all suitable safety precautions are taken to protect the TCM and main control valve body electrical connector pins against electrostatic discharge.

NOTES:

- The transmission control module (TCM) is part of the main control valve body and cannot be serviced separately.
- Some variation in the illustrations may occur, but the essential information is always correct.



All vehicles

1. Remove the transmission fluid pan.

Refer to: [Transmission Fluid Pan, Gasket and Filter](#) (307-01C Automatic Transmission/Transaxle - Vehicles With: 8HP70 8-Speed - Hybrid Electric Vehicle - Automatic Transmission – AWD, Removal and Installation).




Vehicles with Stop/Start


- 2.

CAUTION:

Take precautions to avoid any electrostatic charging, which could damage this component.

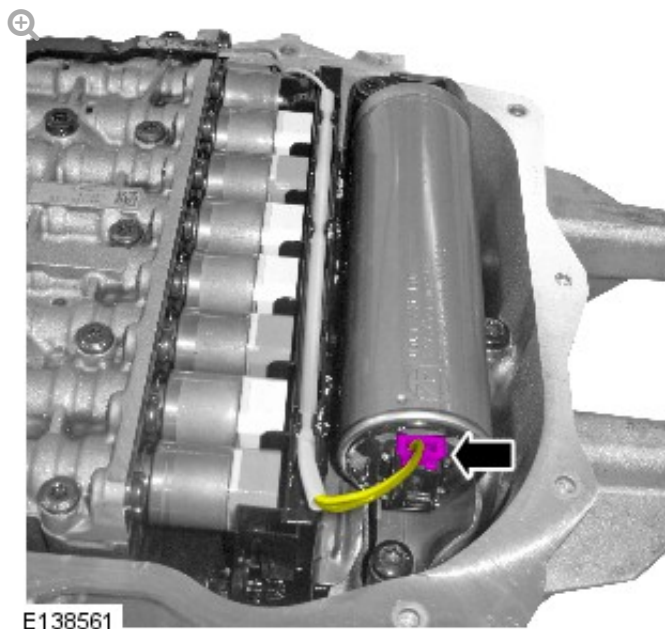

3.

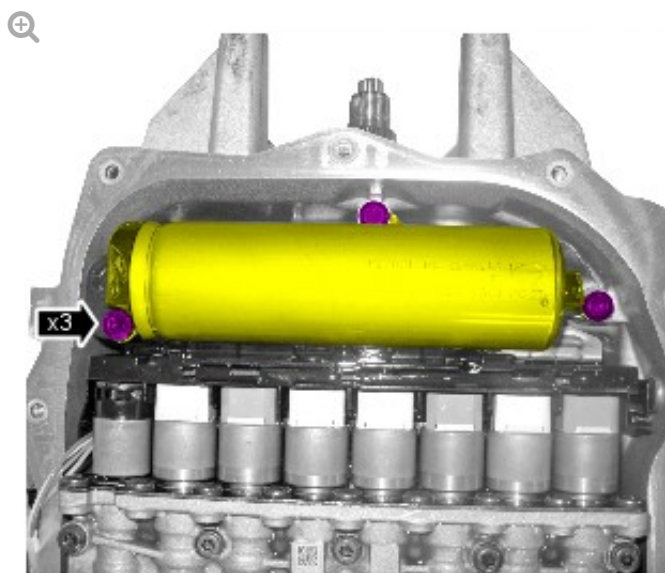

4.



E138563




All vehicles

5.

CAUTIONS:

- Discard the bolts.
- Take precautions to avoid any electrostatic charging, which could damage this component.

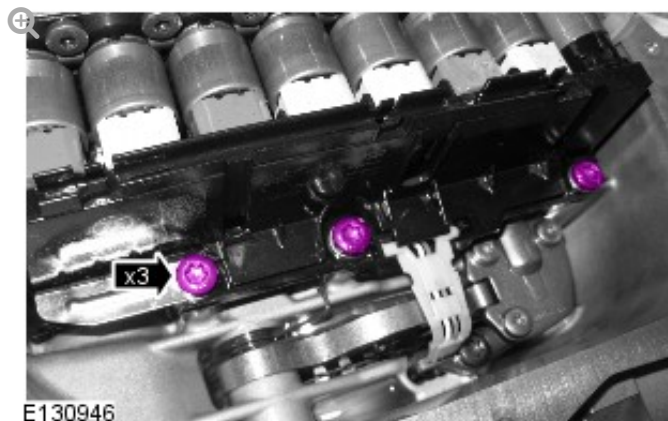


E130946

Renew Part: *Transmission control module and main control valve body bolts.*

6.


CAUTION:

Discard the bolt.

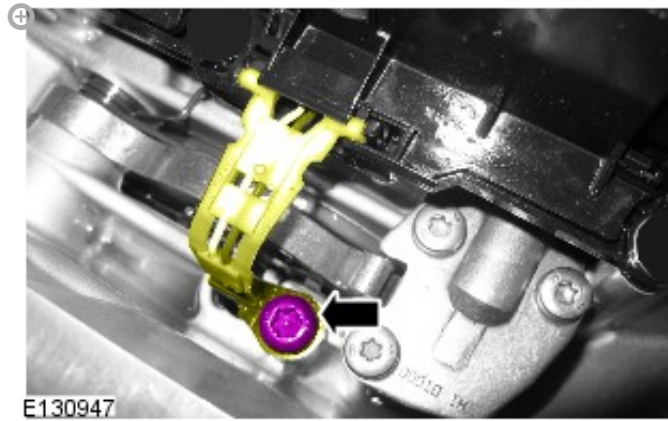

Renew Part: *Transmission control module and main control valve body bolts.*


7.

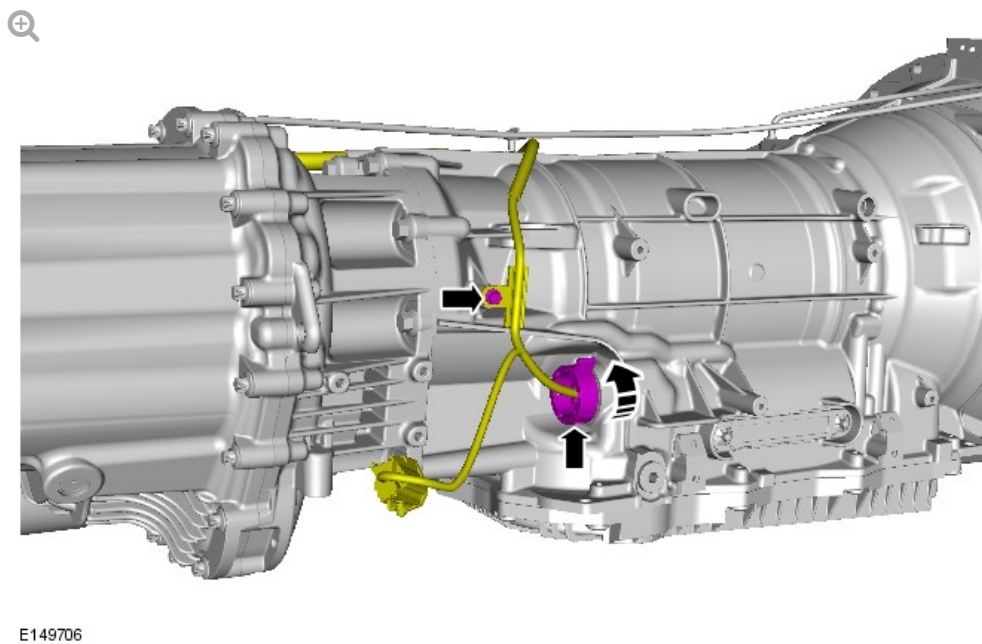

8.

NOTE:


Note the orientation of the component prior to removal.

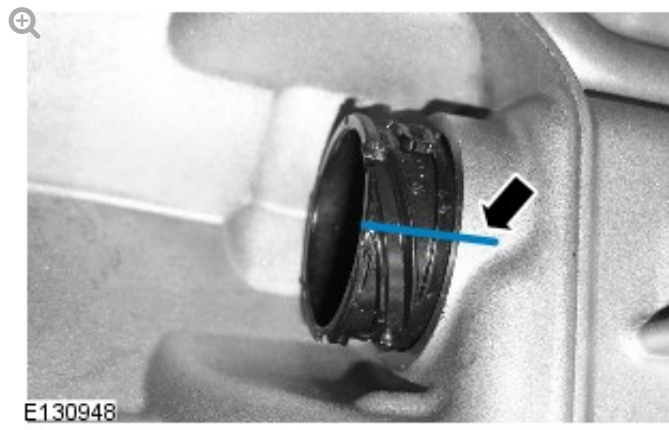

9.




10.

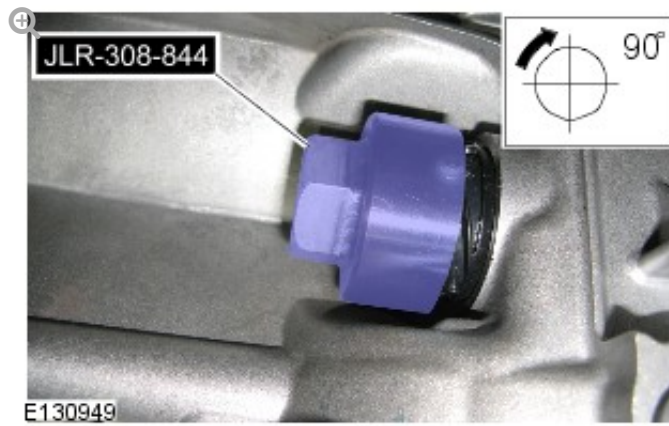

Special Tool(s): [JLR-308-844](#)


11.

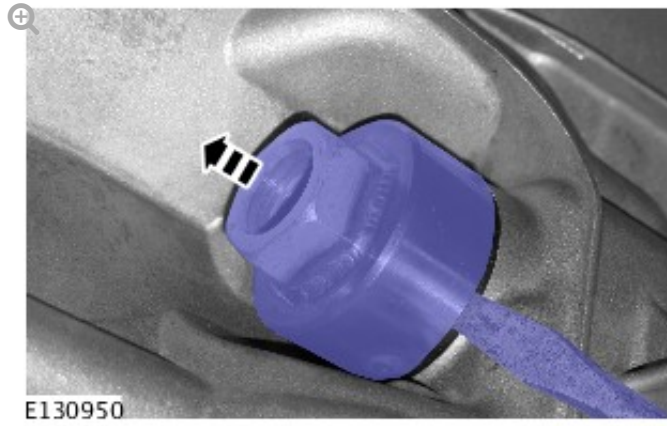

12.

CAUTION:

Discard the bolts.

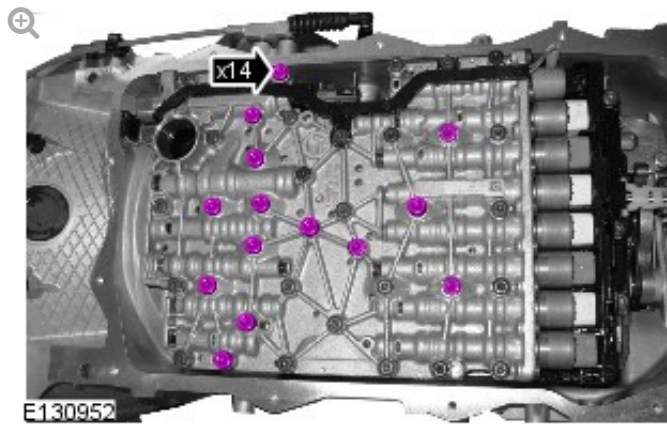


Torque: 8 Nm

13.

NOTE:

Note the position of the manual park brake release.

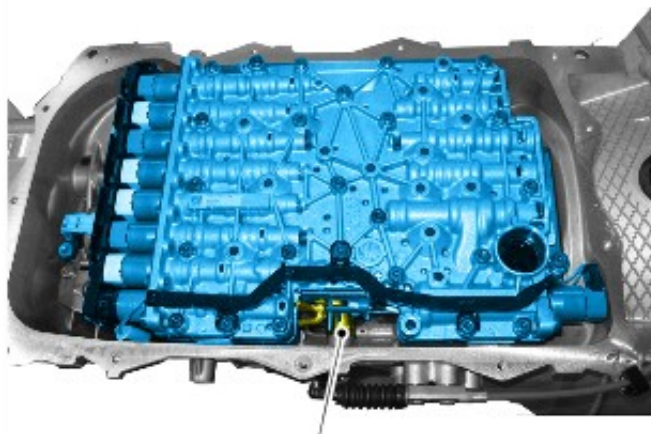


E130953

INSTALLATION



All vehicles

1.

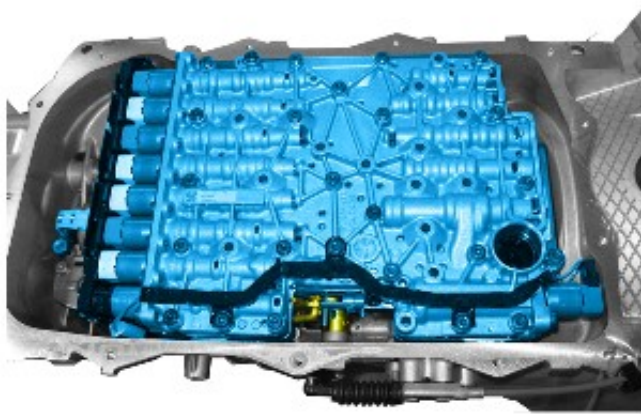


E150701

2.


NOTE:

Make sure that the component is installed to the noted removal position.

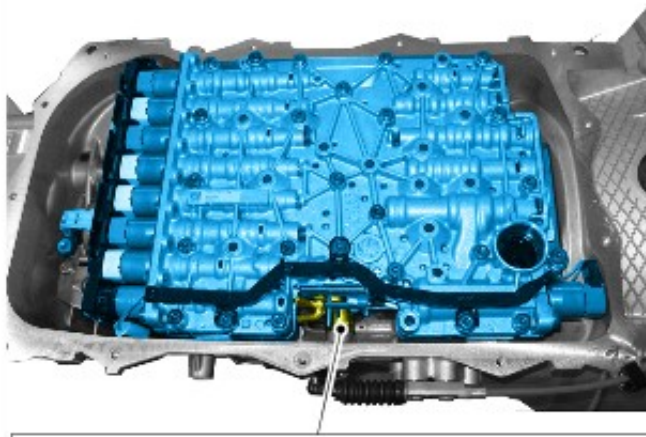

E130953


3.

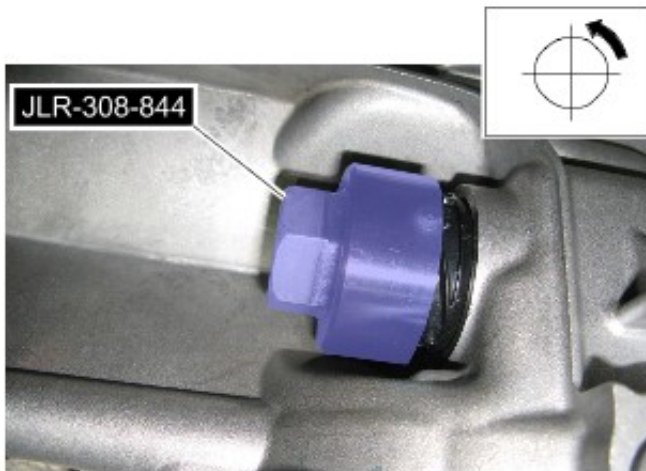

E150812

- *Special Tool(s):* [JLR-308-844](#)


4.

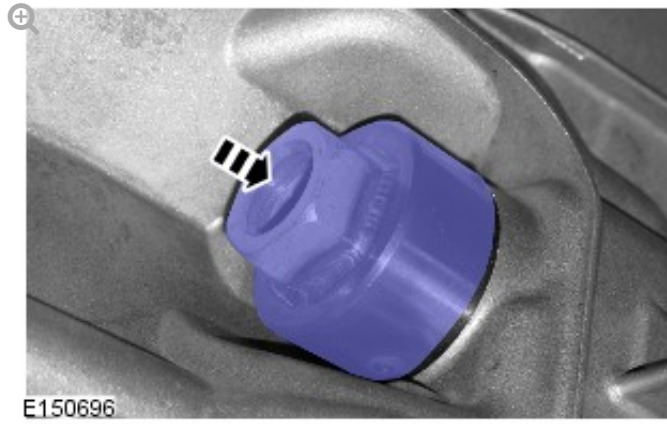

5.

CAUTION:


Make sure that the electrical connector is installed in the correct orientation as noted in the removal step.

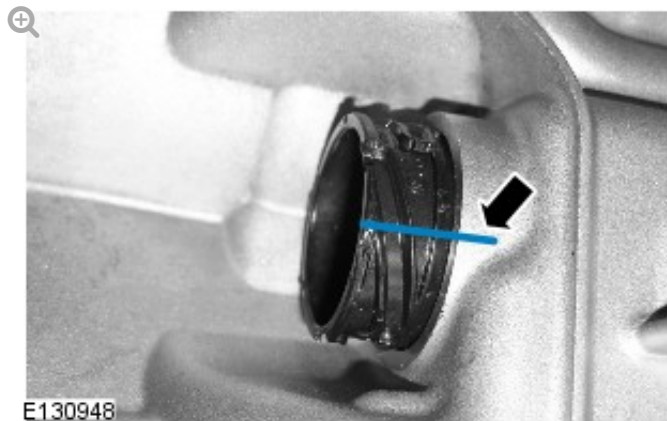

6.



7.

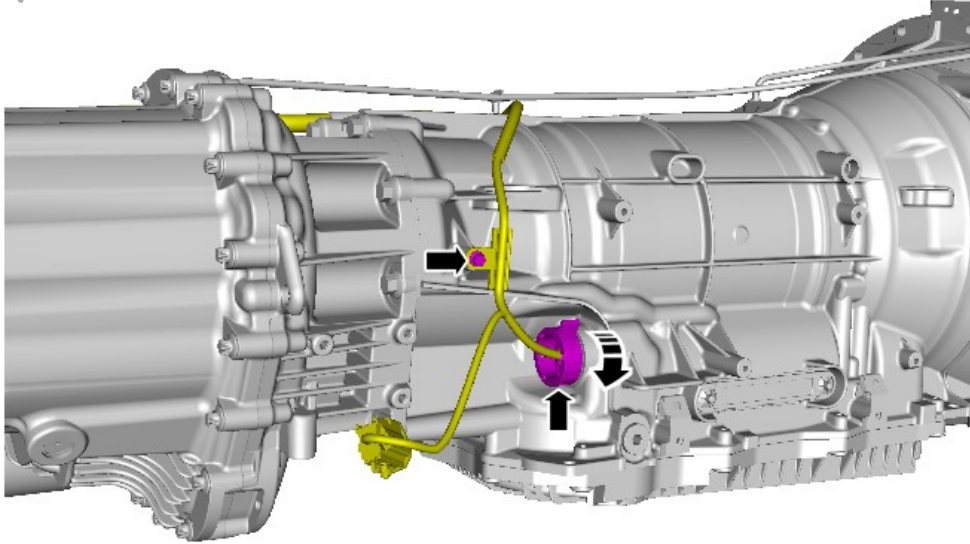

E149992

Torque: 10 Nm


8.

CAUTION:

Make sure that new bolts are installed.

NOTE:

Tighten the retaining bolts evenly and progressively.

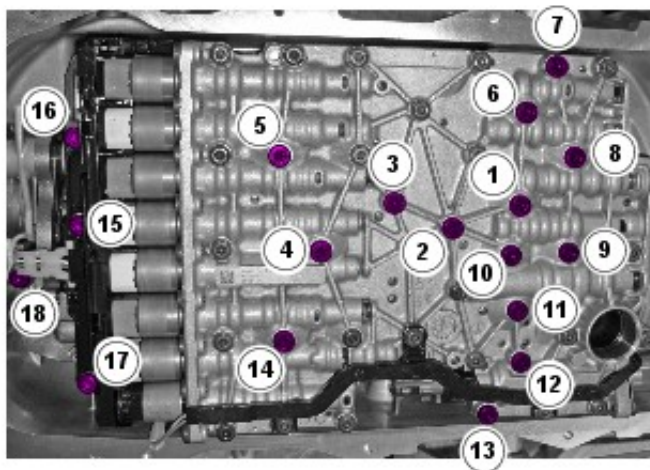

E130933

Renew Part: *Transmission control module and main control valve body bolts.*

Torque: 8 Nm



Vehicles with Stop/Start

9.



E138563


10.

CAUTION:

Make sure that new bolts are installed.

NOTE:


Tighten the retaining bolts evenly and progressively.

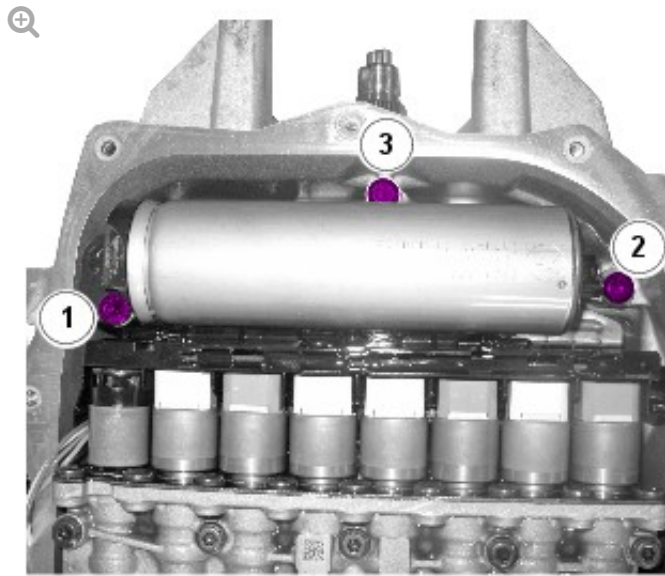

E138566

Torque: 8 Nm

11.

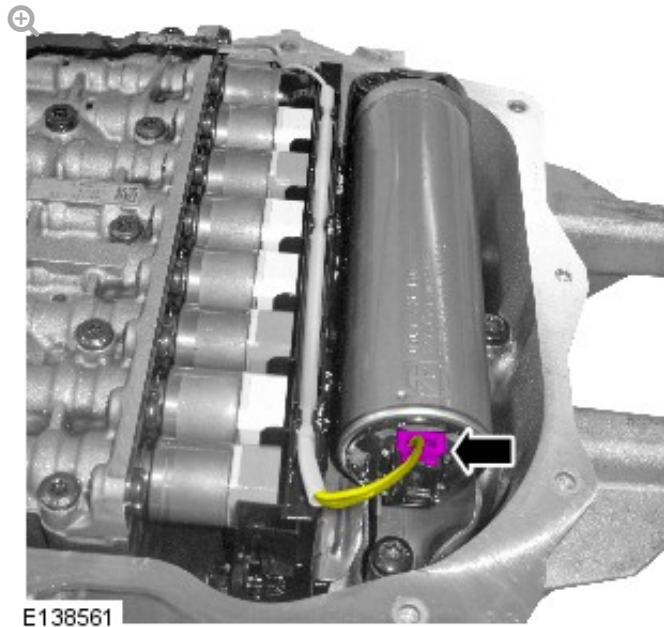

All vehicles

12. Refer to: [Transmission Fluid Pan, Gasket and Filter](#) (307-01C Automatic Transmission/Transaxle - Vehicles With: 8HP70 8-Speed - Hybrid Electric Vehicle - Automatic Transmission – AWD, Removal and Installation).
13. Using the diagnostic tool, calibrate the main control valve body and the transmission control module (TCM).