

2016.0 RANGE ROVER (LG), 307-01

AUTOMATIC TRANSMISSION/TRANSAXLE - VEHICLES WITH: 8HP70 8-SPEED AUTOMATIC TRANSMISSION AWD

TRANSMISSION FLUID PAN, GASKET AND FILTER (G1509715)

REMOVAL AND INSTALLATION

44.24.05	GASKET-OIL/FLUID PAN - RENEW	3000 CC, TDV6, DIESEL	1.4	USED WITHINS	+
44.24.05	GASKET-OIL/FLUID PAN - RENEW	8HP45	1.2	USED WITHINS	+

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Removal Step 7	Renew Part	Transmission fluid pan, gasket and filter bolts

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.

1. Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

- 2.

WARNING:


Make sure to support the vehicle with axle stands.

Raise and support the vehicle.


3. Refer to: [Transmission Fluid Drain and Refill](#) (307-01C Automatic Transmission/Transaxle - Vehicles With: 8HP70 8-Speed - Hybrid Electric Vehicle - Automatic Transmission – AWD, General Procedures).

Refer to: [Transmission Fluid Drain and Refill - V6 S/C 3.0L Petrol](#) (307-01A Automatic Transmission/Transaxle - Vehicles With: 8HP45 8-Speed Automatic Transmission AWD, General Procedures).



- 4.

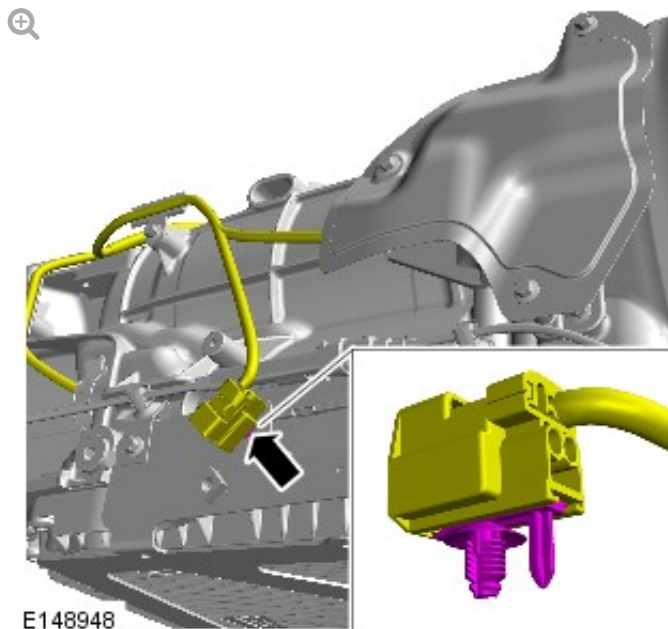

5.

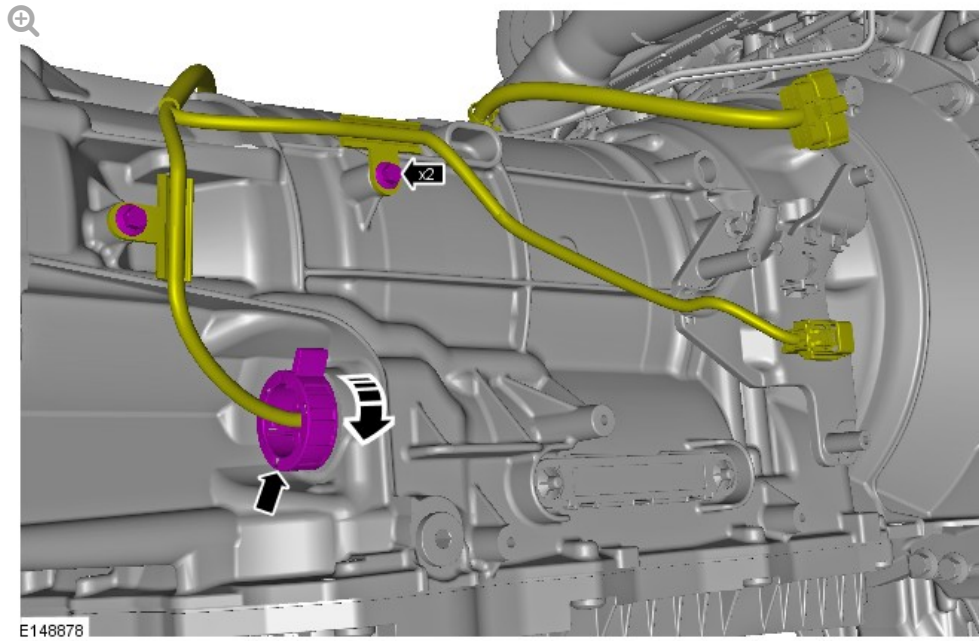

6.

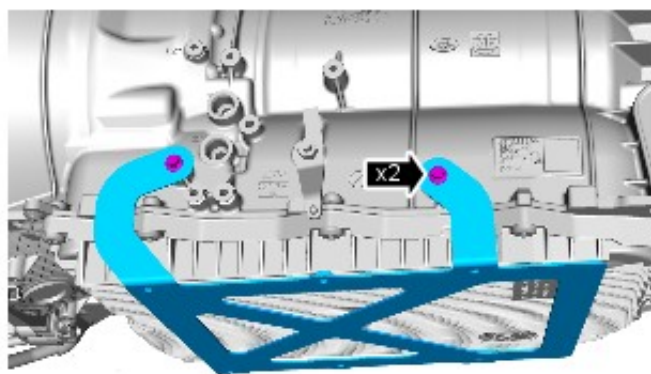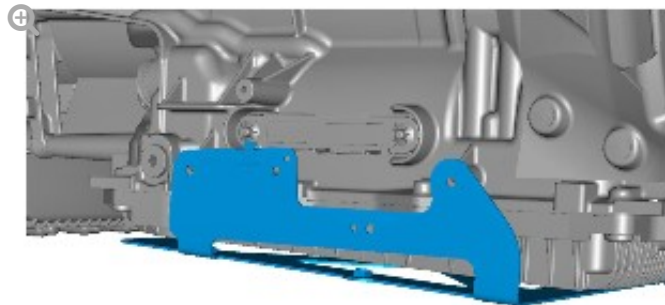


E148881

Torque: 10 Nm

CAUTIONS:

- Take extra care when removing the component, prevent damage to the mating faces.
- Make sure that the area around the component is clean and free of foreign material.
- Be prepared to collect escaping fluids.
- Discard the components.

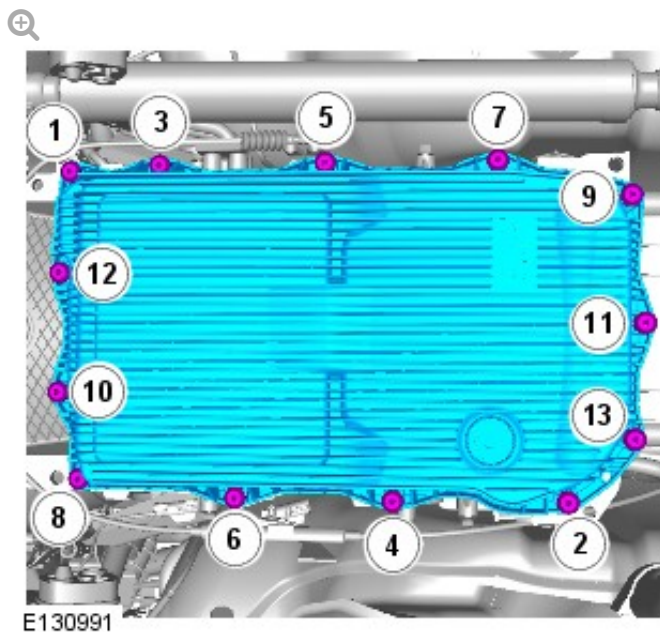

Renew Part: *Transmission fluid pan, gasket and filter bolts.*


Torque: 10 Nm

INSTALLATION

1.

CAUTIONS:

- Make sure that new components are installed.
- Make sure that the mating faces are clean and free of foreign material.
- Make sure the correct specification and quantity of oil is used.

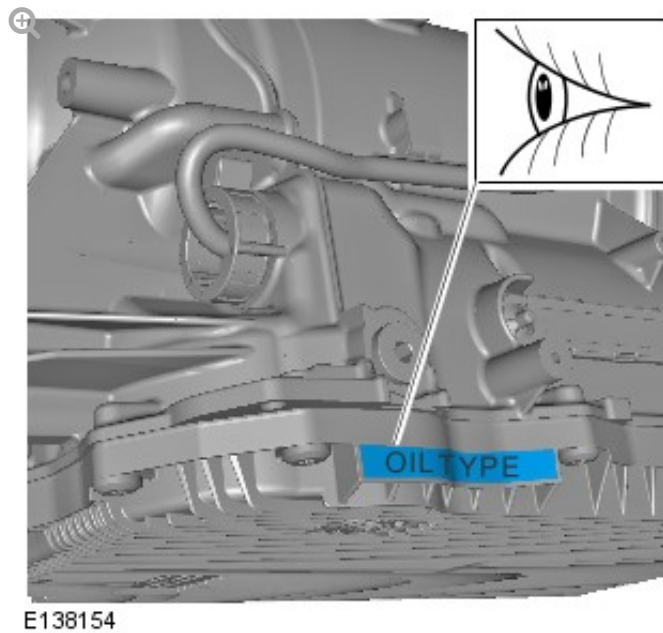

To install, reverse the removal procedure.