

2016.0 RANGE ROVER (LG), 307-01

AUTOMATIC TRANSMISSION/TRANSAXLE - VEHICLES WITH: 8HP70 8-SPEED AUTOMATIC TRANSMISSION AWD

TRANSMISSION SUPPORT INSULATOR (G1509716)

REMOVAL AND INSTALLATION

12.45.08	MOUNTING - REAR - CENTRE - RENEW	3000 CC, TDV6	0.8	USED WITHINS	+
----------	---	------------------	-----	-----------------	---

REMOVAL

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.

-
1. Disconnect the battery ground cable.

For additional information, refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).


2.

WARNING:

Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

3.

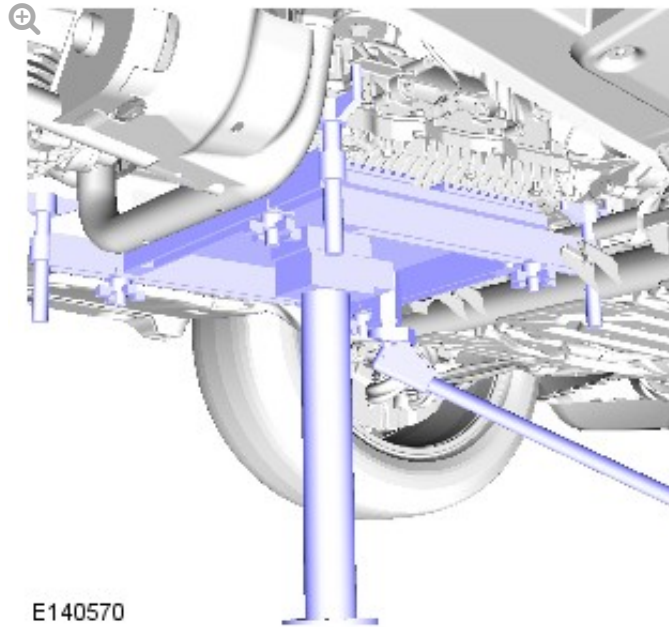

Using a suitable hydraulic jack, support the transmission.

4.


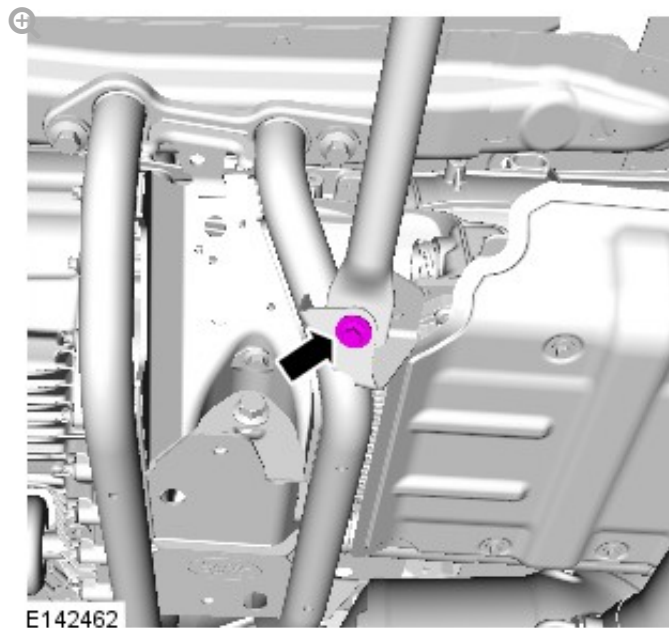


TORQUE: 24 Nm


5.

CAUTION:


Note the fitted position of the component prior to removal.

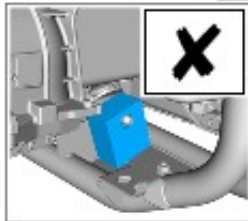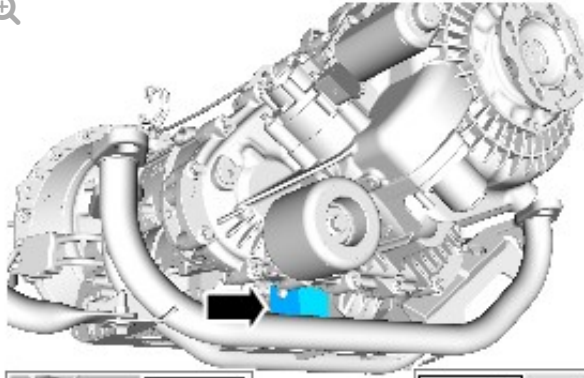

E150667

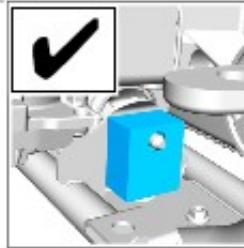



6.

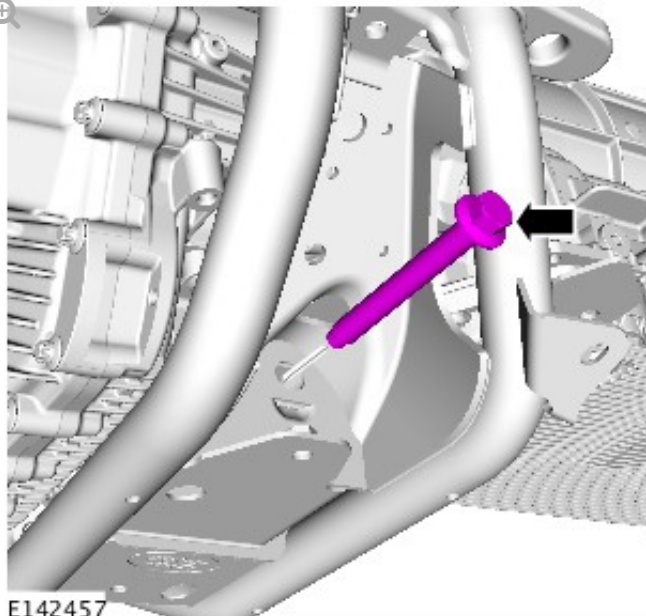

E142457

TORQUE: 175 Nm


7.

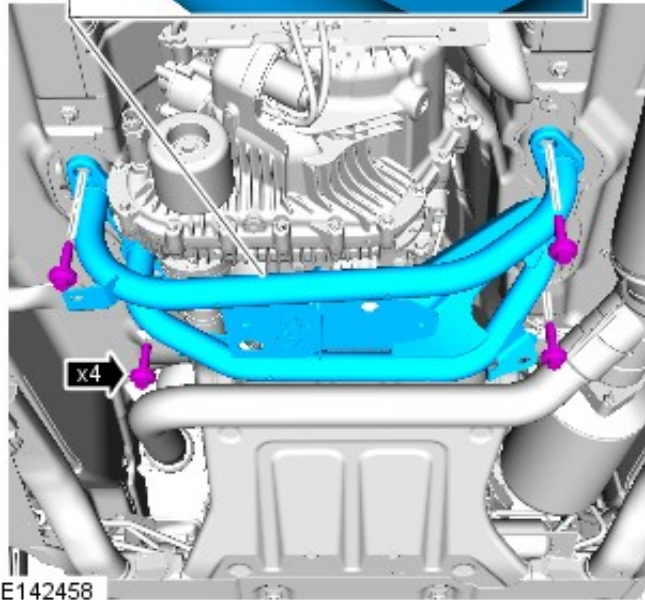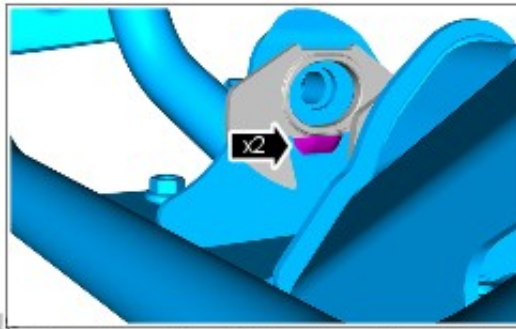

E142458

TORQUE: 110 Nm

8.

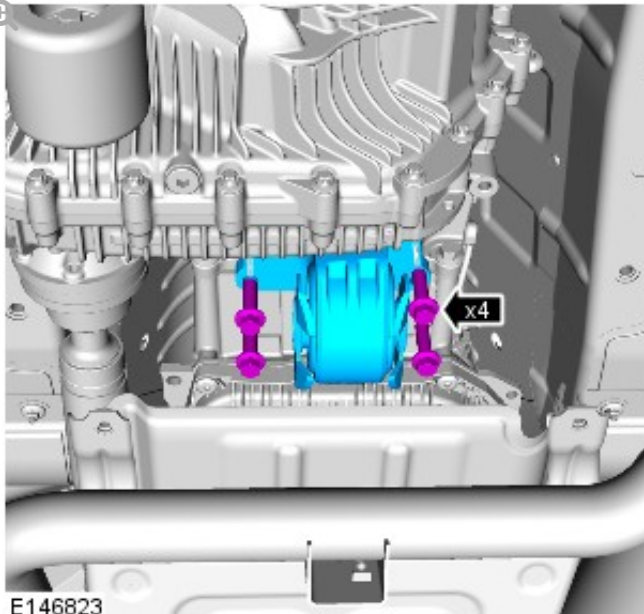

E146823

TORQUE: 60 Nm

INSTALLATION

-
1. To install, reverse the removal procedure.