

PUBLISHED: 08-AUG-2016  
2015.0 RANGE ROVER (LG), 303-14

ELECTRONIC ENGINE CONTROLS - TDV8 4.4L DIESEL

# **CRANKSHAFT POSITION SENSOR** (G1509571)

## REMOVAL AND INSTALLATION

|          |                                                        |                  |     |                 |  |
|----------|--------------------------------------------------------|------------------|-----|-----------------|--|
| 18.30.12 | SENSOR -<br>CRANKSHAFT<br>POSITION<br>(CKP) -<br>RENEW | 4400 CC,<br>TDV8 | 1.3 | USED<br>WITHINS |  |
|----------|--------------------------------------------------------|------------------|-----|-----------------|--|

## REMOVAL



### WARNING:

Observe due care when working near a hot exhaust system.



### NOTES:

- Exhaust system shown removed for clarity.
- Removal steps in this procedure may contain installation details.

1.



### WARNING:


Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2.


Refer to: [Starter Motor](#) (303-06D Starting System - TDV8 4.4L Diesel, Removal and Installation).

3.

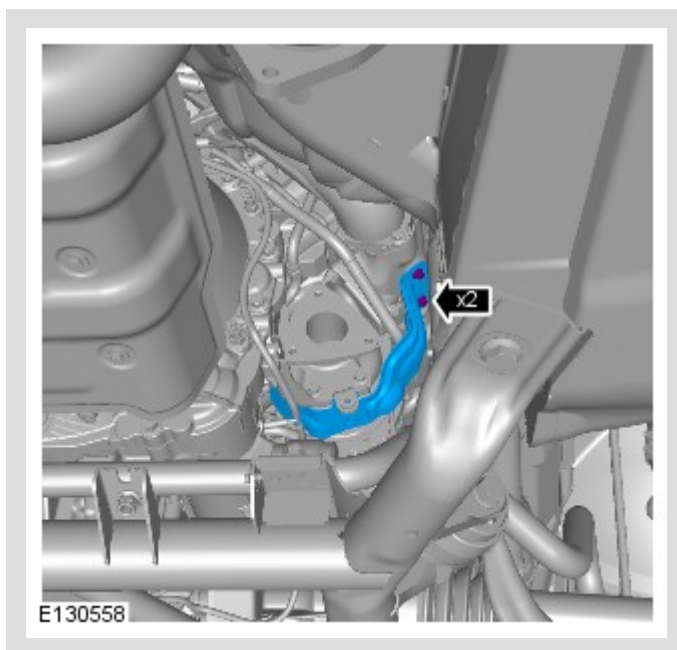


*Torque: 10 Nm*

4.

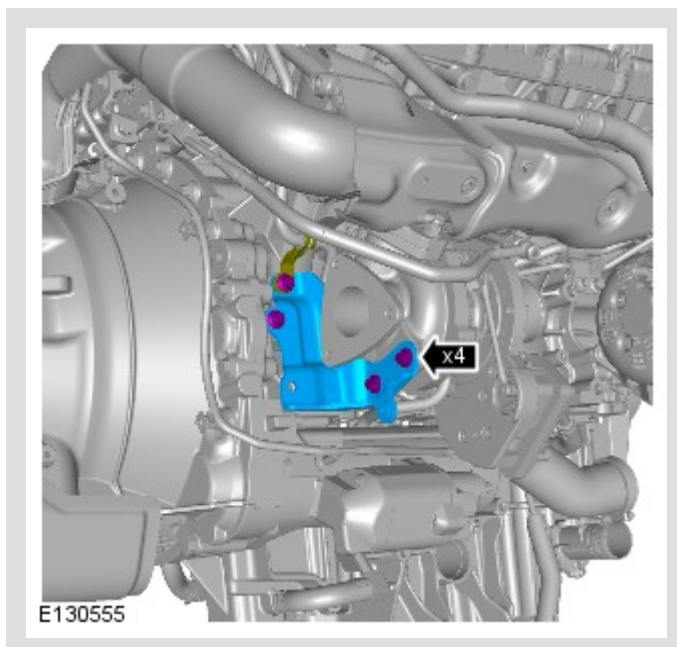

*Torque: 23 Nm*


5.

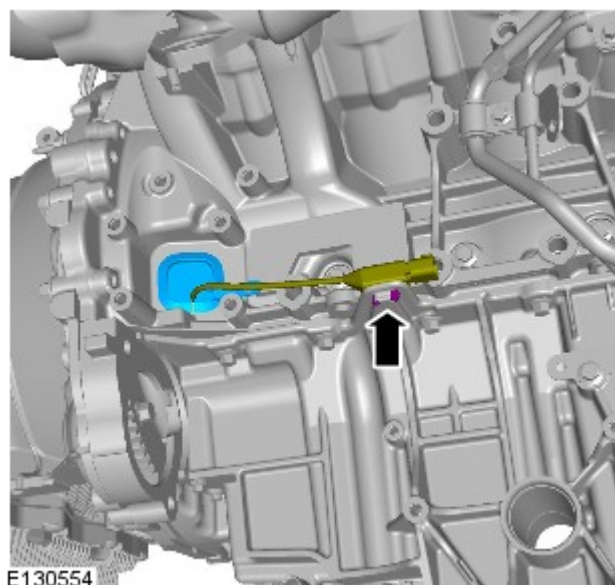

6.

**⚠ CAUTION:**

Before the disconnection or removal of any components, make sure the area around joint faces and connections are clean. Plug any open connections to prevent contamination.

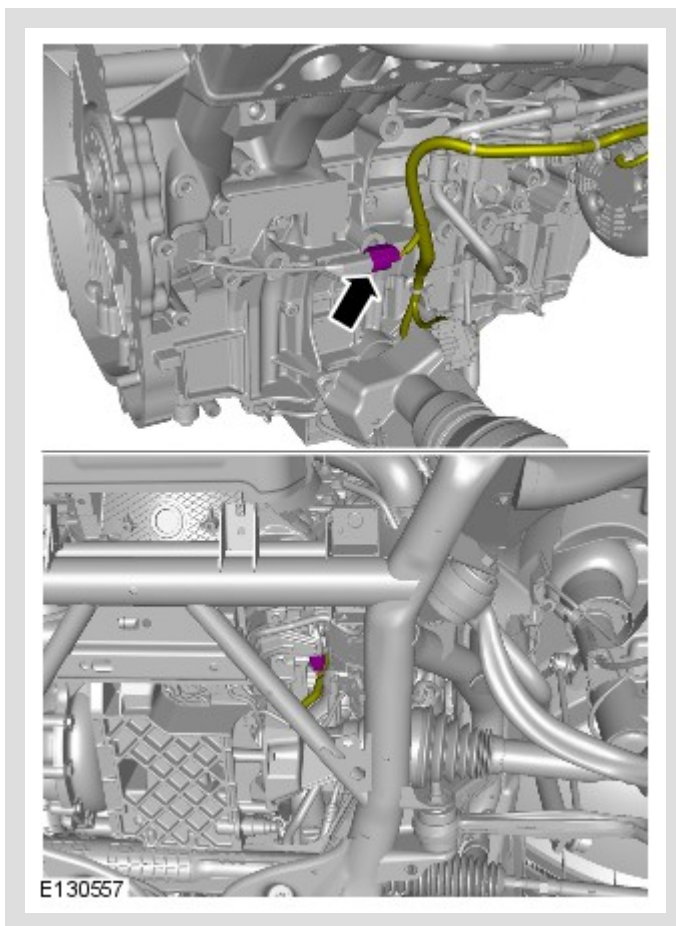


7.



**NOTE:**

The CKP sensor retaining bolt should not be removed from the CKP sensor.

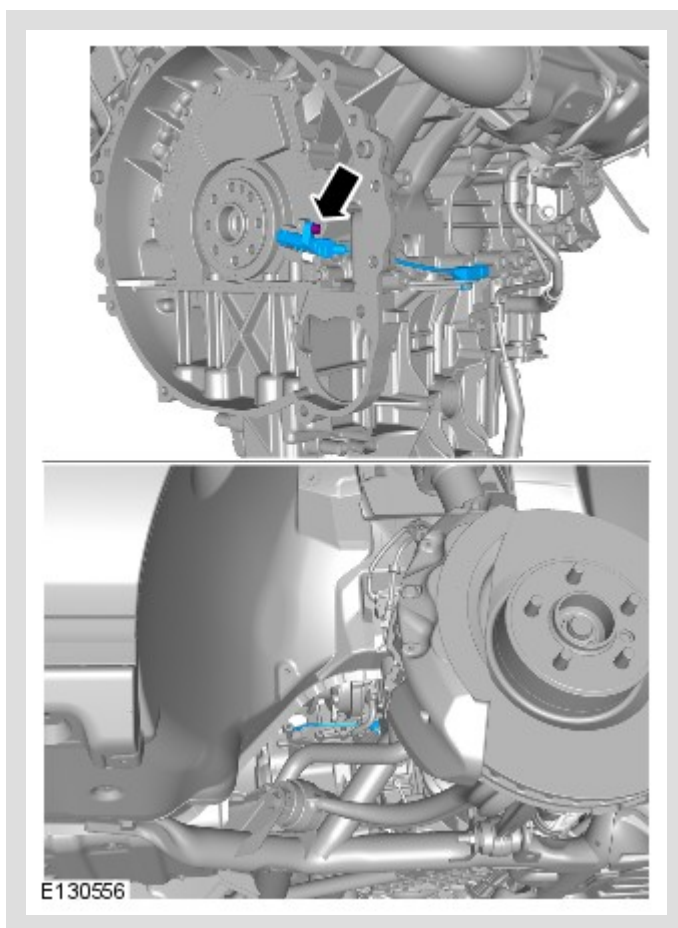

*Torque: 5 Nm*

## INSTALLATION

1.



### CAUTIONS:

- Install the CKP sensor correctly into the housing. Failure to follow this instruction may result in damage to the CKP sensor.
- Make sure that the mating faces are clean and free of foreign material.

- Make sure that the component is clean, free of foreign material and lubricant.

To install, reverse the removal procedure.