

PUBLISHED: 31-AUG-2012
2015.0 RANGE ROVER (LG), 303-14

ELECTRONIC ENGINE CONTROLS - TDV8 4.4L DIESEL

CRANKSHAFT POSITION SENSOR RING (G1509572)

REMOVAL AND INSTALLATION

18.30.14	GEAR(S) - TOOTHED - CRANKSHAFT SENSOR - RENEW	4400 CC, TDV8, WITH PARTICULATE FILTER	6.9	USED WITHINS	
----------	---	---	-----	-----------------	--

REMOVAL



NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.

1.

Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.



WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3.


Refer to: [Flexplate](#) (303-01E Engine - TDV8 4.4L Diesel, Removal and Installation).

4.



NOTE:

The CKP sensor bolt should not be removed from the CKP sensor.

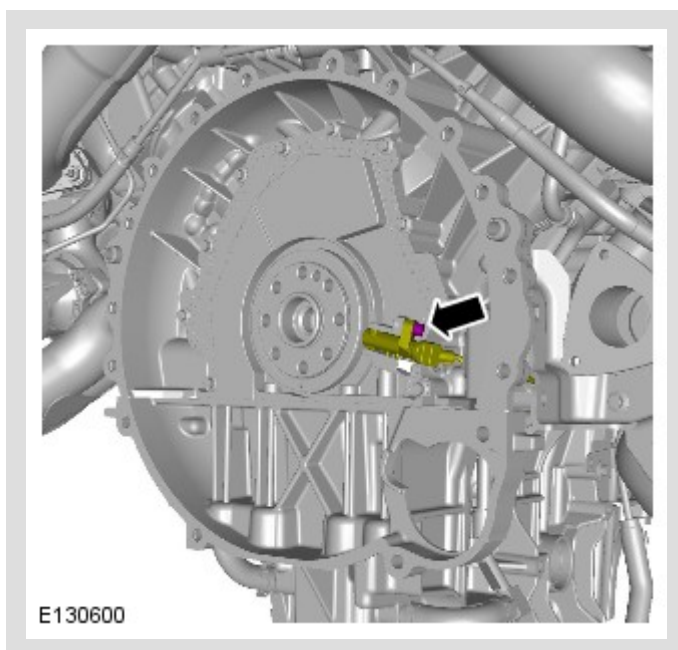

Torque: 5 Nm

5.



NOTE:

Note the position of the crankshaft position (CKP) sensor pulse wheel during removal. It must be returned to its original position during installation.



INSTALLATION

1.




CAUTION:

Make sure that the CKP sensor ring is aligned correctly with the special tool pip and that both mating surfaces are fully seated.




2.

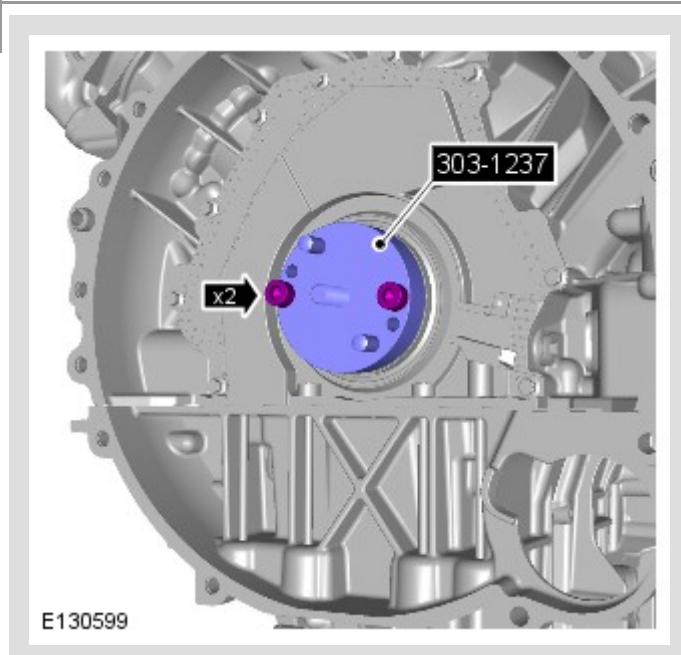


Install the special tool.


3.

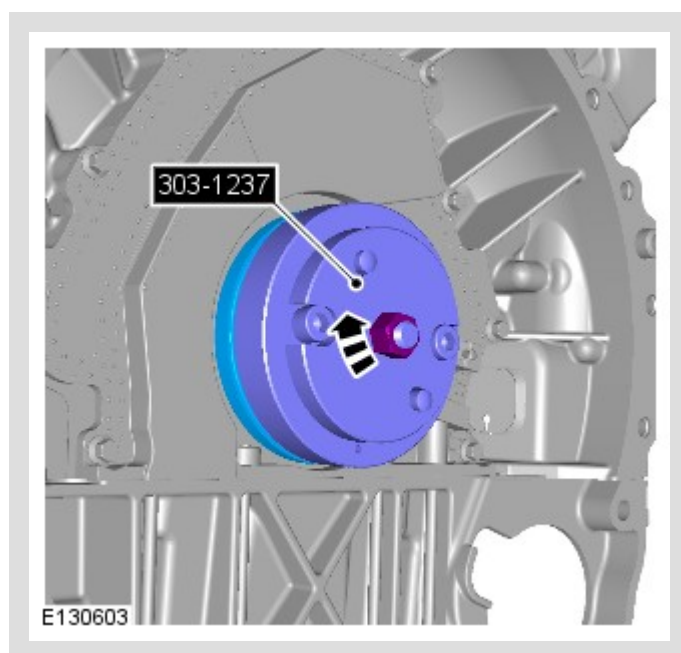

4.

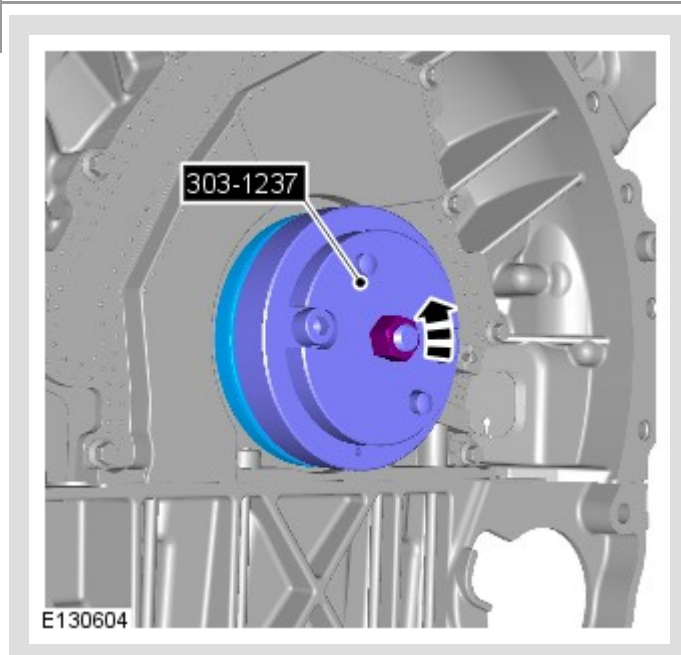

5.

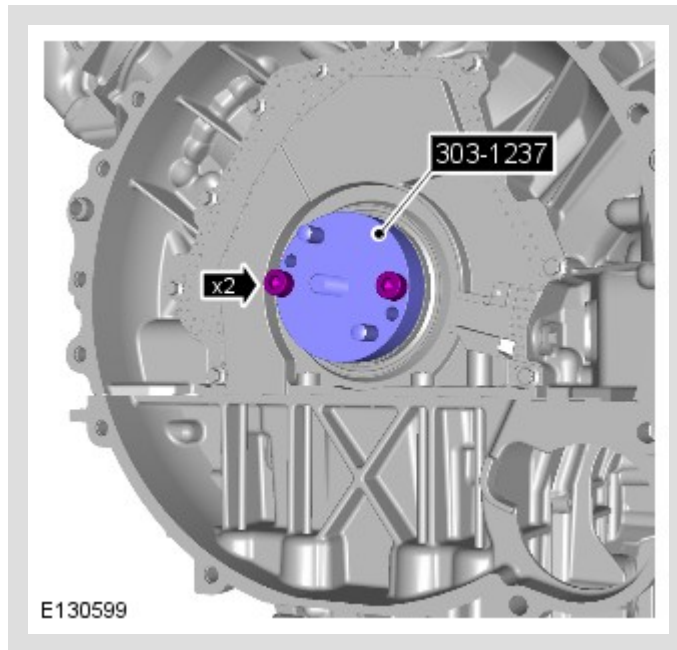


Remove the special tool.

6.

⚠ CAUTION:

Install the CKP sensor correctly into the housing. Failure to follow this instruction may result in damage to the CKP sensor.

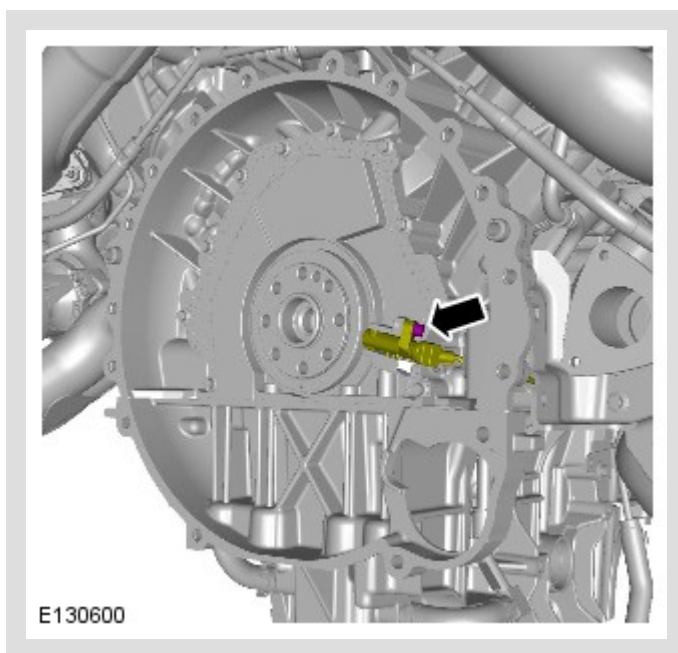

Torque: 5 Nm

-
7. To install, reverse the removal procedure.