

PUBLISHED: 28-APR-2017
2015.0 RANGE ROVER (LG), 303-14

ELECTRONIC ENGINE CONTROLS - TDV8 4.4L DIESEL

FUEL RAIL PRESSURE SENSOR (G1509578)

REMOVAL AND INSTALLATION

19.22.33	SENSOR - FUEL PRESSURE - RENEW	4400 CC, TDV8	1.7	USED WITHINS	
----------	---	------------------	-----	-----------------	--

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME	
Installation Step 3	Renew Part	Fuel rail LH supply pipe	1

REMOVAL



CAUTION:

The use of an electronic torque and angle gauge is recommended during the high pressure fuel pipe tightening procedure.




NOTE:

Removal steps in this procedure may contain installation details.

1. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).
2. Refer to: [Diesel Fuel System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
3. Refer to: [Fuel Injection Component Cleaning](#) (303-04F Fuel Charging and Controls - TDV8 4.4L Diesel, General Procedures).
4. Refer to: [Intake Manifold Plenum Chamber](#) (303-01E Engine - TDV8 4.4L Diesel, Removal and Installation).

5.

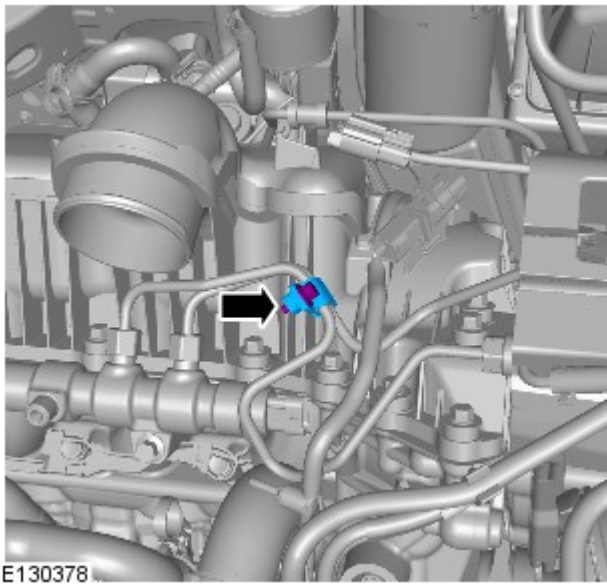


6.



CAUTION:


Discard the fuel pipes.

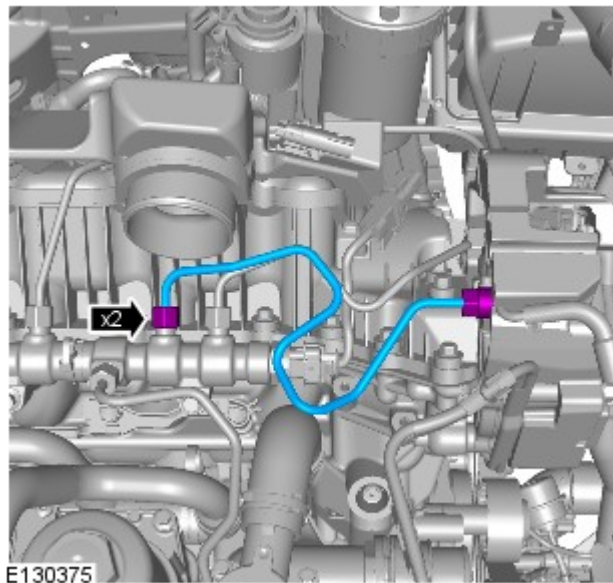

7.

ⓘ CAUTION:

Before disconnecting or removing the components, make sure the area around the joint faces and connections are clean. Plug open connections to prevent contamination.

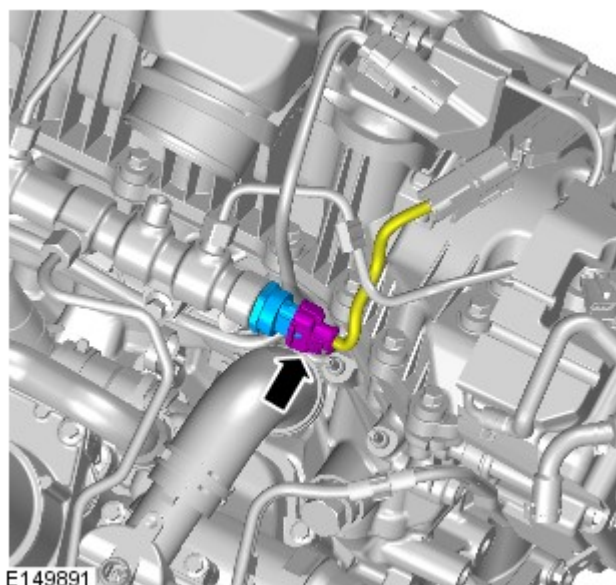


INSTALLATION

1.



NOTES:

- During lubrication, keep the component vertically as shown.
- Install the component finger tight at this stage.

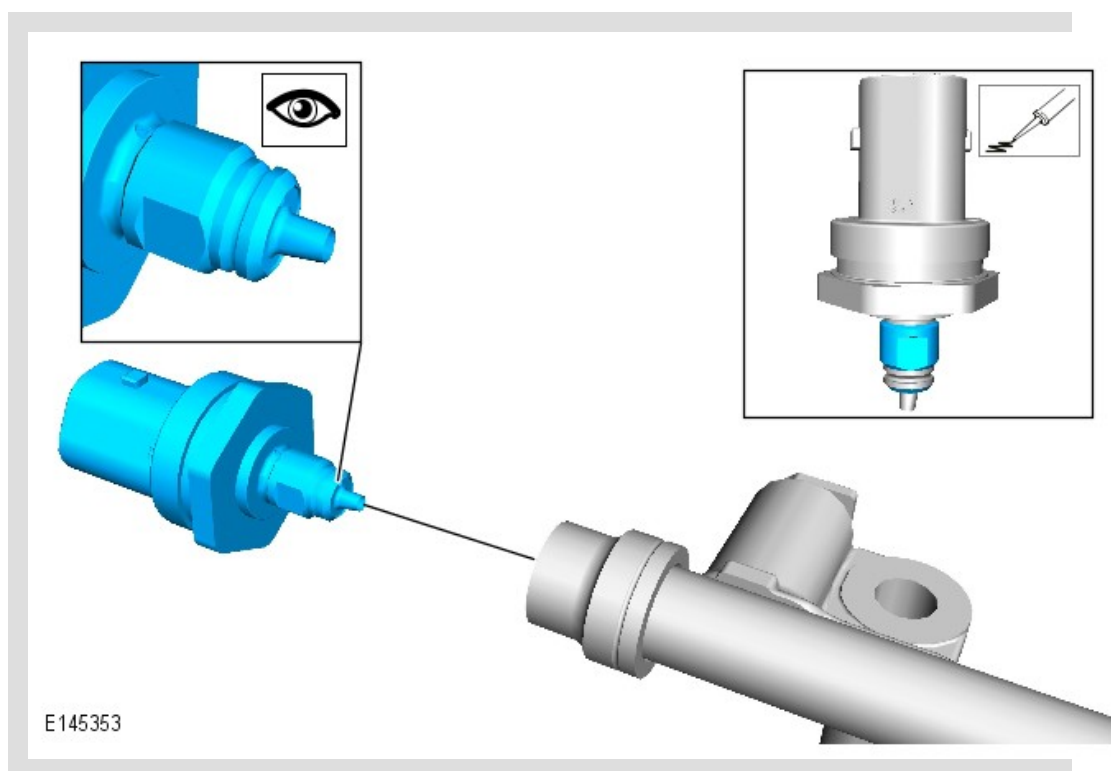


Lubricate with Ft1v27 as shown.

2.



CAUTION:

Make sure that the wiring harness is not twisted or damaged on installation. Failure to follow this instruction may result in damage to the vehicle.

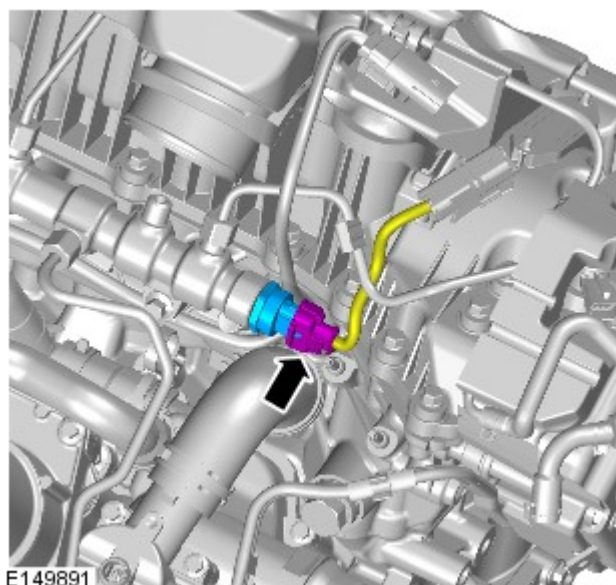


Torque: 70 Nm

3.



CAUTIONS:

- Install new fuel pipes.
- Only tighten the unions finger-tight at this stage.

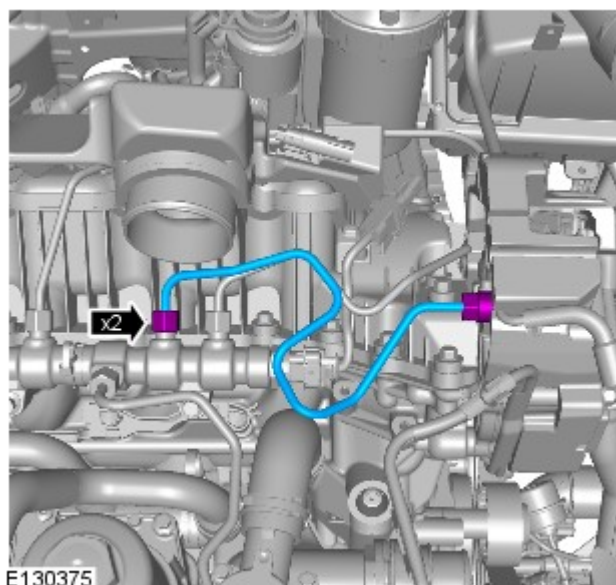


Renew Part: *Fuel rail LH supply pipe : 1 .*


4.

⚠ CAUTION:

Only tighten the bolt finger-tight at this stage.

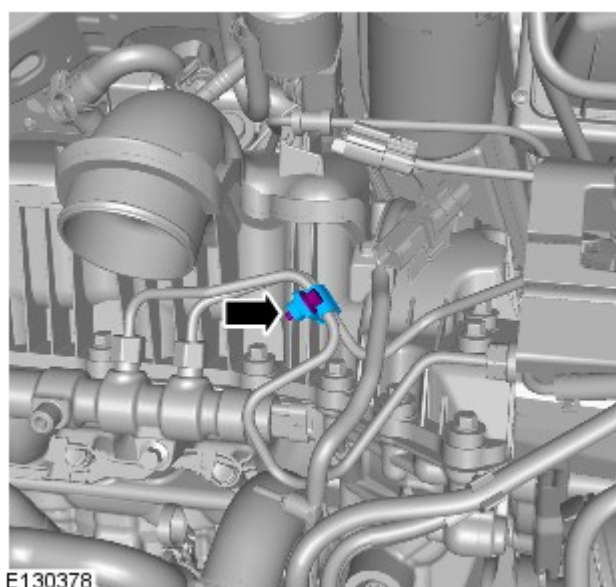


5.

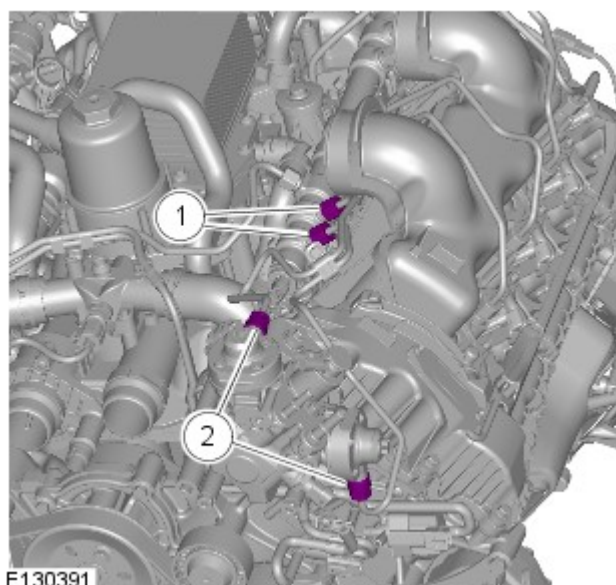

Tighten all.
Torque: 10 Nm

6.

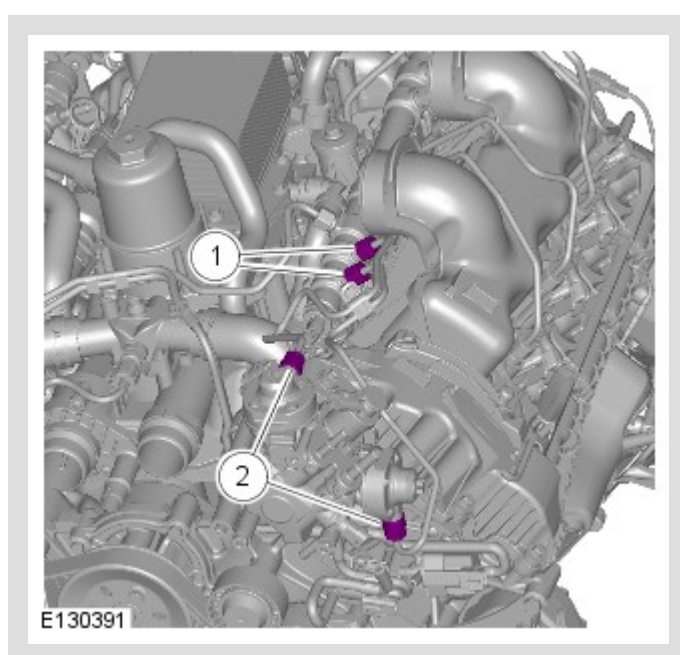


Torque:

1 73°

2 80°

7.

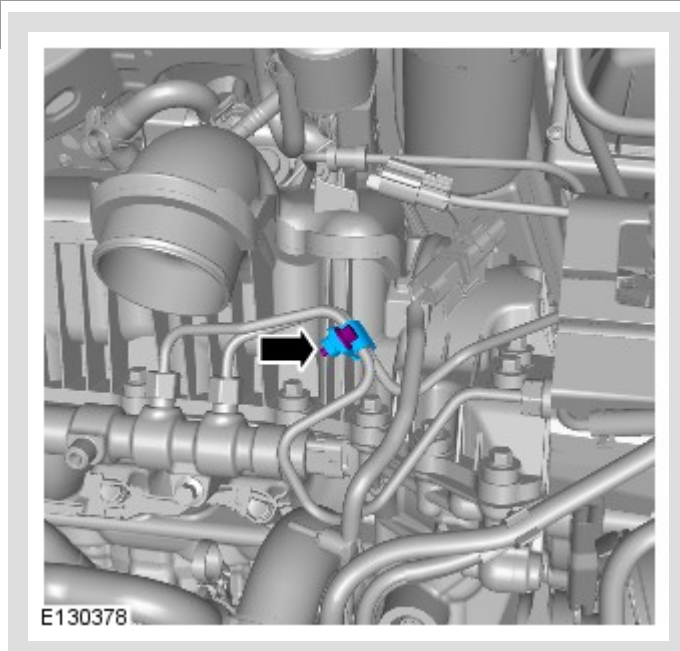

Torque: 10 Nm

8. Refer to: [Intake Manifold Plenum Chamber](#) (303-01E Engine - TDV8 4.4L Diesel, Removal and Installation).

9. Refer to: [High-Pressure Fuel System Bleeding](#) (310-00 Fuel System - General Information, General Procedures).

10. Connect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).