

2016.0 RANGE ROVER (LG), 303-14

ELECTRONIC ENGINE CONTROLS - TDV6 3.0L DIESEL

CRANKSHAFT POSITION SENSOR RING (G1509553)

REMOVAL AND INSTALLATION

		3000 CC, TDV6, DIESEL, WITH PARTICULATE FILTER, WITH DIESEL EXHAUST FLUID			
18.30.14	GEAR(S) - TOOTHED - CRANKSHAFT SENSOR - RENEW		7.7	USED WITHINS	+

SPECIAL TOOL(S)



303-1130

Installer -
Crankshaft Position
(CKP) Sensor Ring

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 1	Replace Part	Crank position sensor ring (CKP)

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.

1. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

Refer to: [Lifting](#) (100-02 Jacking and Lifting, Description and Operation).

3. Refer to: [Flexplate](#) (303-01F Engine - SDV6 3.0L Diesel - Hybrid Electric Vehicle, Removal and Installation).


4.

CAUTION:


Before the disconnection or removal of any components, make sure the area around joint faces and connections are clean. Plug any open connections to prevent contamination.

NOTE:

The crankshaft position (CKP) sensor retaining bolt should not be removed from the CKP sensor.

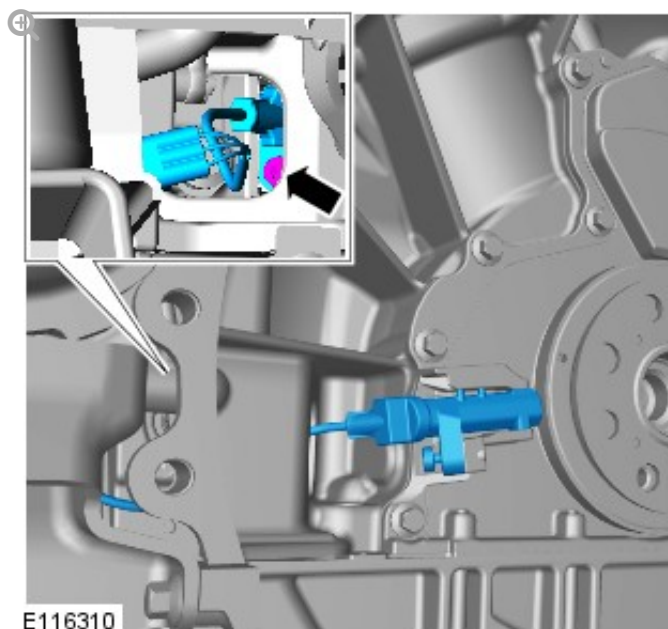

5.

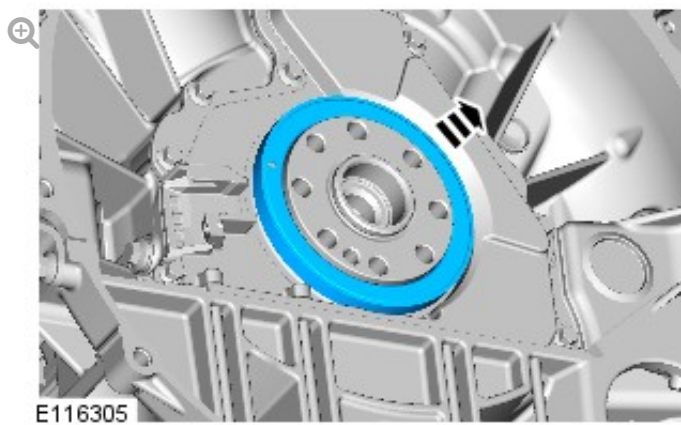

Remove and discard the CKP sensor ring.

INSTALLATION


1.

CAUTION:

Make sure that the CKP sensor ring is aligned correctly with the special tool pip and that both mating surfaces are fully seated.

NOTE:

Make sure a new CKP sensor ring is installed.

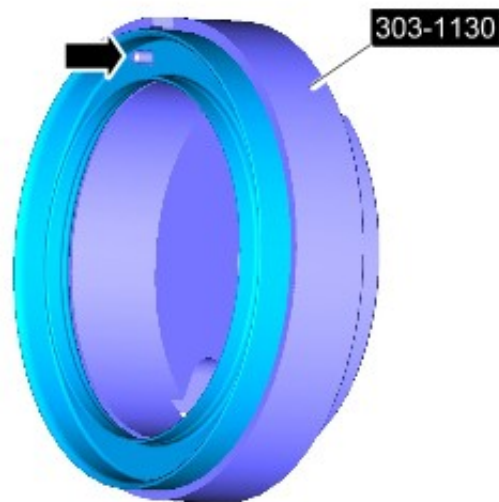


E116306

Special Tool(s): 303-1130


Replace Part: Crank position sensor ring (CKP).

2.

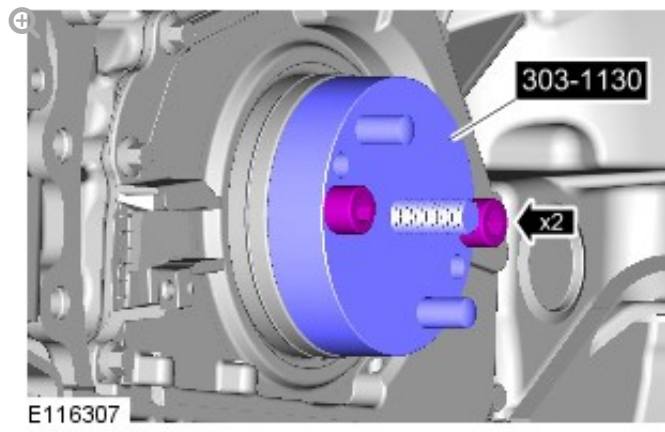


Install the special tool.


3.

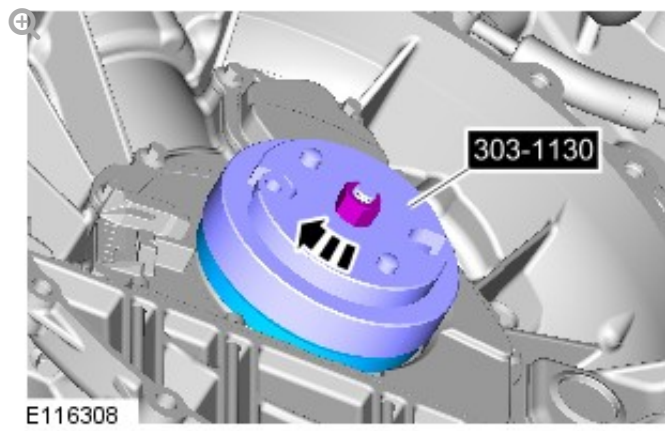

4.

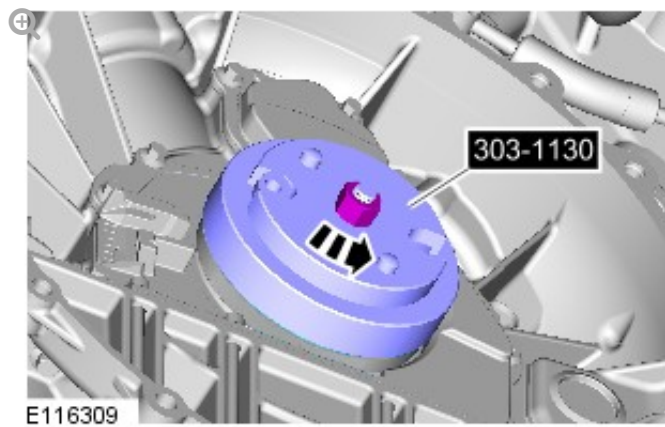

5.

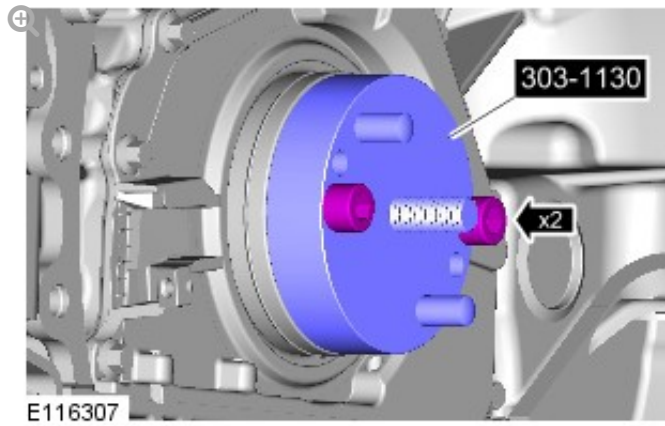


Remove the special tool.

Special Tool(s): [303-1130](#)

6.

CAUTIONS:

- Install the CKP sensor correctly into the housing. Failure to follow this instruction may result in damage to the CKP sensor.
- Before the disconnection or removal of any components, make sure the area around joint faces and connections are clean. Plug any open connections to prevent contamination.

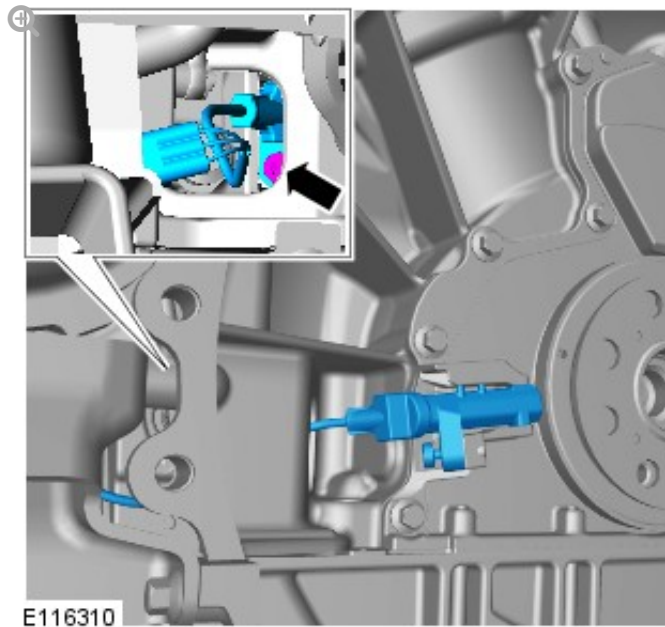

- *Torque: 5 Nm*

7. Refer to: [Flexplate](#) (303-01F Engine - SDV6 3.0L Diesel - Hybrid Electric Vehicle, Removal and Installation).
8. Connect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).