

2016.0 RANGE ROVER (LG), 303-14

ELECTRONIC ENGINE CONTROLS - TDV6 3.0L DIESEL

ENGINE OIL LEVEL SENSOR

[G1509557]

REMOVAL AND INSTALLATION

12.60.51	SWITCH - OIL LEVEL INDICATOR - RENEW	3000 CC, TDV6, DIESEL, WITH PARTICULATE FILTER, WITH DIESEL EXHAUST FLUID	7.1	USED WITHINS	+
----------	---	--	-----	-----------------	---

REMOVAL

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Some components shown removed for clarity.

1. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.

WARNING:


Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3. Remove the oil pan.


Refer to: [Oil Pan](#) (303-01A Engine - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).

4.

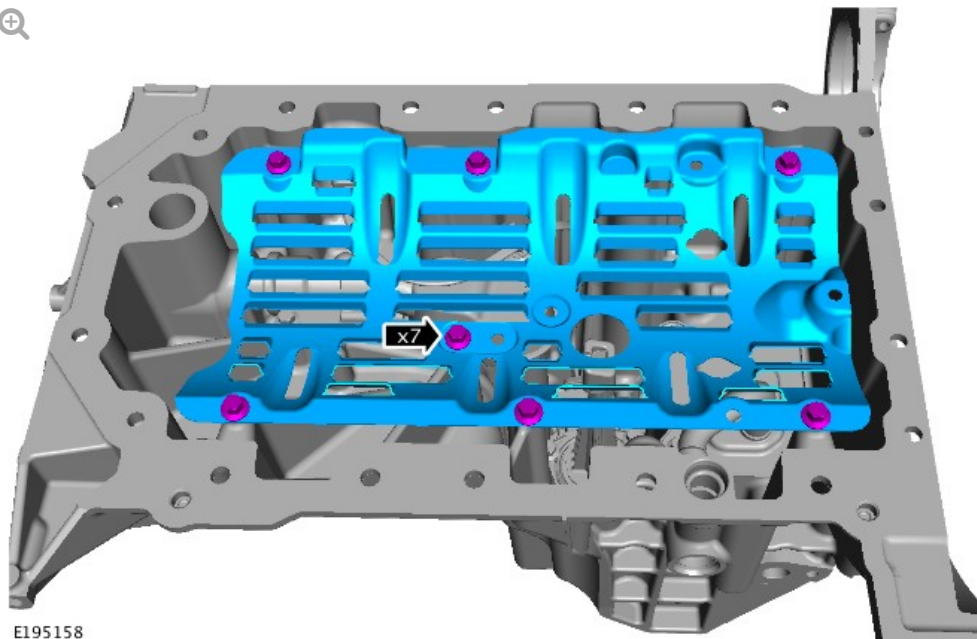

Torque: 10 Nm


5.

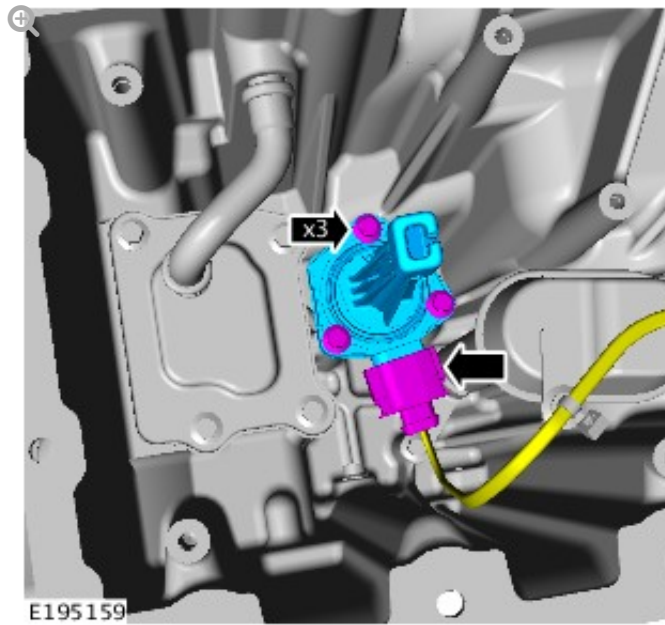

Torque: 10 Nm


INSTALLATION

1.

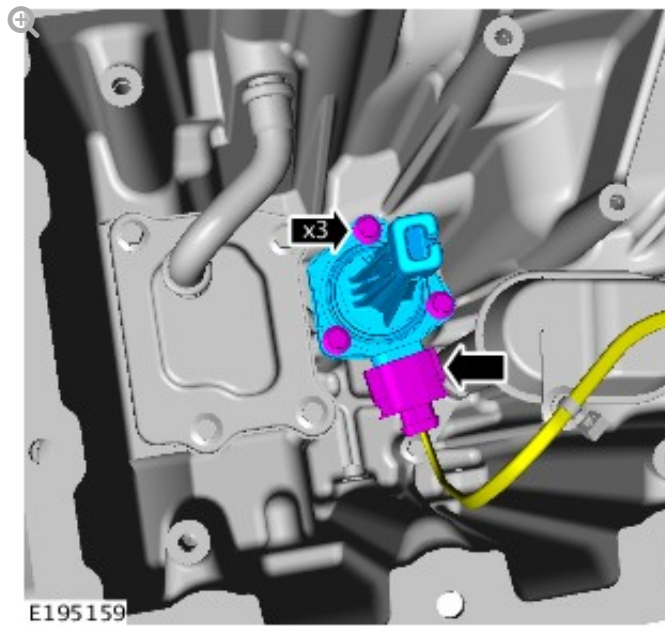

Torque: 10 Nm

2.

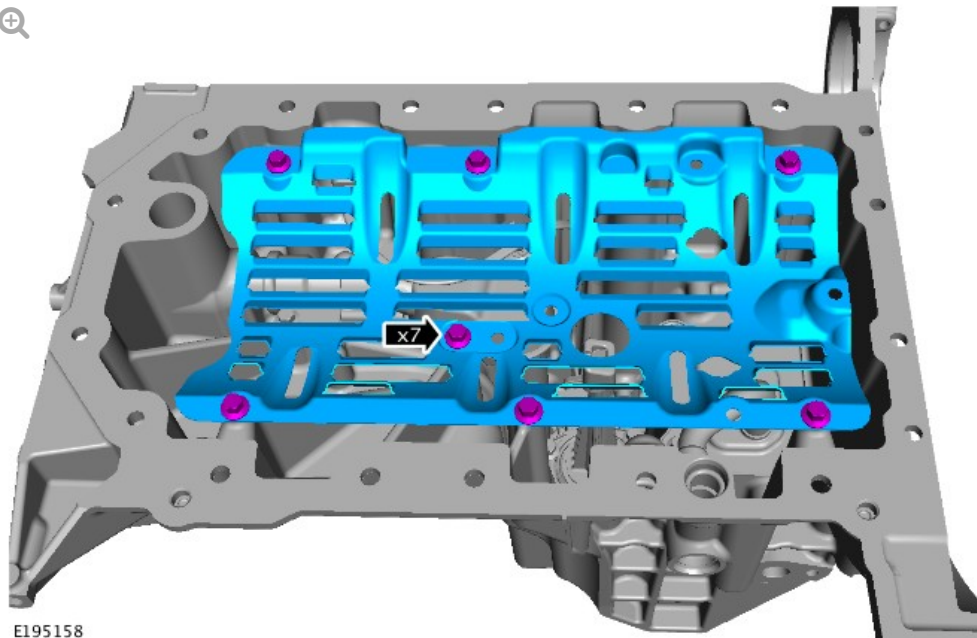

E195158

Torque: 10 Nm

3. Install the oil pan.

Refer to: [Oil Pan](#) (303-01A Engine - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).

4. Connect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).