

PUBLISHED: 07-JUN-2017
2014.0 RANGE ROVER (LG), 303-14

ELECTRONIC ENGINE CONTROLS - V8 S/C 5.0L PETROL

FUEL RAIL PRESSURE SENSOR (G1509615)

REMOVAL AND INSTALLATION

19.22.33	SENSOR - FUEL PRESSURE - RENEW	5000 CC, AJ V8, SUPERCHARGED	0.5	USED WITHINS	
----------	---	------------------------------------	-----	-----------------	--

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.

1. Refer to: Fuel System Pressure Release - V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol (310-00 Fuel System - General Information, General Procedures).
2. Refer to: Fuel Injection Component Cleaning (303-04 Fuel Charging and Controls - V8 S/C 5.0L Petrol, General Procedures).
3. Disconnect the battery ground cable.
Refer to: Specifications (414-00 Battery and Charging System - General Information, Specifications).

4. WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.


5. Refer to: Cooling System Partial Draining and Vacuum Filling (303-03 Engine Cooling - TDV6 3.0L Diesel, General Procedures).
6. Refer to: Cowl Panel Grille (501-02 Front End Body Panels, Removal and Installation).

7.



CAUTION:

Be prepared to collect escaping fluids.

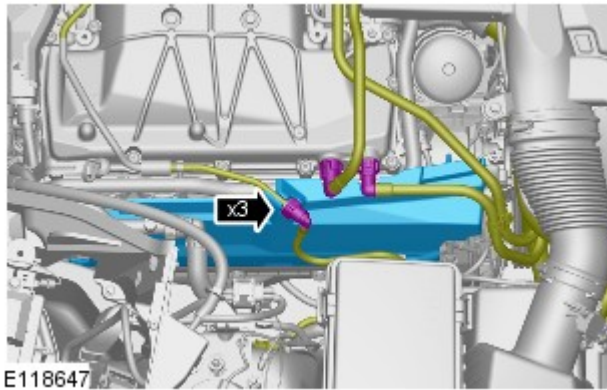

8.



CAUTIONS:

- Be prepared to collect escaping fluids.
- Before disconnecting any components, make sure the area is clean and free from foreign material. When disconnected all openings must be sealed.



- *Torque: 32 Nm*

INSTALLATION

1. To install, reverse the removal procedure.