

2016.0 RANGE ROVER (LG), 303-01

ENGINE - TDV6 3.0L DIESEL - GEN 2/TDV6 3.0L DIESEL

CRANKSHAFT FRONT SEAL - TDV6 3.0L DIESEL - GEN 2

[G1875415]

REMOVAL AND INSTALLATION

12.21.14	OIL SEAL - CRANKSHAFT - FRONT - RENEW	3000 CC, TDV6	3.6	USED WITHINS	+
----------	--	------------------	-----	-----------------	---

SPECIAL TOOL(S)



303-1120

Remover,
Crankshaft Front
Seal



E52717

303-1121


Installer,
Crankshaft Seal



E54545

303-1122

Installer, Crankshaft
Front Seal



E 54546

303-1123

Locking Tool,
Flywheel

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 1	Renew Part	Crankshaft front oil seal

REMOVAL

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Some components shown removed for clarity.

1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.


2. Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

3. Remove the timing belt.

Refer to: [Timing Belt](#) (303-01F Engine - SDV6 3.0L Diesel - Hybrid Electric Vehicle, Removal and Installation).

4.

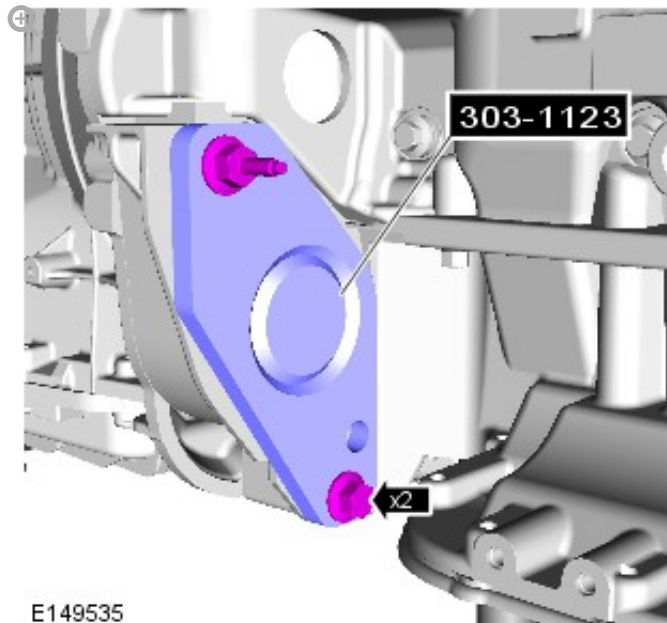


Install the special tool.

Special Tool(s): [303-1123](#)

5. Remove the crankshaft pulley.

Refer to: [Crankshaft Pulley - TDV6 3.0L Diesel - Gen 2 \(303-01A Engine - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation\)](#).


6.

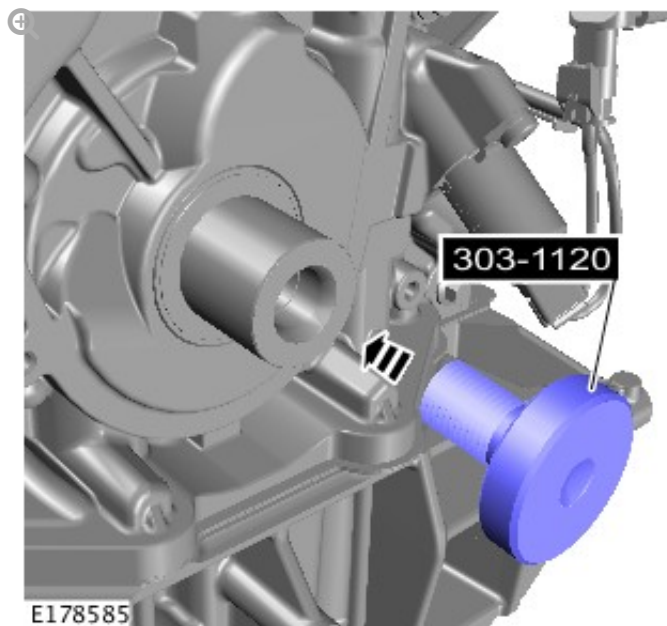

Install the special tool to the crankshaft.

Special Tool(s): [303-1120](#)


7.

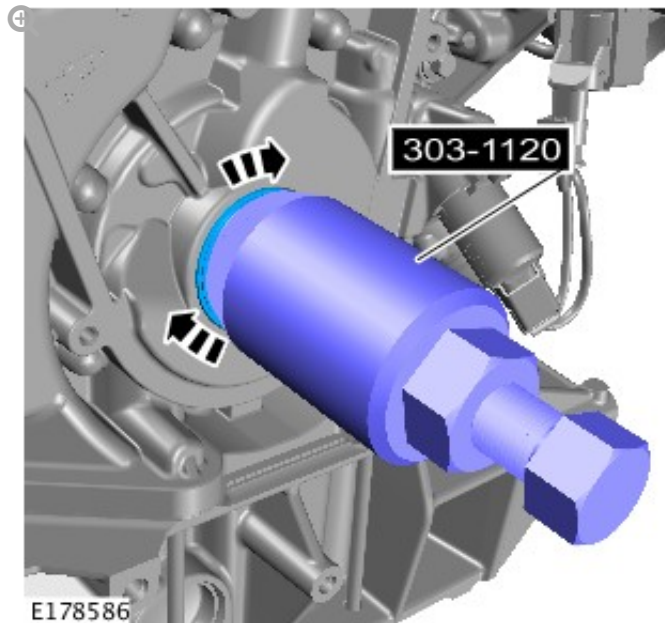

Install the special tool to the crankshaft, rotate the special tool to engage the crankshaft front oil seal as shown.

Special Tool(s): 303-1120


8.

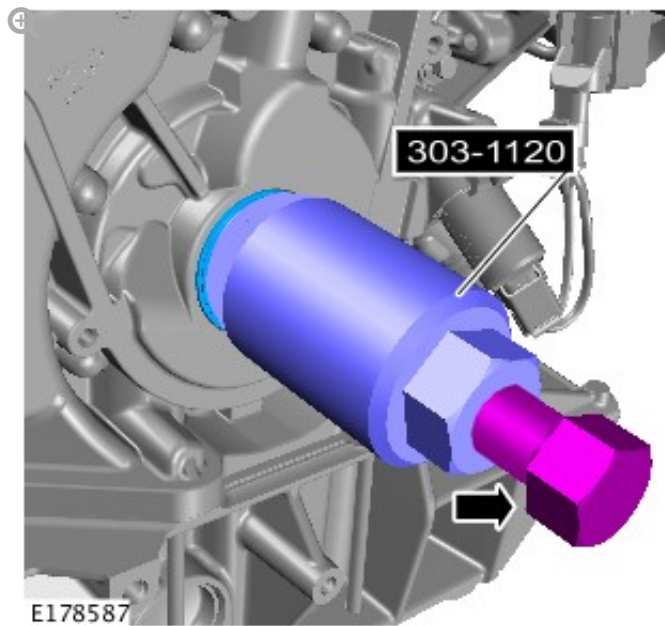

Rotate the special tool release bolt.

Special Tool(s): 303-1120

9.

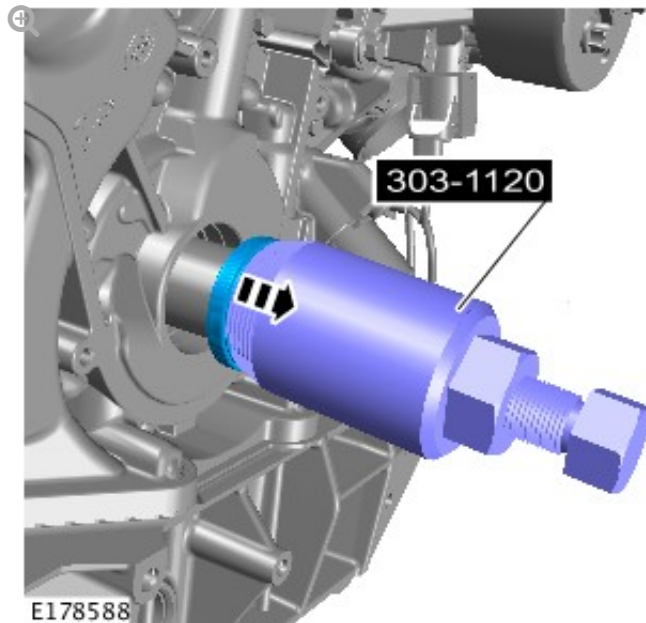

Using the special tool, remove and discard the crankshaft front oil seal.

Special Tool(s): [303-1120](#)

INSTALLATION

1.

CAUTION:


Do not use any lubricant on the crankshaft front seal, special tools or the crankshaft. Failure to follow this instruction may result in damage to the vehicle.

NOTE:

Make sure that all the component mating faces are clean.



303-1122

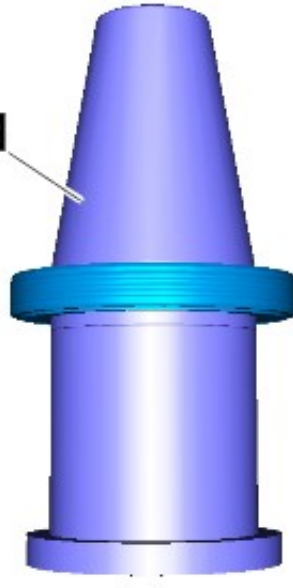

E116752

Install a new crankshaft front seal to the special tool.


Special Tool(s): 303-1122

Renew Part: [Crankshaft front oil seal.](#)

2.



303-1122

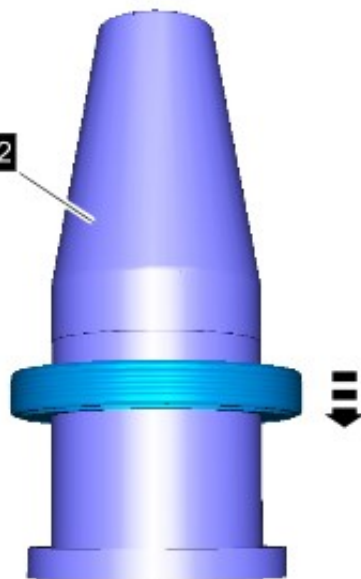


E116753

Reposition the crankshaft front seal along the special tool.

Special Tool(s): 303-1122


3.

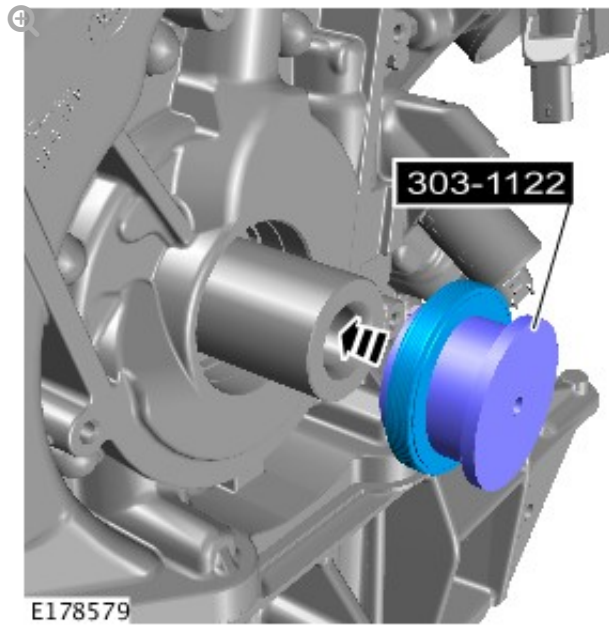

Install the special tool to the crankshaft.


Special Tool(s): [303-1122](#)

4.

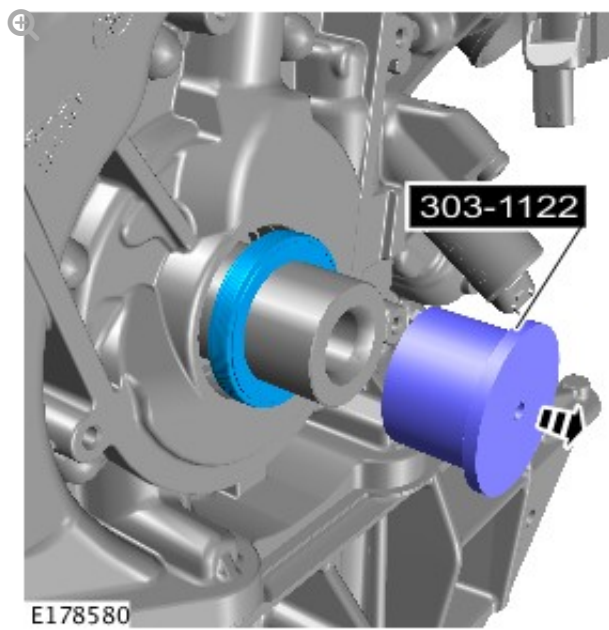

Remove the special tool.

5.

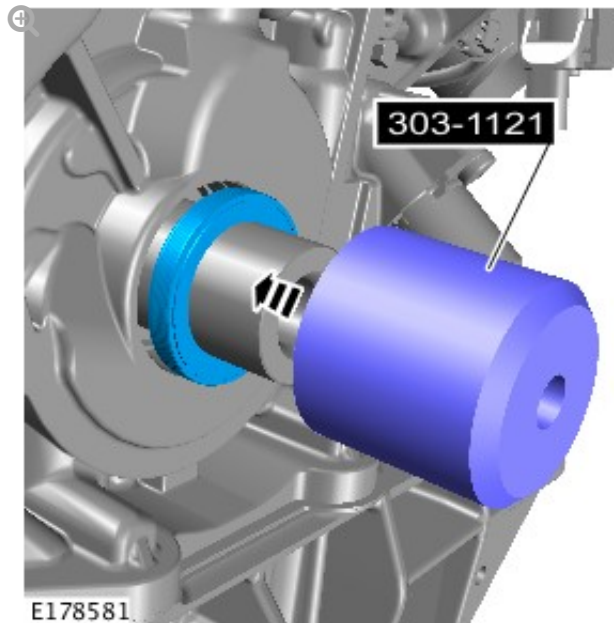


Install the special tool to the crankshaft.

Special Tool(s): 303-1121

6.

NOTES:

- Make sure the seal is installed correctly.
- Use the crankshaft bolt with the service tool.

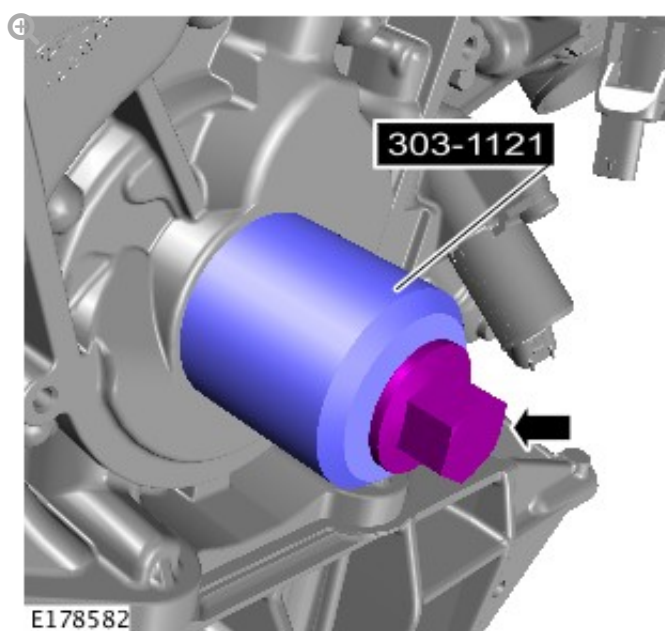

Using the special tool, install the crankshaft front oil seal.


7.

CAUTION:

Make sure the seal is installed correctly.

NOTE:

Wait 10 seconds before removing the crankshaft seal installation tool.

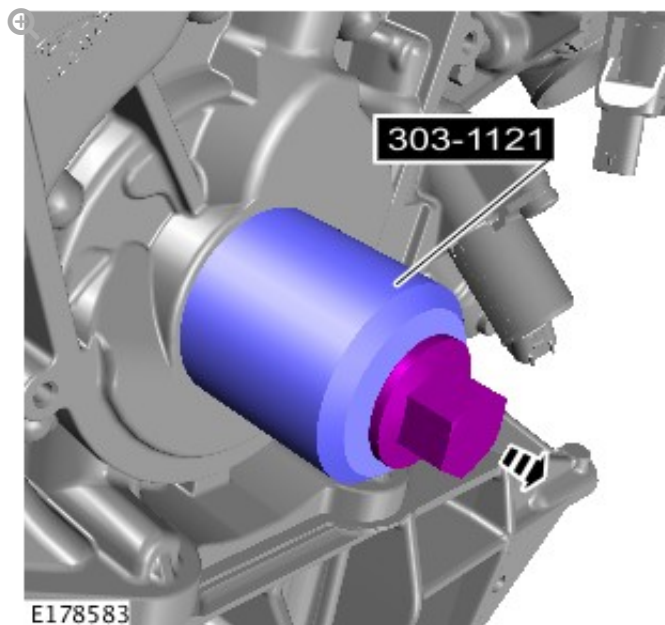


Remove the special tool.

8. Install the crankshaft pulley.

Refer to: [Crankshaft Pulley - TDV6 3.0L Diesel - Gen 2](#) (303-01A Engine - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).

9.

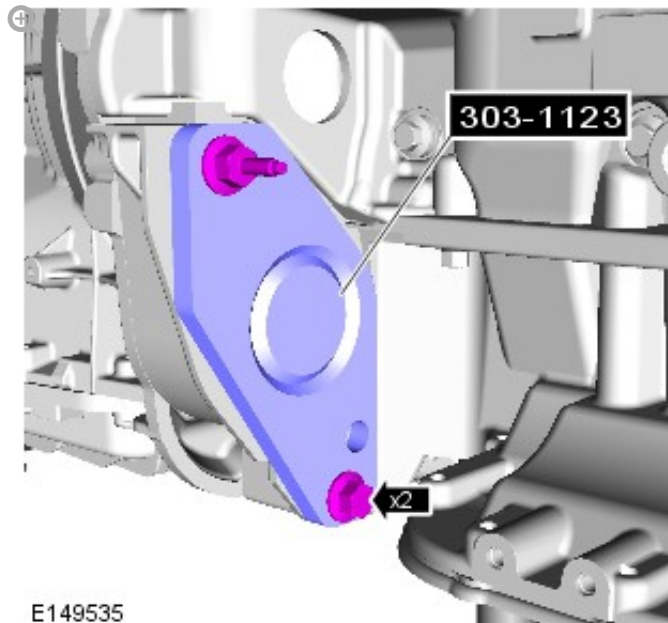

Remove the special tool.

Special Tool(s): [303-1123](#)

10. Install the timing belt.

Refer to: [Timing Belt](#) (303-01F Engine - SDV6 3.0L Diesel - Hybrid Electric Vehicle, Removal and Installation).

11. Connect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).