

2016.0 RANGE ROVER (LG), 303-01

ENGINE - TDV6 3.0L DIESEL - GEN 2/TDV6 3.0L DIESEL

CRANKSHAFT REAR SEAL

[G1509141]



REMOVAL AND INSTALLATION

12.21.20	OIL SEAL - CRANKSHAFT - REAR - RENEW	3000 CC, TDV6, DIESEL, WITH PARTICULATE FILTER, WITH DIESEL EXHAUST FLUID	8	USED WITHINS	+

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 1	Renew Part	Crankshaft rear seal

REMOVAL

NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.

1. Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.

WARNING:


Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3.

Refer to: [Crankshaft Position Sensor Ring](#) (303-14A Electronic Engine Controls - TDV6 3.0L Diesel, Removal and Installation).


4.

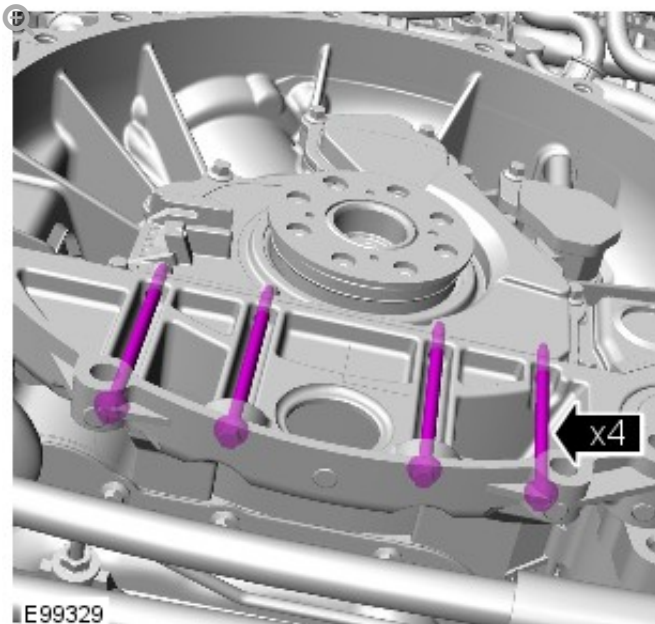

5.

CAUTION:

Discard the seal.

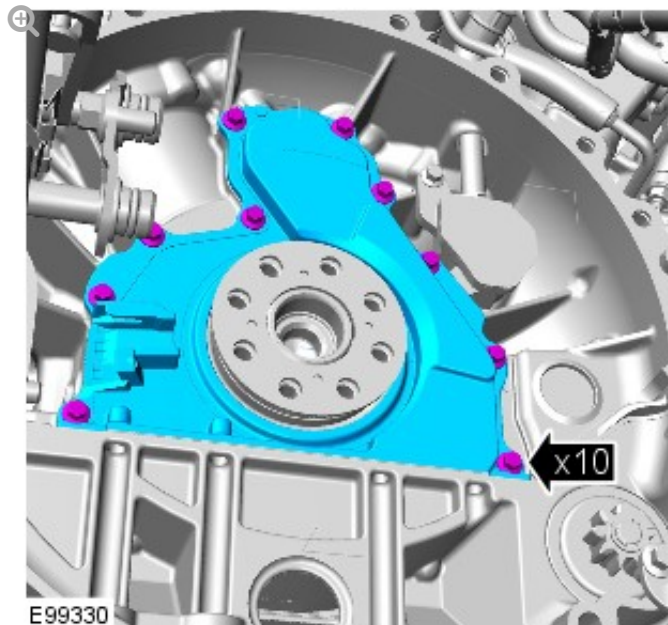


INSTALLATION

1.

CAUTIONS:


- Make sure that the crankshaft rear oil seal is correctly located.
- Make sure the crankshaft seal mating faces are clean and dry.

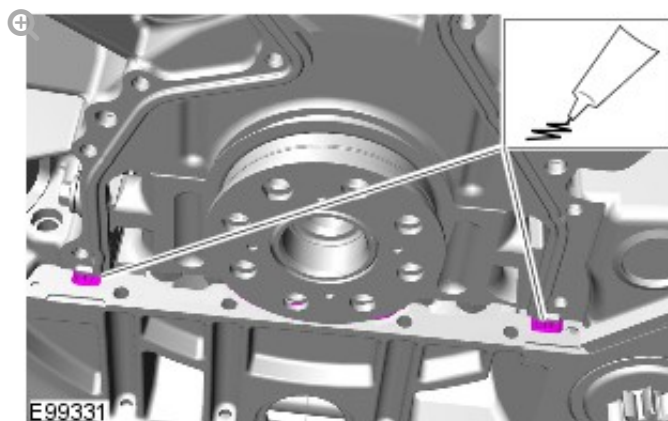

Apply an 8 mm bead of sealant to the cylinder block in the areas shown.

Renew Part: *Crankshaft rear seal.*


2.

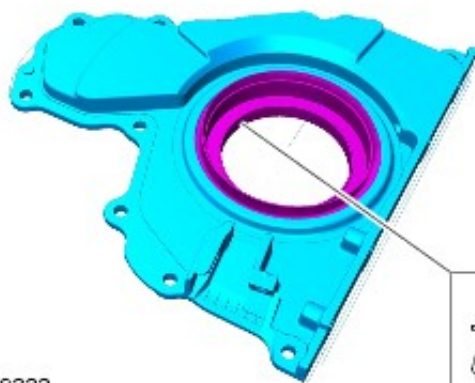

E99332

- Lubricate the oil seal.


3.

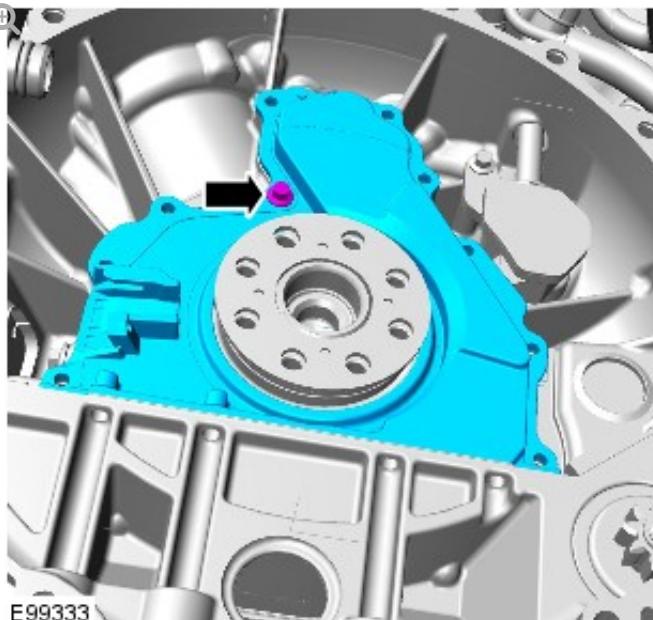

E99333


Torque: 10 Nm

4.

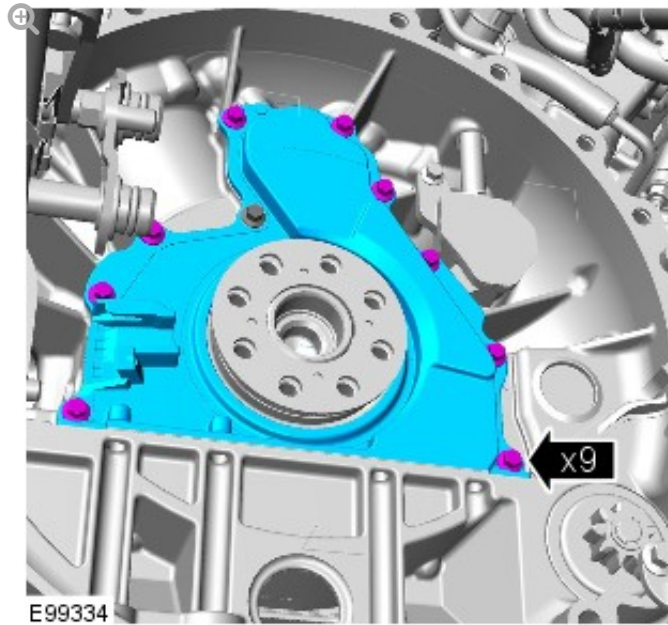

Torque: 10 Nm

5.

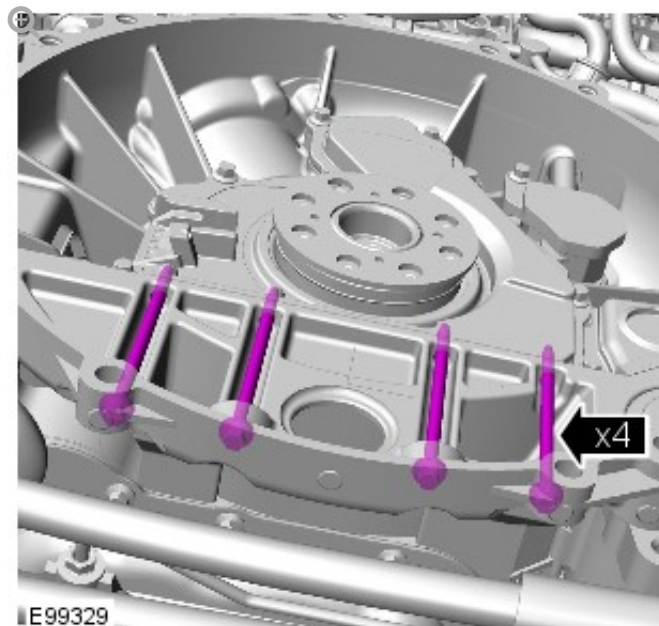

Torque: 10 Nm

6. Refer to: [Crankshaft Position Sensor Ring](#) (303-14A Electronic Engine Controls - TDV6 3.0L Diesel, Removal and Installation).
7. Connect the battery ground cable
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

