

2016.0 RANGE ROVER (LG), 303-01

ENGINE - TDV6 3.0L DIESEL - GEN 2/TDV6 3.0L DIESEL

ELECTRIC OIL PUMP - TDV6 3.0L DIESEL - GEN 2 (G1875418)

REMOVAL AND INSTALLATION

12.60.26	PUMP - OIL - RENEW	3000 CC, TDV6	4.5	USED WITHINS	+
----------	--------------------------	------------------	-----	-----------------	---

SPECIAL TOOL(S)



303-1121

Installer,
Crankshaft Seal



303-1122

Installer, Crankshaft
Front Seal


PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 11	Renew Part	Crankshaft front oil seal


REMOVAL

1. Disconnect the battery ground cable.
Refer to: [Specifications - Armoured](#) (414-00 Battery and Charging System - General Information, Specifications).
2. Remove the generator.
Refer to: [Generator](#) (414-02A Generator and Regulator - TDV6 3.0L Diesel, Removal and Installation).

3.

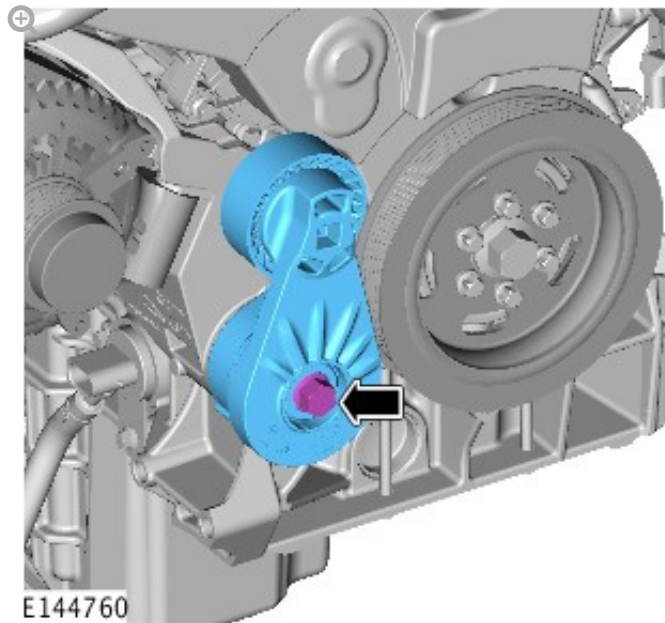

4.

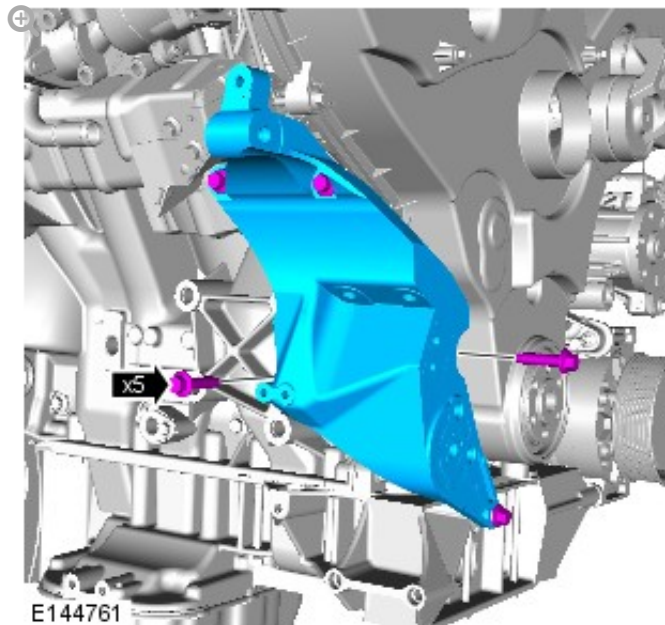

5. Refer to: [Timing Belt](#) (303-01A Engine - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).
6. Refer to: [Crankshaft Pulley - TDV6 3.0L Diesel - Gen 2](#) (303-01A Engine - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).


7.

WARNING:


Do not work on or under a vehicle supported only by a jack.
Always support the vehicle on safety stands.

Raise and support the vehicle.

8.

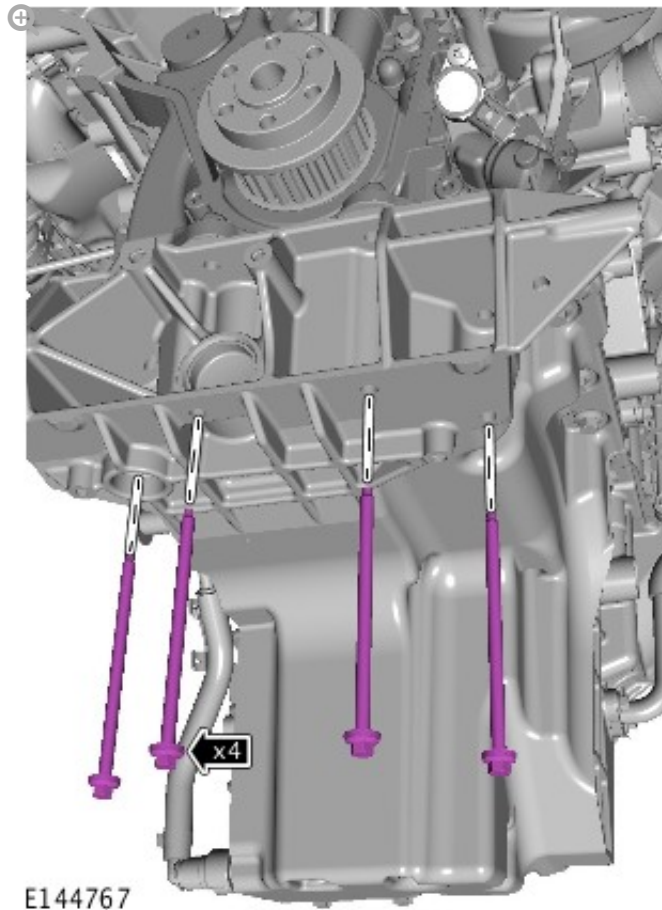


9.

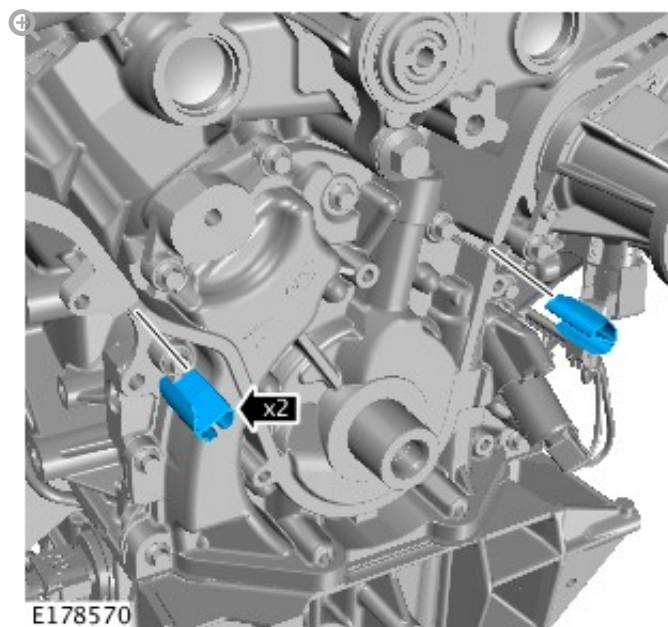


Remove the timing belt cover sealing strips.


10.

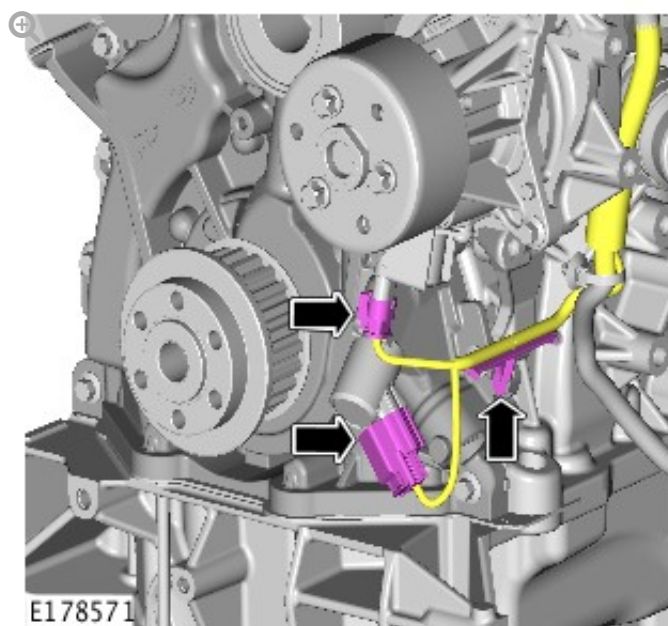

11.

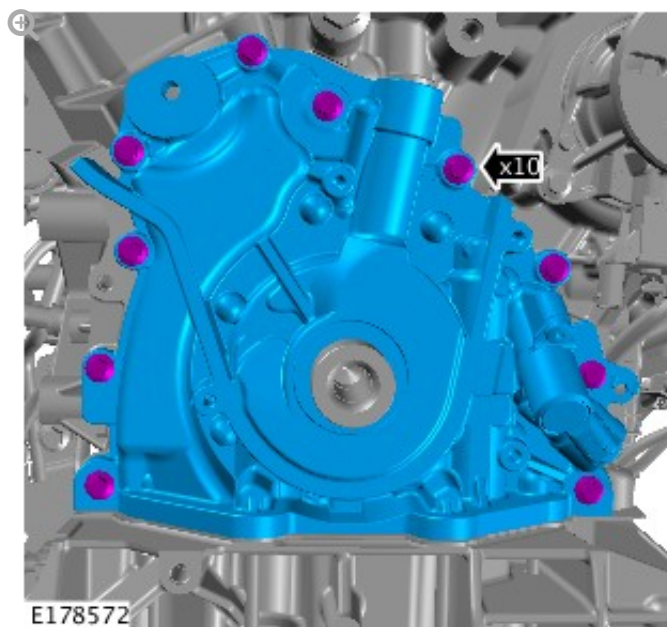

12.

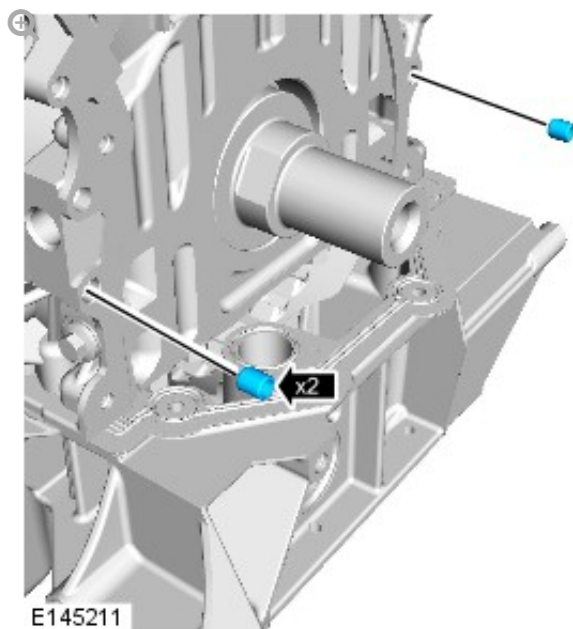


Remove the alignment dowels (if equipped).

INSTALLATION

1.

2.


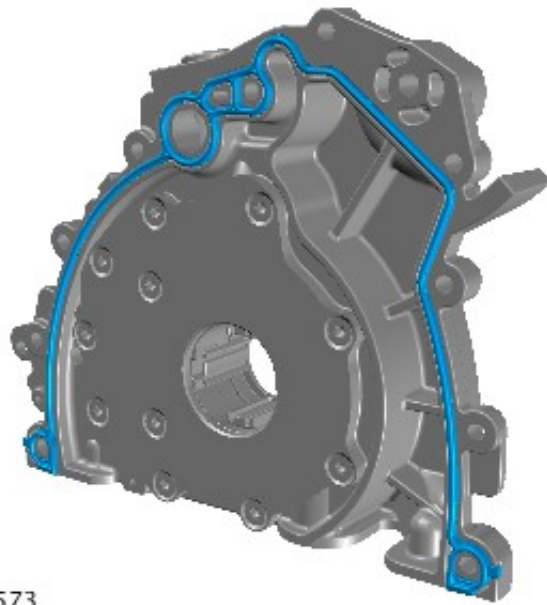


E178573

3.

NOTE:


Prime the oil pump.

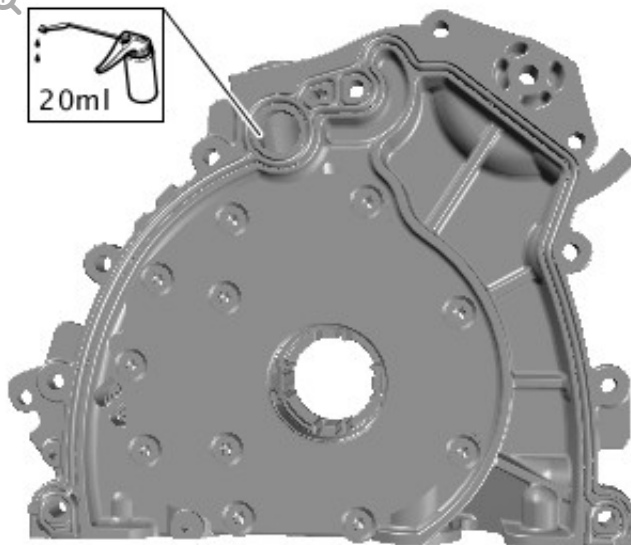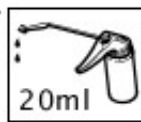

E178574

Fill the orifice shown with 20 ml of engine oil.

4.

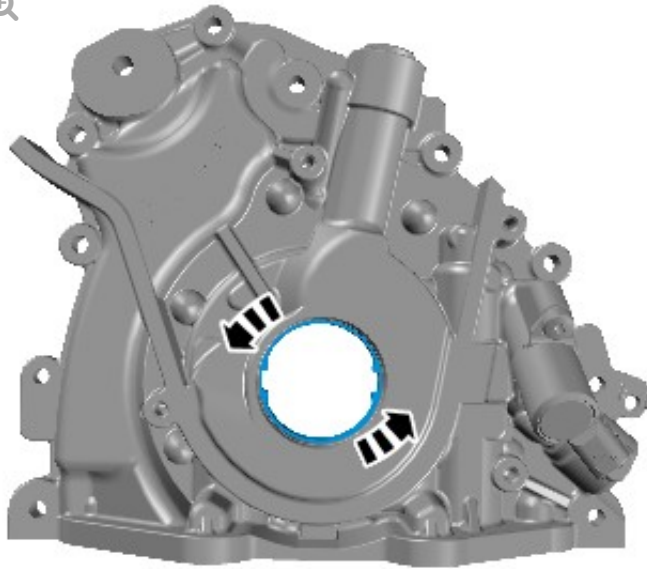


E178575

Rotate the oil pump drive 2 complete turns.

5.

CAUTION:

Make sure that the mating faces are clean and free of foreign material.

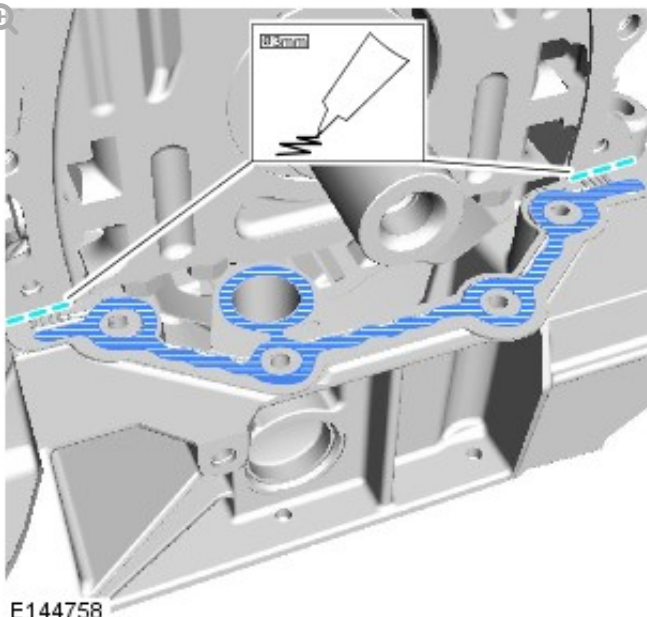

E144758

Apply sealant WSE-M4G323-A5 in an 3mm bead to the two areas shown, also apply a smear of sealant to the gasket face as

illustrated.


6.

CAUTION:

Make sure that the mating faces are clean and free of foreign material.

NOTES:

- Make sure the gasket is installed correctly.
- Make sure the oil pump locator is installed correctly.

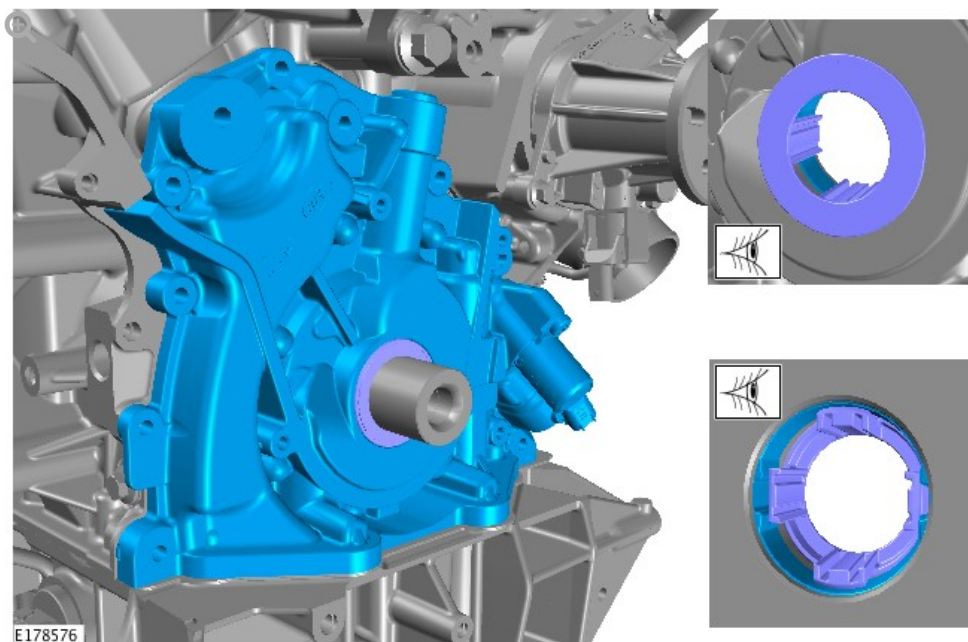


Install the oil pump.

7.


NOTE:

Remove the oil pump locator.

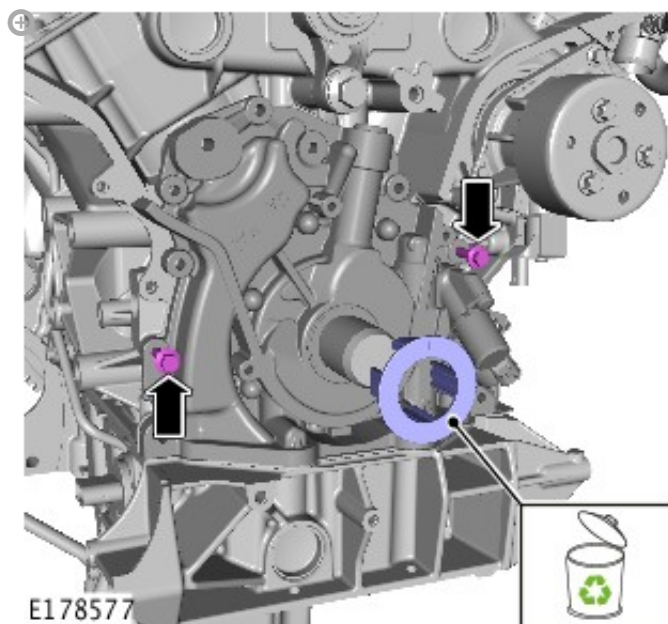

Install two bolts to the oil pump, only finger tighten at this stage.

8.

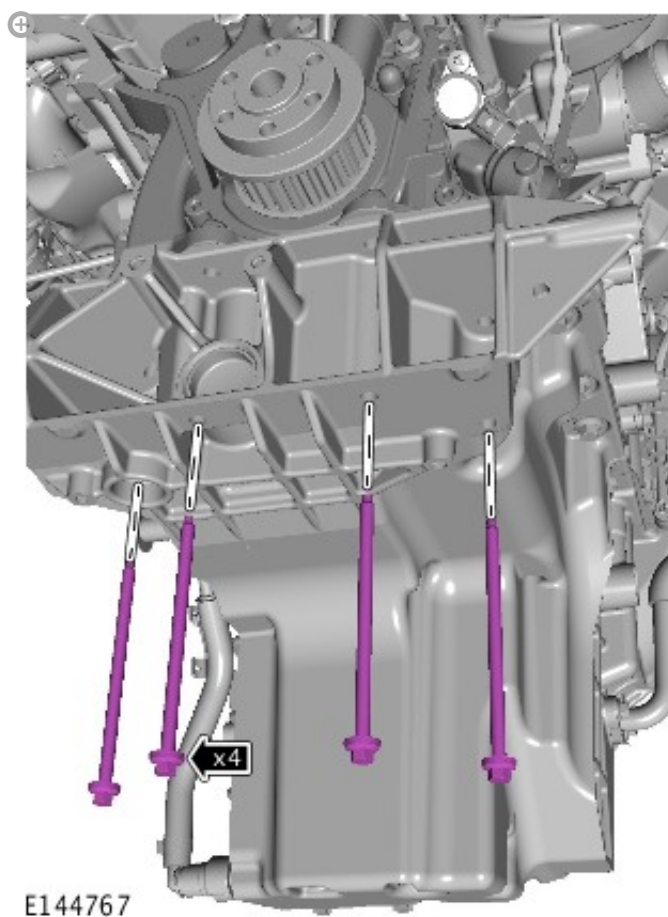


Install the oil pump lower retaining bolts.

Torque: 10 Nm

9.


NOTE:

Tighten the bolts in the sequence shown to 10 Nm .

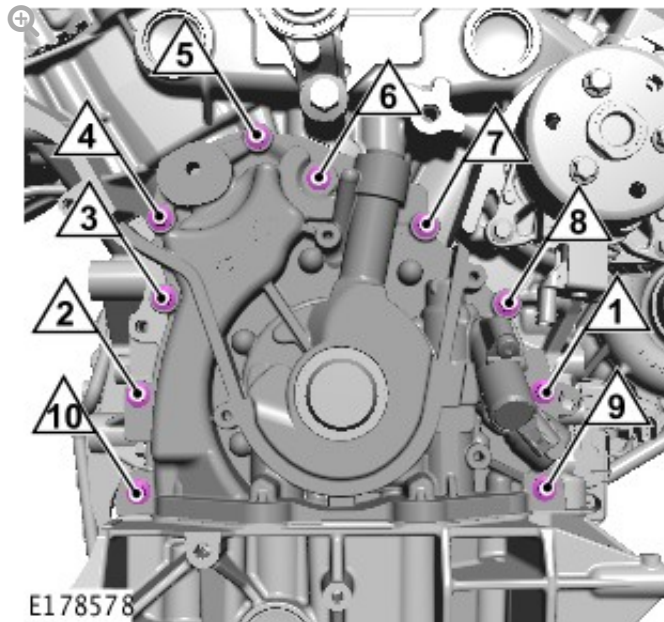

Secure the oil pump.

10.

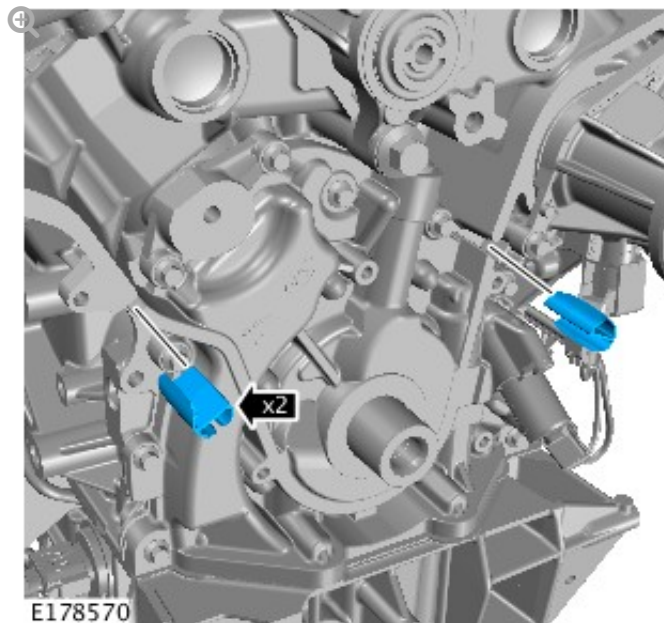

Install the timing belt cover sealing strips.


11.

CAUTION:

Do not use any lubricant on the crankshaft front seal, special tools or the crankshaft. Failure to follow this instruction may result in damage to the vehicle.

NOTE:

Make sure all component mating faces are clean.

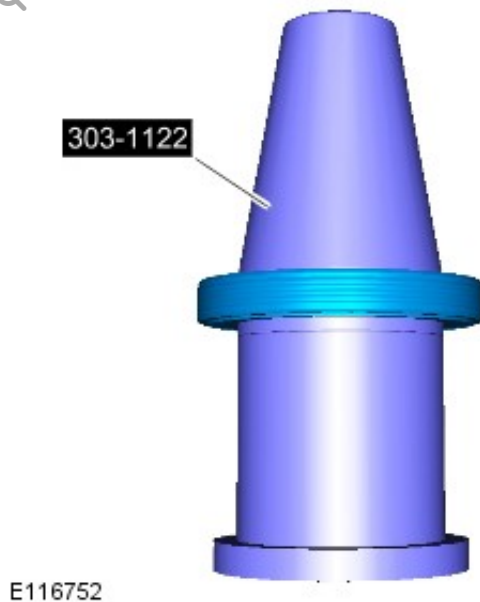

Install a new crankshaft front seal to the special tool.


Special Tool(s): [303-1122](#)

Renew Part: [Crankshaft front oil seal](#).

12.

NOTE:


Remove the sleeve from the special tool.

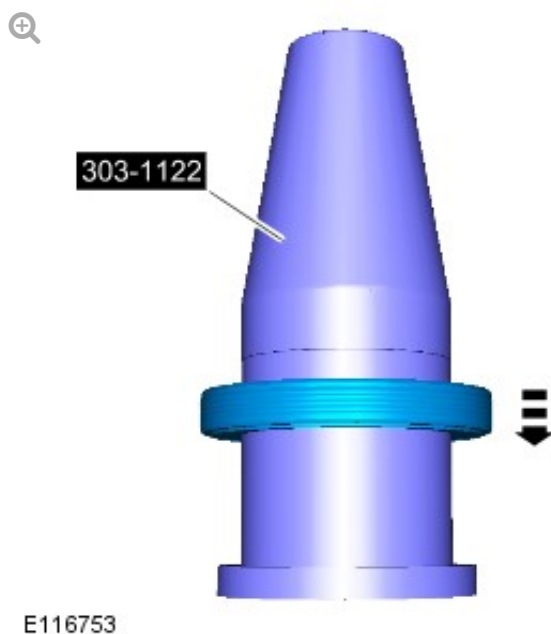

Reposition the crankshaft front seal along the special tool.

Special Tool(s): [303-1122](#)


13.

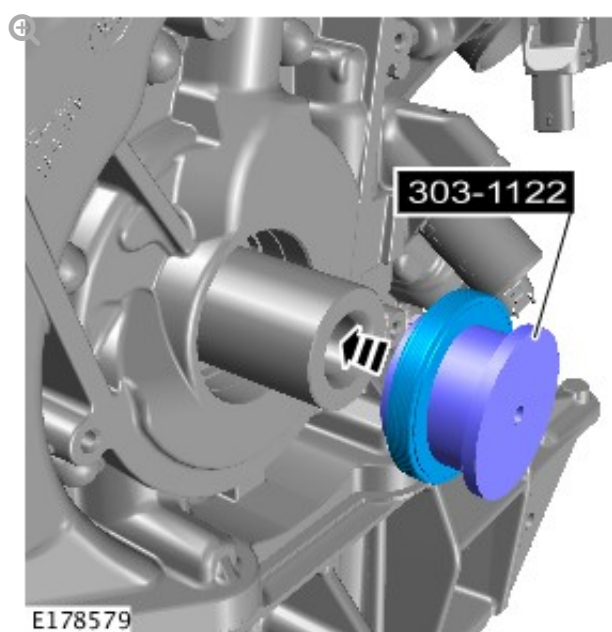

Install the special tool to the crankshaft.

Special Tool(s): [303-1122](#)


14.

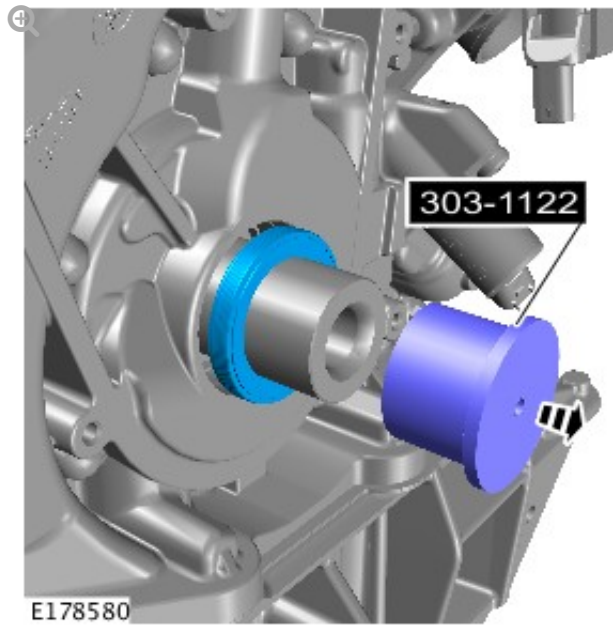

Remove the special tool from the crankshaft.

Special Tool(s): 303-1122

15.

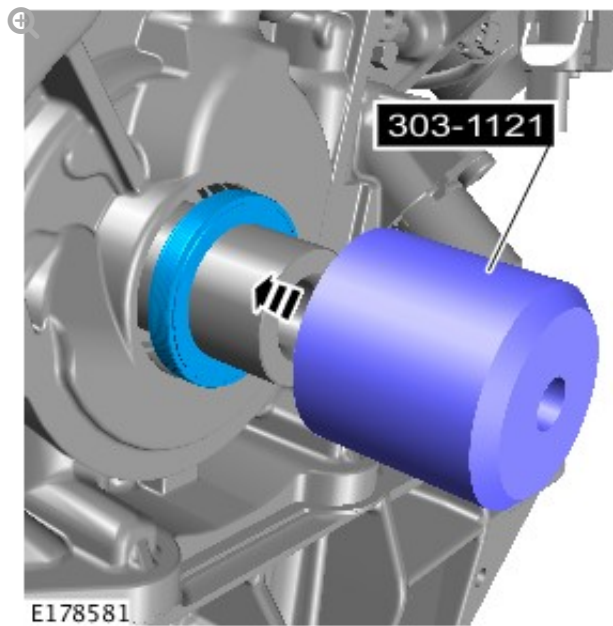


Install the special tool to the crankshaft.

Special Tool(s): 303-1121

16.

NOTES:

- Make sure the seal is installed correctly.
- Use the crankshaft bolt with the service tool.

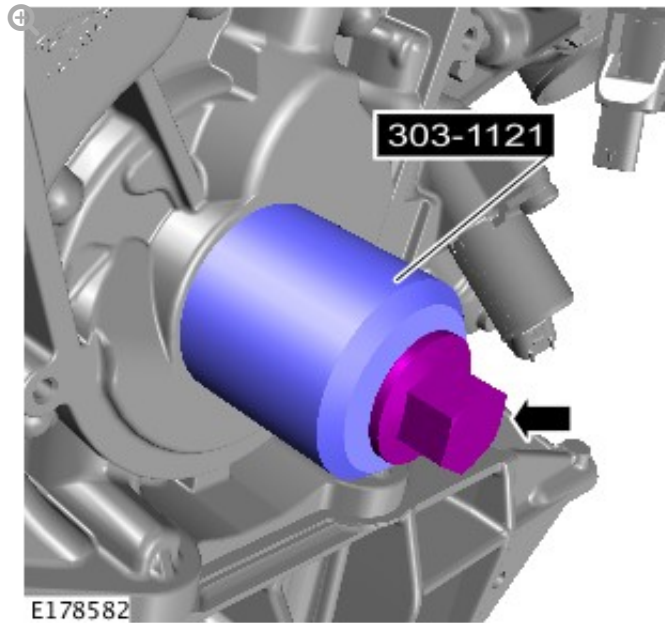


Install the special tool to the crankshaft.

Special Tool(s): [303-1121](#)

17.

NOTES:


- Make sure the seal is installed correctly.
- Wait 10 seconds before removing the crankshaft seal installation tool.

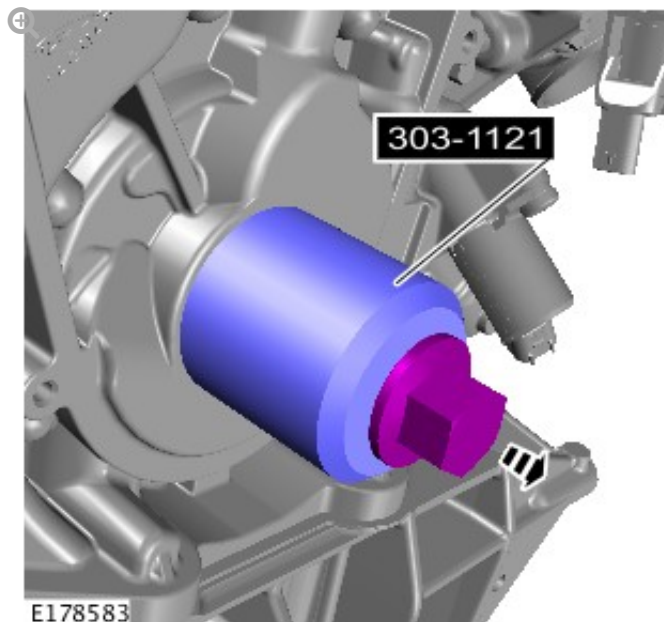

Remove and discard the crankshaft pulley retaining bolt.


Special Tool(s): [303-1121](#)

18.

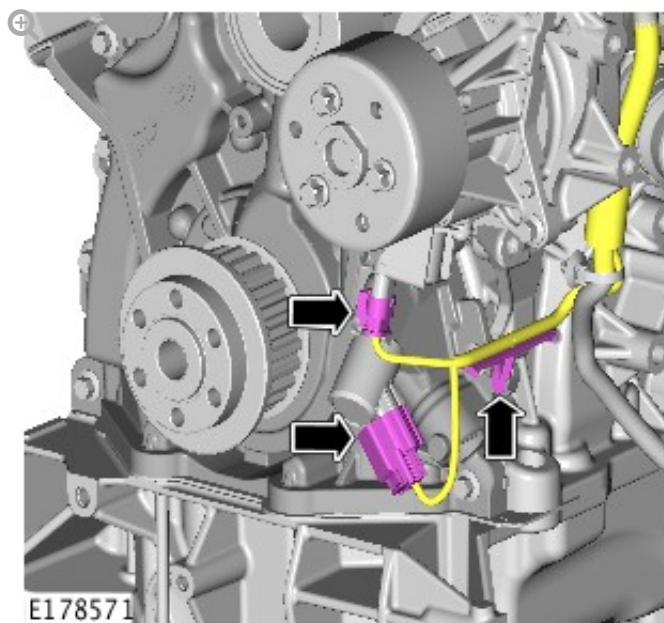

19. Refer to: [Crankshaft Pulley - TDV6 3.0L Diesel - Gen 2](#) (303-01A Engine - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).
20. Refer to: [Timing Belt](#) (303-01A Engine - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).

21.

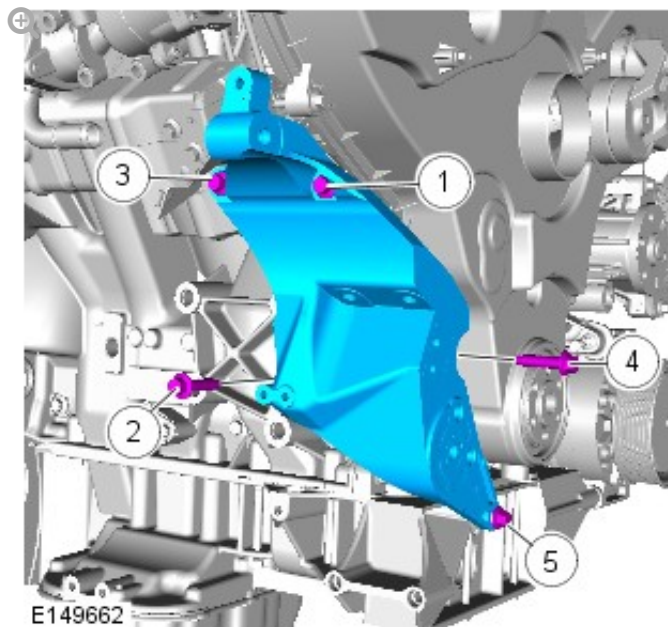


Tighten the bolts in the sequence shown.

Torque: 22 Nm

22. Install the generator.

Refer to: [Generator](#) (414-02A Generator and Regulator - TDV6 3.0L Diesel, Removal and Installation).

23.

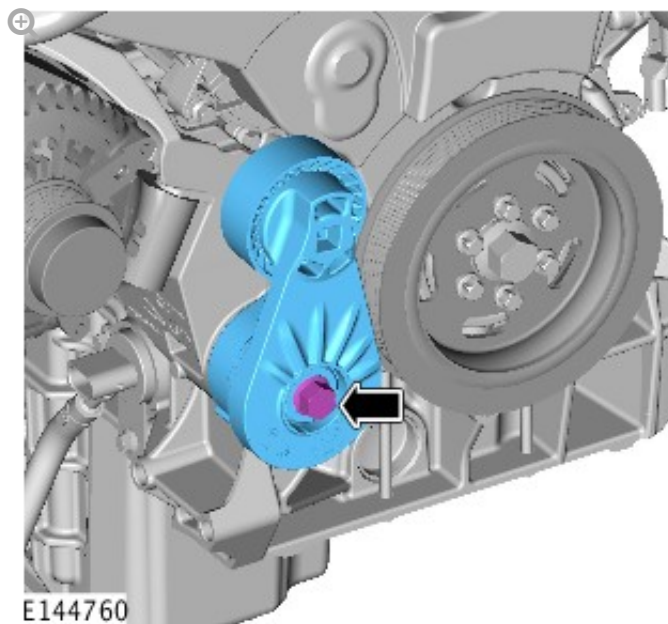

Torque: 45 Nm

24. Connect the battery ground cable.

Refer to: [Specifications - Armoured](#) (414-00 Battery and Charging System - General Information, Specifications).