

2016.0 RANGE ROVER (LG), 303-01

ENGINE - TDV6 3.0L DIESEL - GEN 2/TDV6 3.0L DIESEL

ENGINE (G1509158)

INSTALLATION

INSTALLATION

SPECIAL TOOL(S)



303-021

Engine support
bracket



303- 1141

Engine lifting
kit



303-1141- 01

Engine lifting
bracket - Rear

CAUTION:

Make sure that all openings are sealed. Use new blanking caps.

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.


1.

WARNING:


This step requires the aid of another technician.

CAUTION:

Be prepared to collect escaping fluids.

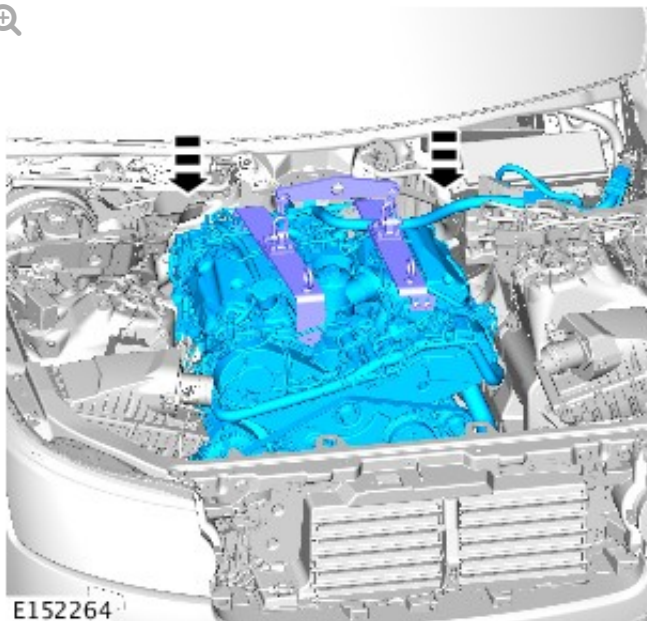


2.

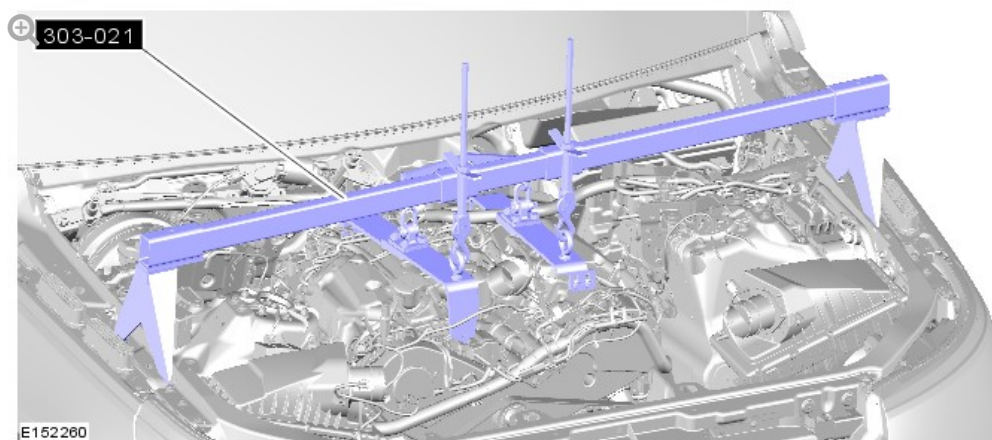

Install the special tool.


Special Tool(s): [303-021](#)

3.

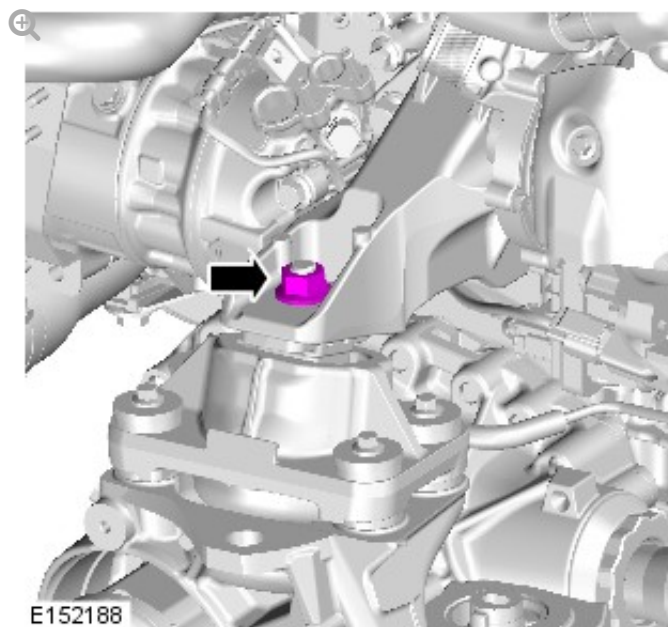


Torque: 110 Nm

4.

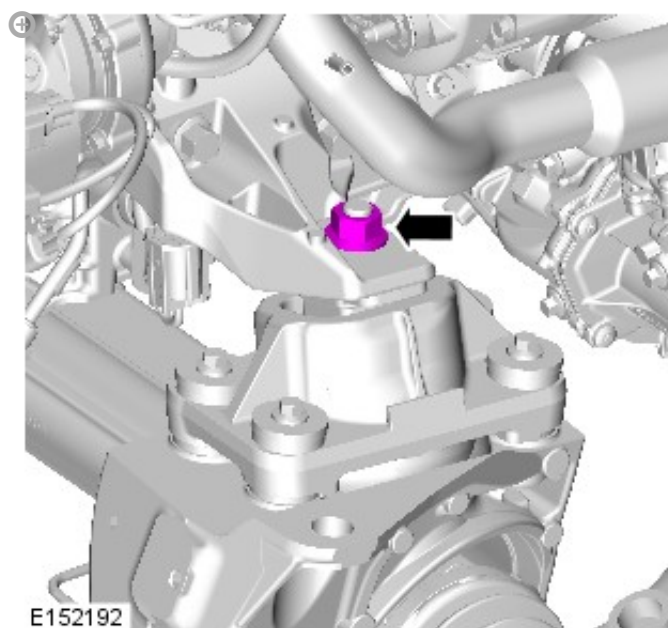

Torque: 110 Nm


5.

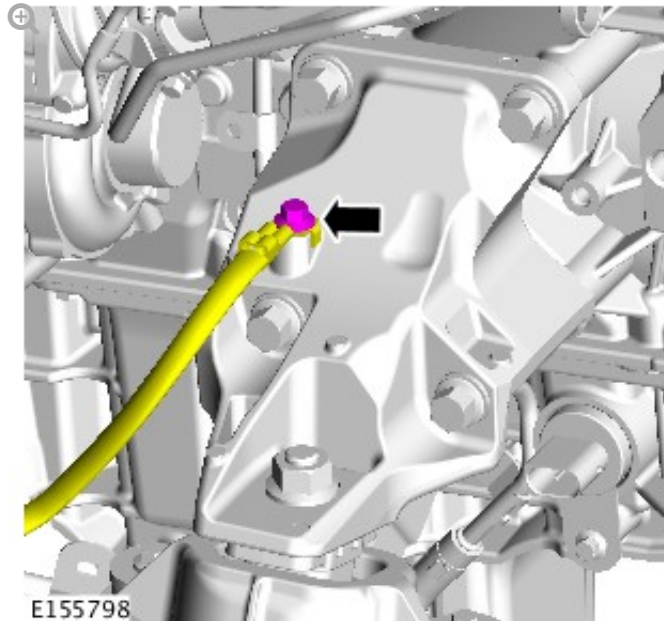

Torque: 9 Nm


6. Refer to: [Transmission - TDV6 3.0L Diesel](#) (307-01B Automatic Transmission/Transaxle - Vehicles With: 8HP70 8-Speed Automatic Transmission AWD, Installation).

7.

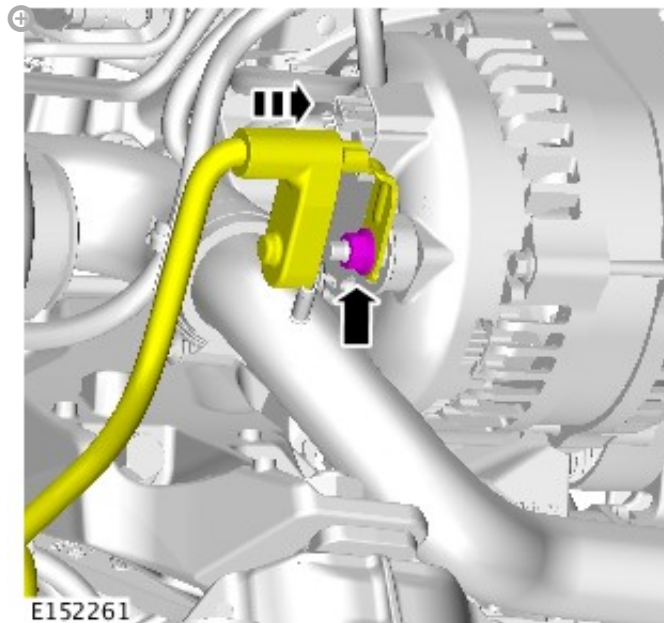

Torque: 12 Nm


8.

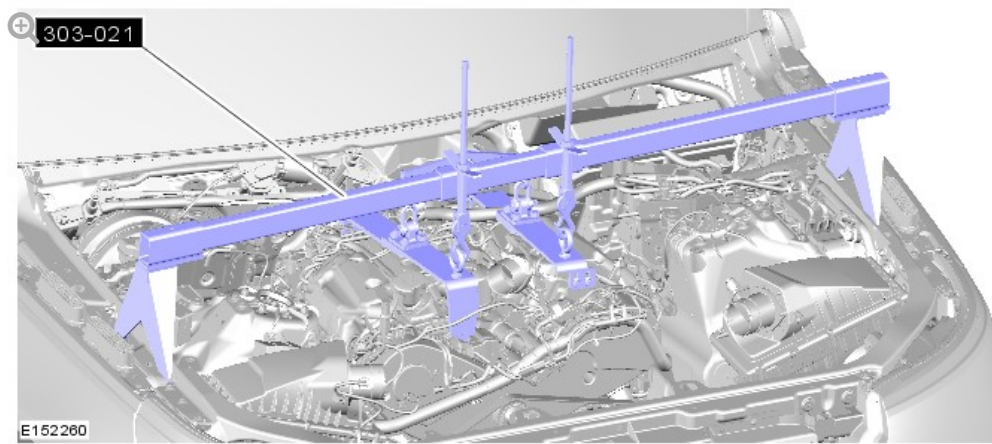

Remove the special tool.

Special Tool(s): 303-021


9.

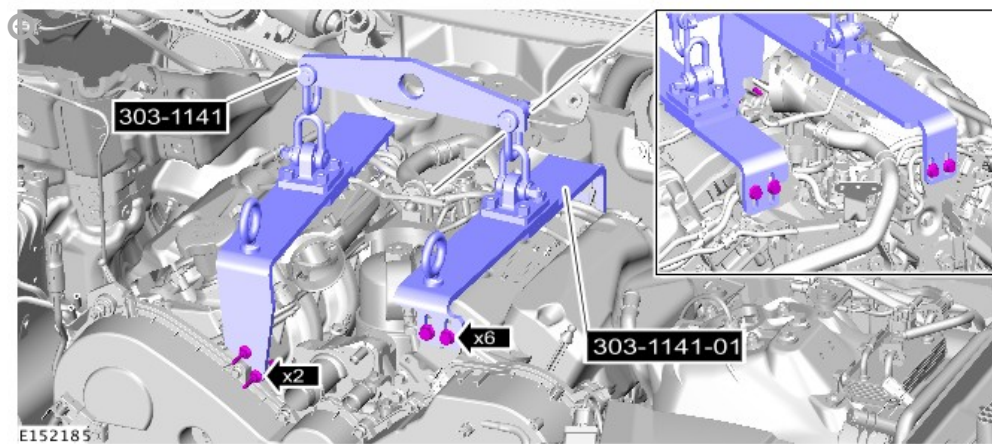


Remove the special tool.

Special Tool(s): 303-1141, 303-1141-01

10.

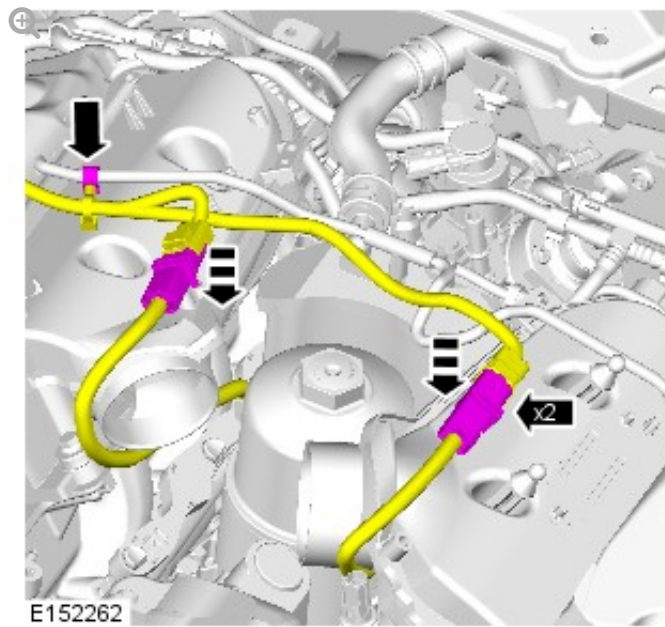


11.

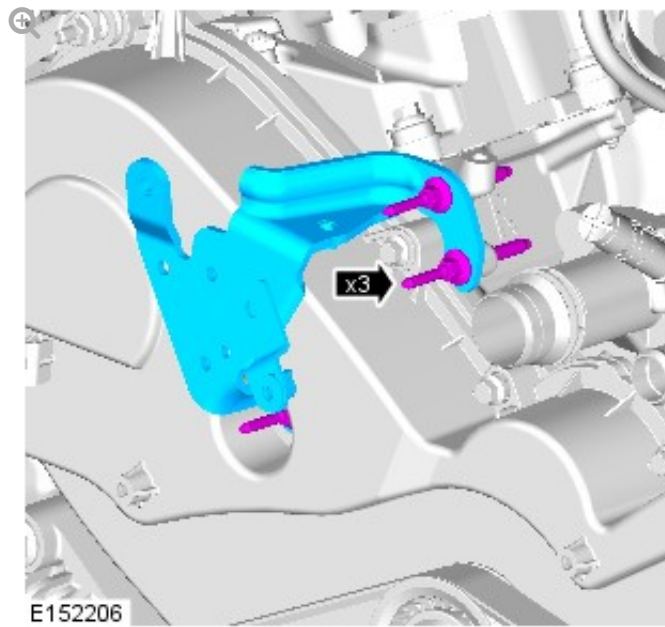


Torque: 8 Nm

12.

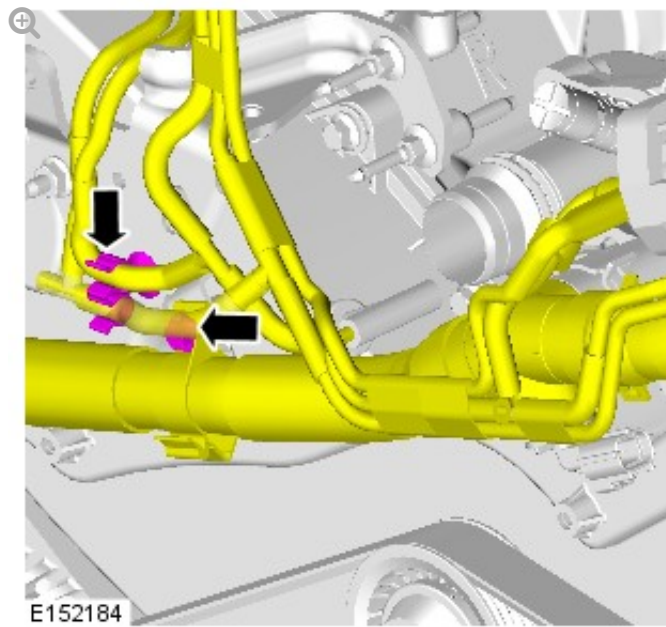


Torque: 8 Nm

13.

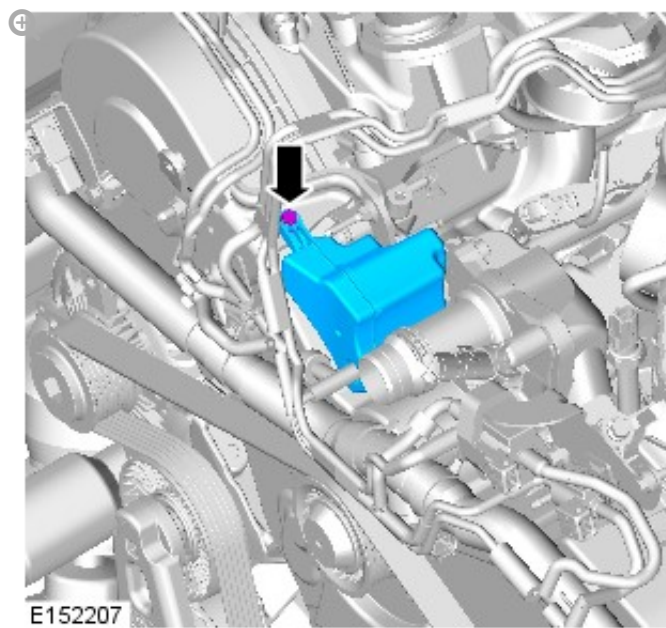


Torque: 8 Nm


14.

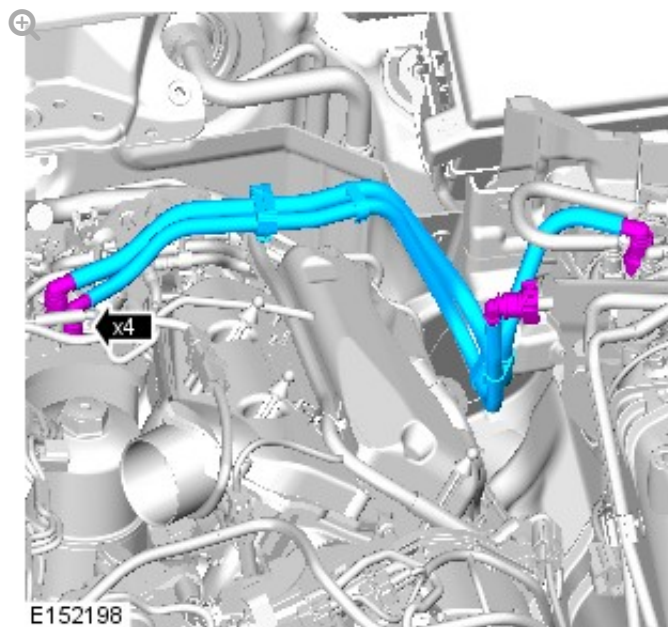

15.

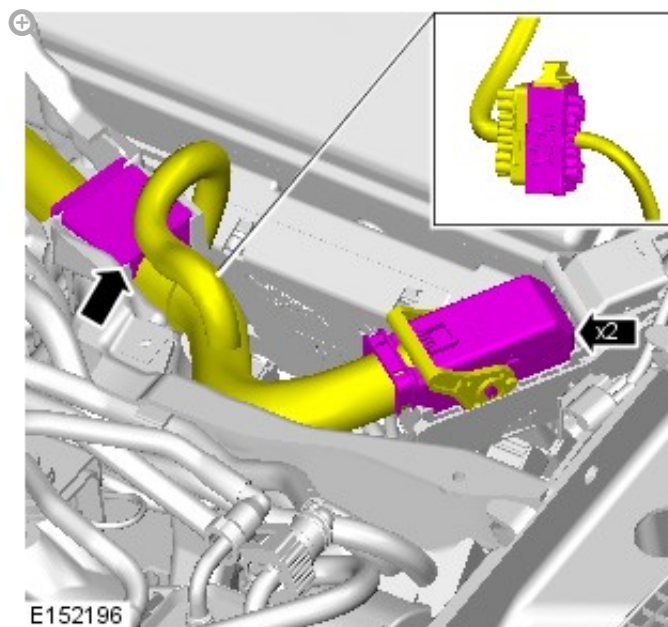


16.

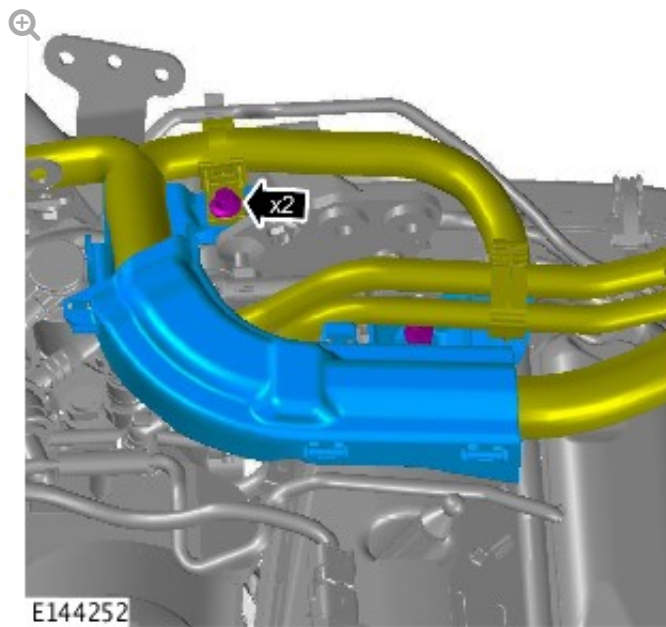

Torque: 10 Nm

17.

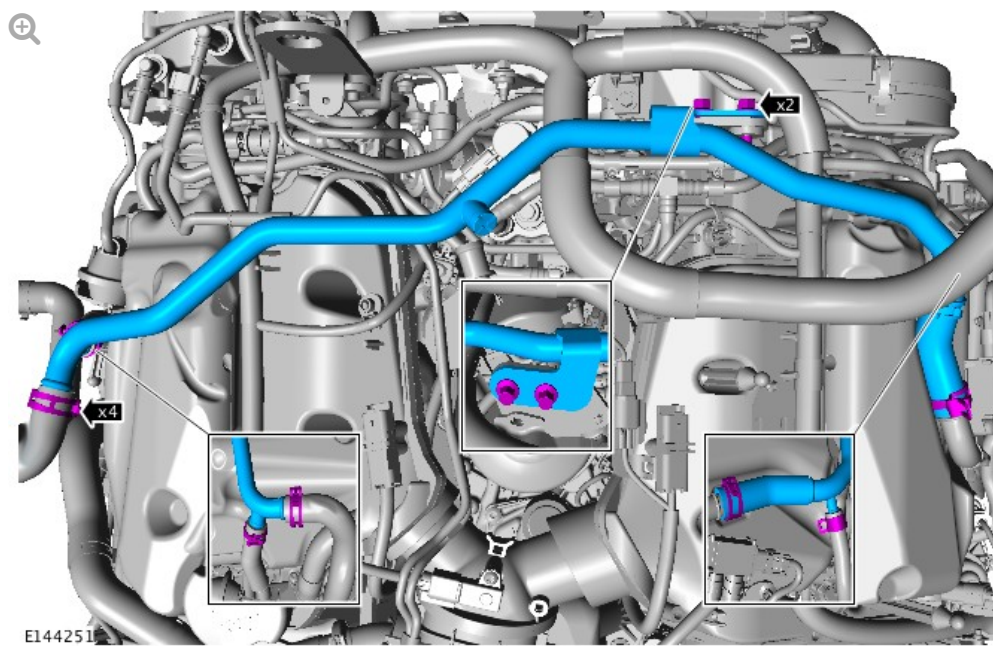

Torque: 10 Nm

18. Refer to: [Secondary Bulkhead Centre Panel - TDV6 3.0L Diesel](#) (501-02 Front End Body Panels, Removal and Installation).


19.

CAUTION:

Make sure that a new bolt is installed.


NOTE:

LHD illustration shown, RHD is similar.

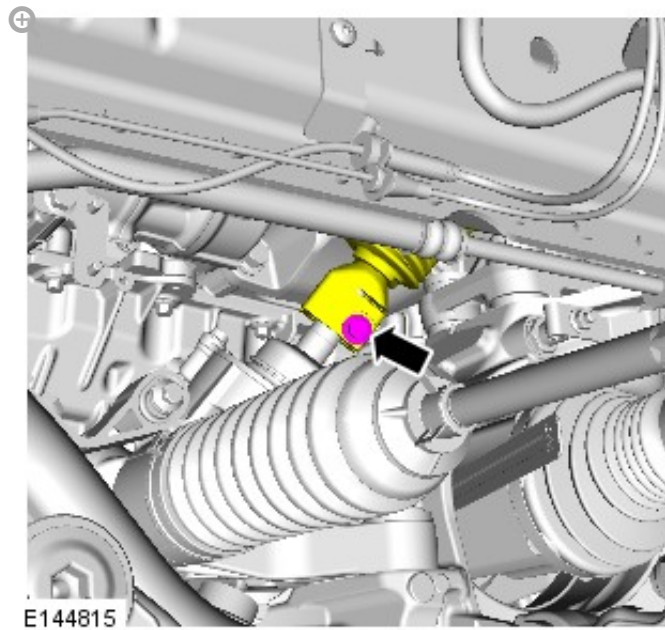


- *Torque: 30 Nm*

20.

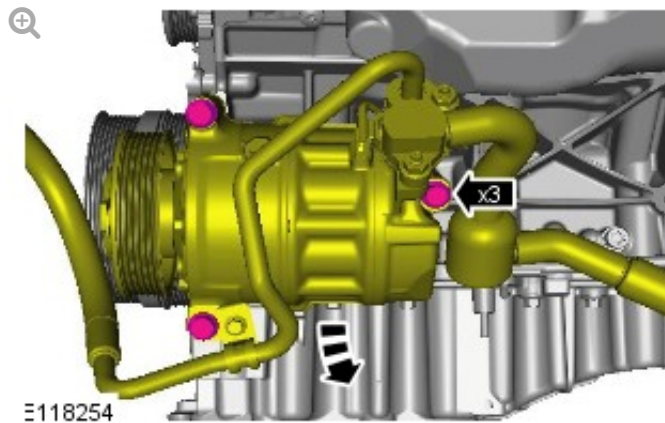


Torque: 25 Nm

21.

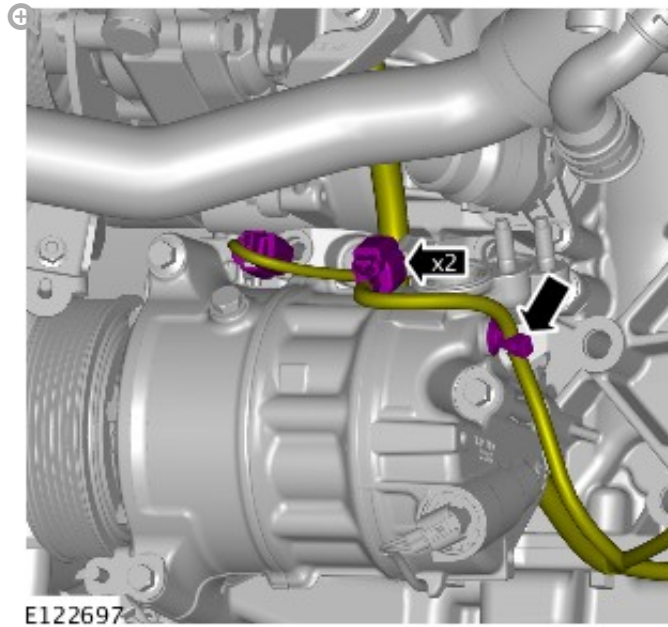


22. Refer to: [Accessory Drive Belt](#) (303-05A Accessory Drive - TDV6 3.0L Diesel, Removal and Installation).


23.

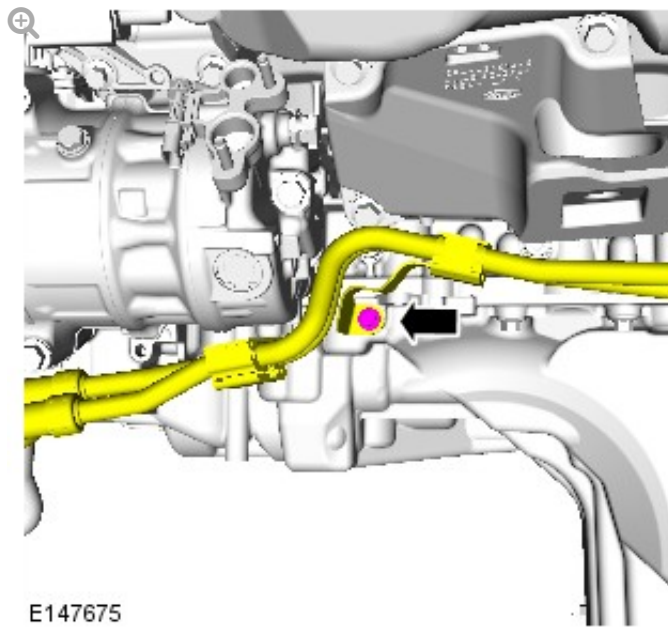


24.

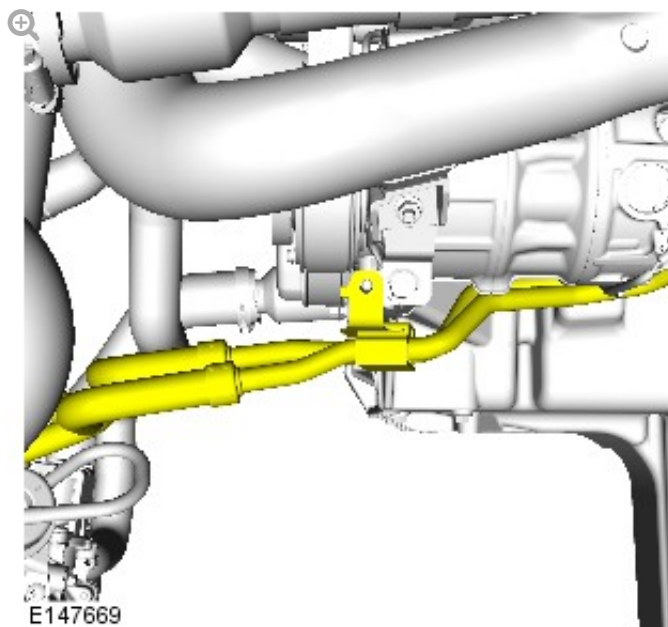


25.

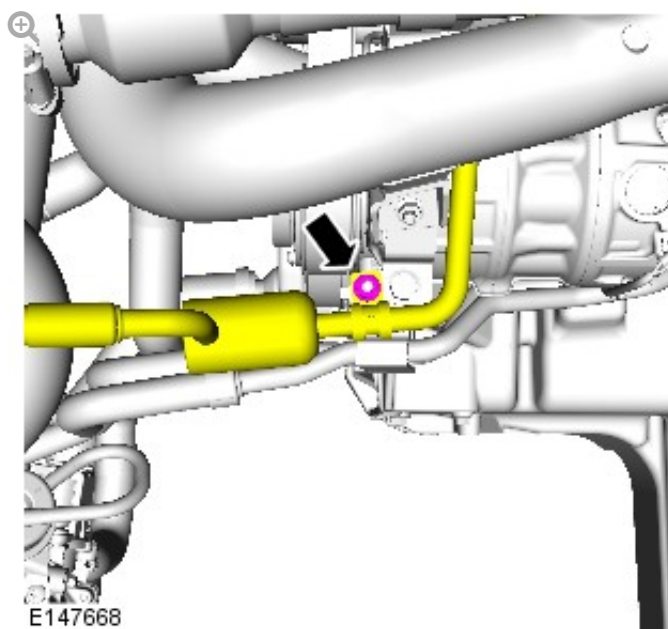

26.

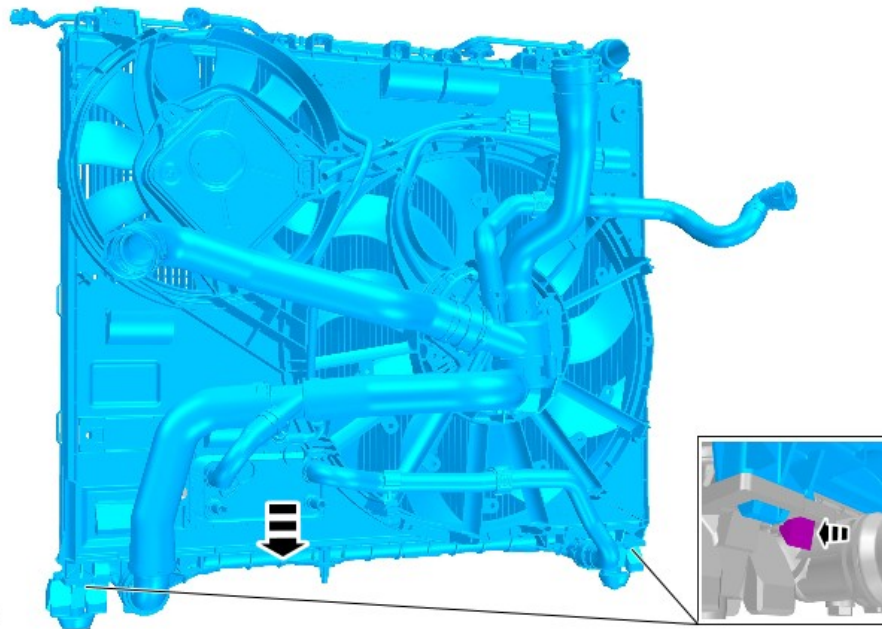


27.

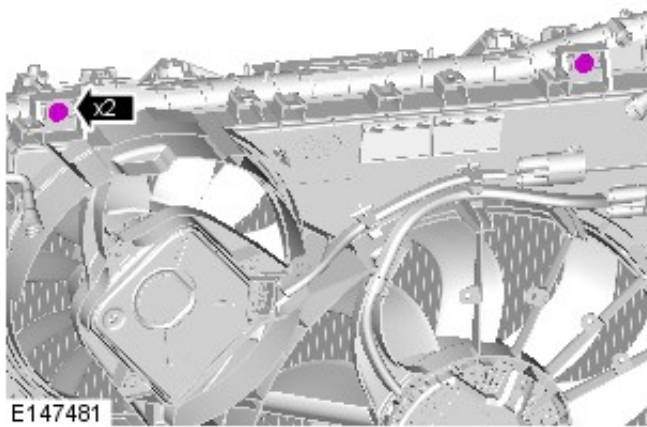


Torque: 7 Nm


28.

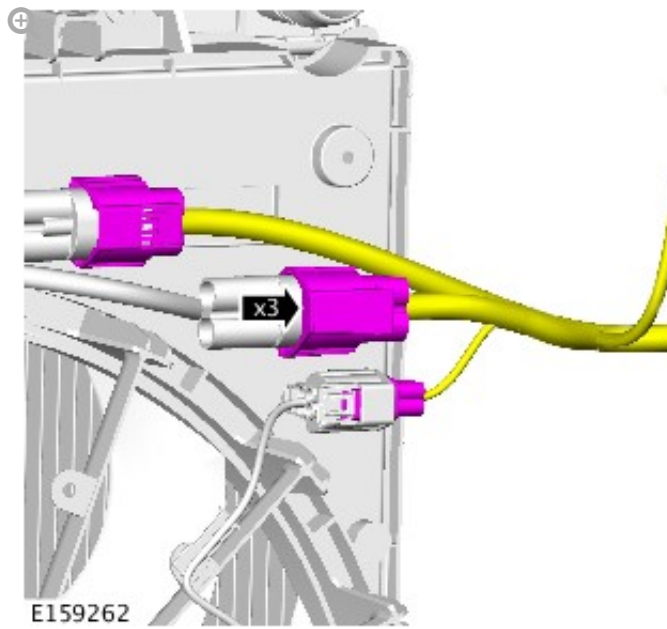


29.

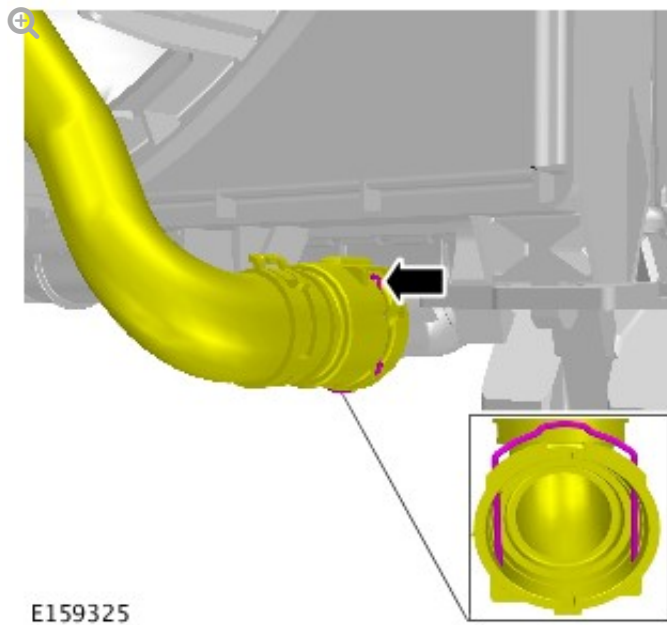


30.

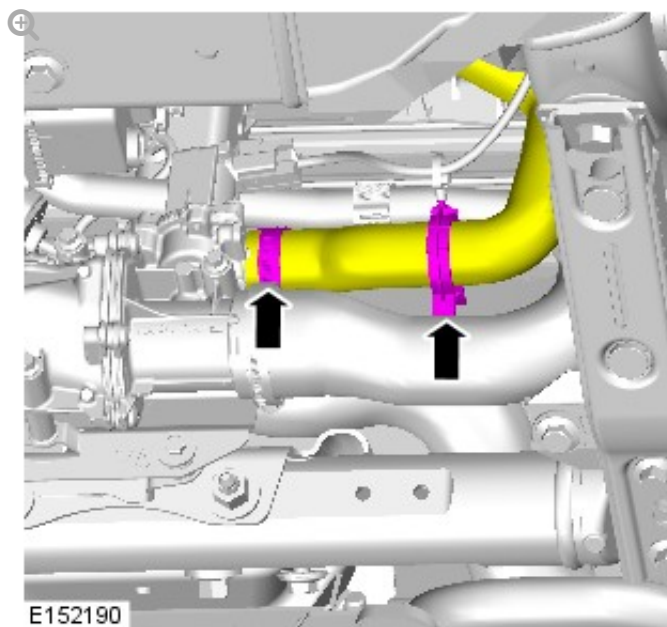


31.

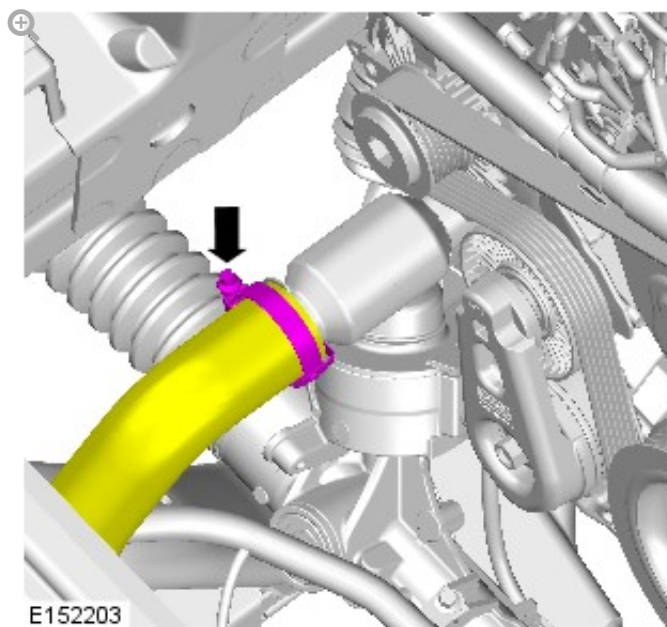


32.

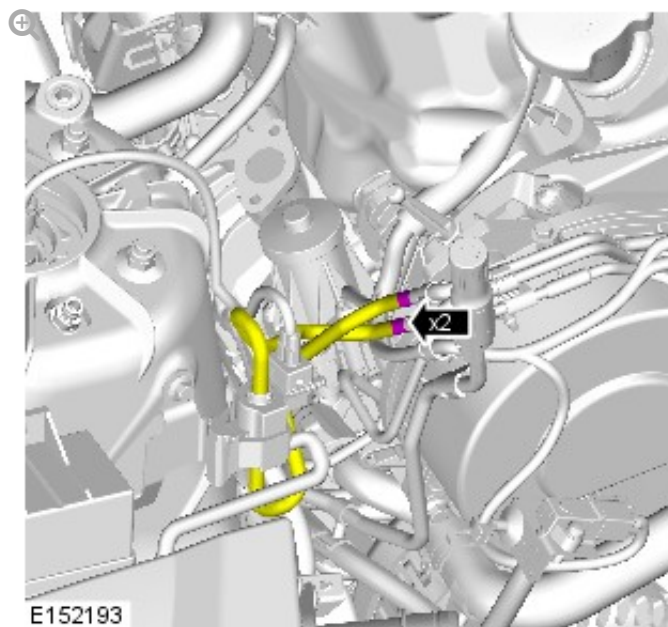

33.

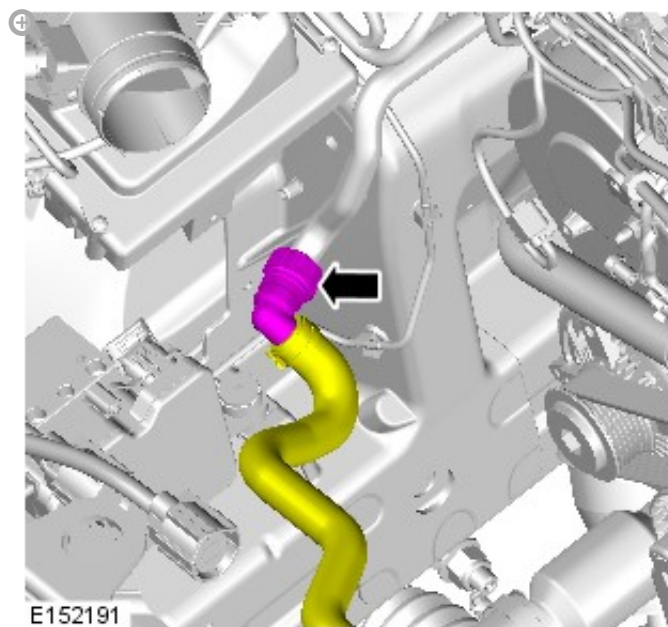


34.

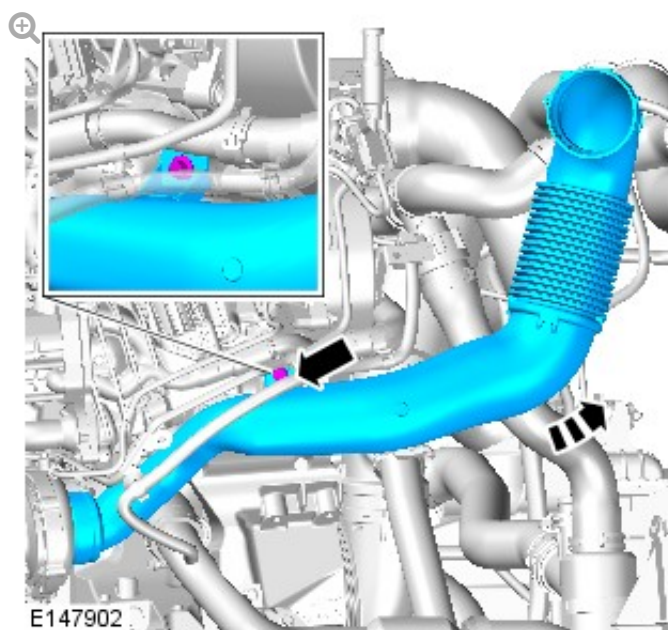


Torque: 10 Nm

35.

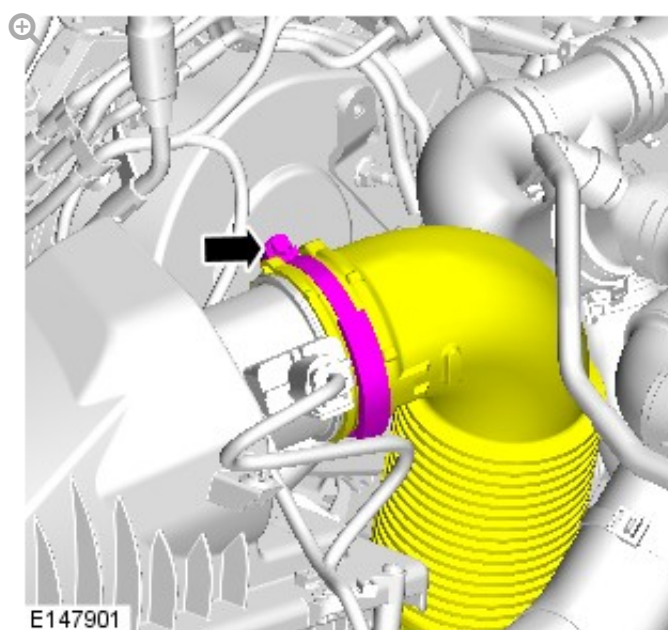


36.

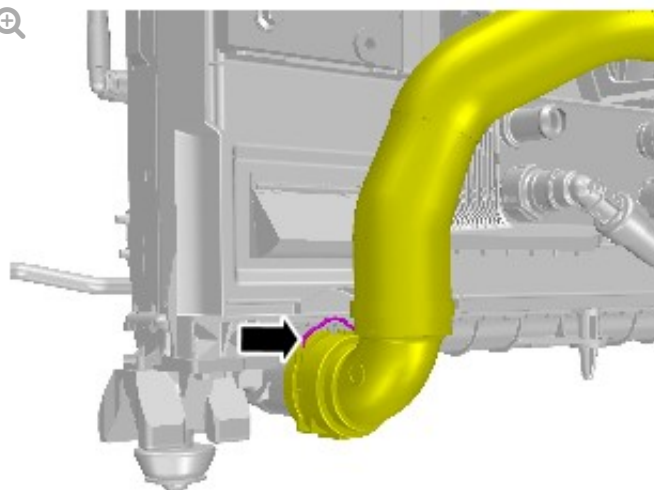


E159277

37.

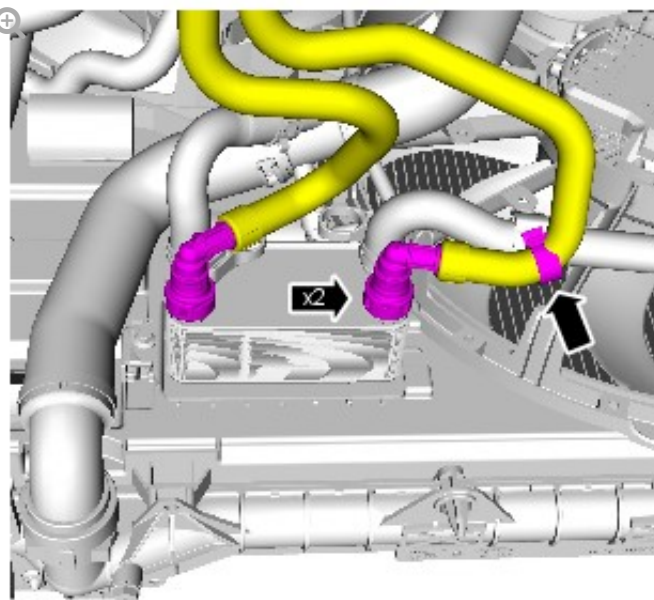


E147667

38.

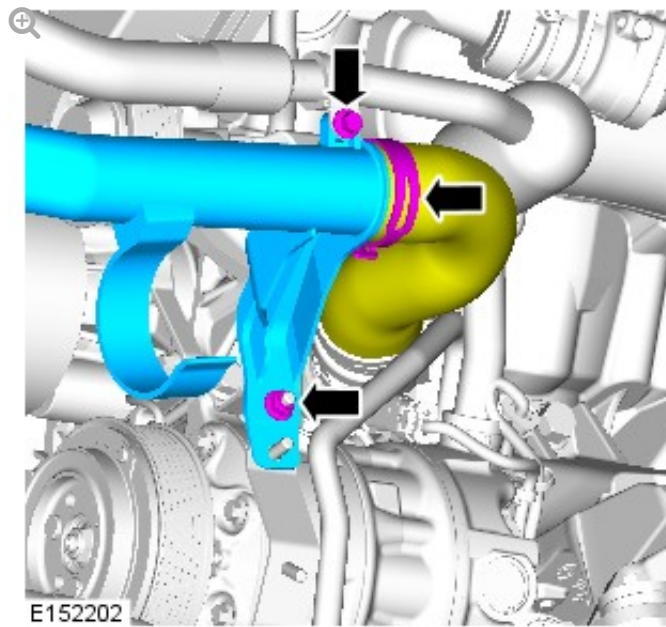


Torque: 6 Nm

39.

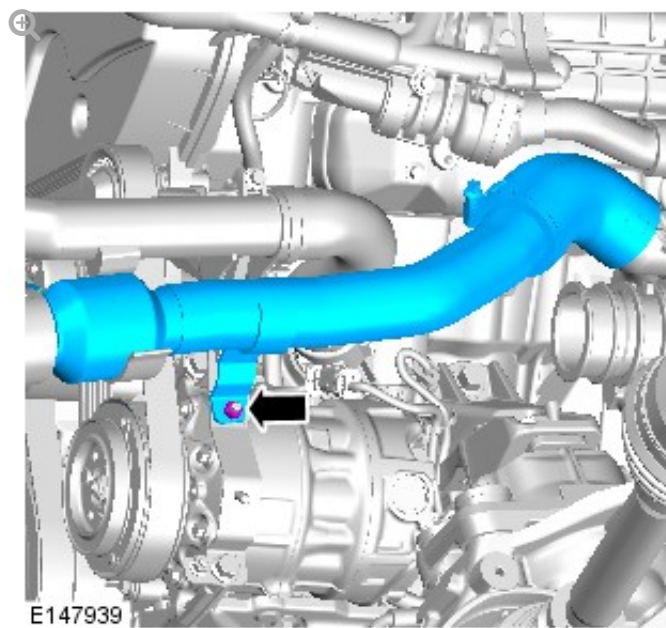


Torque: 6 Nm

40.

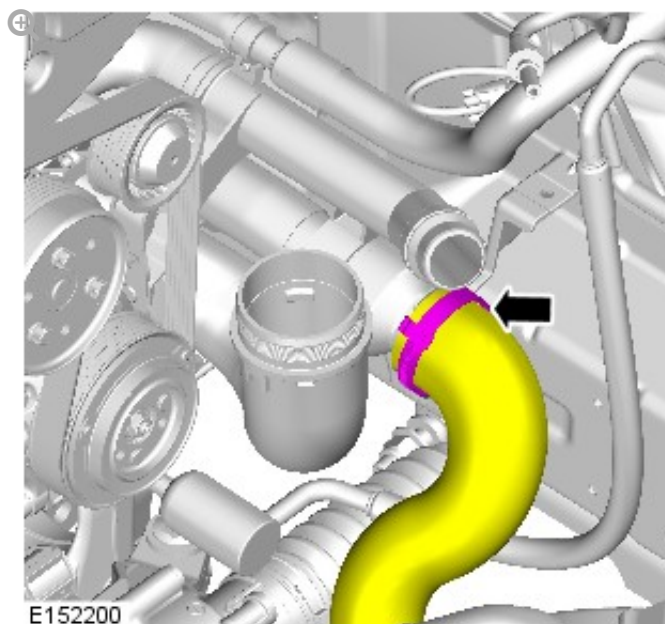


41.

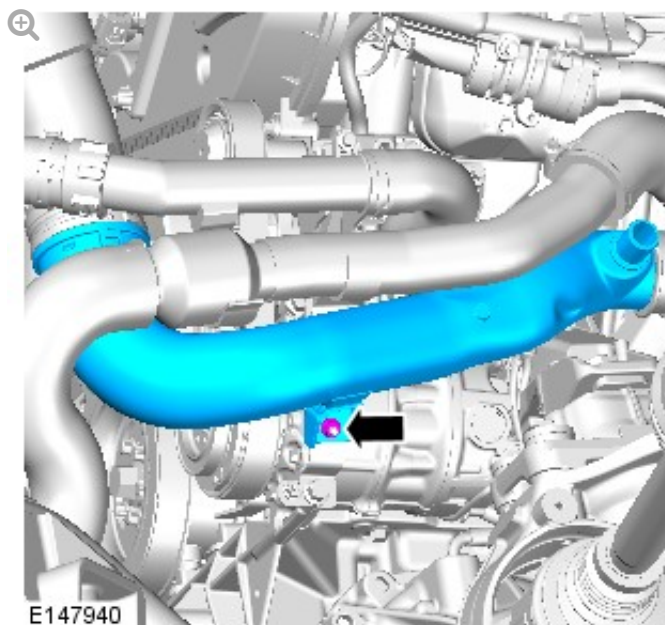


Torque: 6 Nm


42.

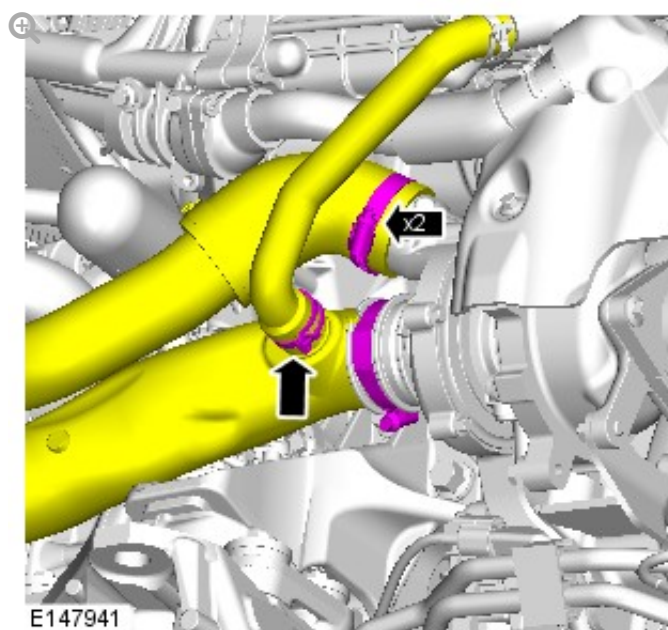

43.

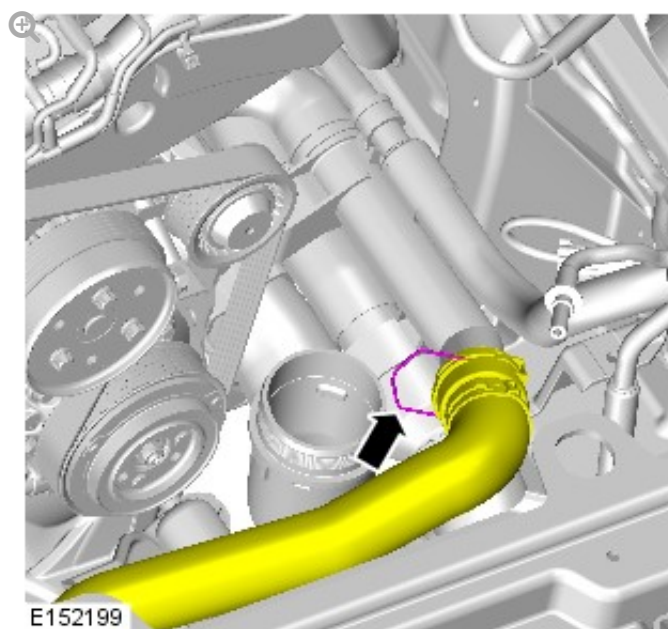


44.

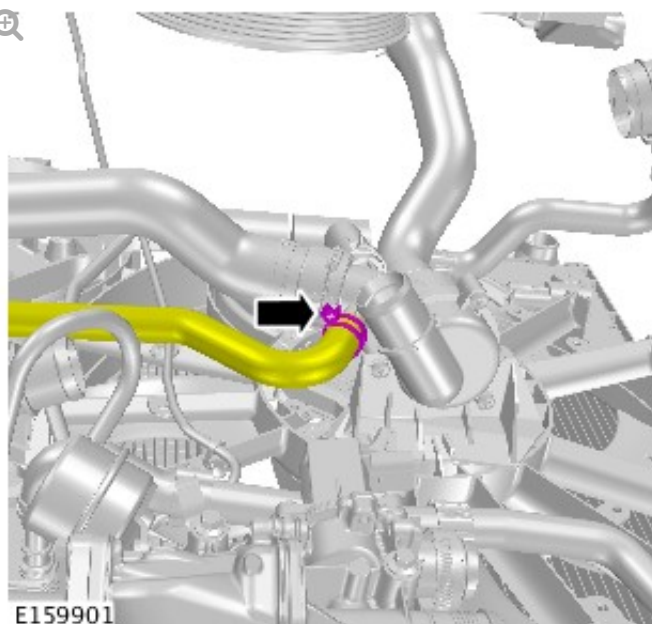


E159901

45.

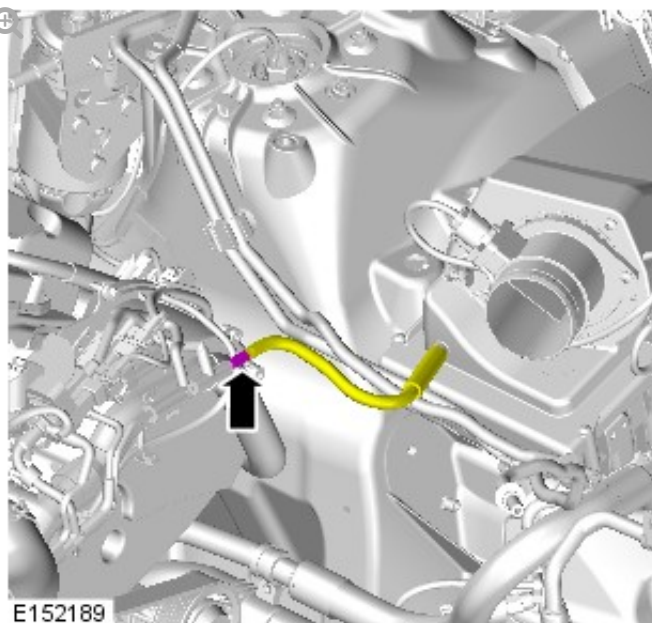


E152189

46.

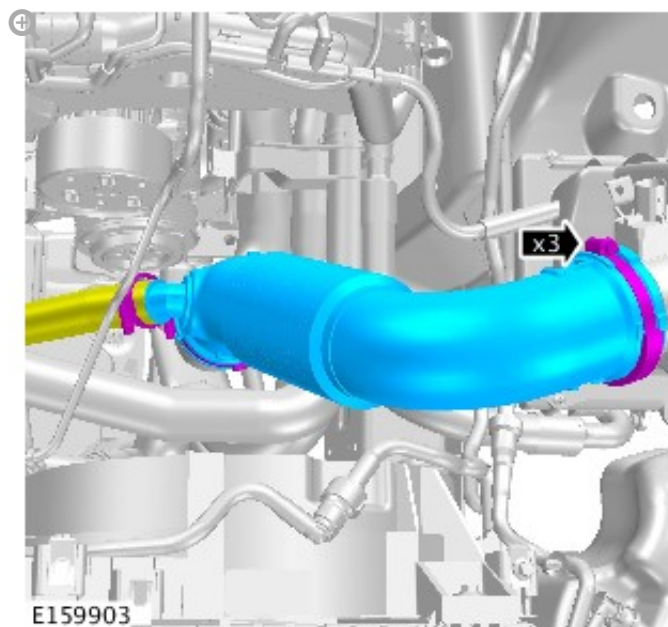


47.

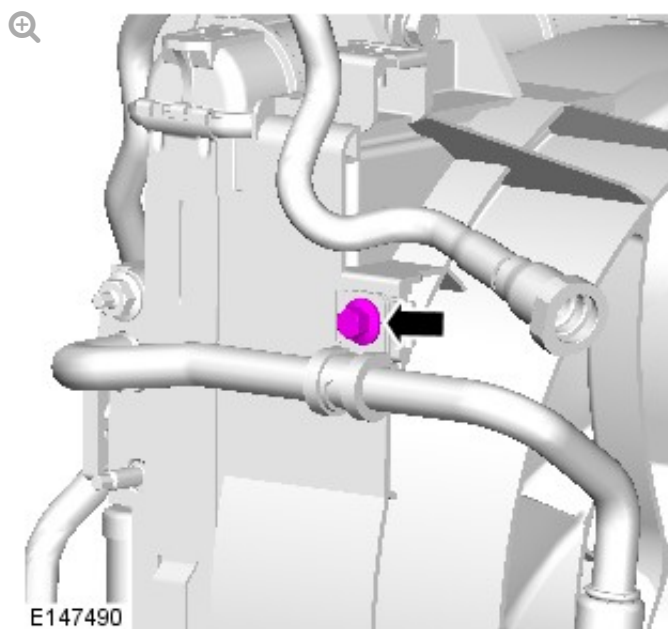


Torque: 10 Nm

48.

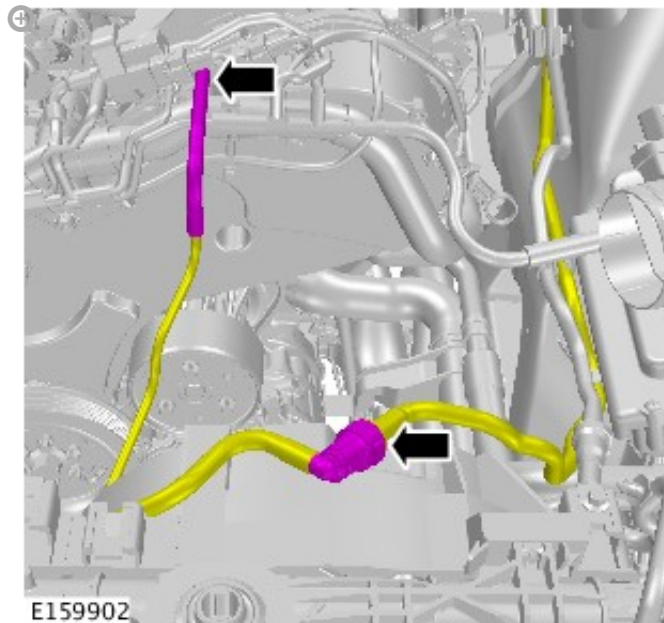

49.

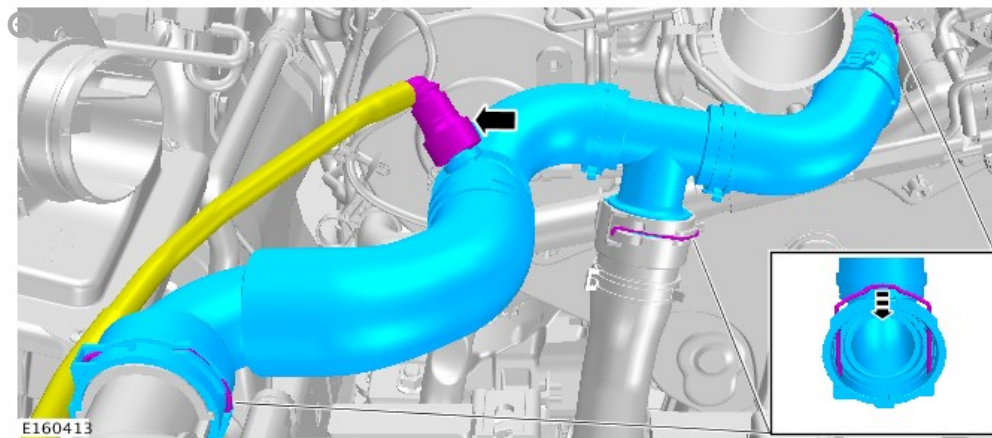

50. Refer to: [Intake Air Shutoff Throttle](#) (303-04A Fuel Charging and Controls - TDV6 3.0L Diesel, Removal and Installation).
51. Refer to: [Hood](#) (501-02 Front End Body Panels, Removal and Installation).
52. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).
53. Refer to: [Low-Pressure Fuel System Bleeding](#) (310-00 Fuel System - General Information, General Procedures).

