

2016.0 RANGE ROVER (LG), 303-01

ENGINE - TDV6 3.0L DIESEL - GEN 2/TDV6 3.0L DIESEL

ENGINE (G1509157)

REMOVAL

REMOVAL

SPECIAL TOOL(S)



303-021

Engine support
bracket



**303-
1141**

Engine lifting
kit



**303-1141-
01**

Engine lifting
bracket - Rear

CAUTION:

Make sure that all openings are sealed. Use new blanking caps.

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

1. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.


WARNING:

Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

3. Refer to: [Hood](#) (501-02 Front End Body Panels, Removal and Installation).
4. Refer to: [Cooling System Partial Draining, Filling and Bleeding](#) (303-03G Engine Cooling - SDV6 3.0L Diesel - Hybrid Electric Vehicle, General Procedures).
5. Refer to: [Intake Air Shutoff Throttle](#) (303-04A Fuel Charging and Controls - TDV6 3.0L Diesel, Removal and Installation).


6.

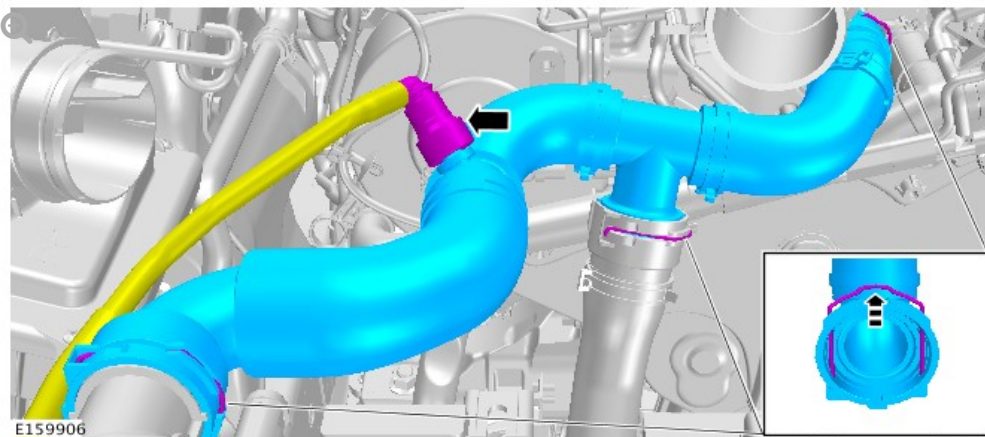


7.

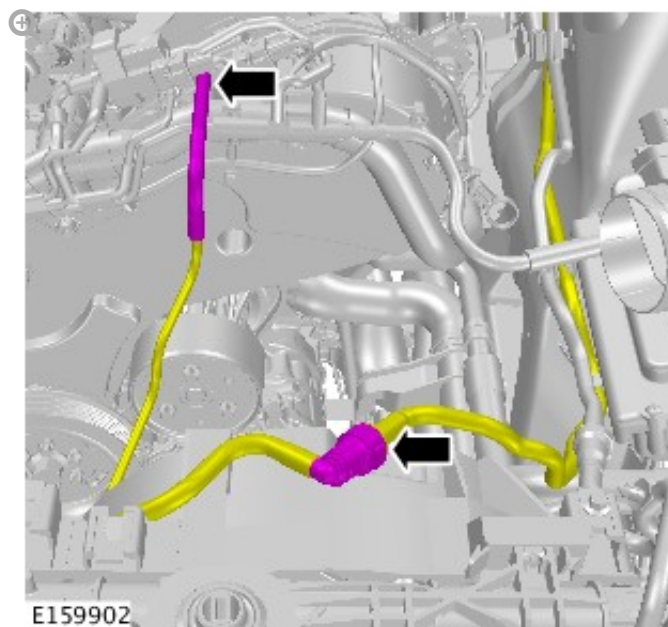


8.

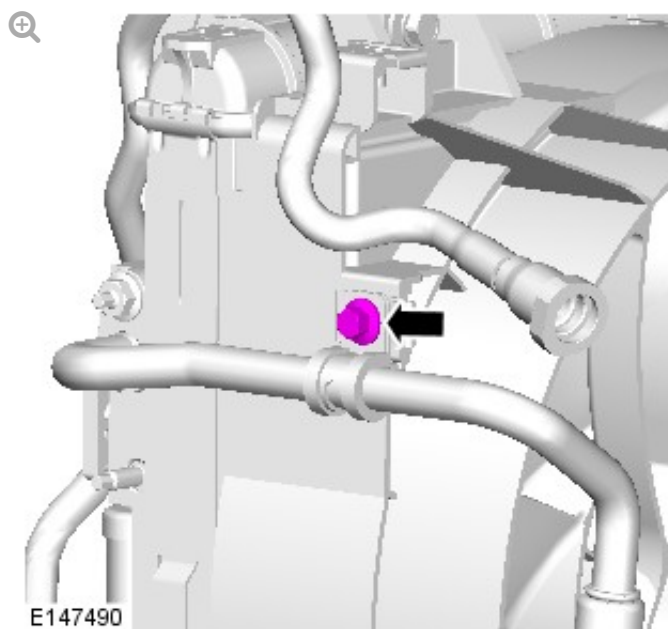


9.

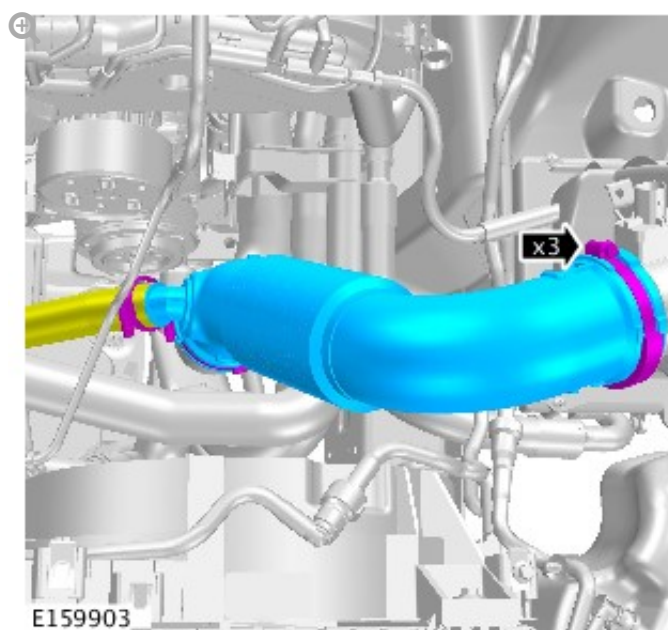

10.

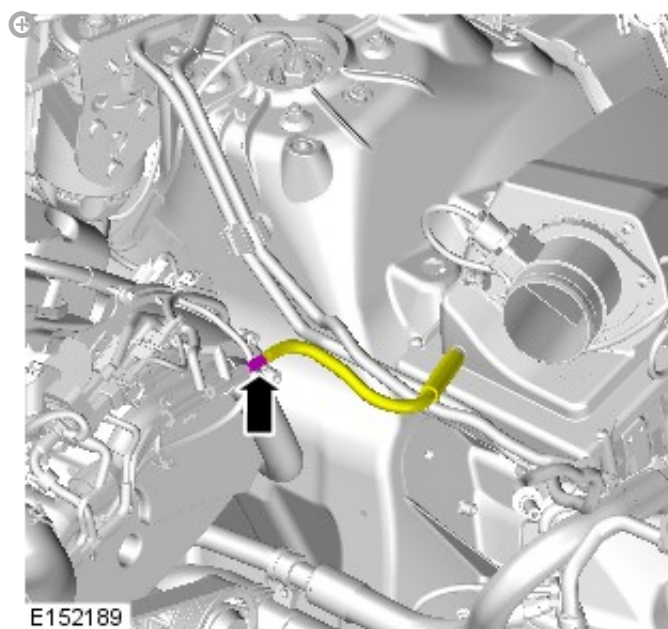


11.

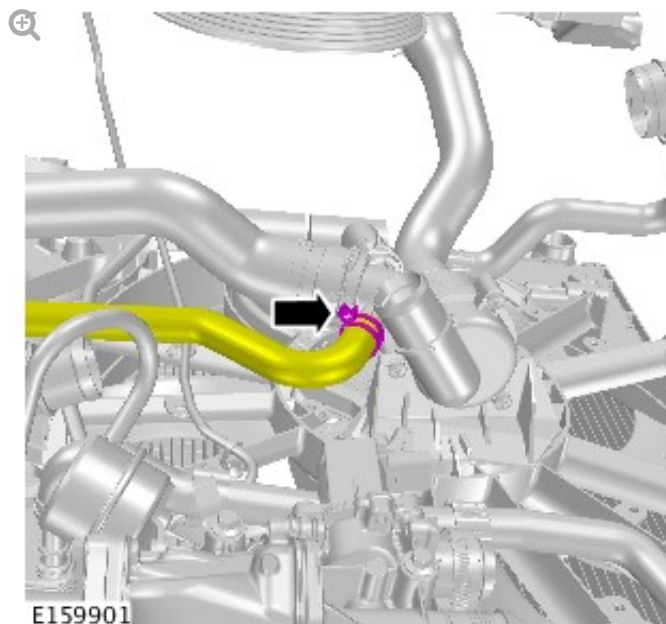


12.

CAUTION:


Be prepared to collect escaping coolant.

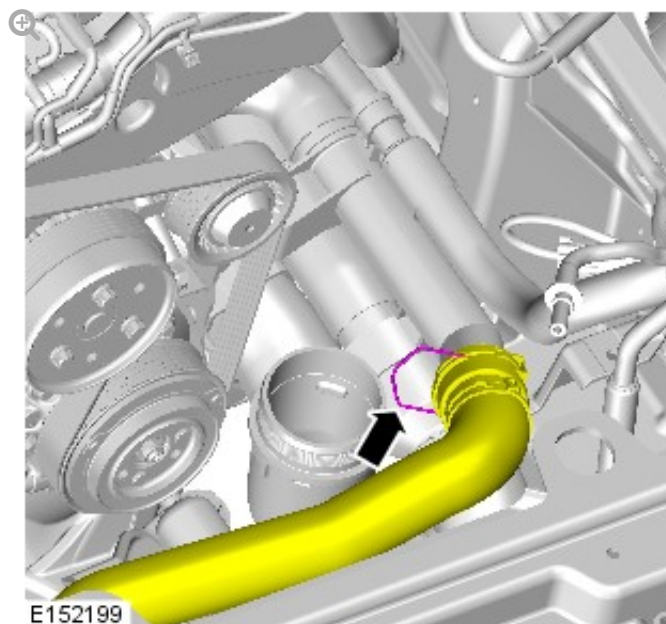


13.

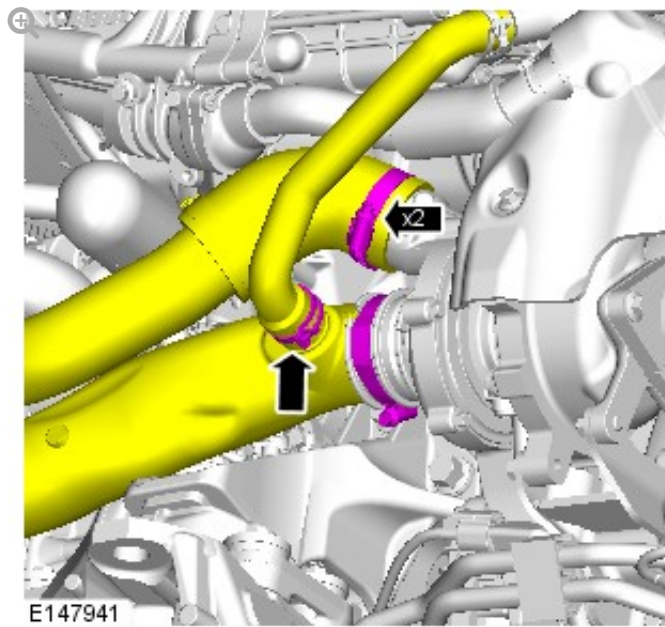


14.

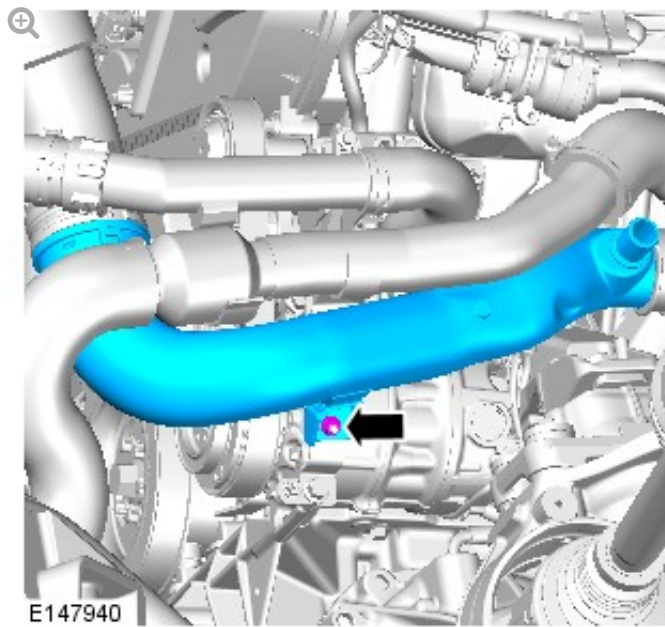

15.

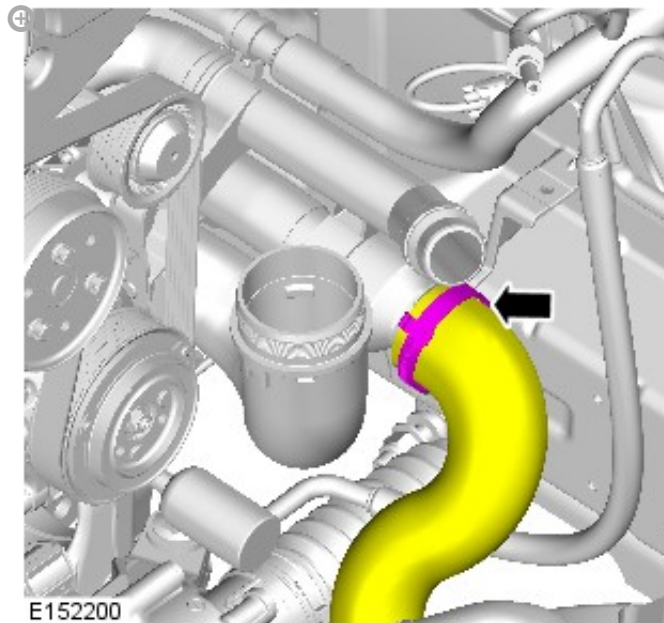


16.

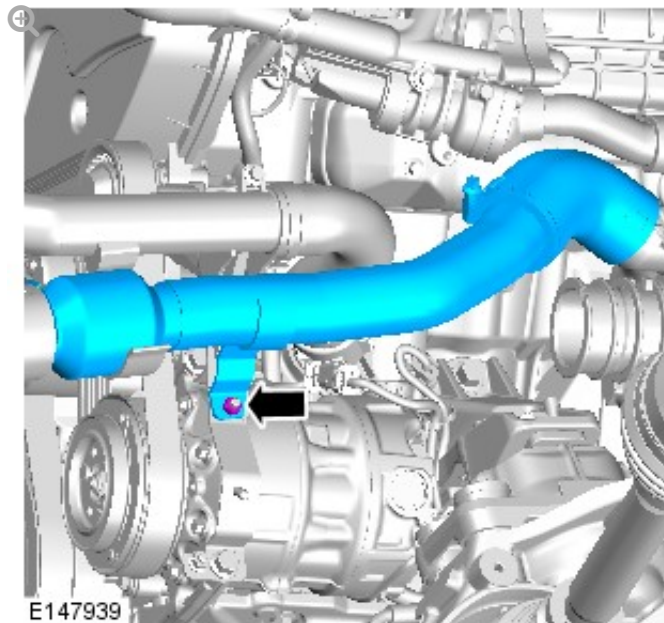

17.

CAUTION:


Be prepared to collect escaping coolant.

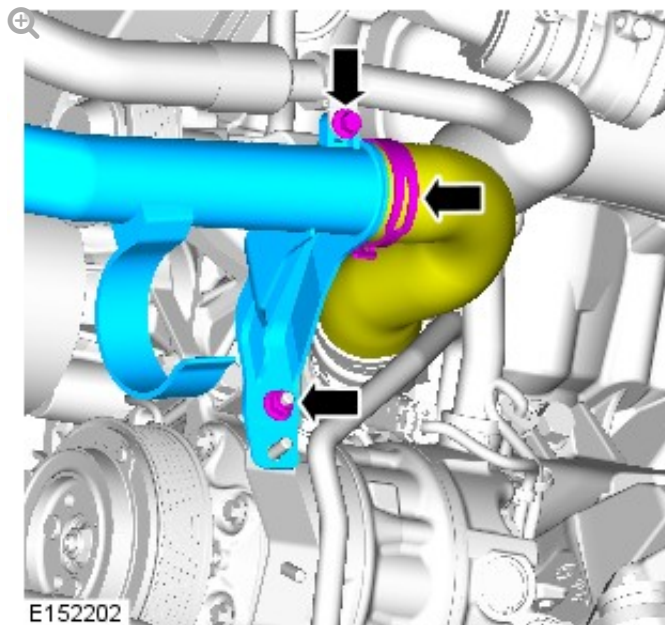

18.

CAUTIONS:


- Be prepared to collect escaping fluids.
- Before disconnecting or removing the components, make sure the area around the joint faces and connections are clean and dry. Plug open connections to prevent contamination.

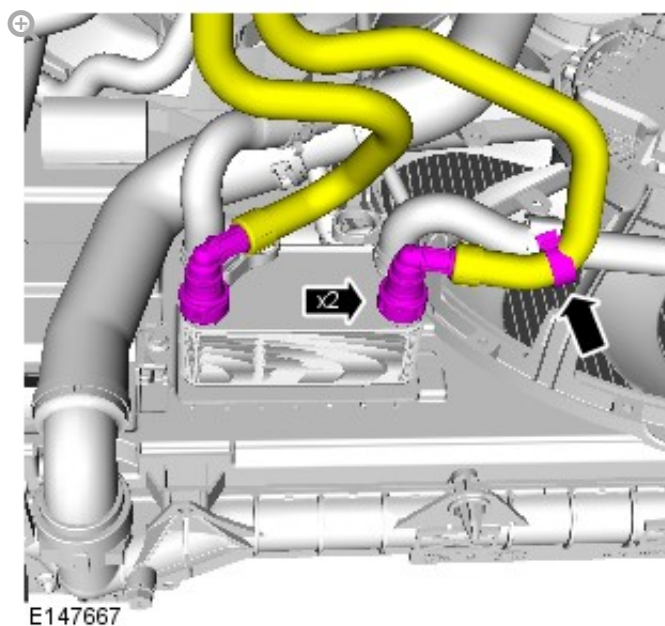

19.


CAUTION:

Be prepared to collect escaping coolant.

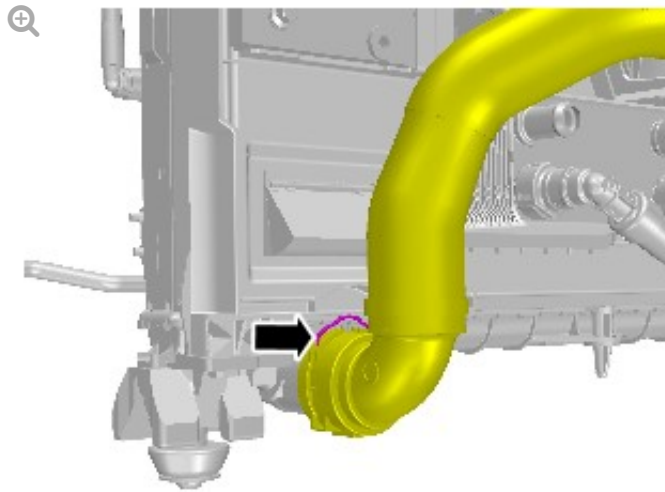


E159277

20.

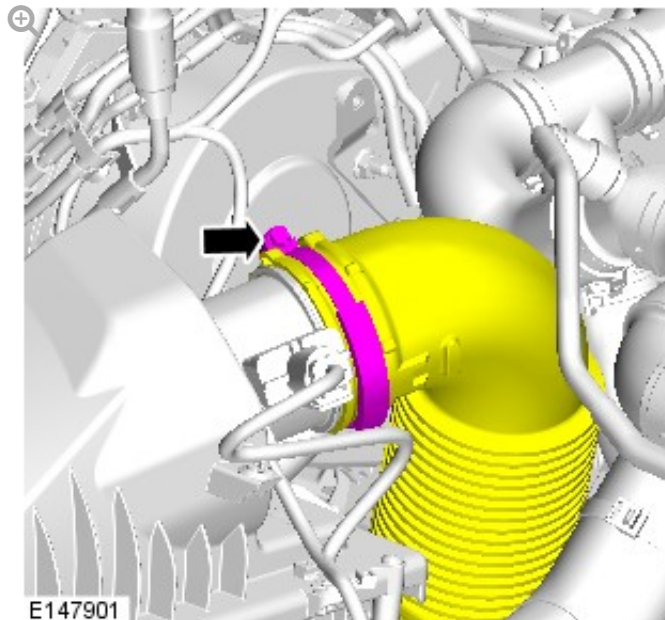


E147901


21.

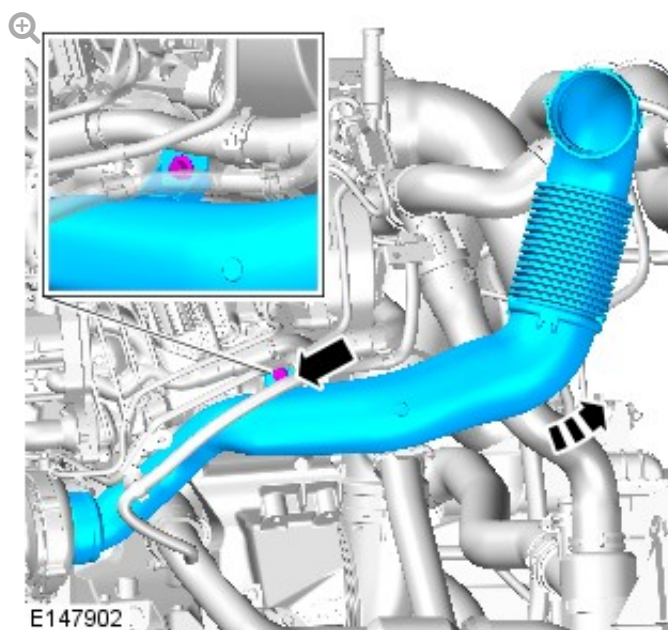


22.

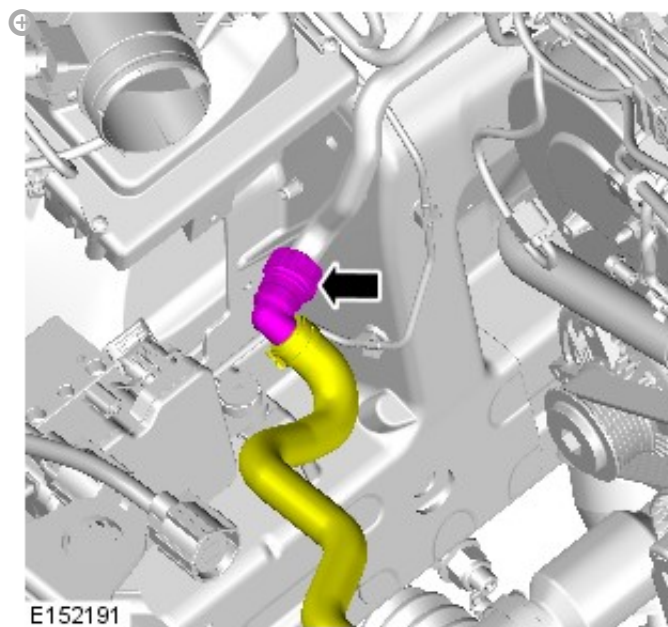


23.

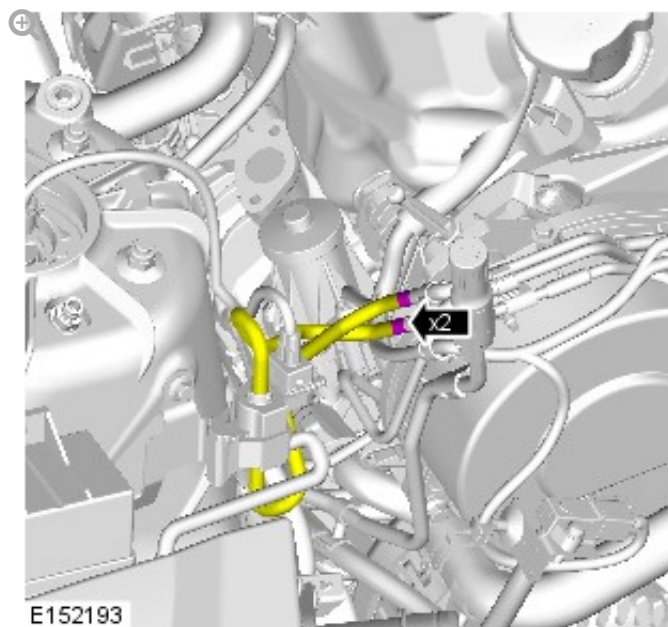

24.

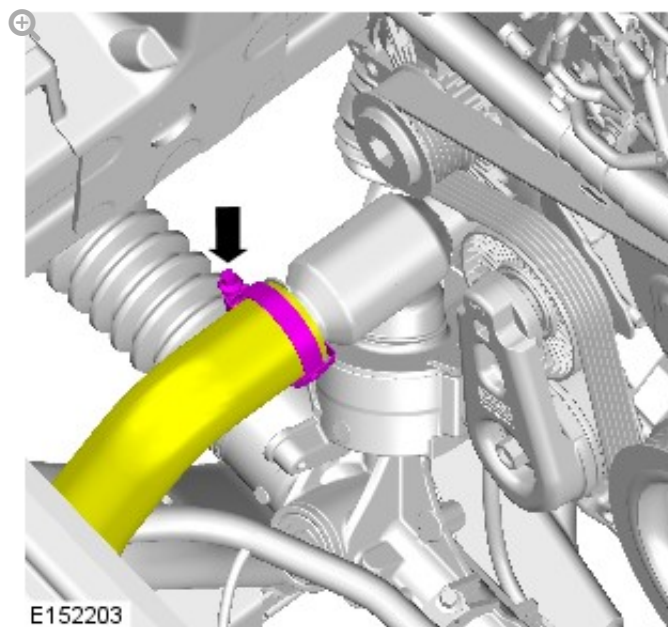


25.

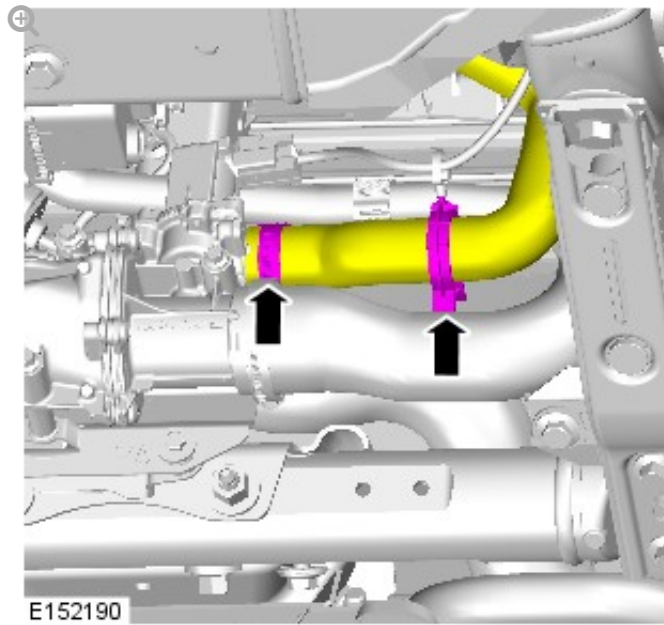


26.

CAUTION:


Be prepared to collect escaping coolant.

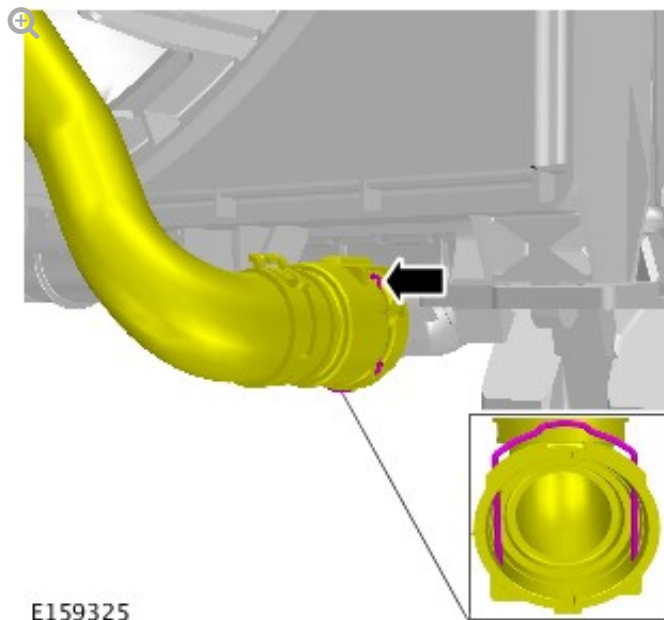

27.

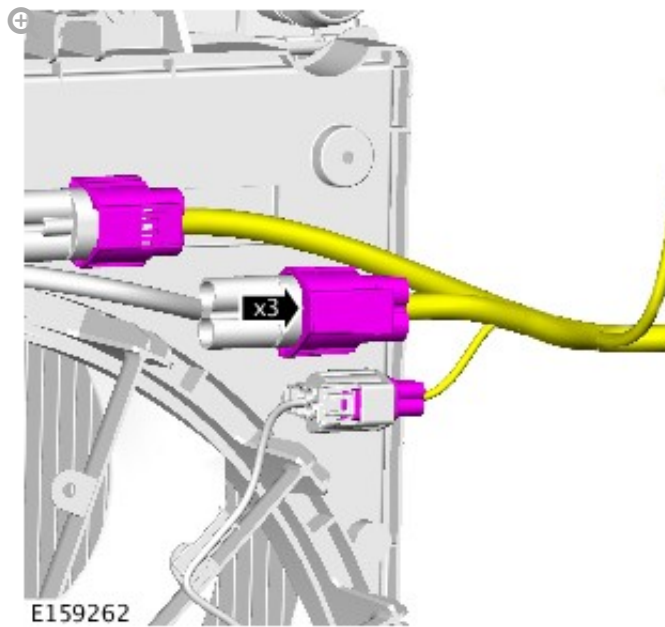


28.

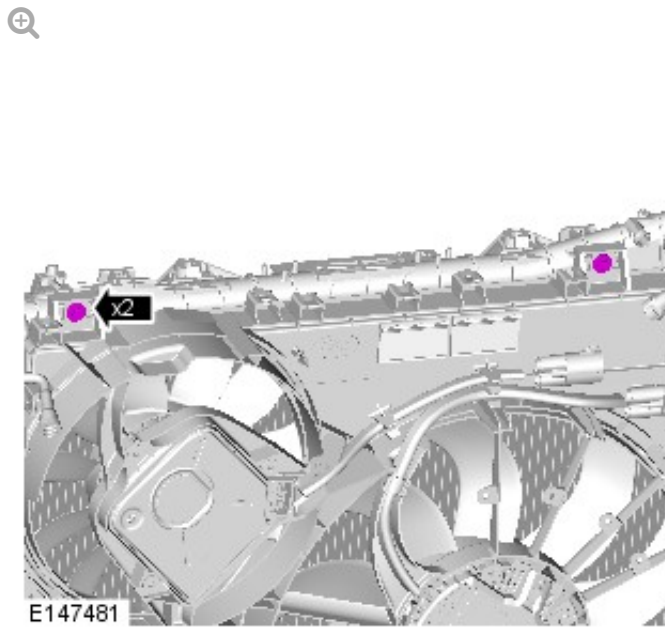

29.


CAUTION:

Take extra care not to damage the surrounding components.

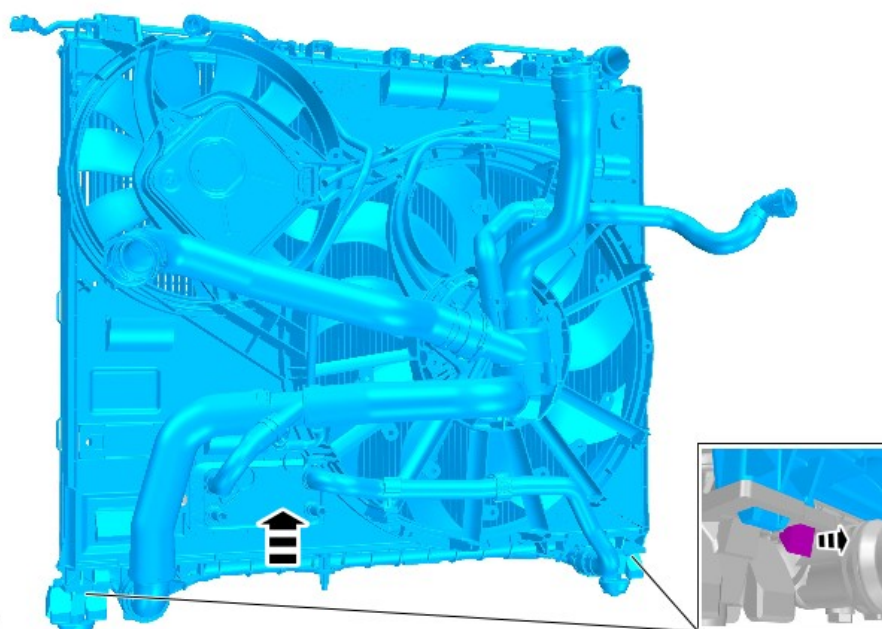


E159900

30.

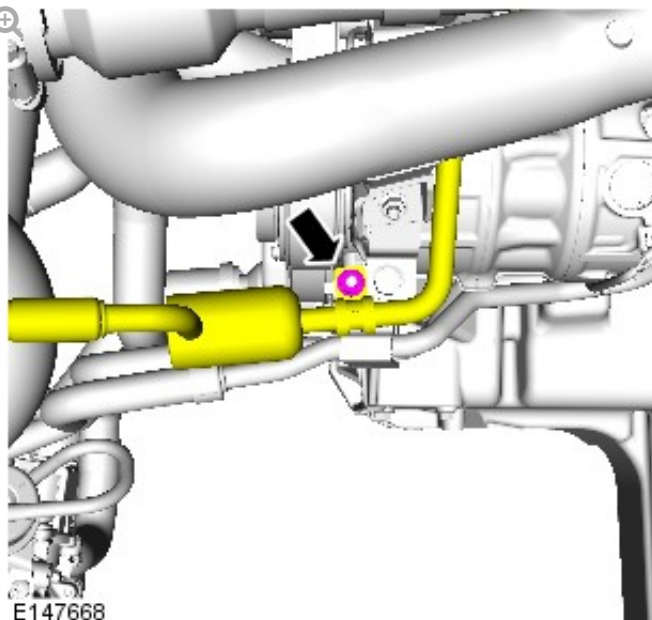


E147668

31.

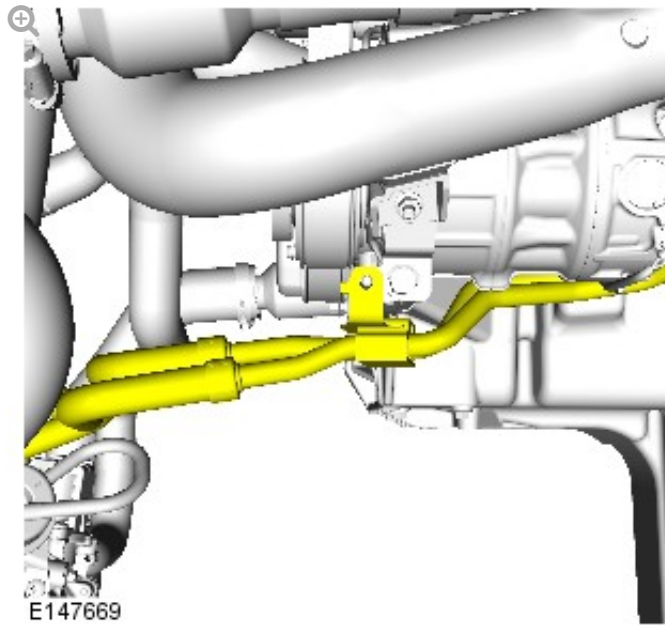


32.

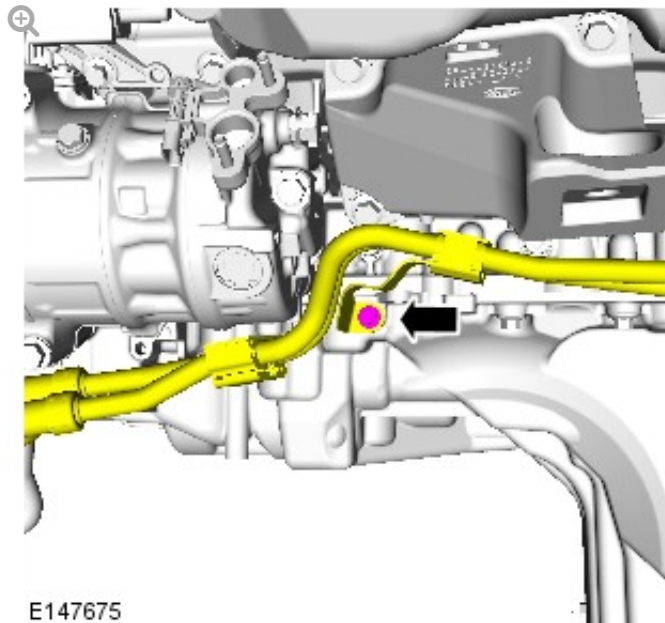


33. Refer to: [Accessory Drive Belt](#) (303-05A Accessory Drive - TDV6 3.0L Diesel, Removal and Installation).

34.

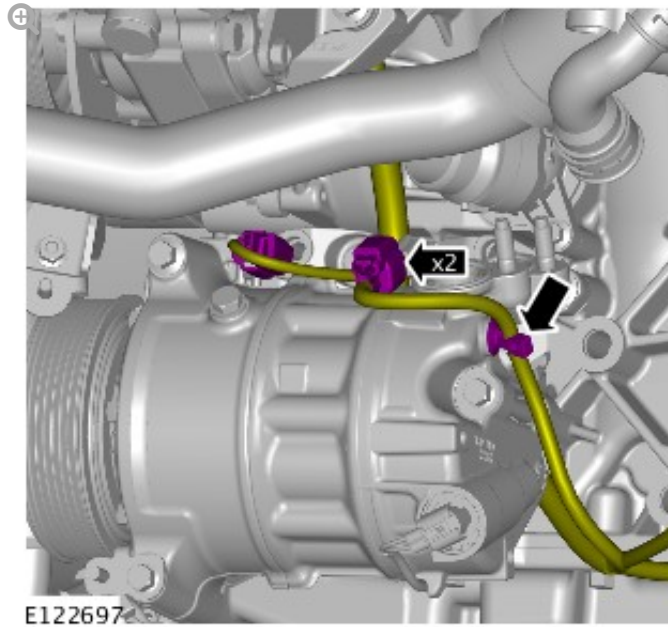

35.

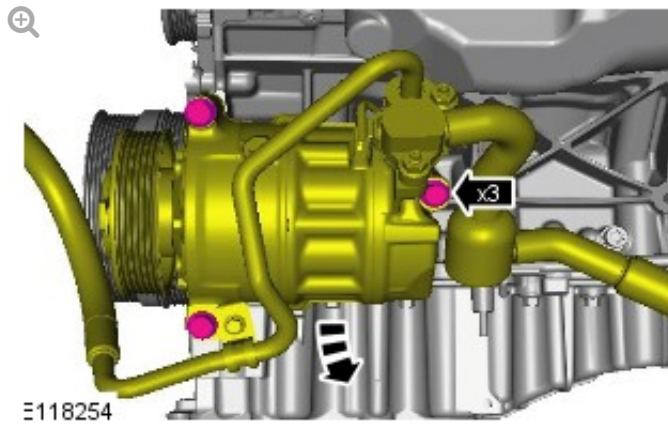


36.

CAUTION:

Discard the bolt.

NOTE:

RHD shown, LHD is similar.

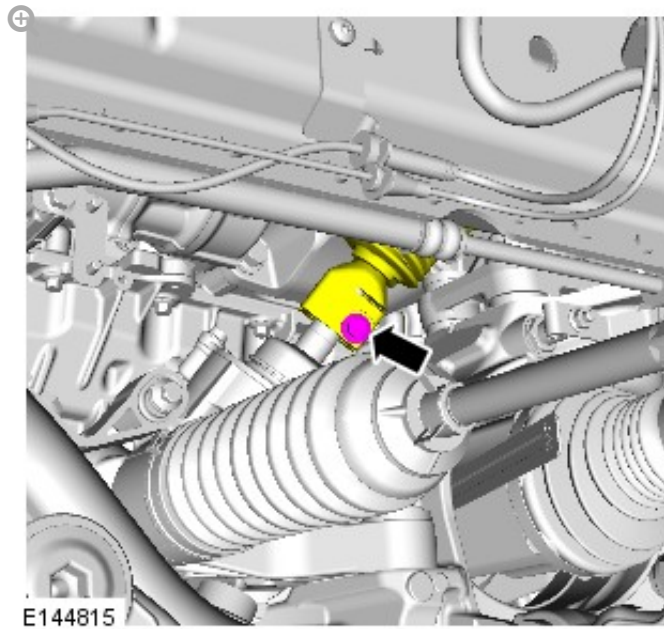


Align the steering wheel to straight ahead.

37. Refer to: [Secondary Bulkhead Centre Panel - TDV6 3.0L Diesel](#) (501-02 Front End Body Panels, Removal and Installation).


38.

CAUTION:


Be prepared to collect escaping coolant.

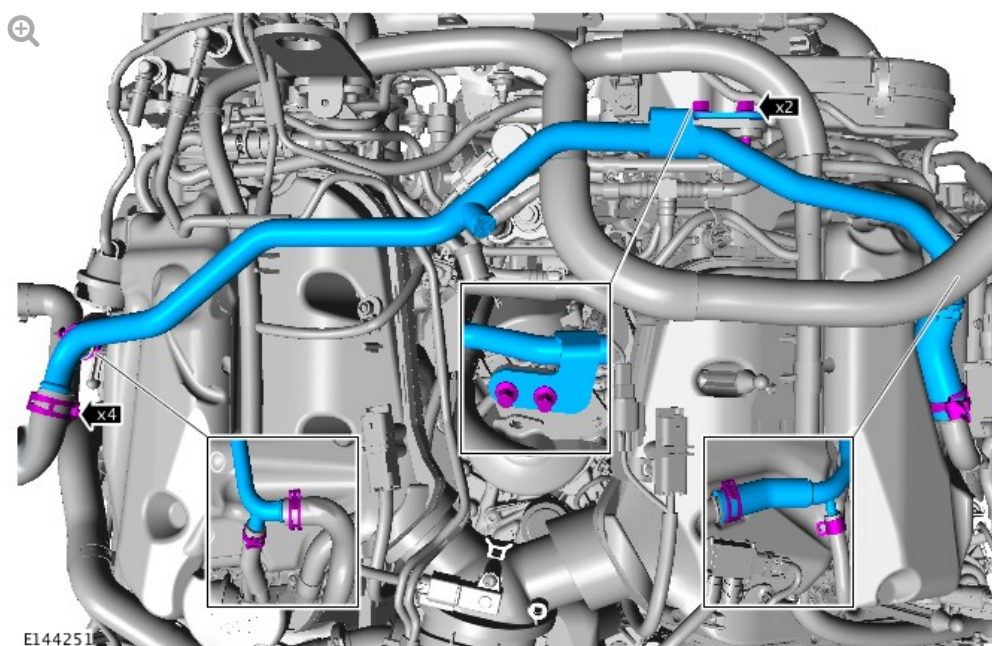

39.

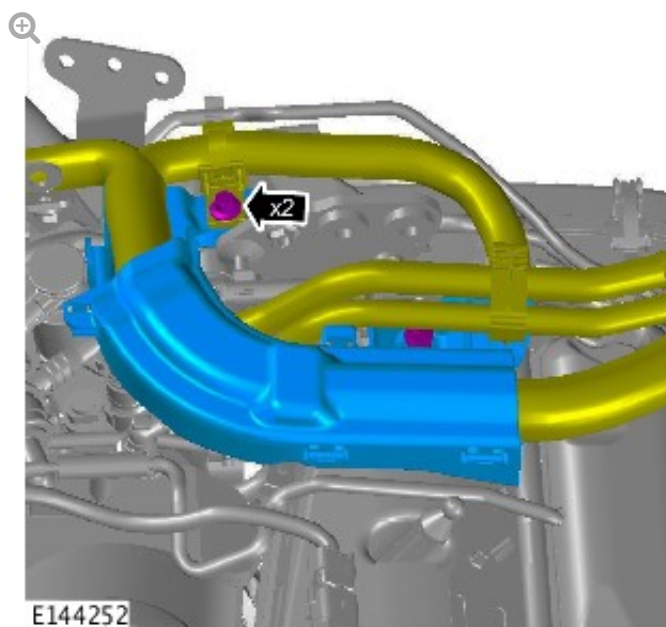


40.

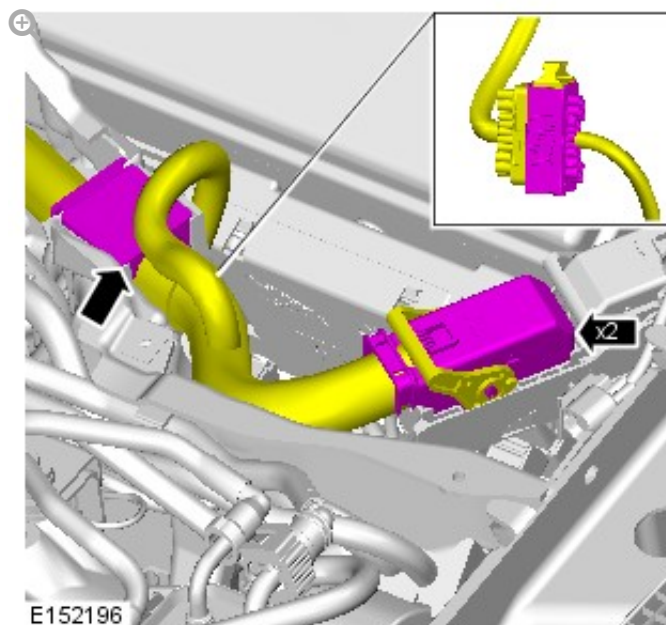


41.

CAUTION:


Be prepared to collect escaping fuel.

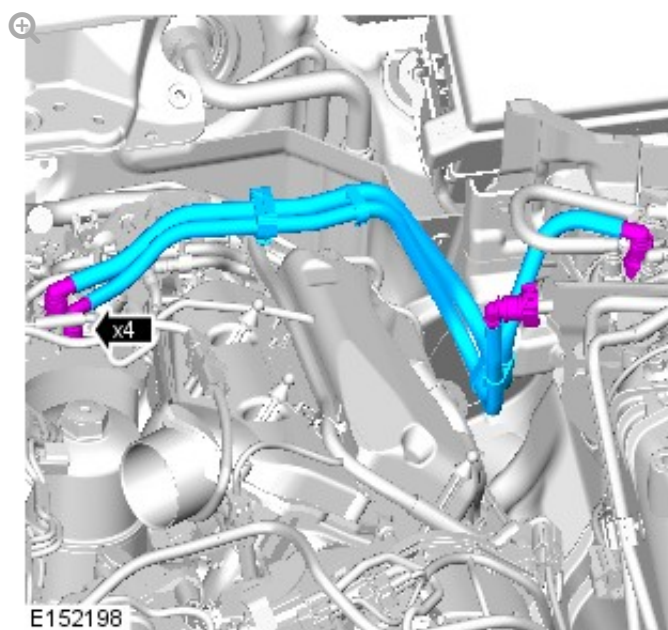


42.

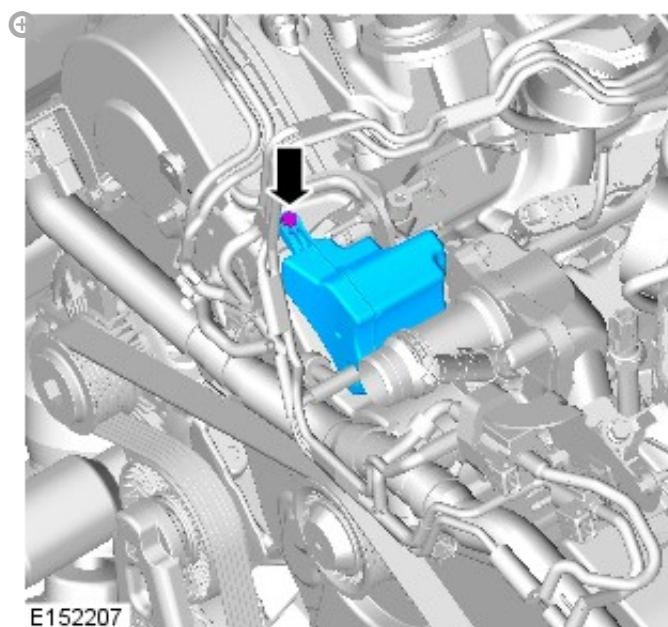


43.

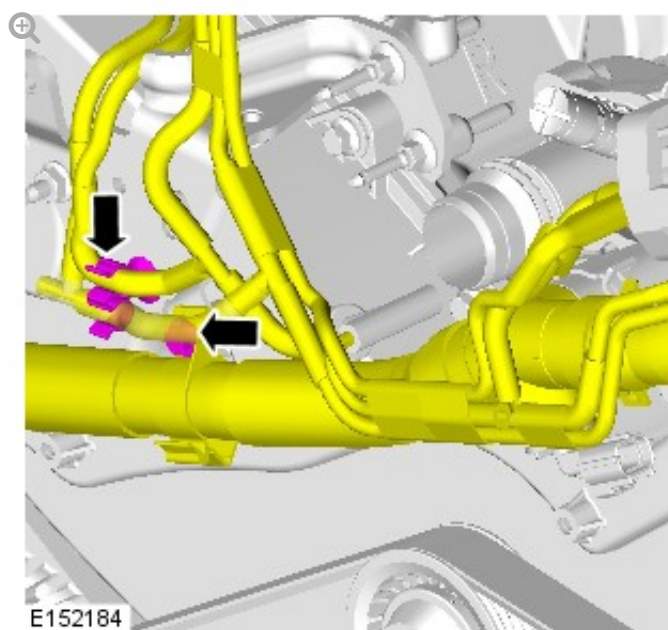


44.

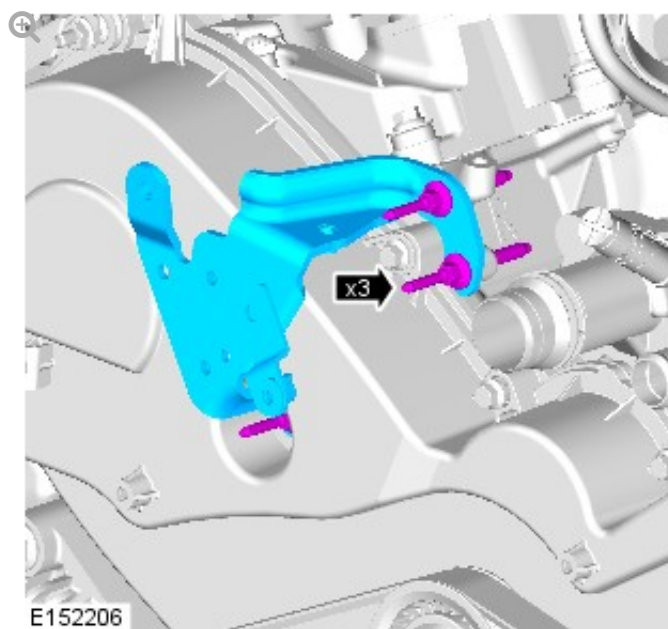

45.

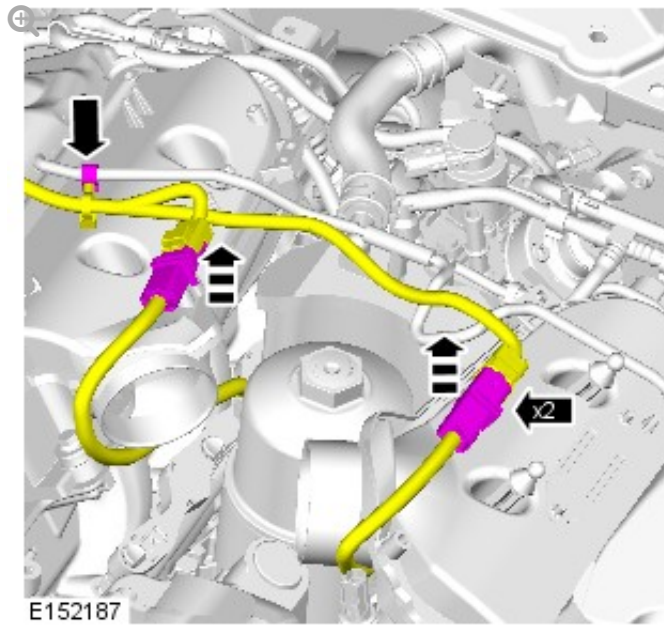


46.

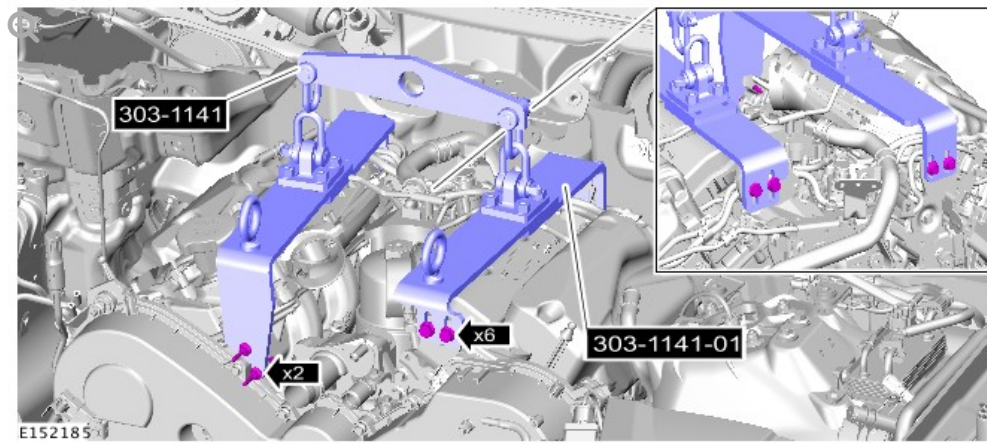


Special Tool(s): 303-1141, 303-1141-01

47.

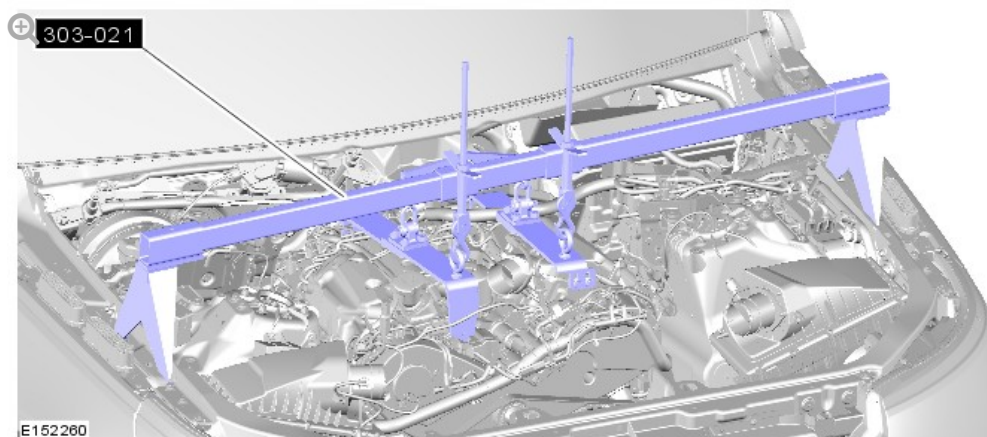


- Install the special tool.

48.

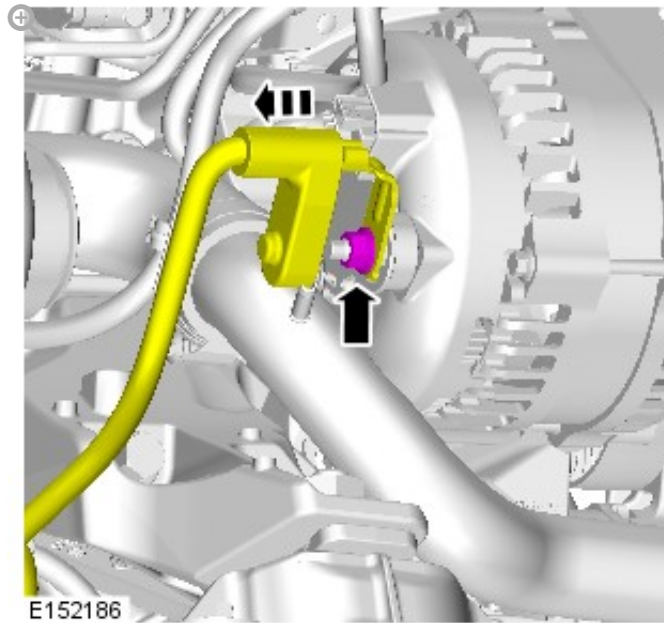


49. Refer to: [Transmission - TDV6 3.0L Diesel](#) (307-01B Automatic Transmission/Transaxle - Vehicles With: 8HP70 8-Speed Automatic Transmission AWD, Removal).


50.

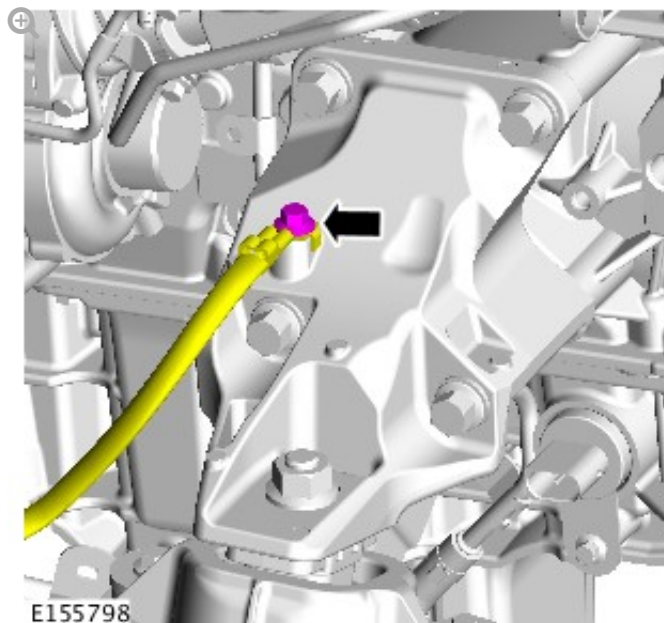


51.

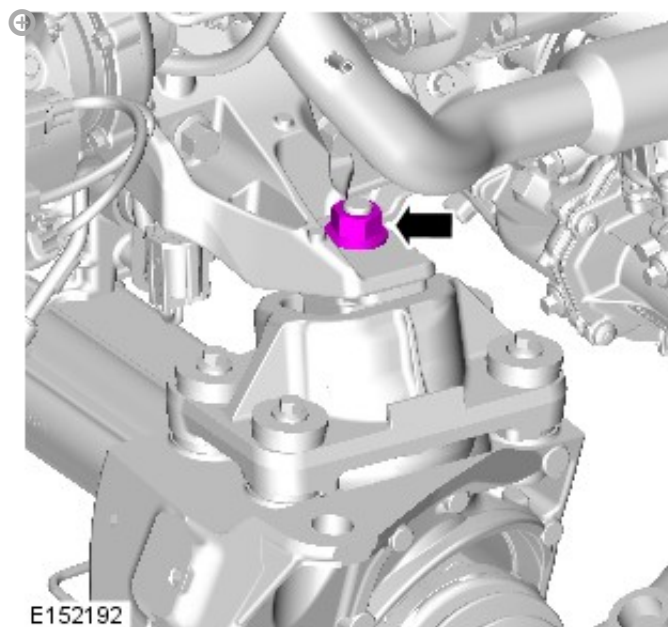

52.

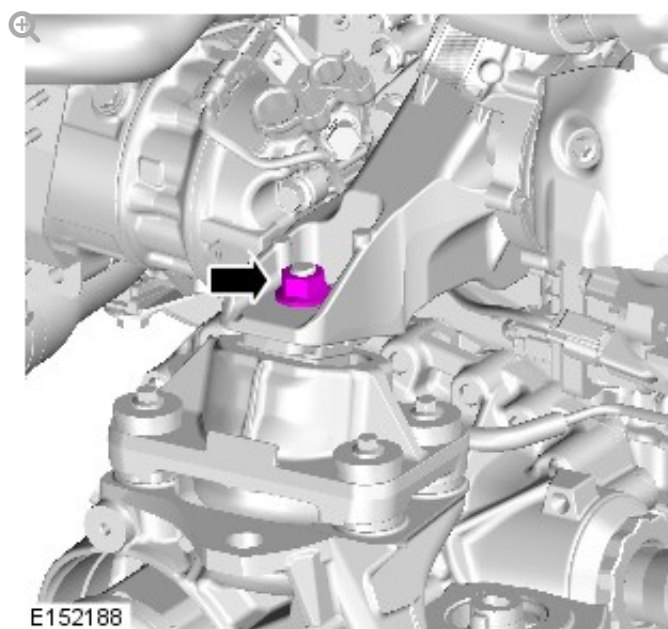

53.

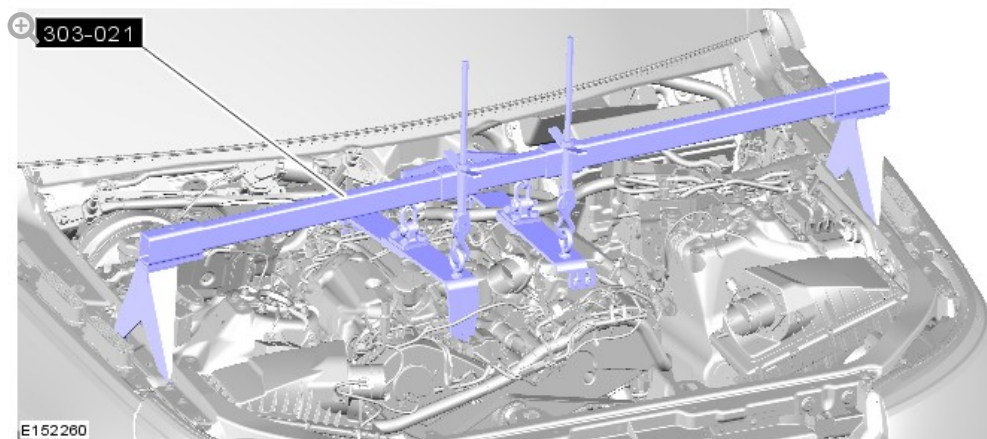

- Remove the special tool.

Special Tool(s): [303-021](#)


54.

WARNING:

This step requires the aid of another technician.

CAUTION:

Be prepared to collect escaping fluids.

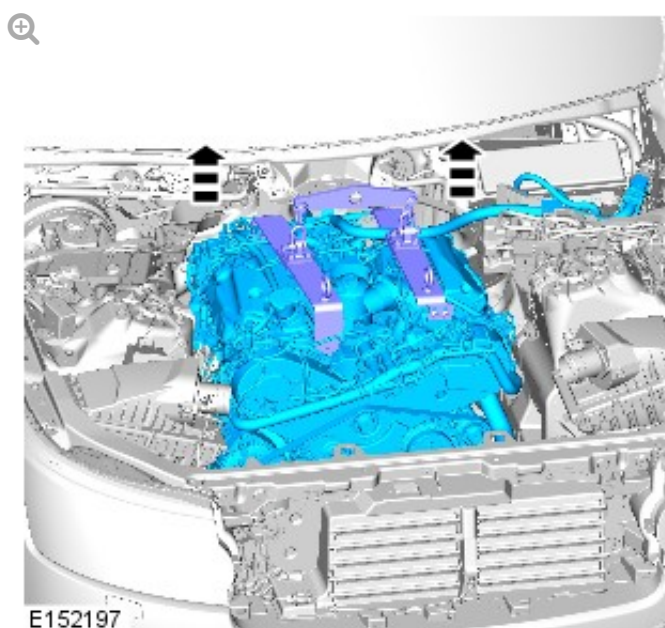

Carefully and progressively raise and remove the engine.