

2016.0 RANGE ROVER (LG), 303-01

ENGINE - TDV6 3.0L DIESEL - GEN 2/TDV6 3.0L DIESEL

FLEXPLATE [G1509148]

REMOVAL AND INSTALLATION

SPECIAL TOOL(S)



303-1123

E 54546

303-1123

Locking Tool,
Flywheel

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 1	Renew Part	Flywheel bolts

REMOVAL

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

1. Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

- 2.


WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3. Refer to: [Starter Motor](#) (303-06A Starting System - TDV6 3.0L Diesel, Removal and Installation).
4. Refer to: [Transmission - TDV6 3.0L Diesel](#) (307-01B Automatic Transmission/Transaxle - Vehicles With: 8HP70 8-Speed Automatic Transmission AWD, Removal).

5.

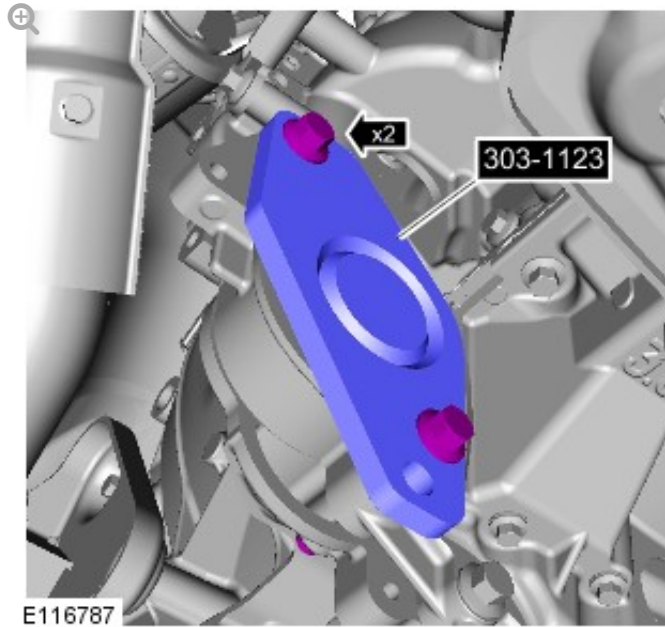

- Install the special tool.
- *Special Tool(s):* 303-1123

6.

CAUTION:

Discard the bolts.

NOTE:

Prevent the flexplate from rotating.



INSTALLATION

1.

CAUTION:

Make sure that new bolts are installed.

NOTES:

- Make sure that all the component mating faces are clean.
- Loosely install all retaining bolts.




- Prevent the flexplate from rotating.
Renew Part: [Flywheel bolts](#).

2.


CAUTION:

Tighten the bolts evenly in the stages shown.

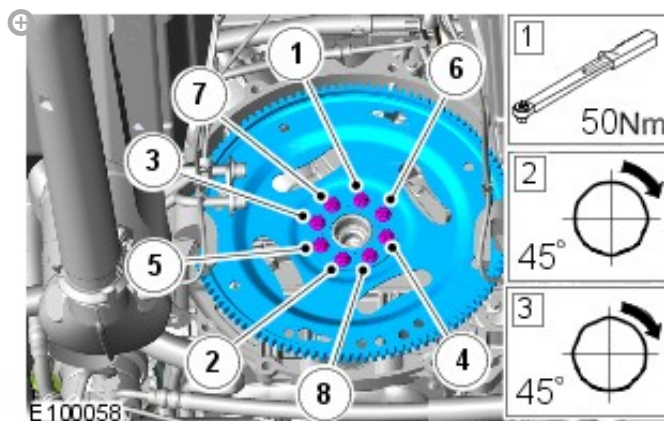

- Stage 1: Tighten to 50 Nm.
- Stage 2: Tighten to 45 degrees.
- Stage 3: Tighten to 45 degrees.

3.

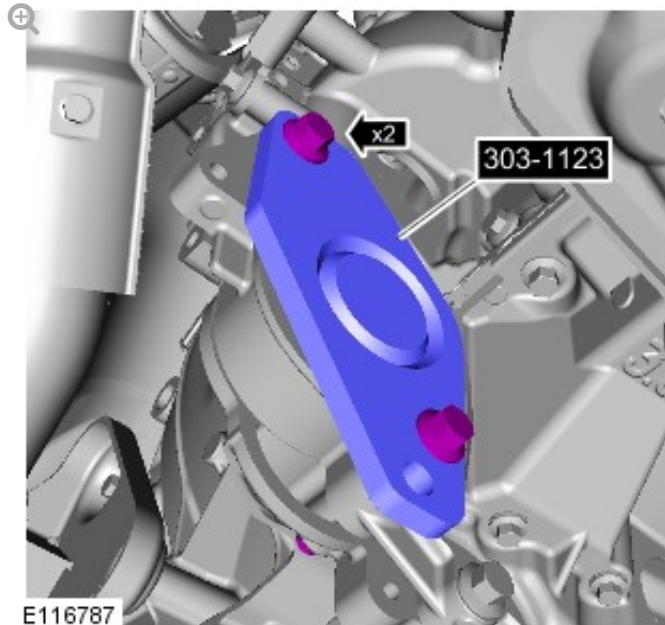

- Remove the special tool.
 - *Special Tool(s):* [303-1123](#)
4. Refer to: [Transmission - TDV6 3.0L Diesel](#) (307-01B Automatic Transmission/Transaxle - Vehicles With: 8HP70 8-Speed Automatic Transmission AWD, Installation).
5. Refer to: [Starter Motor](#) (303-06A Starting System - TDV6 3.0L Diesel, Removal and Installation).
6. Connect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).