

2016.0 RANGE ROVER (LG), 303-01

ENGINE - TDV6 3.0L DIESEL - GEN 2/TDV6 3.0L DIESEL

LEFT CYLINDER HEAD (G1509142)

REMOVAL AND INSTALLATION

12.29.04	CYLINDER HEAD - ASSEMBLY - LEFT/ONE ONLY - RENEW	3000 CC, TDV6, DIESEL, WITH PARTICULATE FILTER, WITH DIESEL EXHAUST FLUID	15.4	USED WITHINS	+
----------	--	---	------	--------------	---

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 2	Renew Part	Cylinder head gasket
Installation Step 2	Renew Part	Cylinder head bolts
Installation Step 6	Renew Part	Water outlet connection O-ring seals

REMOVAL

1. Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.


WARNING:

Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

3. Refer to: [Left Camshaft](#) (303-01A Engine - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).
4. Refer to: [Glow Plugs](#) (303-07C Glow Plug System - TDV6 3.0L Diesel, Removal and Installation).
5. Refer to: [Left Exhaust Manifold](#) (303-01A Engine - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).


6.

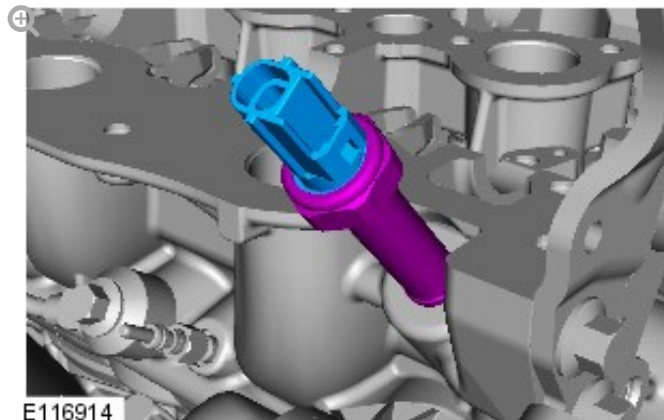

7.

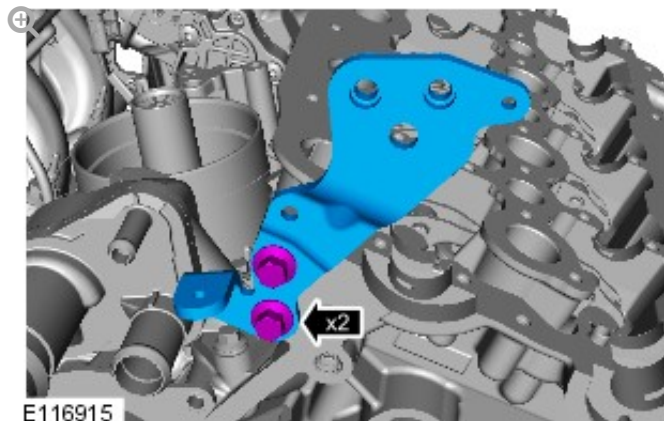


8.

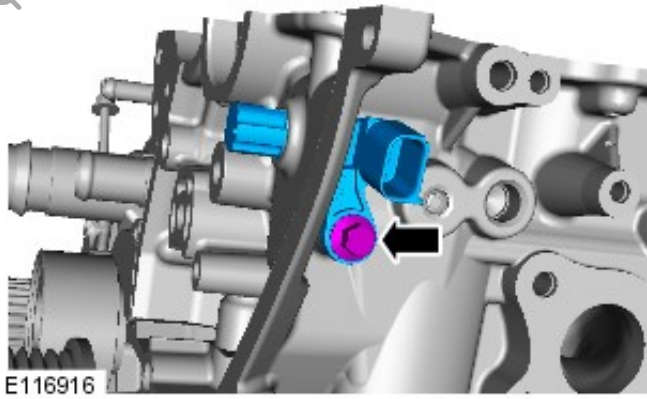


E116916

9.

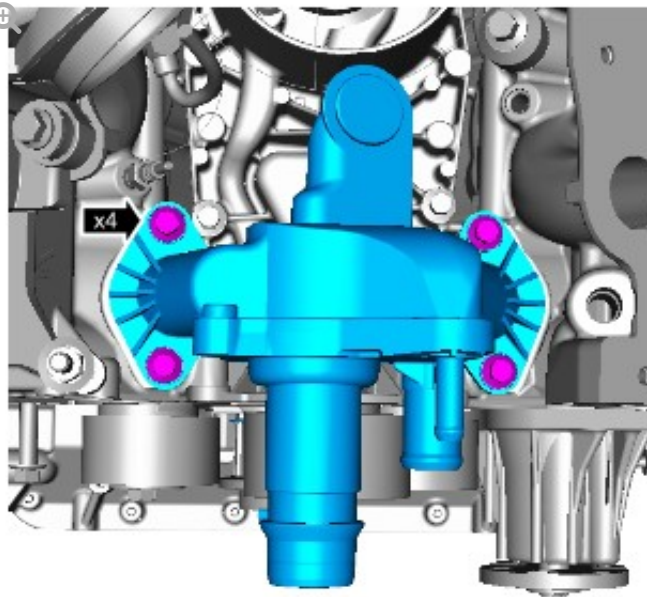

E116917

10.

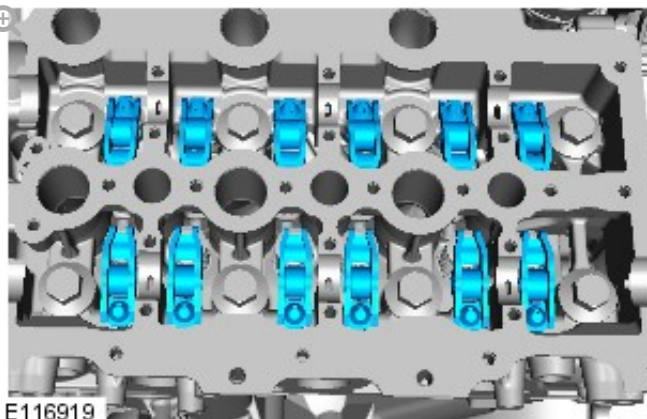

E116919


11.

CAUTION:

Discard the bolts.

NOTE:

Discard the gasket.

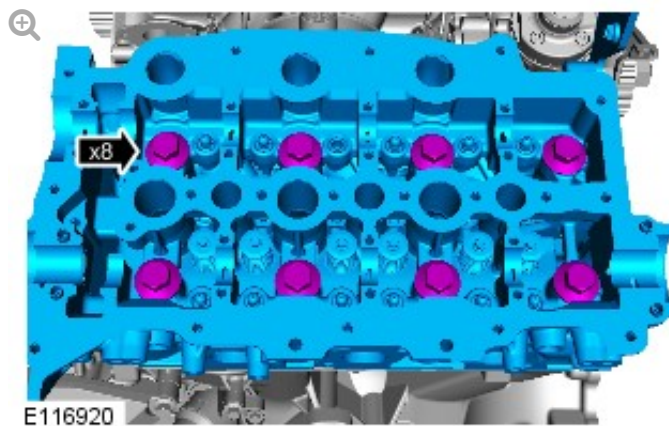


INSTALLATION

1.

CAUTIONS:

- Make sure that the mating faces are clean and free of foreign material.
- An acceptable flatness of the cylinder head is 0.2mm.

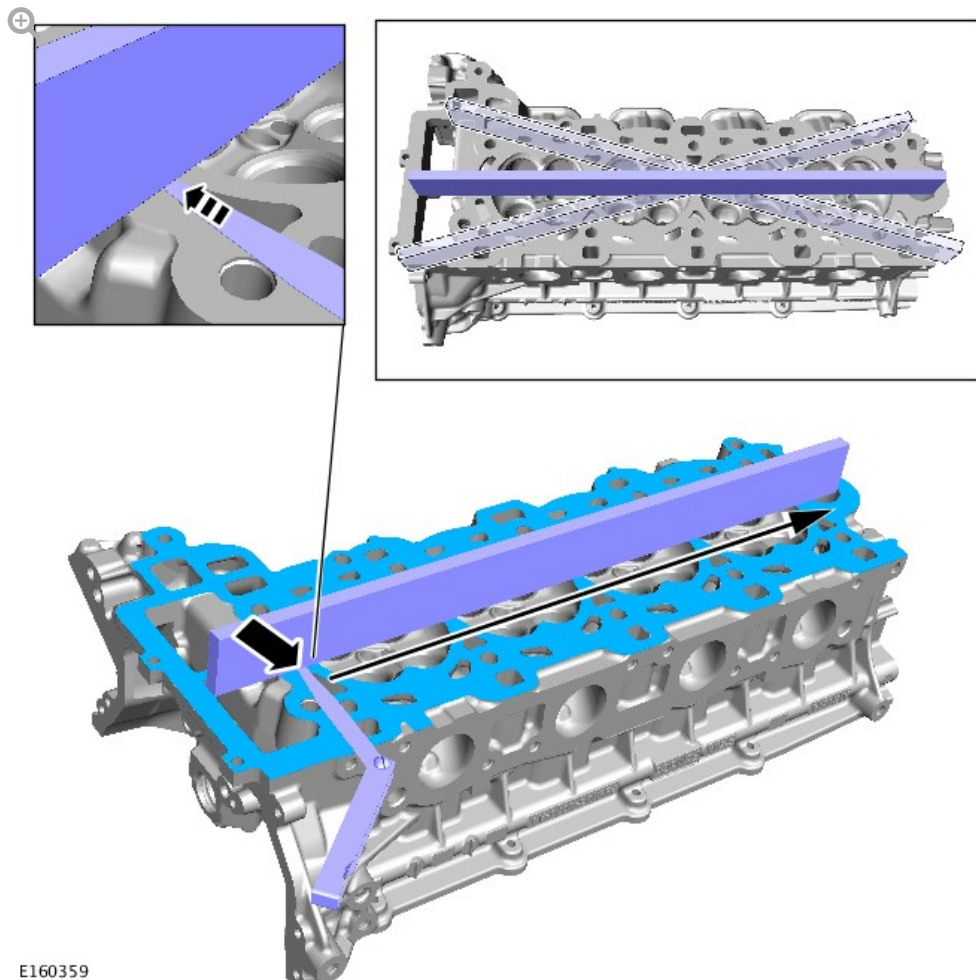

1. Clean and inspect the cylinder head and cylinder block.
2. Check the cylinder head face for distortion, across the center and from corner to corner.

Refer to: [Cylinder Head Distortion](#) (303-00 Engine System - General Information, General Procedures).


Refer to: [Cylinder Head Gasket Selection - TDV6 3.0L Diesel](#) (303-00 Engine System - General Information, General Procedures).

CAUTIONS:

- Only tighten the bolts finger-tight at this stage.
- Make sure that new bolts are installed.
- Use care when installing the cylinder head. Damage to the cylinder block, cylinder head or cylinder head gasket may result.
- The head gasket must be installed over the cylinder block dowels.

NOTES:

- Install a new gasket.
- No additional lubrication to the cylinder head bolts is required.

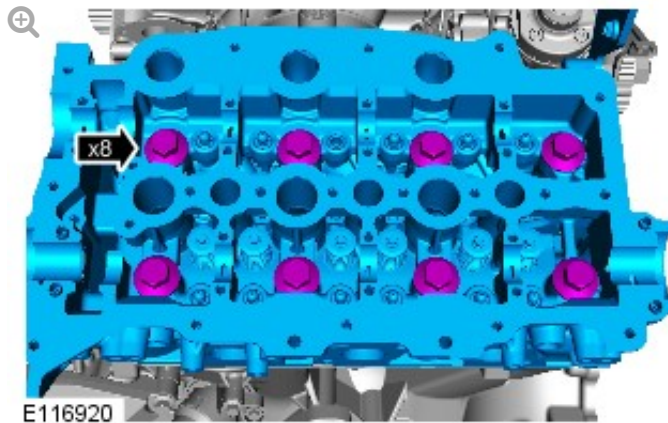


Renew Part: [Cylinder head gasket.](#)

Renew Part: [Cylinder head bolts.](#)

3.

NOTE:

Tighten the bolts in the indicated sequence.

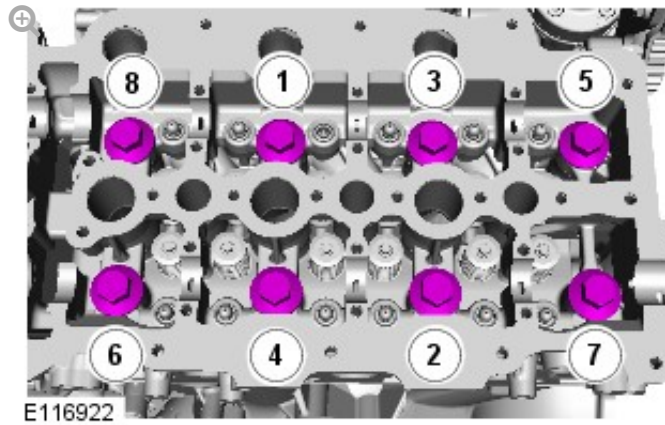


- *Torque: 80 Nm*

4.


NOTE:

Tighten the bolts in the indicated sequence.

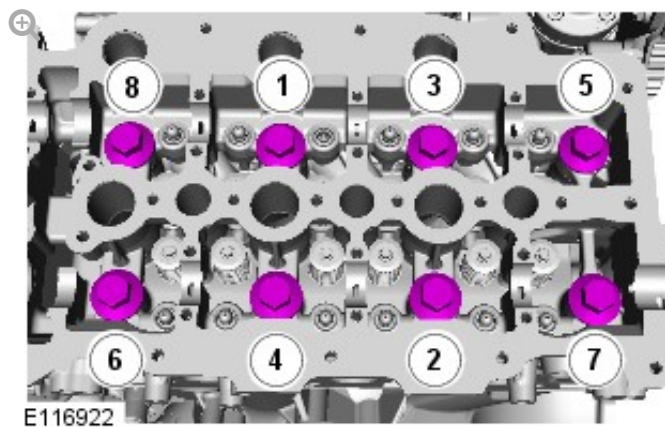

- *Torque: 180°*


5.

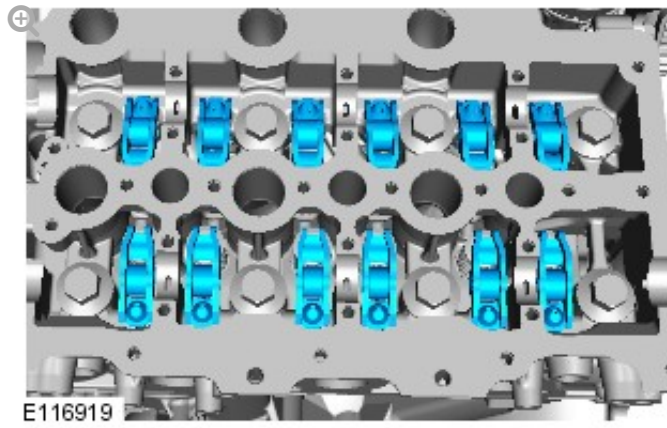

6.

CAUTION:


Install the new seals.

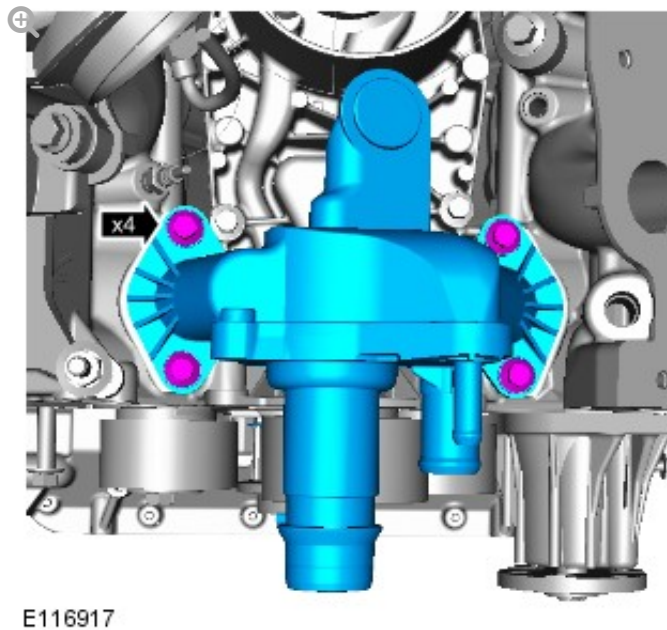

Renew Part: *Water outlet connection O-ring seals.*


Torque: 10 Nm

7.

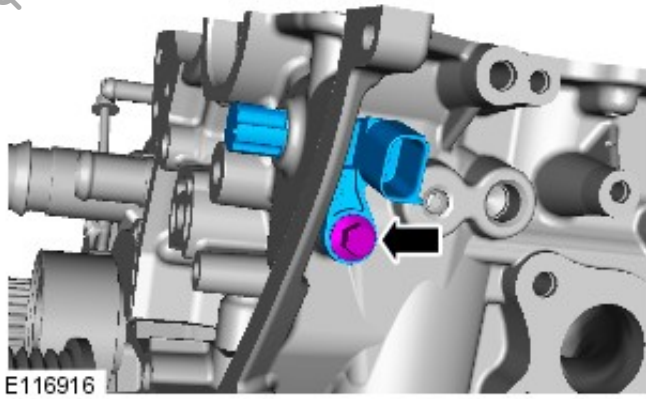


Torque: 10 Nm

8.

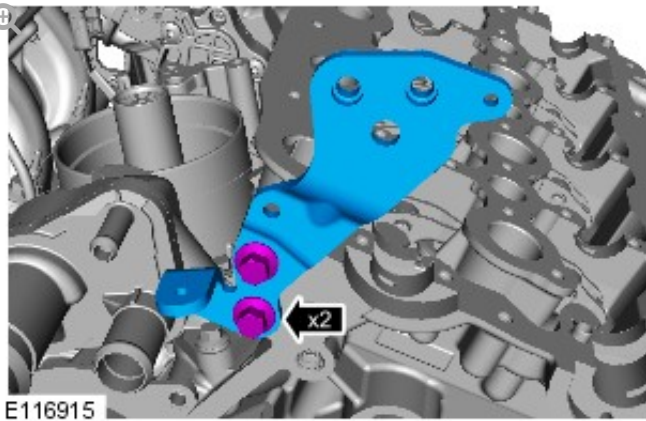

Torque: 24 Nm

9.

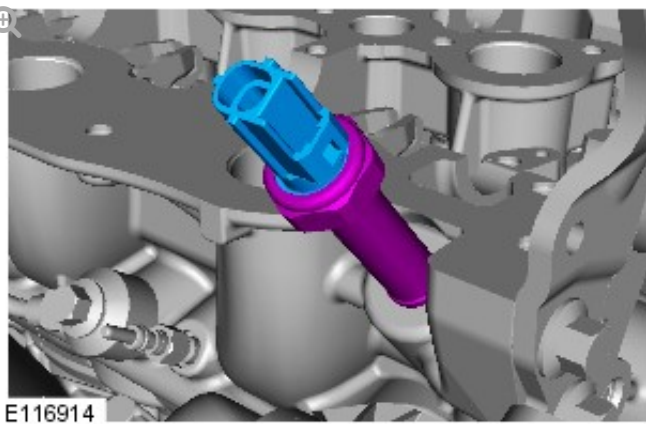

Torque: 14 Nm

10. Refer to: [Left Exhaust Manifold](#) (303-01A Engine - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).

11. Refer to: [Glow Plugs](#) (303-07C Glow Plug System - TDV6 3.0L Diesel, Removal and Installation).
12. Refer to: [Left Camshaft](#) (303-01A Engine - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).
13. Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).