

2016.0 RANGE ROVER (LG), 303-01

ENGINE - TDV6 3.0L DIESEL - GEN 2/TDV6 3.0L DIESEL

LEFT ENGINE MOUNT (G1509143)

REMOVAL AND INSTALLATION

12.45.11	MOUNTING - LH - RENEW	3000 CC, TDV6, DIESEL	2.9	USED WITHINS	+
----------	-----------------------------	-----------------------------	-----	-----------------	---

REMOVAL

NOTES:


- Some components shown removed for clarity.
- Some variation in the illustrations may occur, but the essential information is always correct.

1. Disconnect the battery ground cable.
Refer to: Specifications (414-00, Specifications).
2. Refer to: Engine Undershield (501-02 Front End Body Panels, Removal and Installation).
3. Refer to: Air Conditioning (A/C) Compressor - TDV6 3.0L Diesel (412-01 Climate Control, Removal and Installation).

4.

NOTE:


Make sure the retaining clip is correctly installed and tightened.

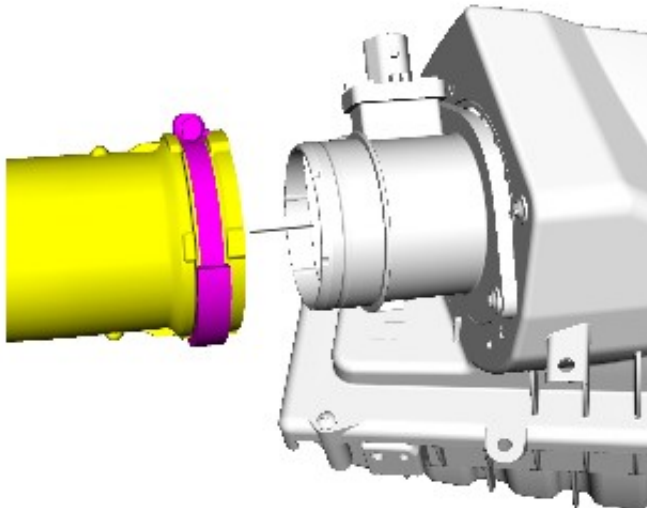

E157217


Torque: 3 Nm

5.

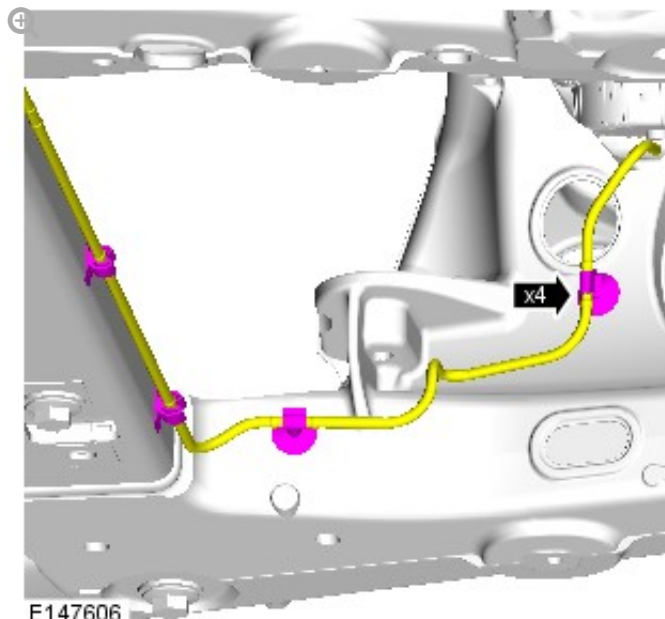

E147606


6.

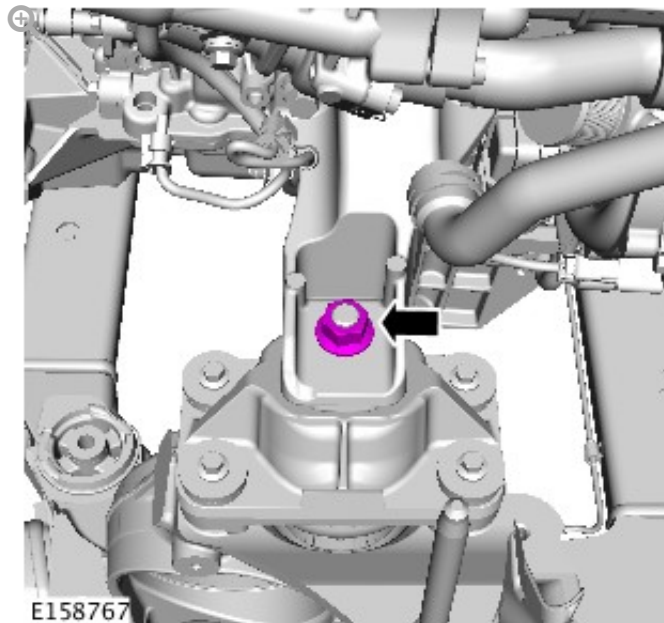

7.


CAUTION:

Use a wooden block to protect the oil pan when supporting the engine.

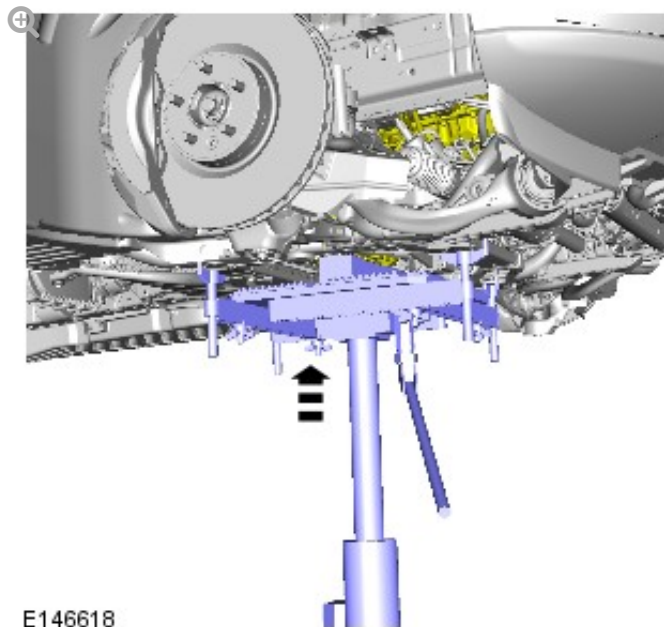

Using a suitable hydraulic jack, raise and support the engine.


8.

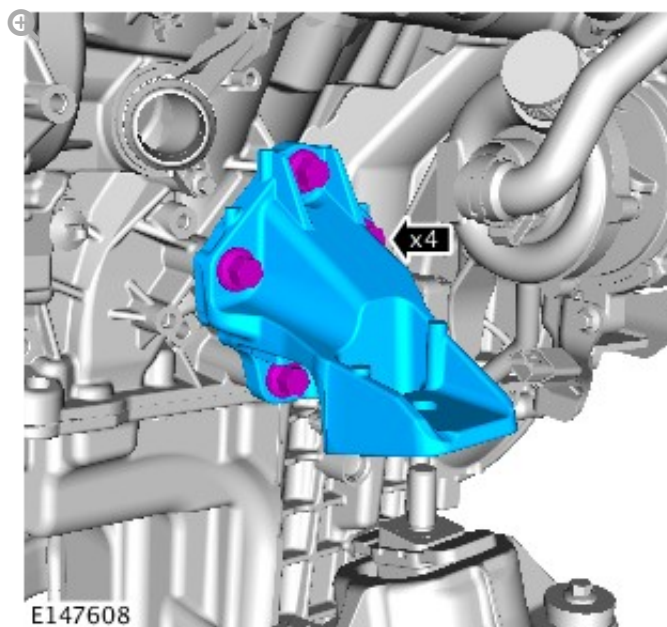


9.

CAUTION:

Discard the bolts.

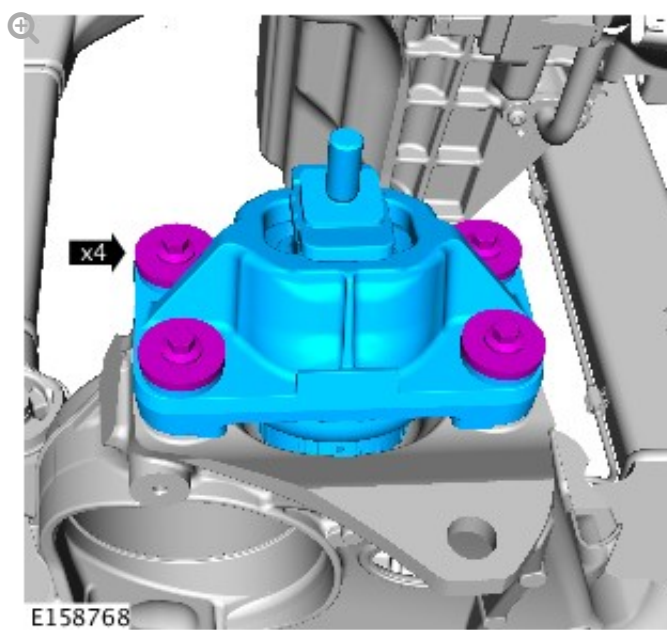


10.

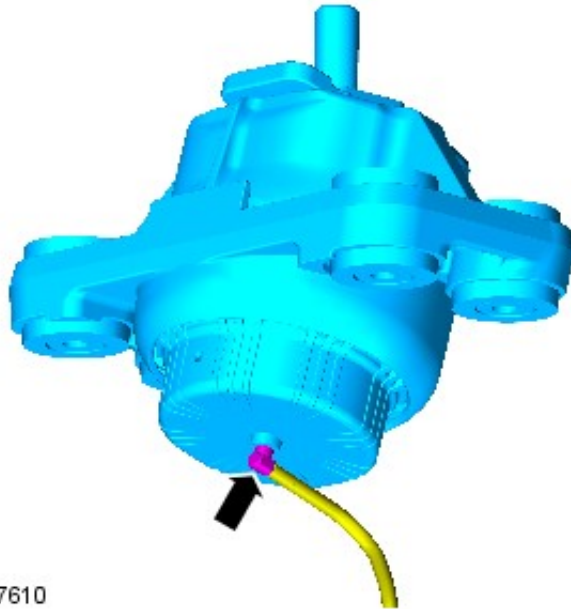

E147610

INSTALLATION

1.

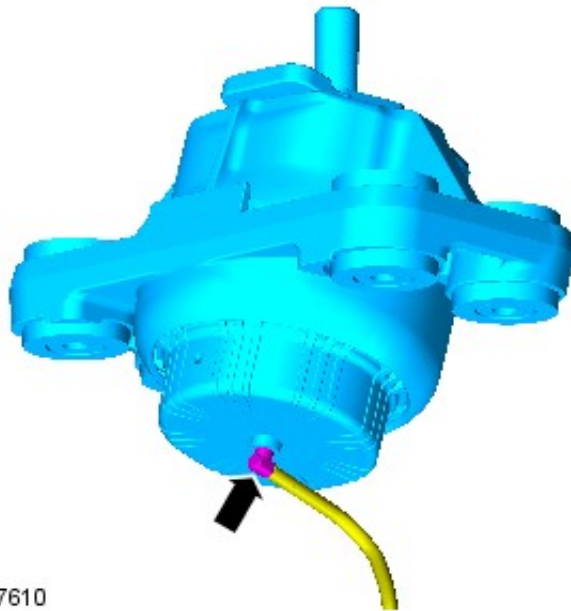

E147610


2.

CAUTION:


Only tighten the nut finger tight at this stage.

NOTE:

Make sure that new bolts are installed.

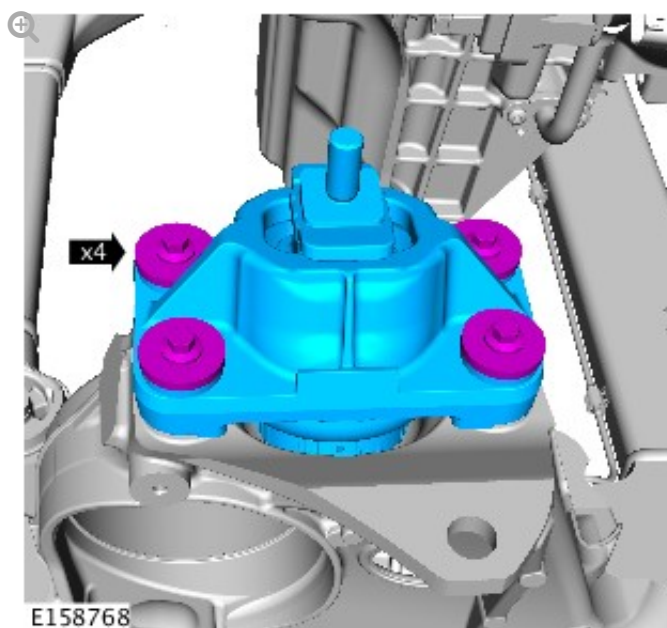

3.

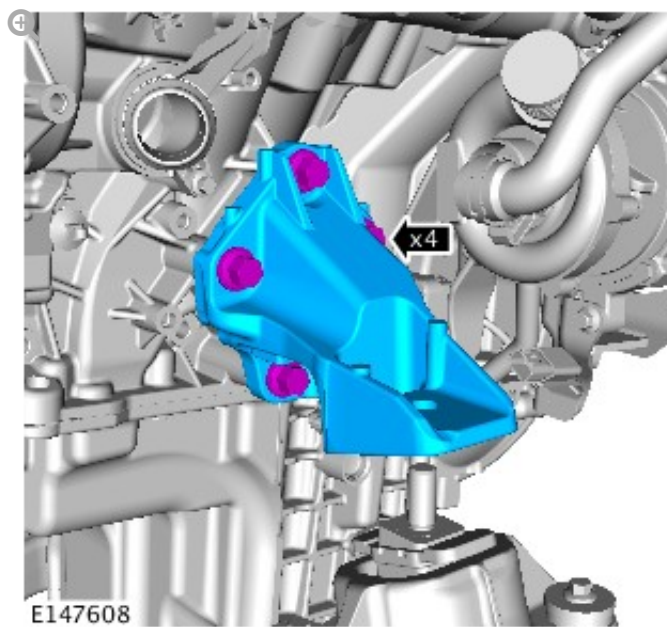


Torque: 115 Nm

4. Lower the engine onto the mount.

5.

CAUTION:


Only tighten the nut finger tight at this stage.

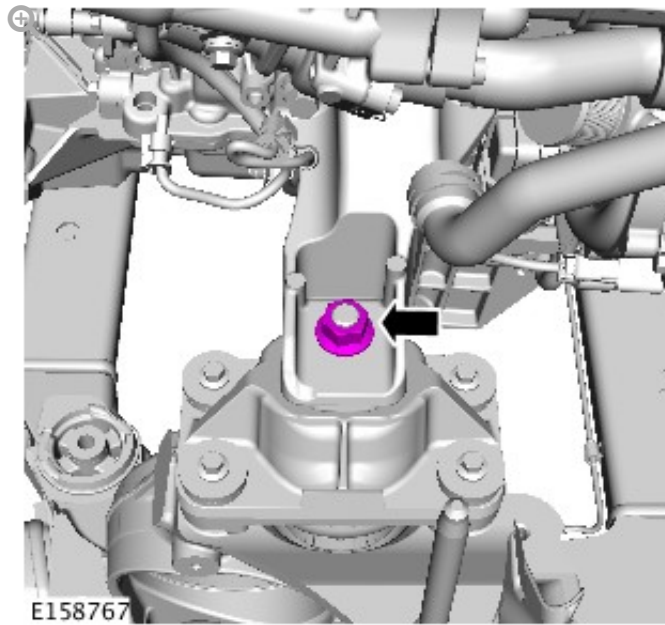

6.


CAUTION:

Tighten the bolts in the sequence shown.

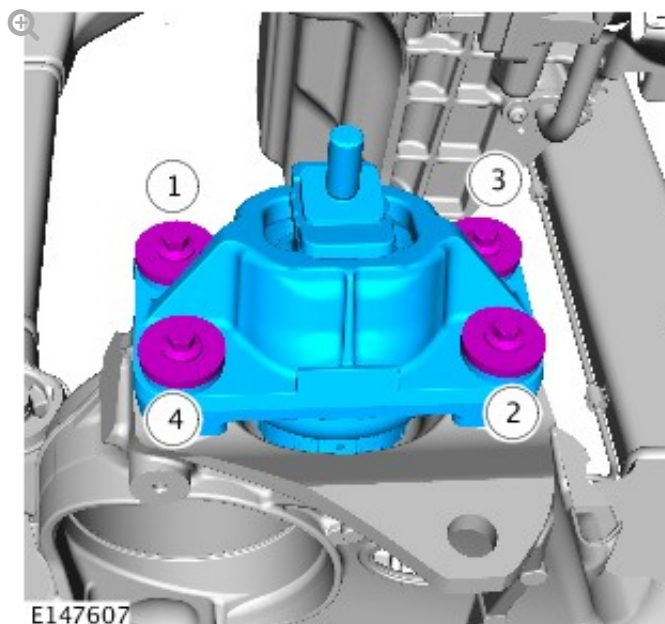


Torque: 40 Nm

7.

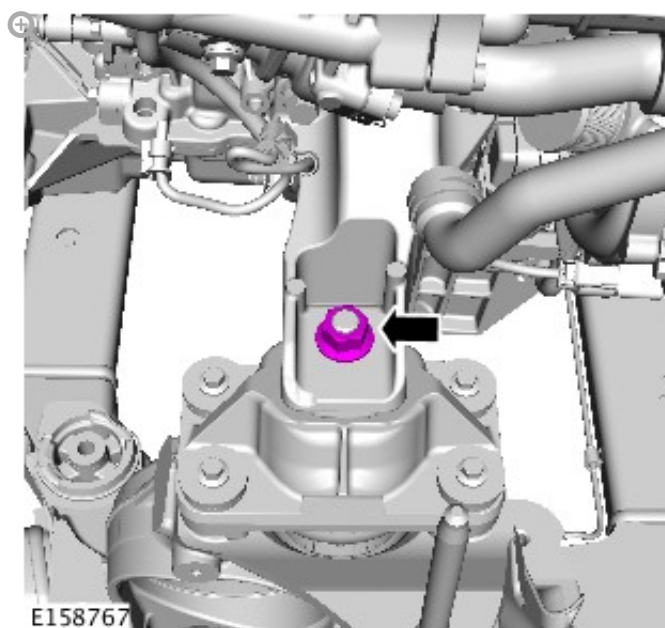

Torque: 130 Nm


8.

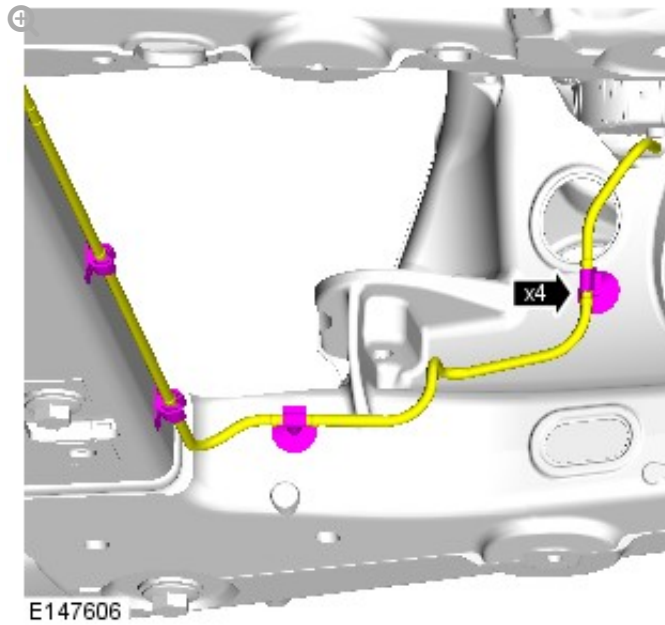

9.

NOTE:

Make sure the retaining clip is correctly installed and tightened.

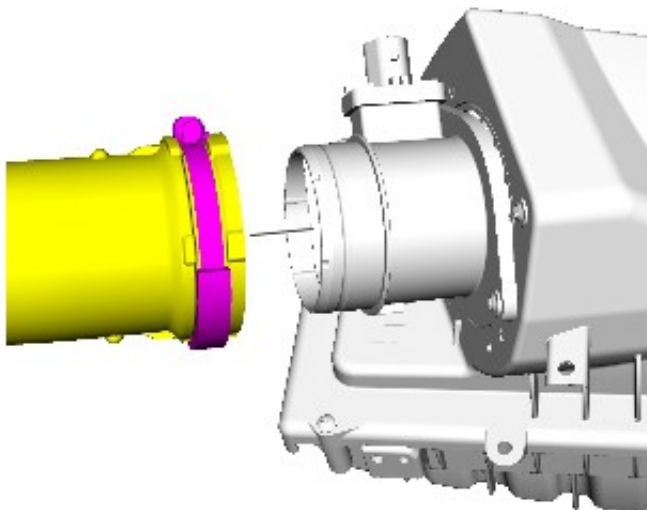

E157217

Torque: 3 Nm

10. Refer to: Air Conditioning (A/C) Compressor - TDV6 3.0L Diesel

(412-01 Climate Control, Removal and Installation).

11. Refer to: Engine Undershield (501-02 Front End Body Panels, Removal and Installation).
12. Connect the battery ground cable.
Refer to: Specifications (414-00, Specifications).