

2016.0 RANGE ROVER (LG), 303-01

ENGINE - TDV6 3.0L DIESEL - GEN 2/TDV6 3.0L DIESEL

OIL COOLER (G1879930)

REMOVAL AND INSTALLATION

12.60.68	COOLER - OIL - RENEW	3000 CC, TDV6	6.3	USED WITHINS	+
----------	----------------------------	------------------	-----	-----------------	---

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 1	Renew Part	Oil cooler O-ring seals
Installation Step 2	Renew Part	Engine coolant outlet seal

REMOVAL


NOTES:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustration showing certain components removed to provide extra clarity.

1. Drain the cooling system.
Refer to: [Cooling System Partial Draining and Vacuum Filling](#) (303-


03A Engine Cooling - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, General Procedures).

2. Disconnect the startup battery ground cable.
Refer to: [Specifications](#) (414-01 Battery, Mounting and Cables, Specifications).
3. Remove the right valve cover.
Refer to: [Right Valve Cover](#) (303-01A Engine - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).
4. Remove the oil filter.
Refer to: [Oil Filter Element](#) (303-01A Engine - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).
5. Remove the glow plugs.
Refer to: [Glow Plugs](#) (303-07C Glow Plug System - TDV6 3.0L Diesel, Removal and Installation).

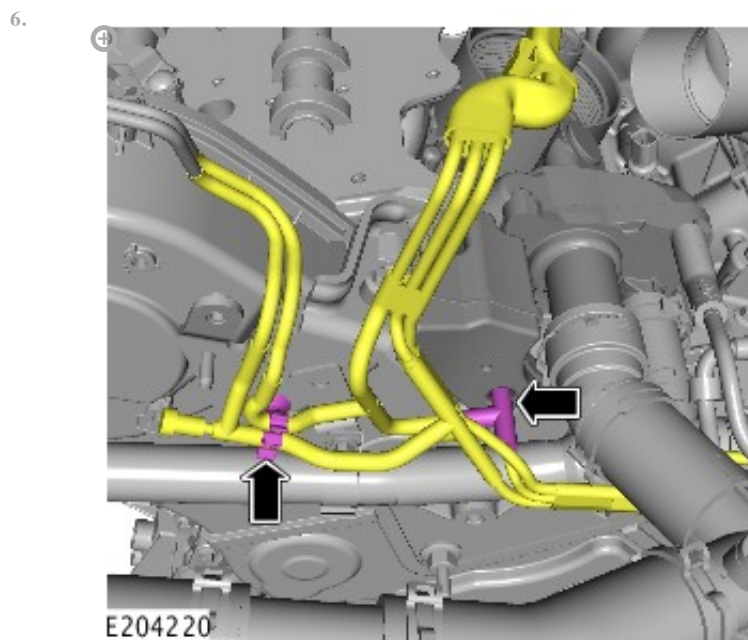

Disconnect the vacuum tubes.

7.

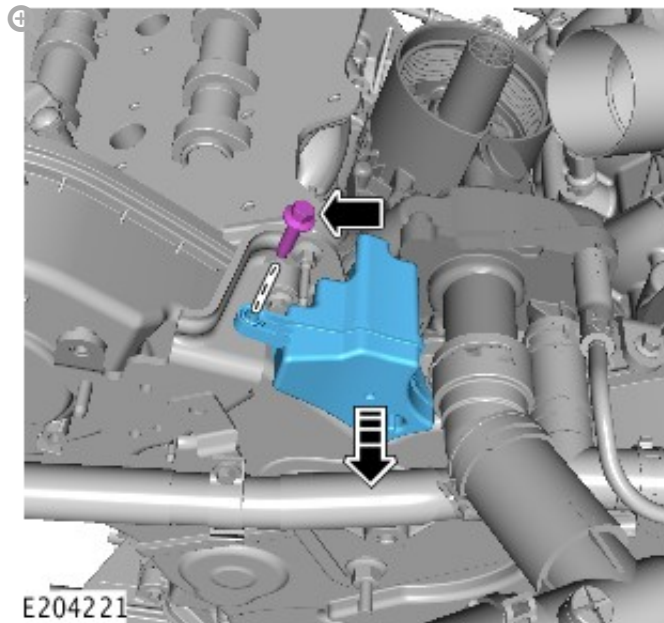


Remove the vacuum reservoir.

8.

CAUTION:

Be prepared to collect escaping coolant.

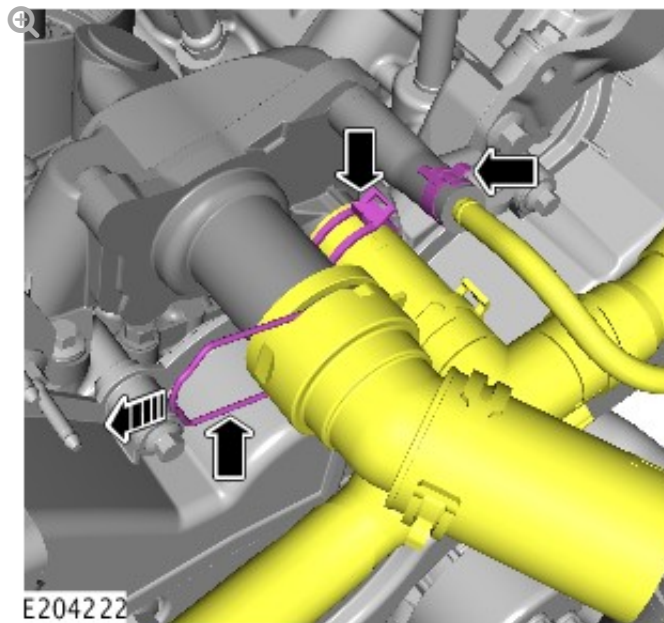

Disconnect the coolant hoses.


9.

CAUTION:

Be prepared to collect escaping coolant.

NOTE:

Remove and discard the seals.

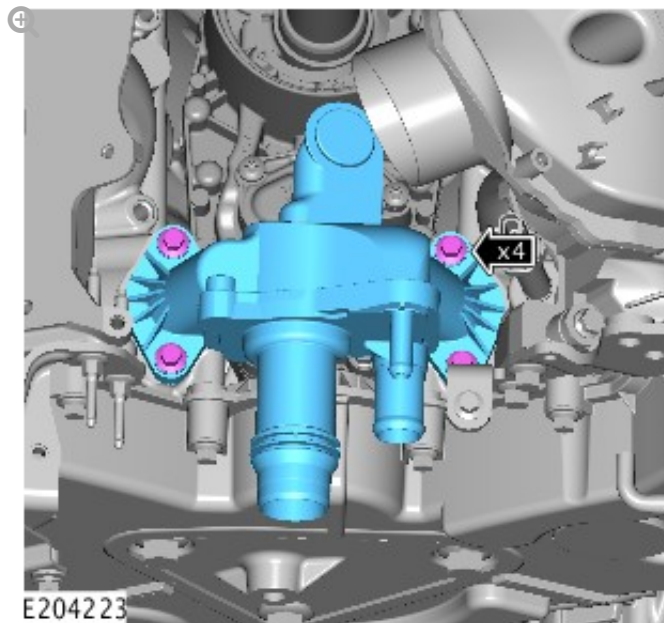


Remove the engine coolant outlet.

10.

NOTE:

Remove and discard the seals.

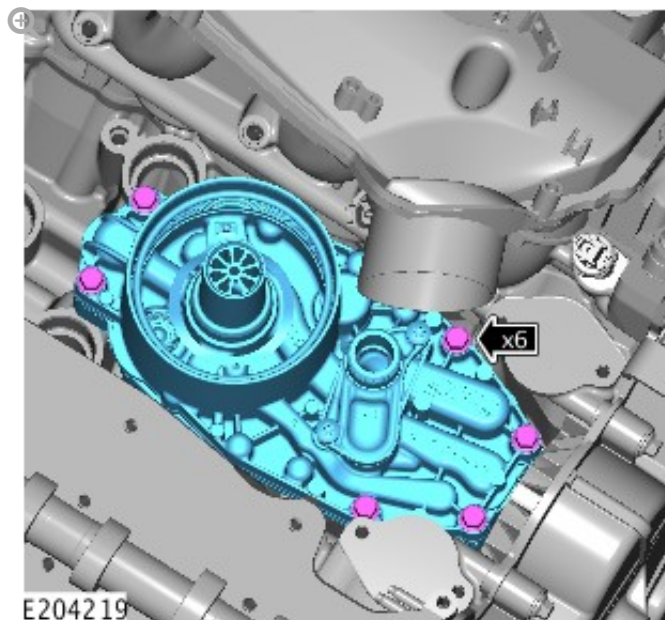

Remove the oil cooler.

INSTALLATION

1.

CAUTION:

Install new seals.

Install the oil cooler.

Renew Part: *Oil cooler O-ring seals.*

Torque: 10 Nm

2.

CAUTION:

Install new seals.

Install the coolant outlet.

Renew Part: *Engine coolant outlet seal.*

Torque: 10 Nm

3. Connect the coolant hoses.

4. Install the vacuum reservoir.

Torque: 10 Nm

5. Connect the vacuum tubes.

6. Install the glow plugs.

Refer to: [Glow Plugs](#) (303-07C Glow Plug System - TDV6 3.0L Diesel, Removal and Installation).

7. Install a new oil filter.

Refer to: [Oil Filter Element](#) (303-01A Engine - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).

8. Install the right valve cover.

Refer to: [Right Valve Cover](#) (303-01A Engine - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).

9. Connect the startup battery ground cable.

Refer to: [Specifications](#) (414-01 Battery, Mounting and Cables, Specifications).

10. Fill the cooling system.

Refer to: [Cooling System Partial Draining and Vacuum Filling](#) (303-03A Engine Cooling - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, General Procedures).

11. Check and top-up the engine oil.