

2016.0 RANGE ROVER (LG), 303-01

ENGINE - TDV6 3.0L DIESEL - GEN 2/TDV6 3.0L DIESEL

OIL PAN (G1671685)

REMOVAL AND INSTALLATION

12.60.44	PAN - OIL - RENEW	3000 CC, TDV6, DIESEL, WITH PARTICULATE FILTER	6.7	USED WITHINS	+
12.60.44	PAN - OIL - RENEW	3000 CC, TDV6, DIESEL, WITH PARTICULATE FILTER, WITH DIESEL EXHAUST FLUID	6.8	USED WITHINS	+

REMOVAL

NOTES:


- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.

1. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System -

General Information, Specifications).

2. Refer to: [Engine Oil Draining and Filling](#) (303-01F Engine - SDV6 3.0L Diesel - Hybrid Electric Vehicle, General Procedures).
3. Refer to: [Starter Motor](#) (303-06A Starting System - TDV6 3.0L Diesel, Removal and Installation).
4. Refer to: [Differential Case - GTDi 2.0L Petrol](#) (205-03 Front Drive Axle/Differential, Removal and Installation).

5.

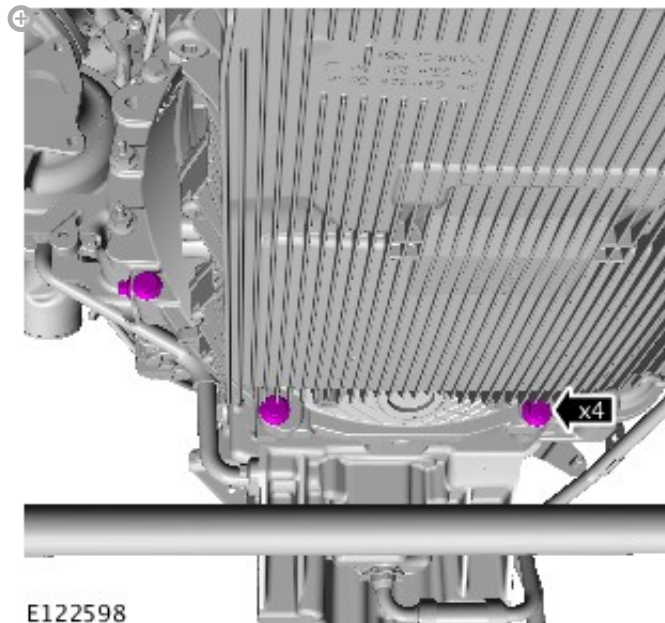

Torque:

M10 40 Nm

M8 24 Nm


6.

CAUTION:

A new gasket must be installed.

NOTE:

Remove and discard the gasket.

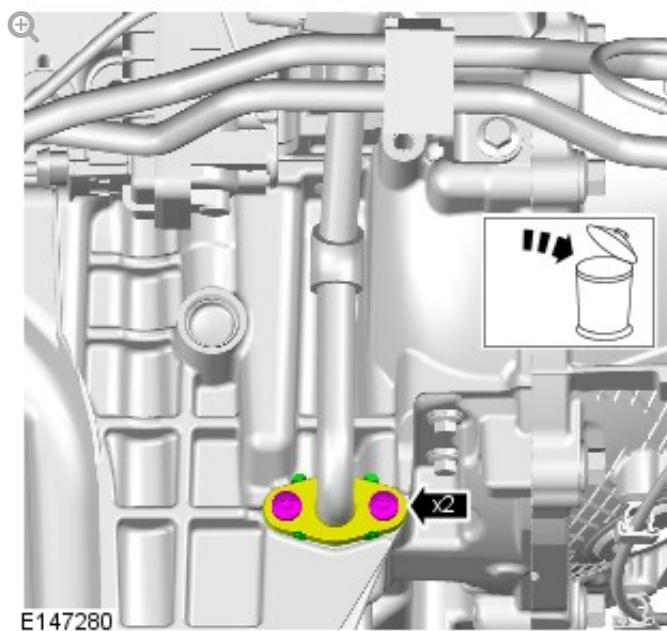

Torque: 10 Nm


7.

CAUTION:

A new gasket must be installed.


NOTE:

Remove and discard the gasket.

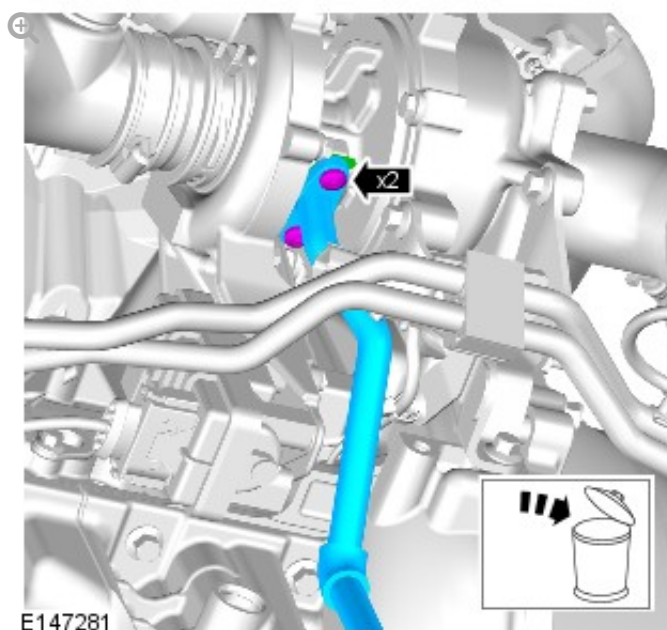


Torque: 10 Nm

8.

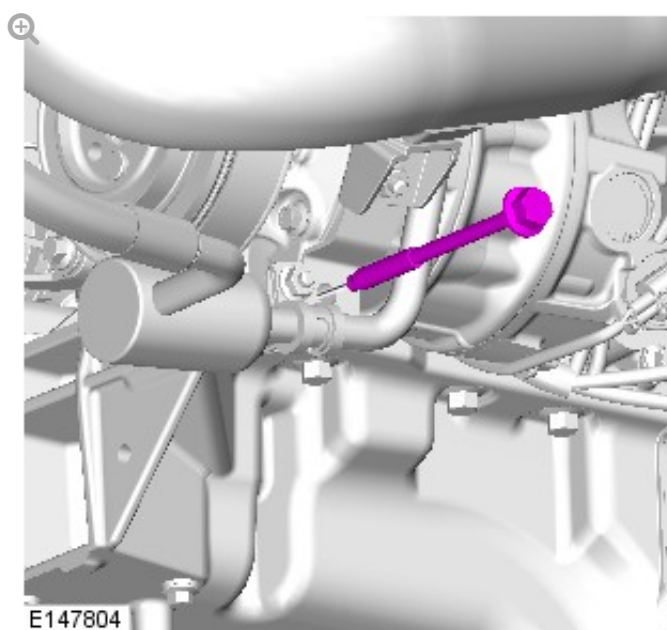


Torque: 25 Nm

9.

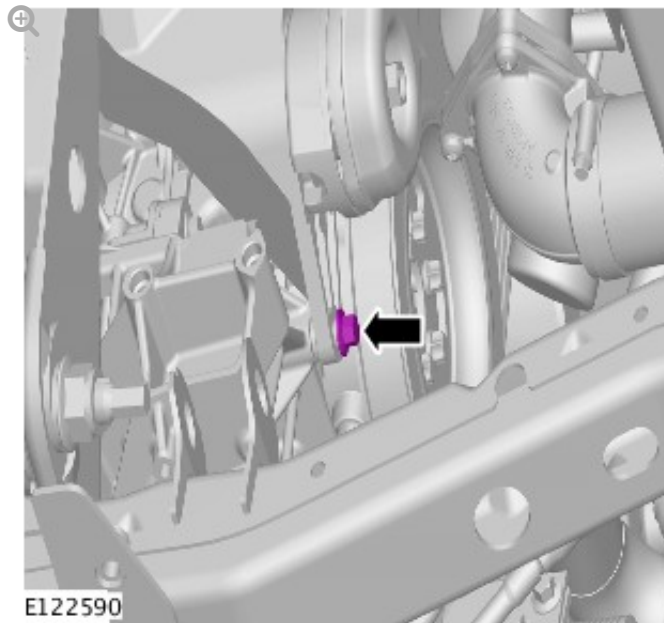

Torque: **24 Nm**

10.

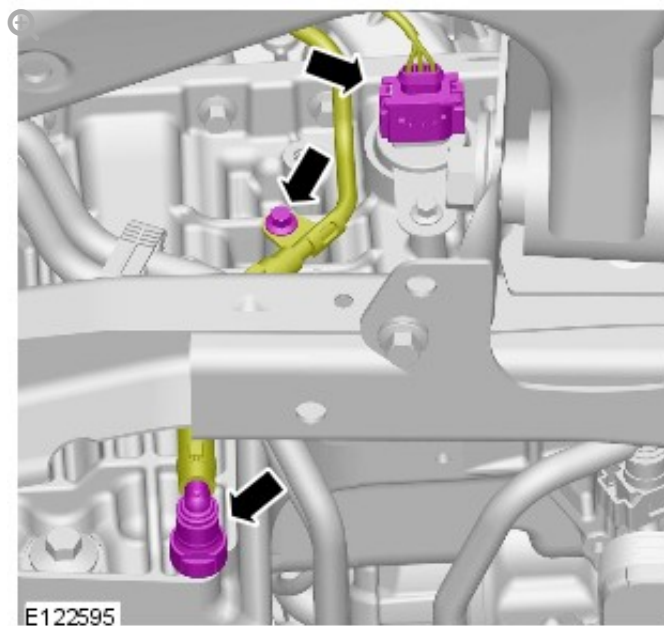

Torque: **10 Nm**


11.

CAUTION:

A new gasket must be installed.

NOTE:

Remove and discard the gasket.

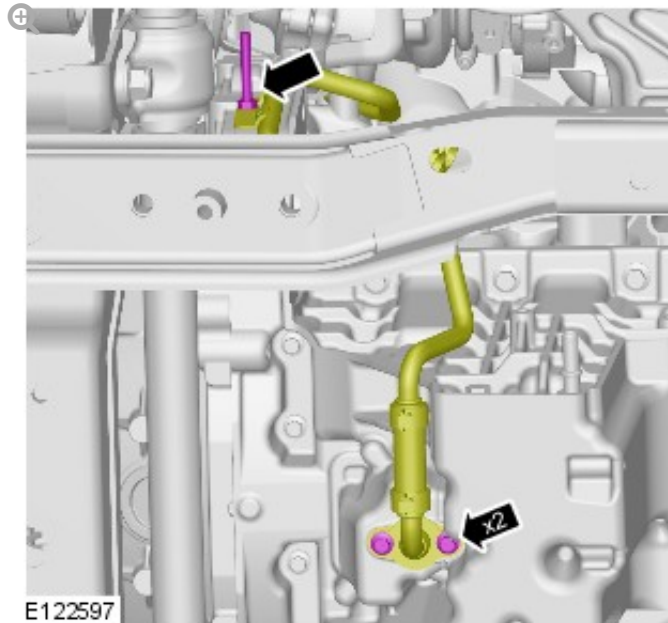


Torque: 10 Nm

12.

CAUTION:

Note the position of the bolts, prior to removal.

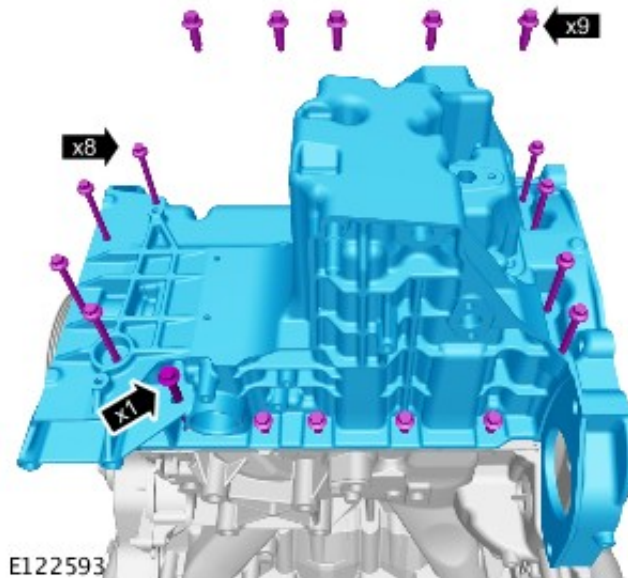

- *Torque:*
M8 23 Nm
- *Torque:*
M6 10 Nm


13.

CAUTION:

A new gasket must be installed.

NOTE:

Remove and discard the gasket.

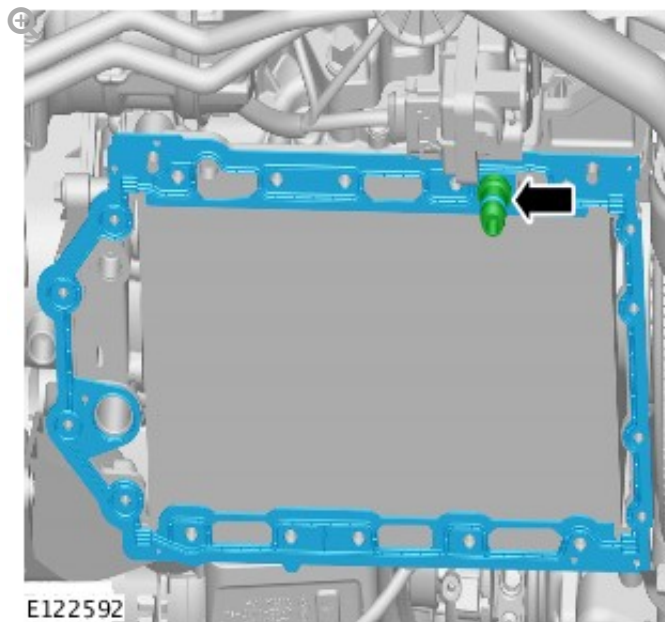

14.


NOTE:

Do not disassemble further if the component is removed for access only.



Torque: 10 Nm

15.

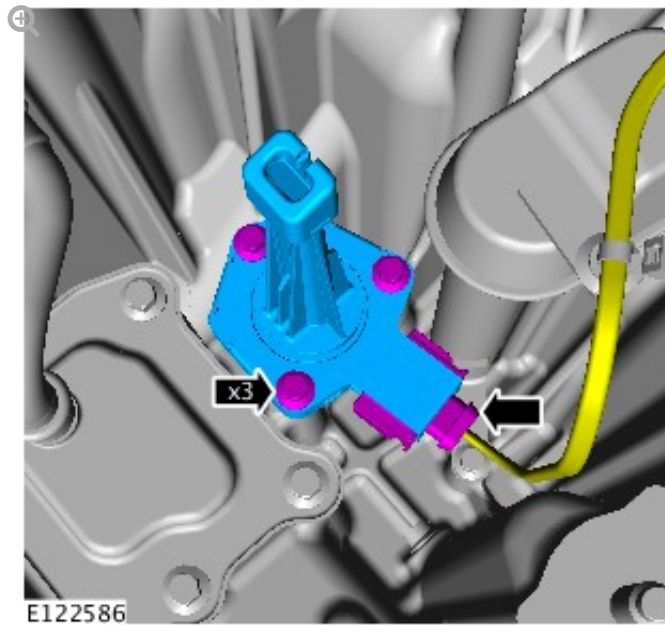

Torque: 10 Nm


16.

CAUTION:

A new O-ring seal must be installed.

NOTE:

Remove and discard the O-ring seal.

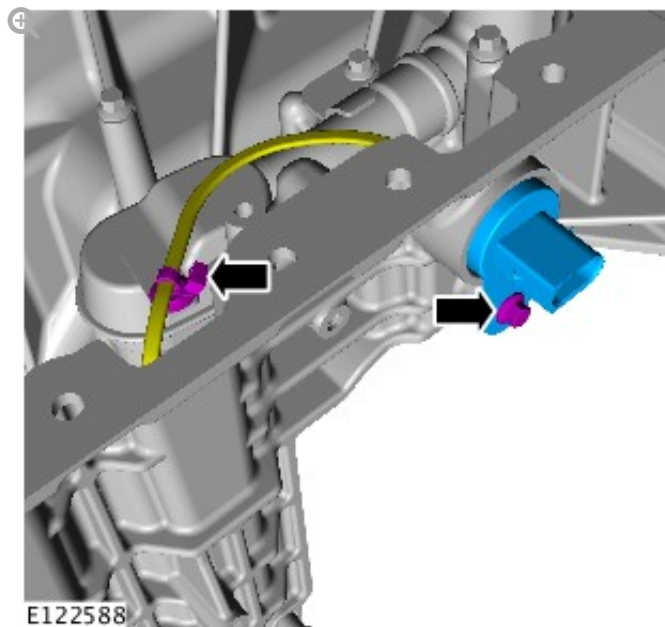

Torque: 10 Nm


17.

CAUTION:

A new O-ring seal must be installed.

NOTE:

Remove and discard the O-ring seal.

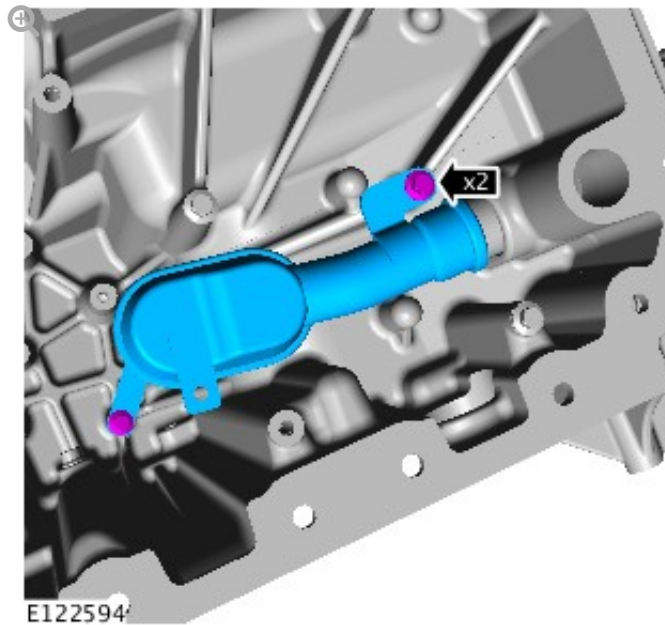

Torque: 10 Nm


18.

CAUTIONS:

- A new O-ring seal must be installed.
- A new gasket must be installed.

NOTES:

- Remove and discard the O-ring seals.
- Remove and discard the gasket.

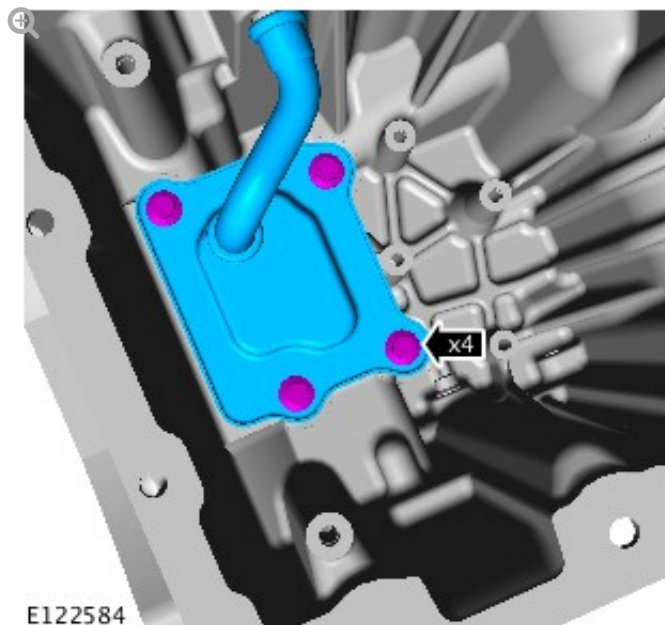

Torque: 10 Nm

INSTALLATION


1.

CAUTIONS:

- Installation of the oil pan and tightening must be carried out within 7 minutes of applying the sealant.
- Make sure that the mating faces are clean and free of corrosion and foreign material.

NOTE:

Right-hand shown, left-hand similar.

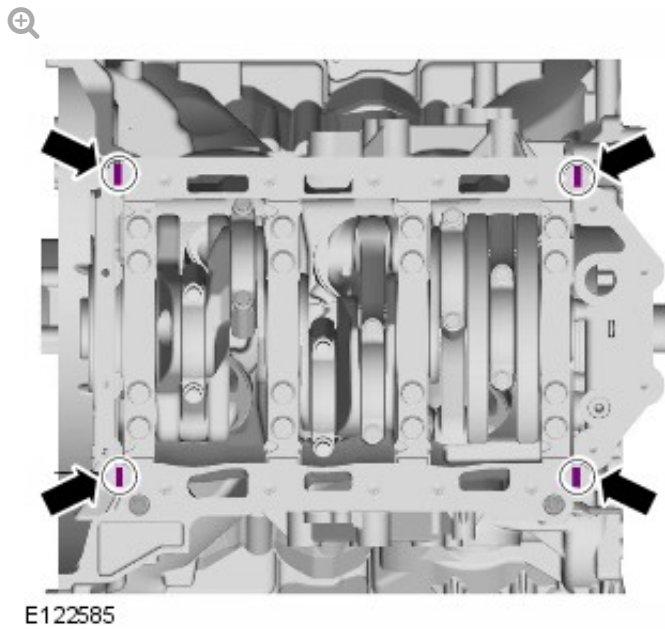

Apply sealant WSE-M4G323-A5 in an 8mm bead to the cylinder block in the area illustrated.

2. To install, reverse the removal procedure.