

2016.0 RANGE ROVER (LG), 303-01

ENGINE - TDV6 3.0L DIESEL - GEN 2/TDV6 3.0L DIESEL

RIGHT ENGINE MOUNT (G1509144)

REMOVAL AND INSTALLATION

12.45.12	MOUNTING - RH - RENEW	3000 CC, TDV6, DIESEL	1.4	USED WITHINS	+
----------	-----------------------------	-----------------------------	-----	-----------------	---

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 10	Renew Part	Steering column lower shaft lower bolt

REMOVAL

NOTE:


Removal steps in this procedure may contain installation details.

1. Remove the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).
2. Remove the generator.
Refer to: Generator (414-02, Removal and Installation).

3.

NOTE:


- Make sure to clean the threads prior to installation.
- Right hand drive only.

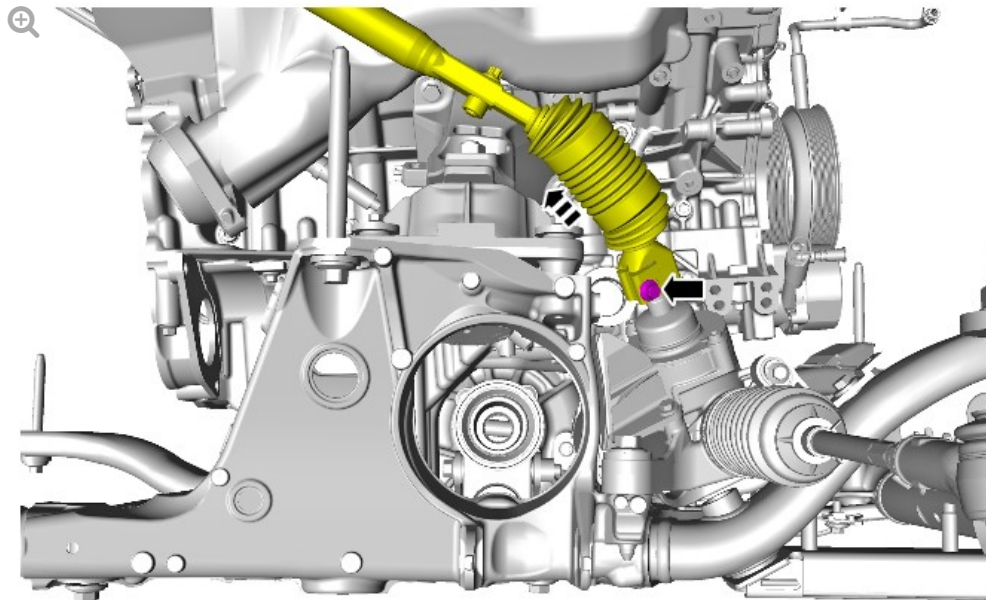

E151313


Align the steering wheel to straight ahead.

4.

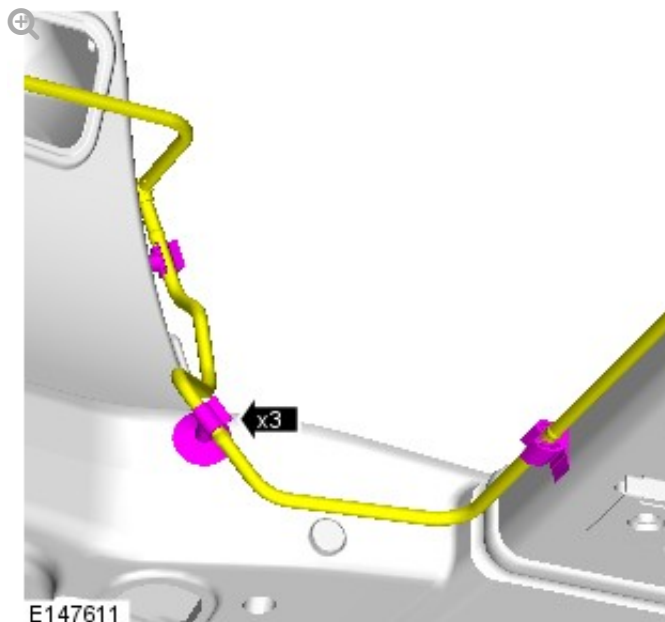

E147611


5.

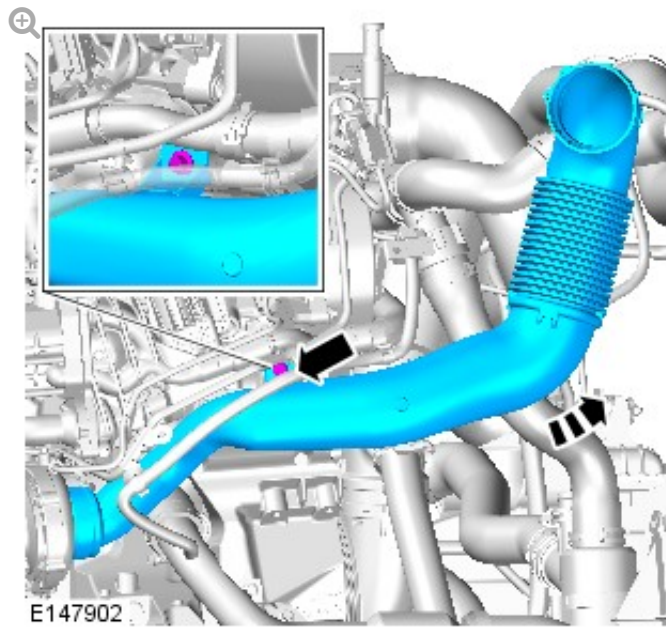


6.

NOTE:


Left-hand shown, right-hand similar.

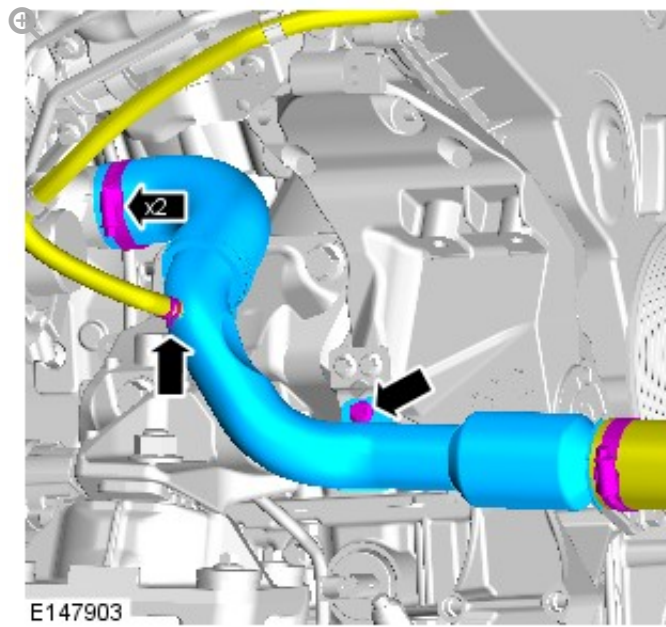

7.

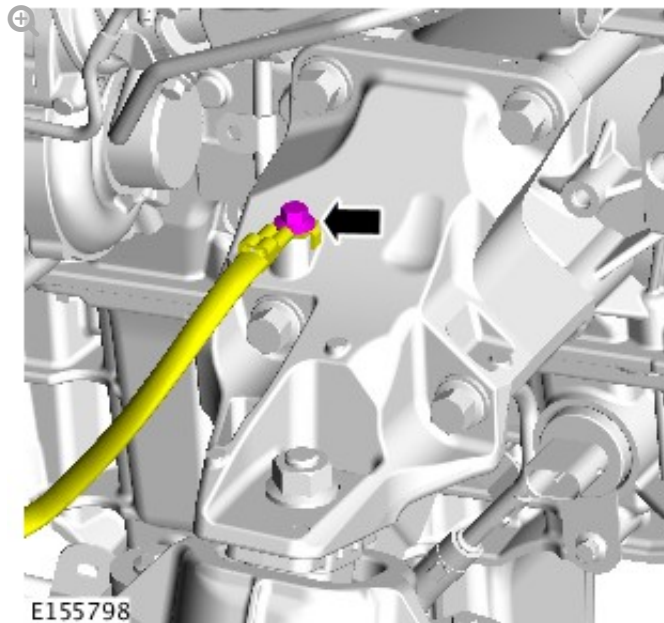


8.

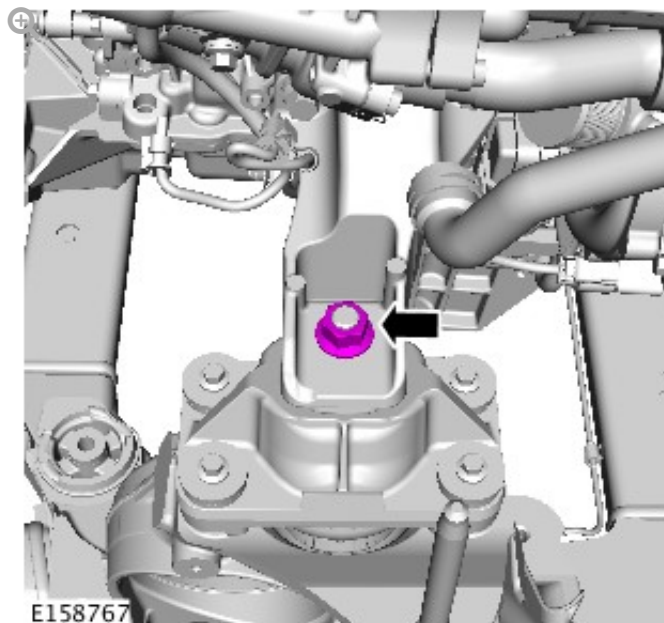

9.

CAUTION:


- Support the engine on a jack. The angle may need to be adjusted during this procedure.
- Use a wooden block to protect the oil pan when supporting the engine.

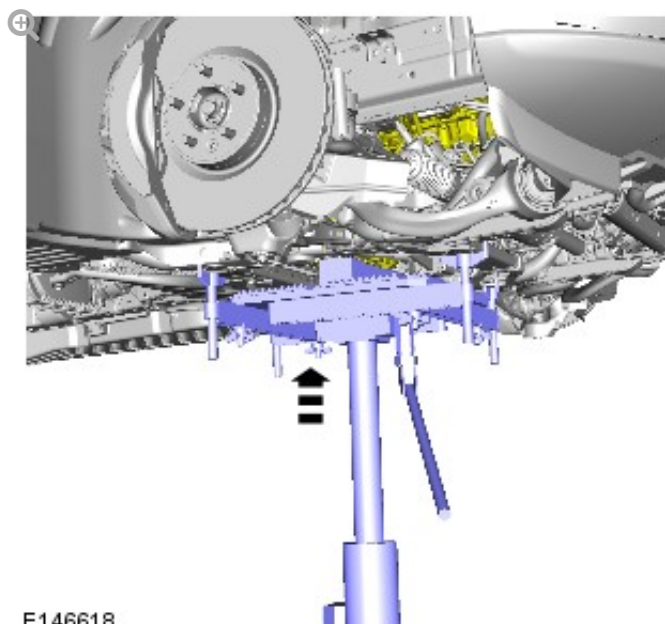

E146618


Using a suitable hydraulic jack, raise and support the engine.

10.

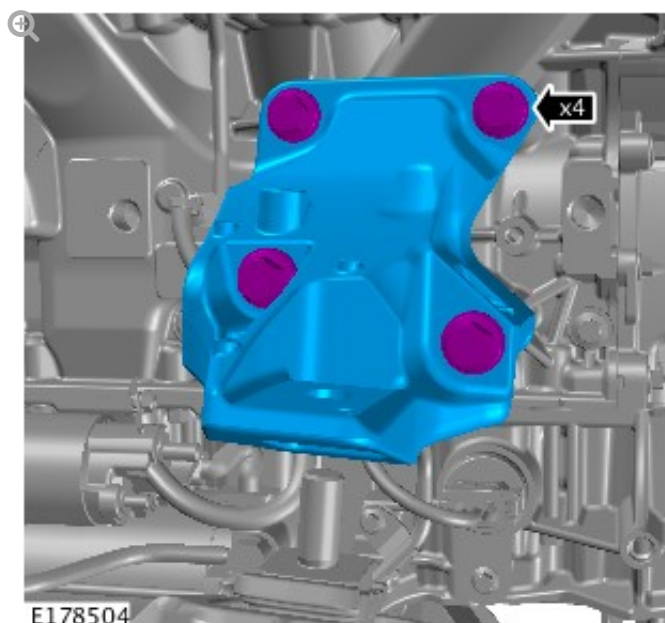


E178504

11.

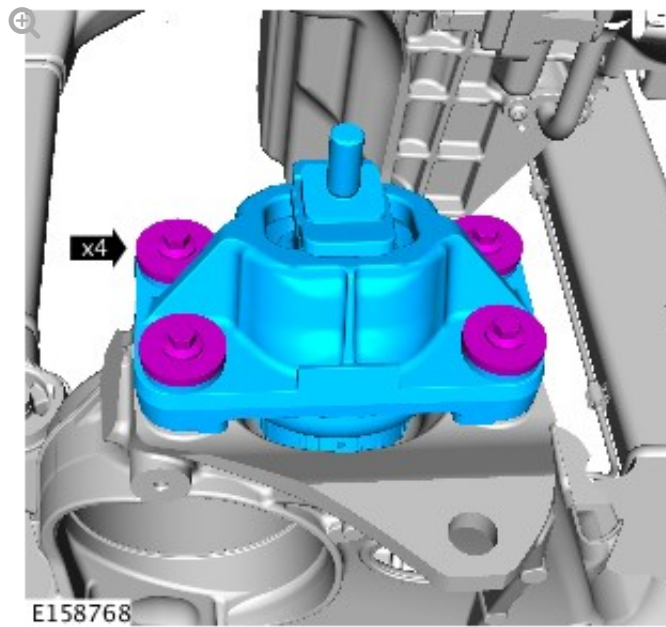


12.

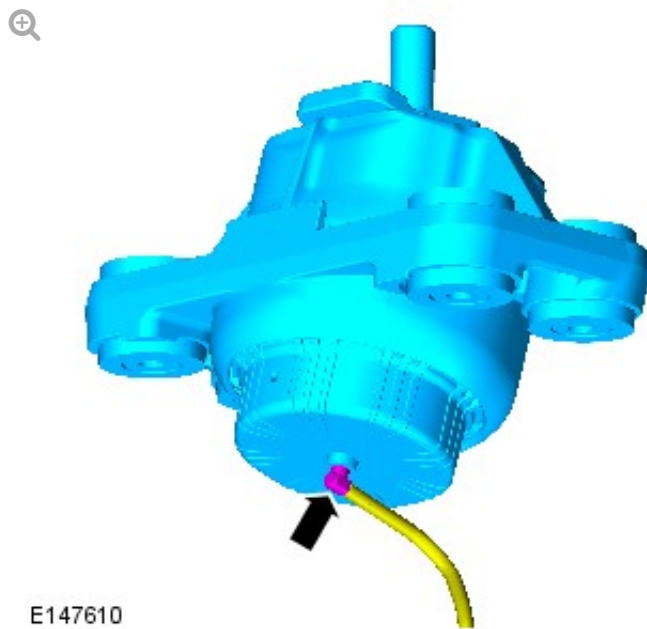


INSTALLATION

1.

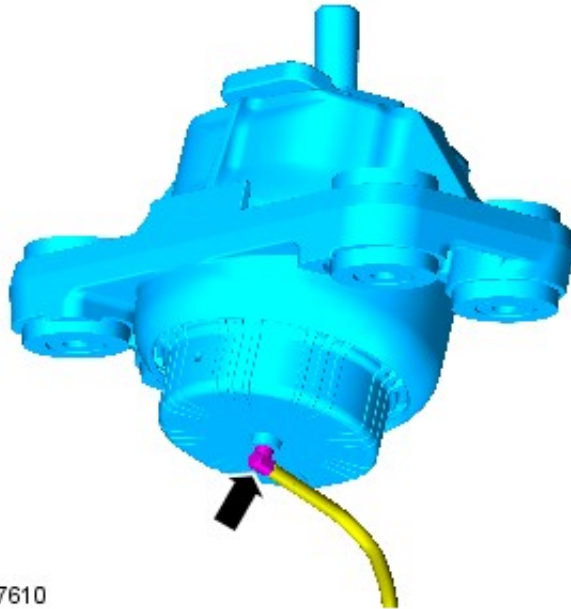

E147610


2.

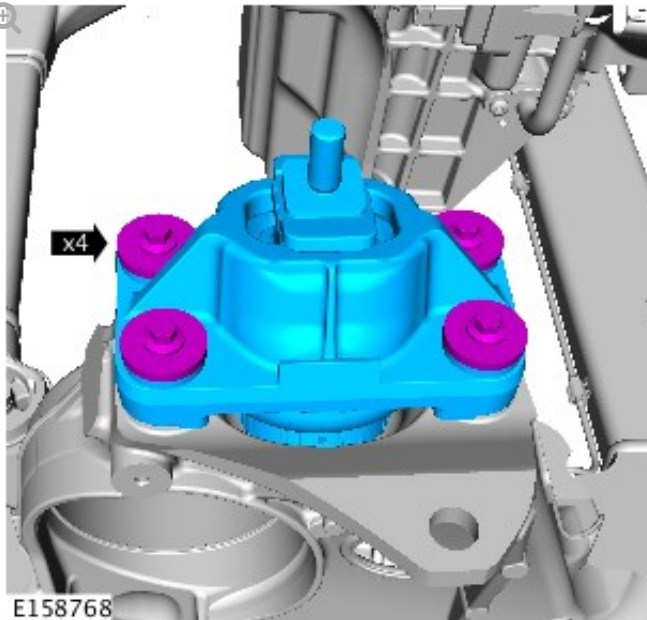

E158768

Only tighten the bolts finger tight at this stage.


3.

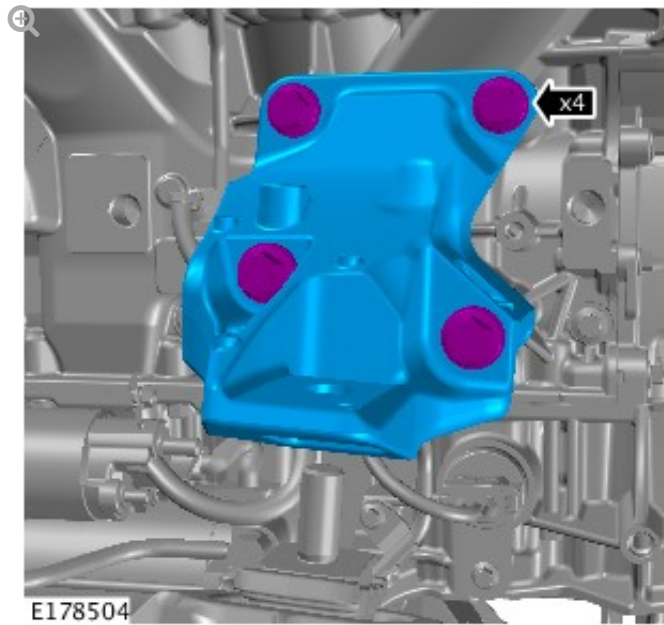

Torque: 115 Nm


4. Lower the engine onto the engine mounting.

5.

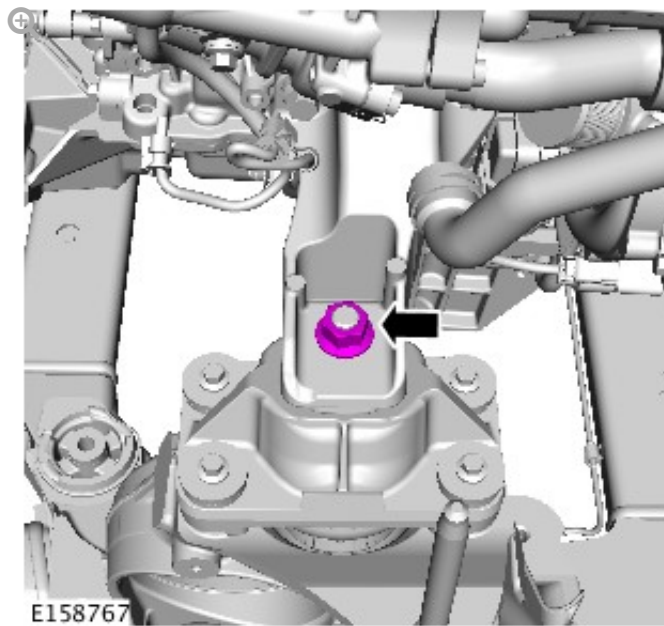


Only tighten the nut finger tight at this stage.

6.

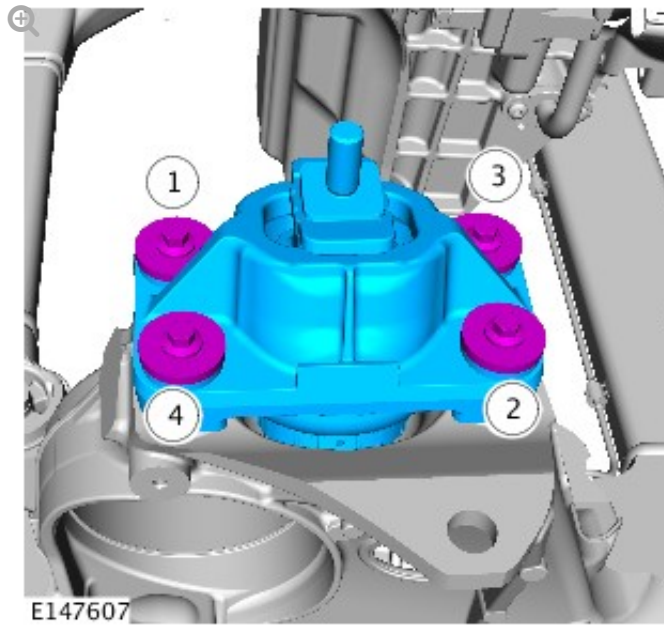


Torque: 40 Nm

7.

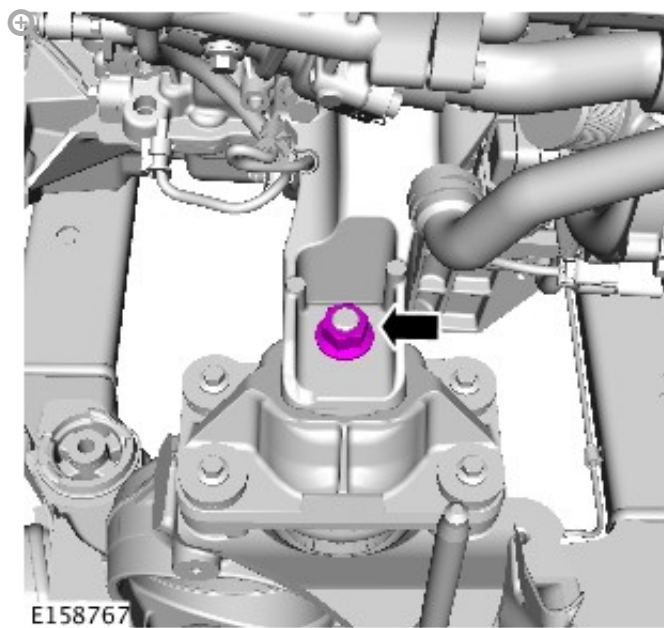


Torque: 130 Nm

8.

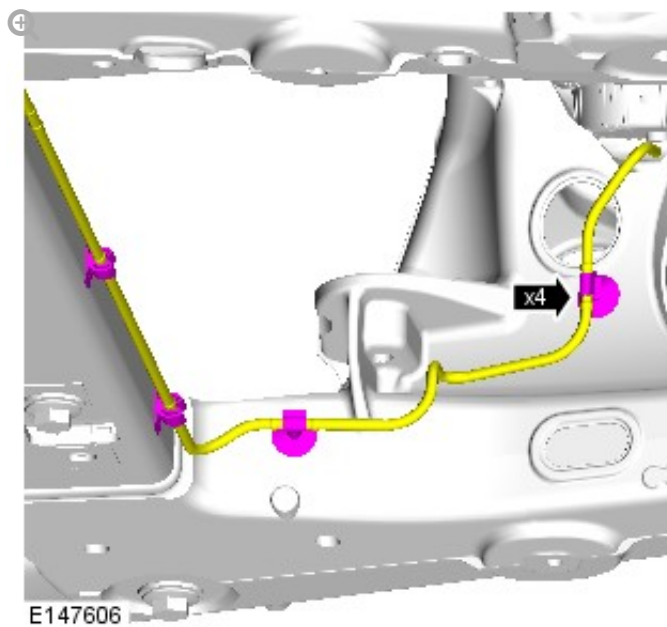


9.

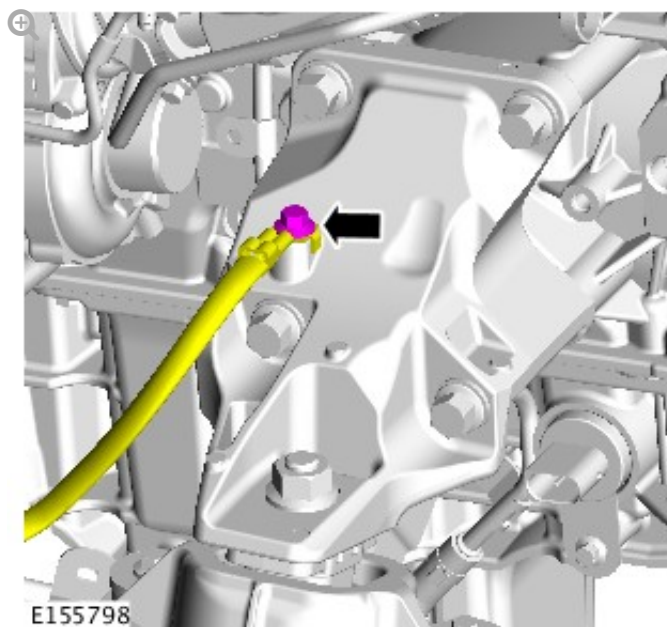

Torque: 25 Nm


10.

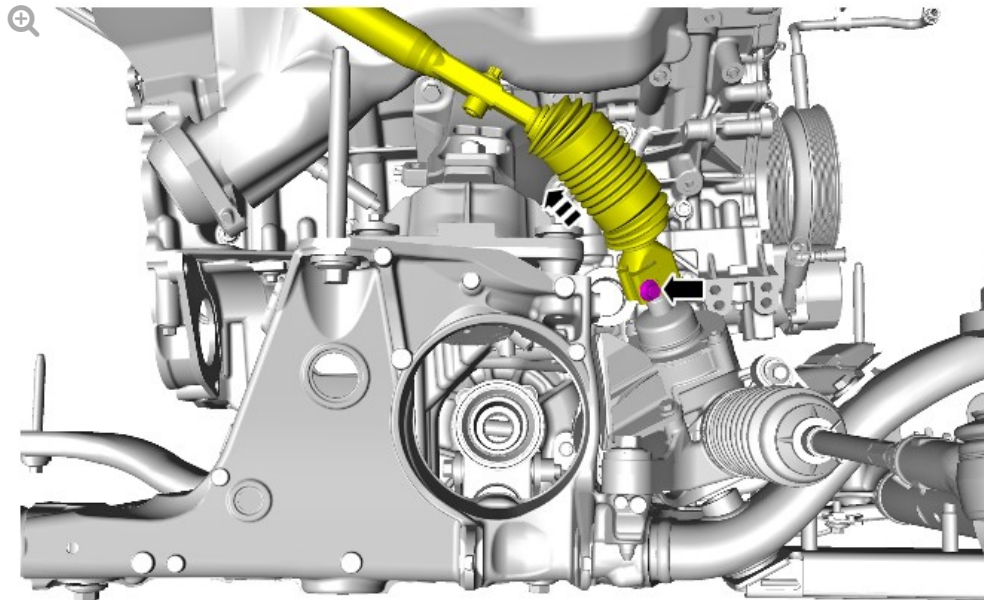

E151313

1. Install a new bolt.
2. Renew Part: *Steering column lower shaft lower bolt.*


11.

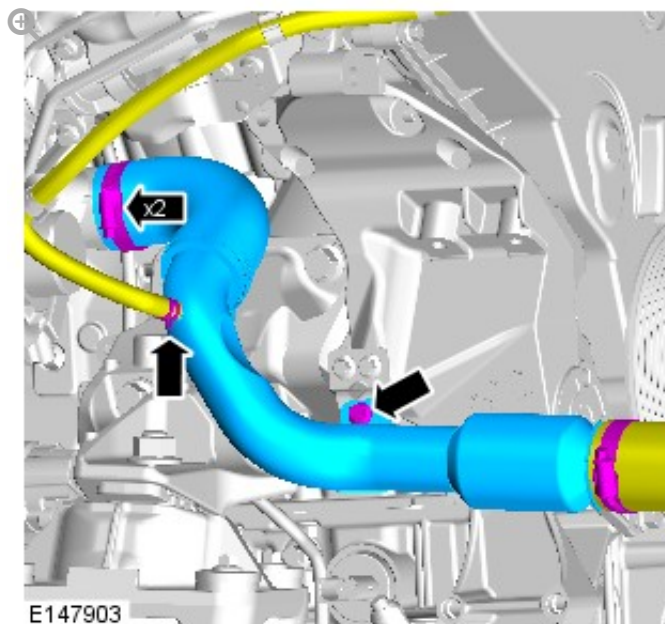

E147903


Torque: 10 Nm

12.

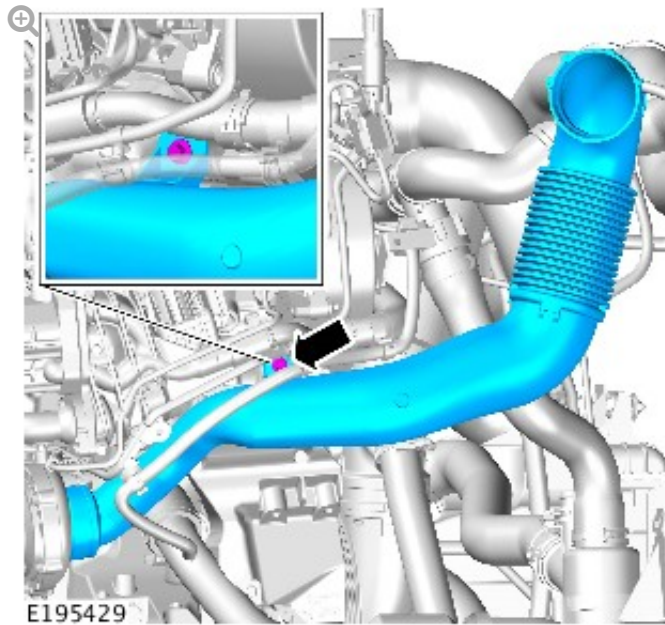

Torque: 10 Nm

13.

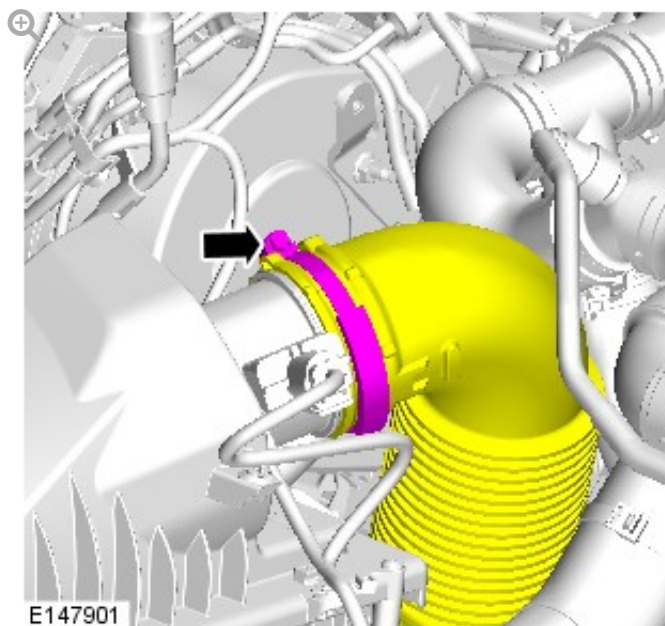

14. Install the generator.
Refer to: Generator (414-02, Removal and Installation).
15. Connect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

