

2016.0 RANGE ROVER (LG), 303-01

ENGINE - TDV6 3.0L DIESEL - GEN 2/TDV6 3.0L DIESEL

RIGHT EXHAUST MANIFOLD

[G1875939]

REMOVAL AND INSTALLATION

		3000 CC, TDV6, DIESEL, WITH PARTICULATE FILTER, WITH DIESEL EXHAUST FLUID			
30.15.11	MANIFOLD - EXHAUST - RH/REAR - RENEW		3.8	USED WITHINS	+

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 1	Renew Part	Exhaust manifold nuts
Installation Step 1	Renew Part	Exhaust manifold gasket
Installation Step 3	Renew Part	Exhaust manifold cross-over pipe studs
Installation Step 4	Renew Part	Exhaust manifold cross-over pipe nuts


REMOVAL

1. Refer to: [Right Turbocharger](#) (303-04B Fuel Charging and Controls -

2.

CAUTION:


Discard the nuts.

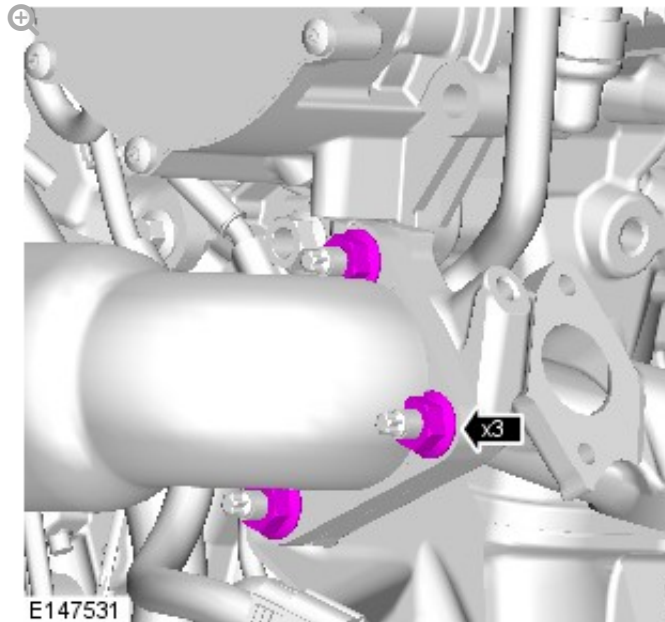

3.

CAUTION:

Discard the studs.

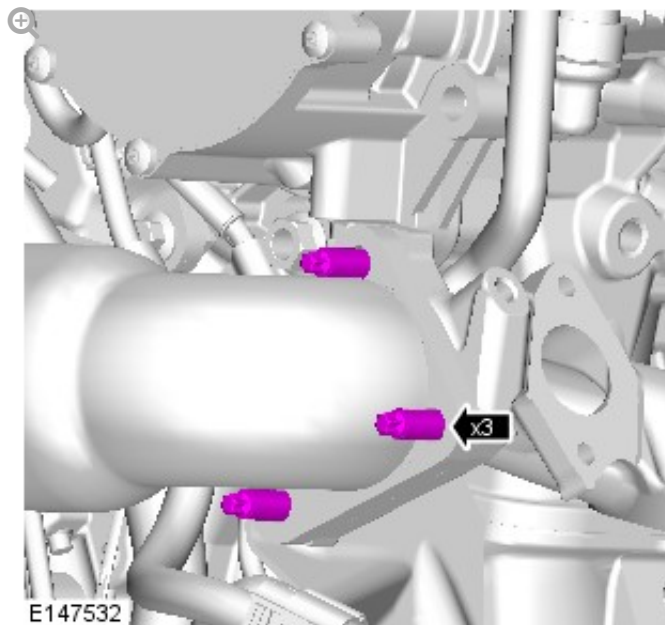


4.

CAUTION:

Discard the nuts.

NOTE:

Remove and discard the gasket.

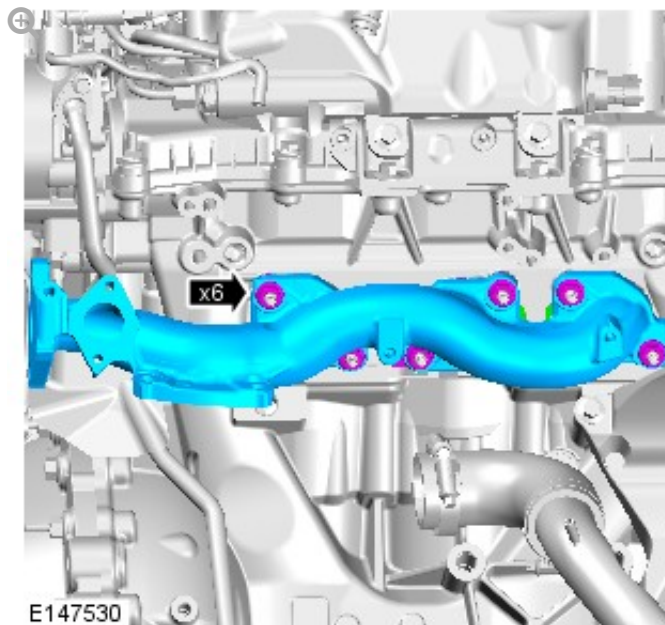

INSTALLATION


1.

CAUTIONS:

- Make sure that new nuts are installed.
- Only tighten the bolts finger-tight at this stage.

NOTE:

Install a new gasket.

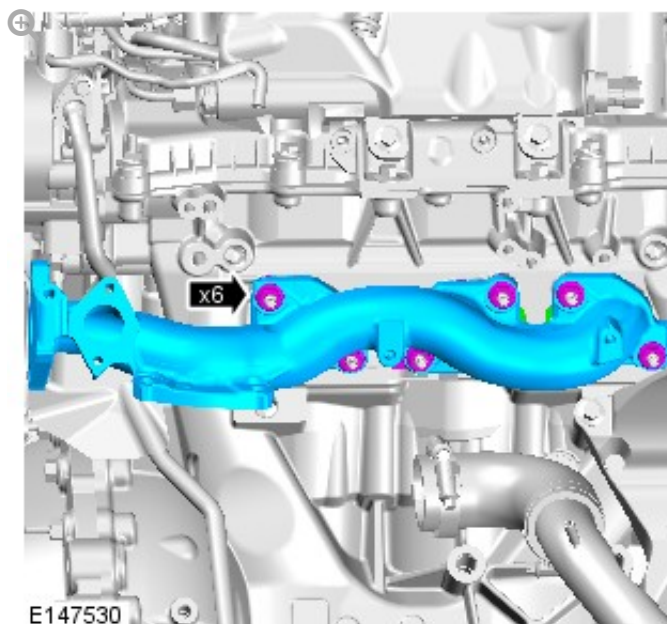


Renew Part: [Exhaust manifold nuts](#).

Renew Part: [Exhaust manifold gasket](#).

2.

NOTE:

Tighten the bolts in the indicated sequence.

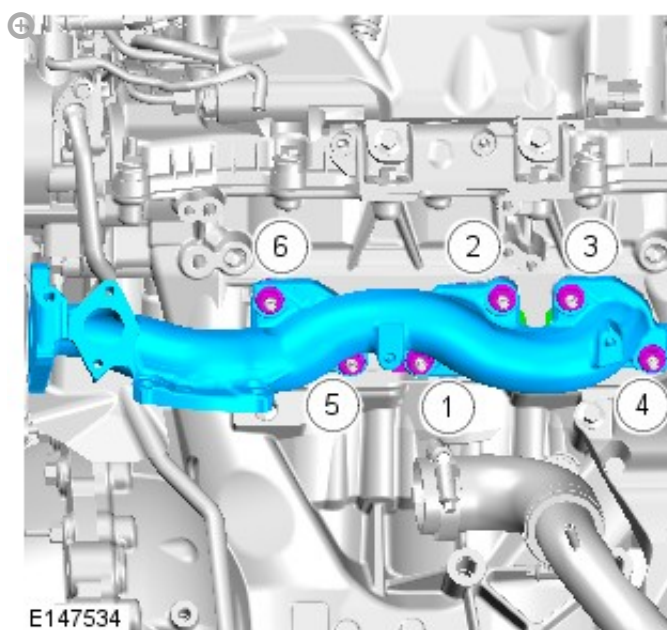

Torque: 28 Nm


3.

CAUTION:

Install new studs.

NOTE:

Install a new gasket.

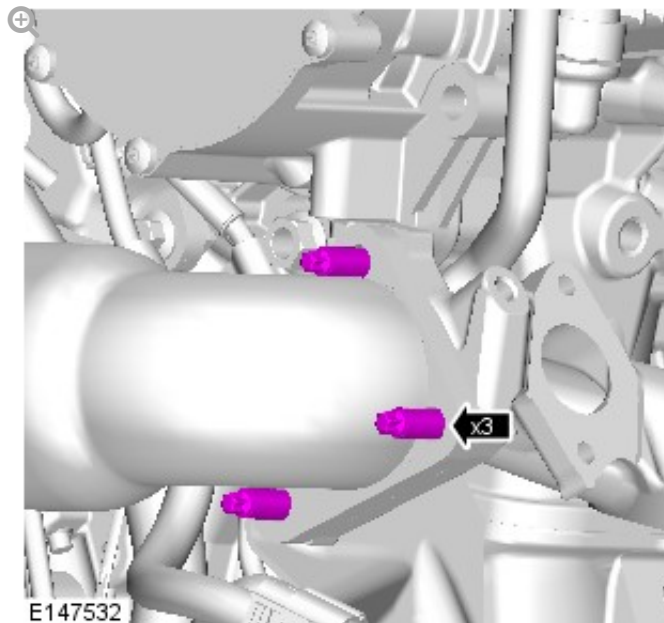


Renew Part: *Exhaust manifold cross-over pipe studs.*

Torque: 13 Nm

4.

CAUTION:

Make sure that new nuts are installed.

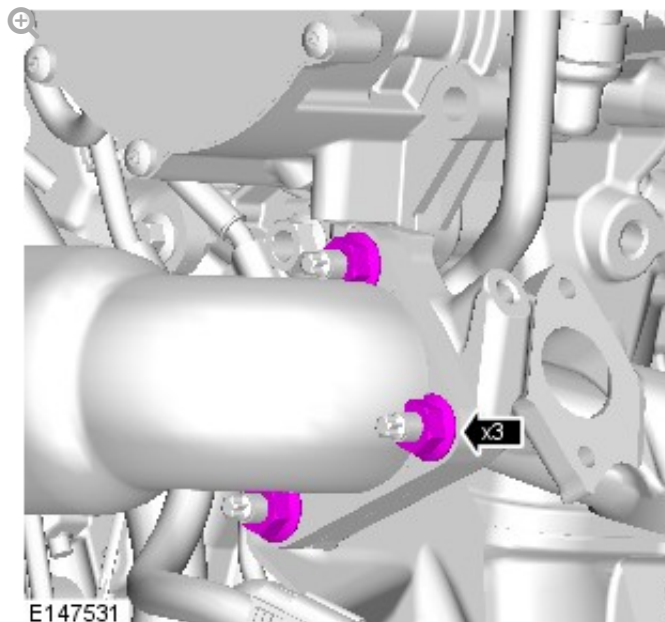

Renew Part: *Exhaust manifold cross-over pipe nuts.*

Torque: **24 Nm**


5.

WARNING:

Make sure that new nuts are installed.

CAUTIONS:

- Make sure that the area around the component is clean and free of foreign material.
- Install a new turbocharger to exhaust manifold gasket every time the turbocharger is removed.

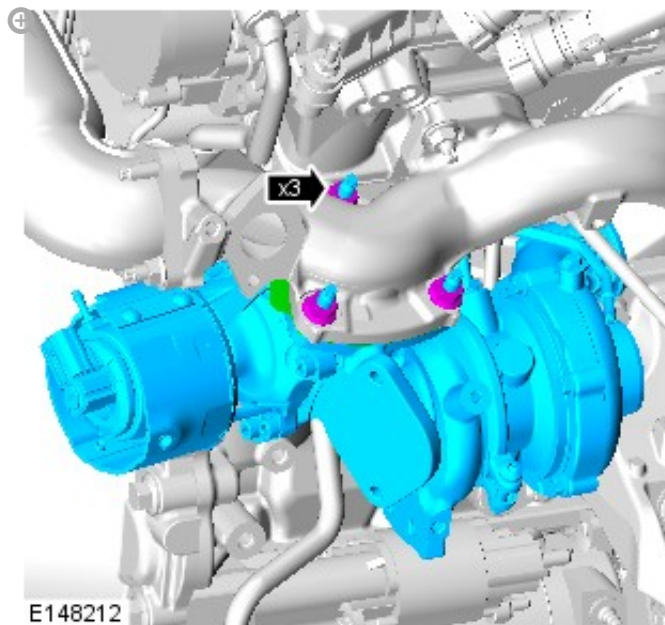

Torque: 24 Nm


6.

CAUTION:

Apply Loctite 243 to the bolts.

NOTE:

Make sure to clean the threads prior to installation.

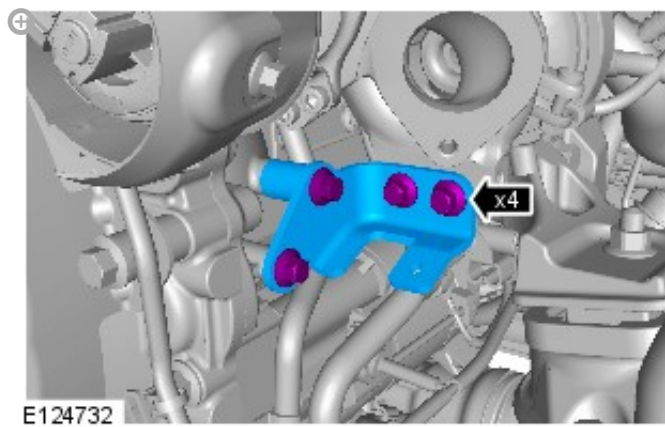


Torque: 32 Nm

7.


NOTES:

- Tighten the bolts in the indicated sequence.
- Some variation in the illustrations may occur, but the essential information is always correct.

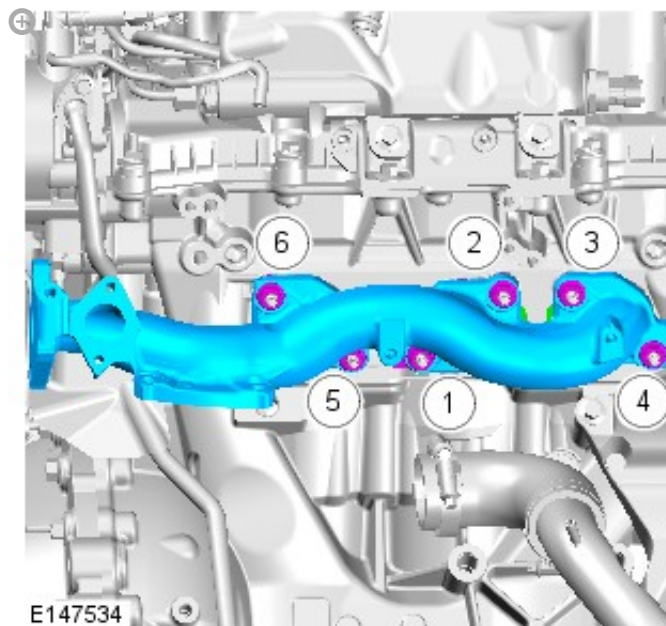


Torque: 28 Nm

8.

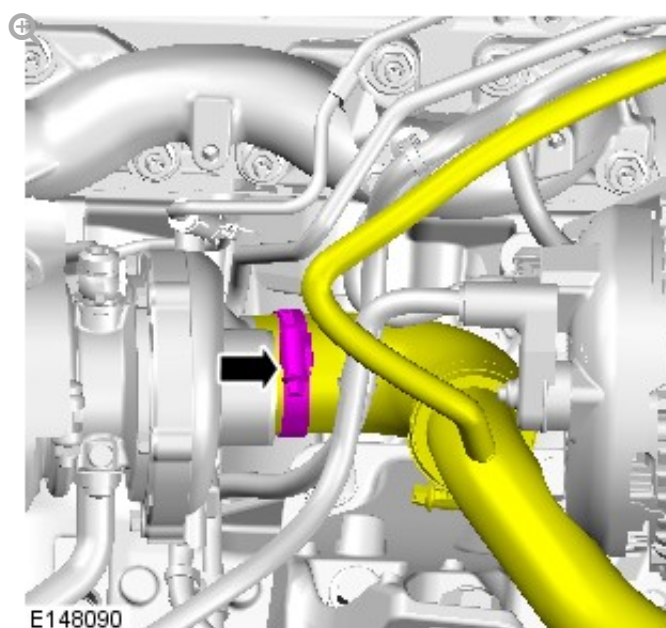


9.

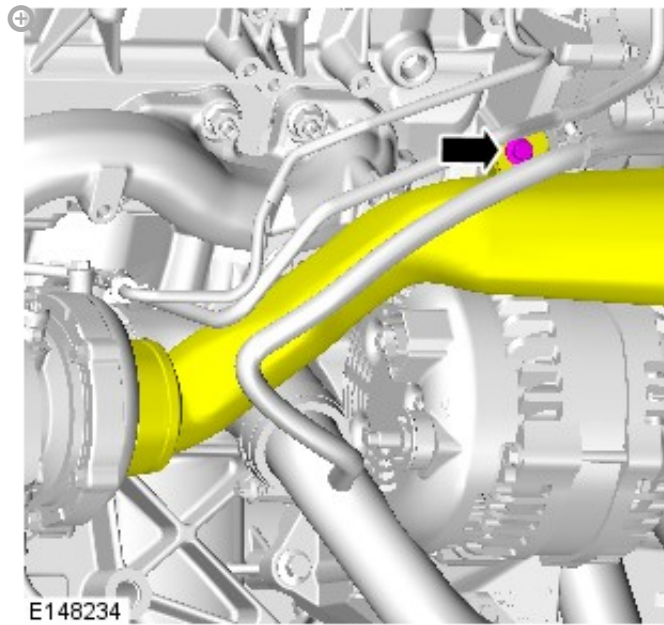

Torque: 10 Nm


10.

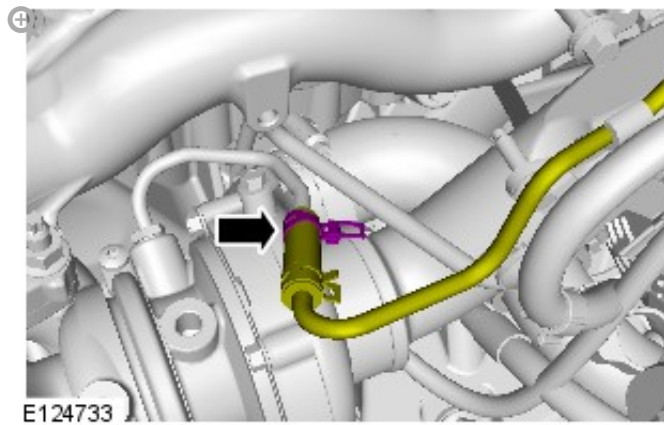

11.


CAUTIONS:

- Make sure that new sealing washers are installed.
- Make sure that a new bolt is installed.

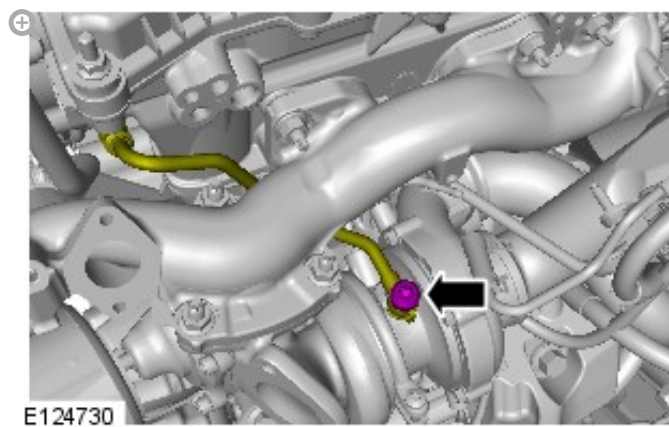


Torque: 30 Nm


12.

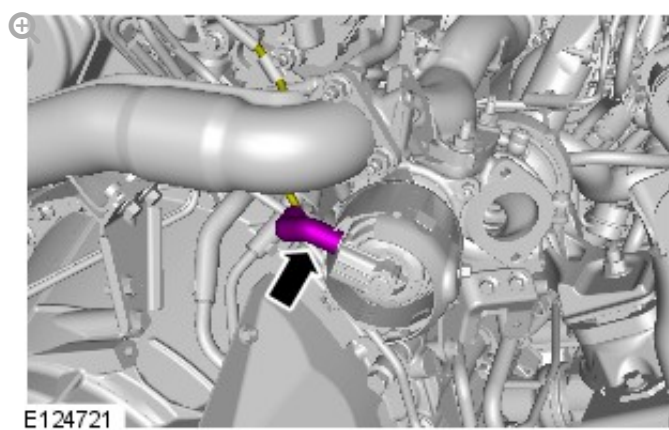

13.

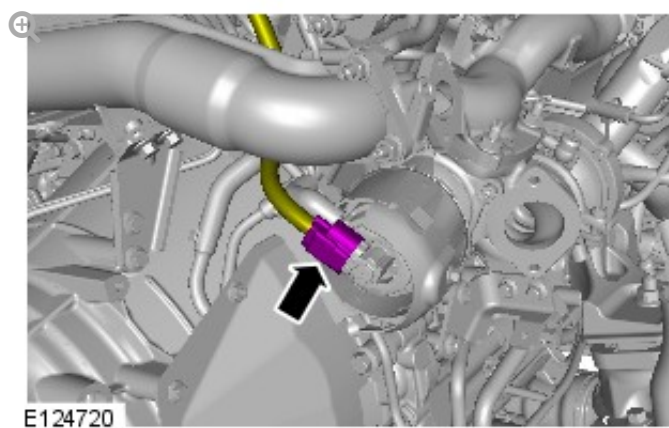


14.

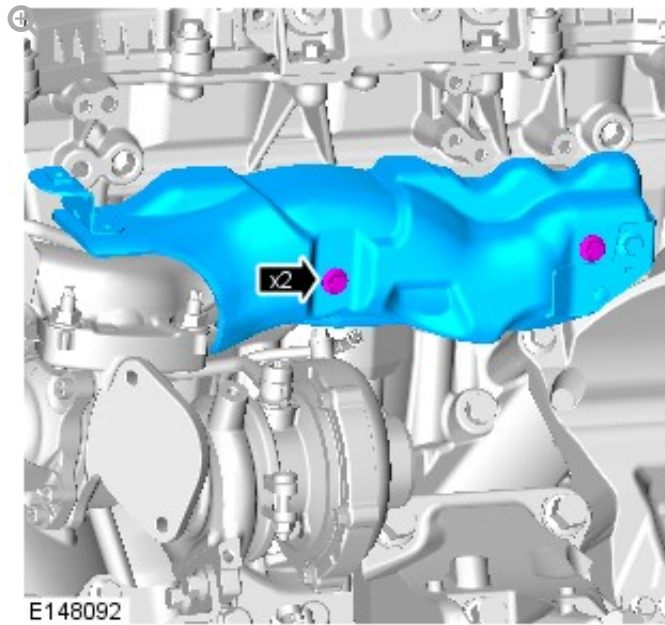

Torque: 11 Nm

15.

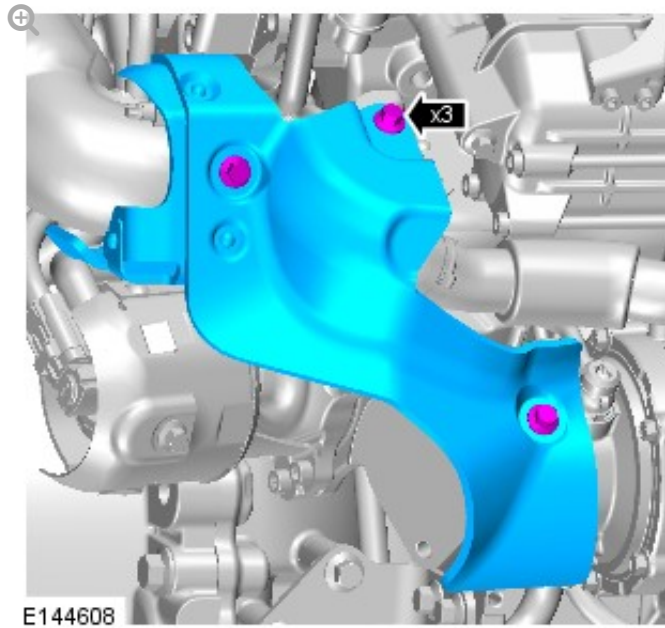


Torque: 9 Nm

16.

NOTE:

Install new gaskets.

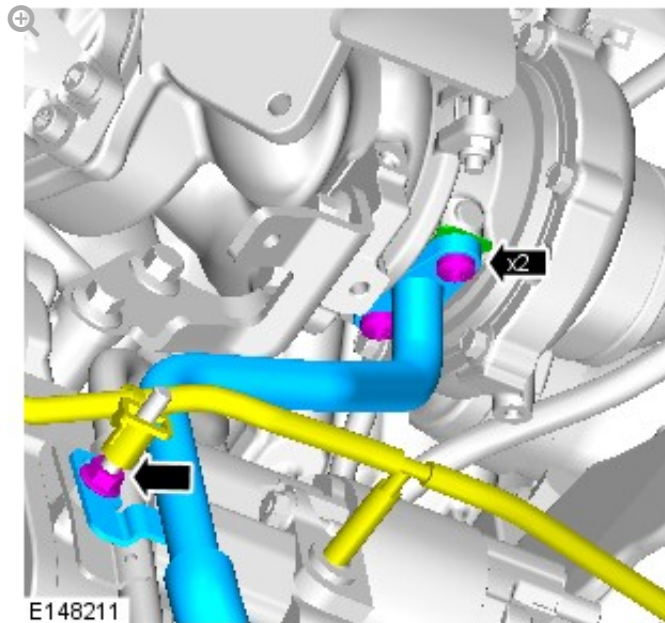


Torque: 9 Nm

17.

NOTE:

Install a new gasket.

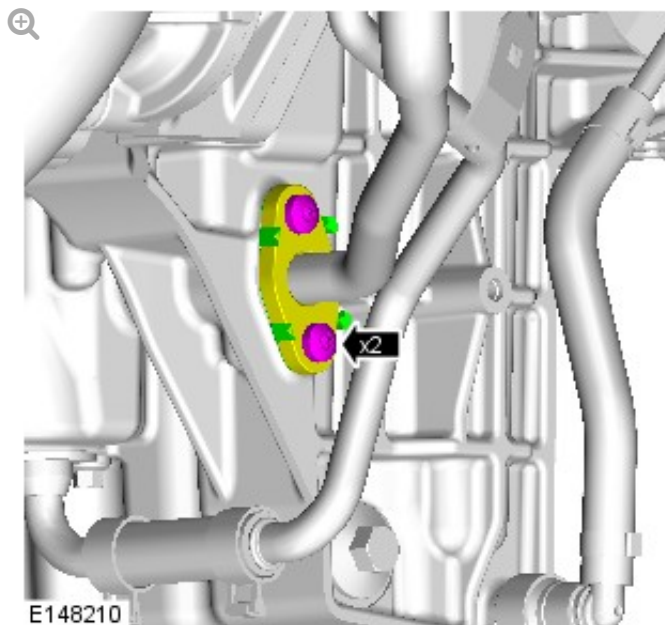

Torque: 9 Nm

18. Refer to: [Right Exhaust Gas Recirculation Valve](#) (303-08A Engine

Emission Control - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel,
Removal and Installation).

19. Refer to: [Engine Oil Draining and Filling](#) (303-01A Engine - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, General Procedures).