

2016.0 RANGE ROVER (LG), 303-01

ENGINE - TDV6 3.0L DIESEL - GEN 2/TDV6 3.0L DIESEL

RIGHT VALVE COVER (G1509156)

REMOVAL AND INSTALLATION

	COVER -				
	CAMSHAFT/ROCKER	3000			
12.29.44	OR CYLINDER HEAD	CC,	5.6	USED	
	- RH/REAR -	TDV6		WITHINS	+
	RENEW				

SPECIAL TOOL(S)



100-012
Slide Hammer



310-213

Fuel Injector
Removal Adapter

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 1	Renew Part	Camshaft cover gasket
Installation Step 12	Renew Part	Fuel injector washers
Installation Step 12	Renew Part	Fuel injector O-ring seals


REMOVAL

NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.

1. Disconnect the battery ground cable
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).
2. Raise and support the vehicle.


3. Refer to: [Timing Cover](#) (303-01A Engine - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).
4. Refer to: [Right Fuel Rail](#) (303-04A Fuel Charging and Controls - TDV6 3.0L Diesel, Removal and Installation).
5. Refer to: [Intake Air Shutoff Throttle](#) (303-04A Fuel Charging and Controls - TDV6 3.0L Diesel, Removal and Installation).

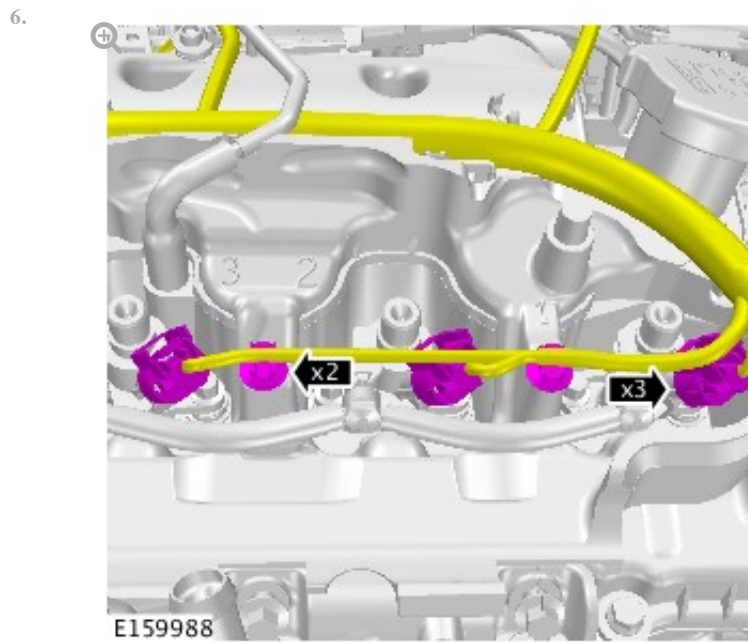


7. Refer to: [Fuel Injection Component Cleaning](#) (303-04A Fuel Charging and Controls - TDV6 3.0L Diesel, General Procedures).

8. **CAUTION:**


Be prepared to collect escaping fuel.

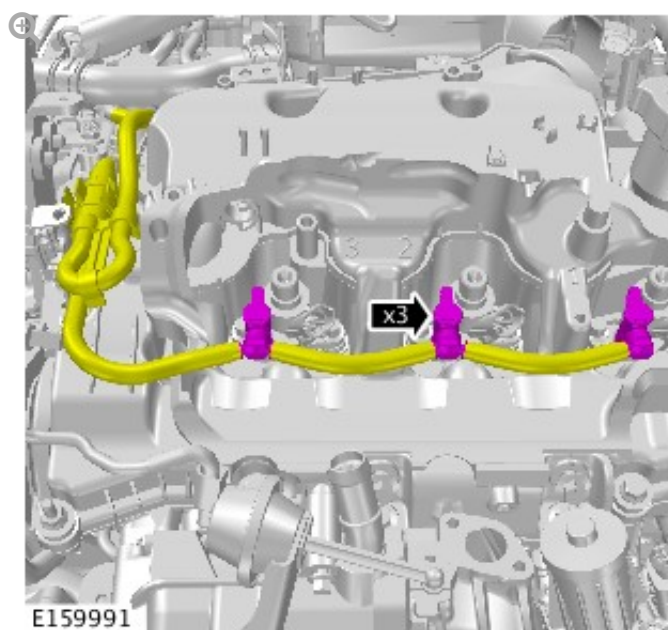

9.

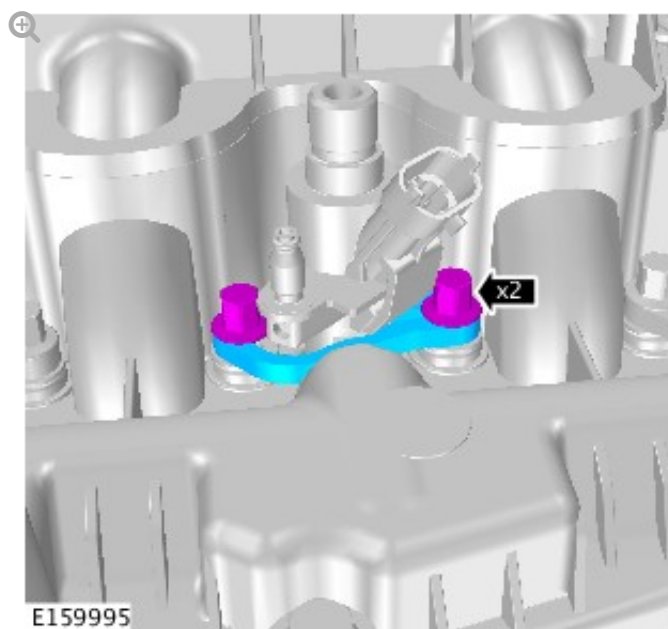


10.

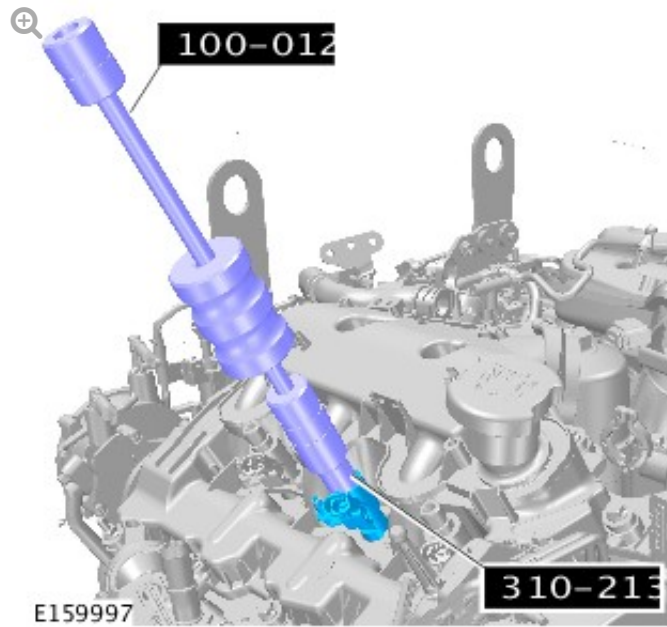

Install the special tool.


Special Tool(s): 100-012, 310-213

11.

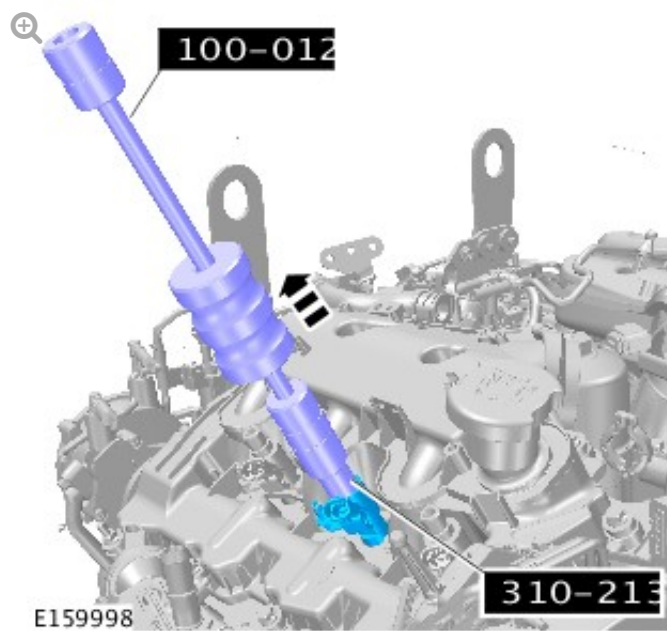

Special Tool(s): 100-012, 310-213

12.

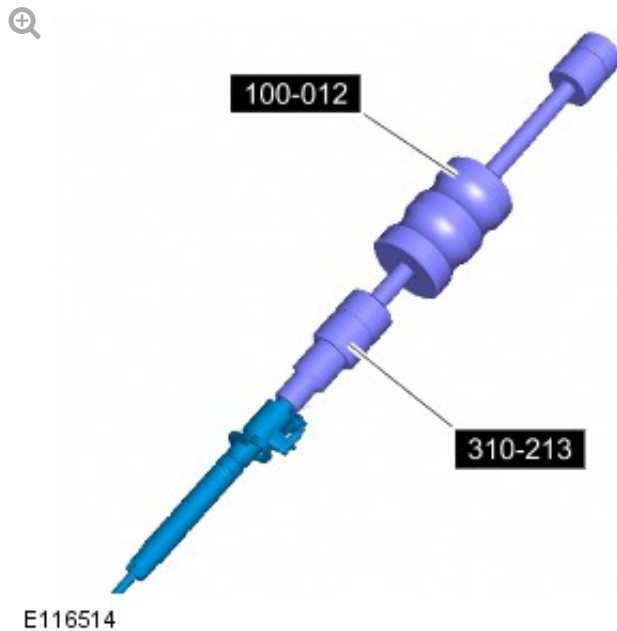

Remove the special tool.


Special Tool(s): [100-012](#), [310-213](#)

13. Remove the 2 remaining fuel injectors.

14.

NOTES:

- This step is only required if new components have not been installed.
- Remove and discard the O-ring seals.
- Discard the sealing washers.
- Repeat this step for each of the fuel injectors.

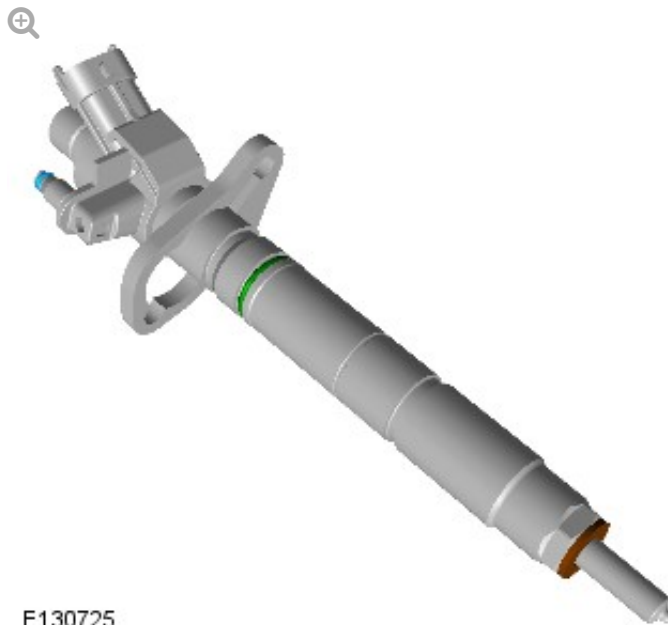


E130725

15.


NOTE:

This step is only required if new components have not been installed.

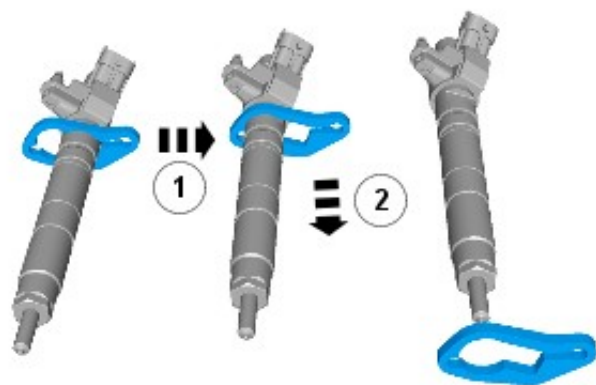


E144699

16.

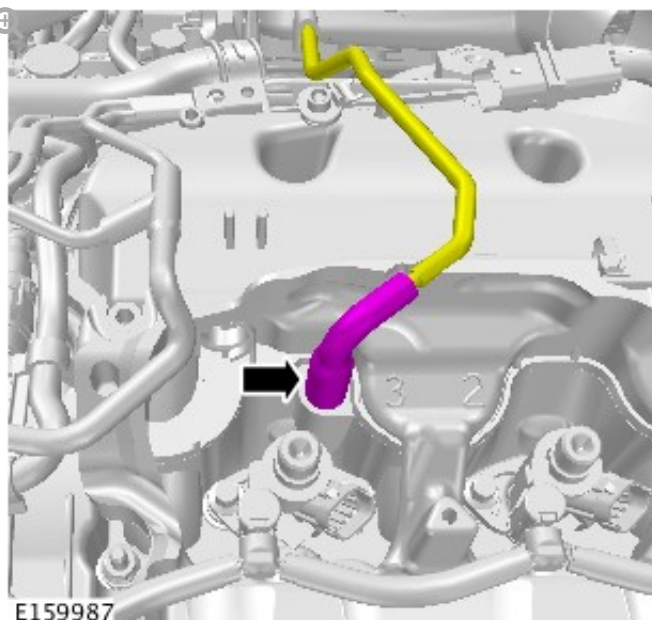


E159987


17.

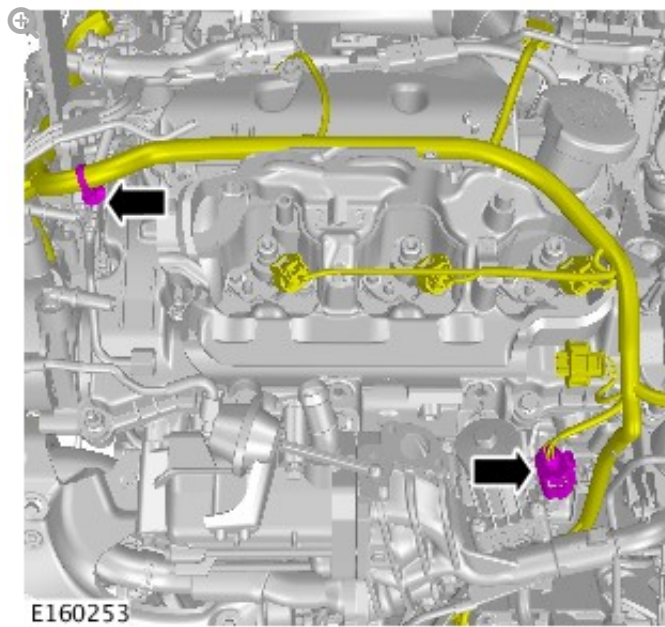


18.

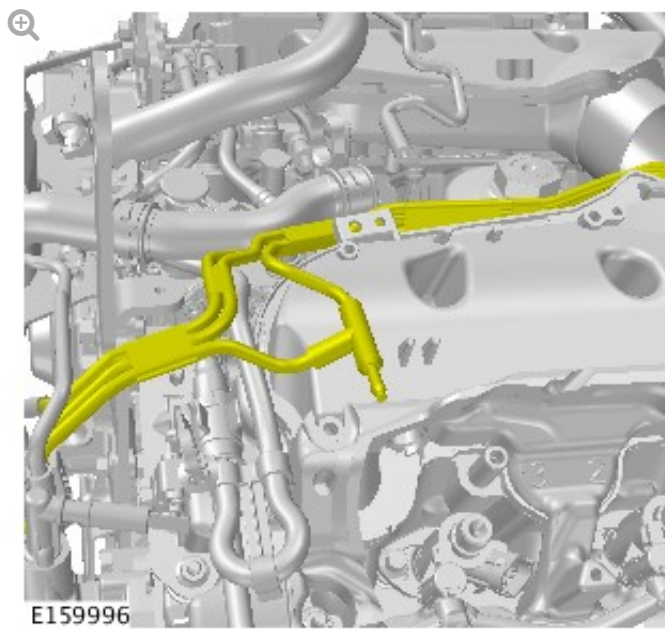


19.

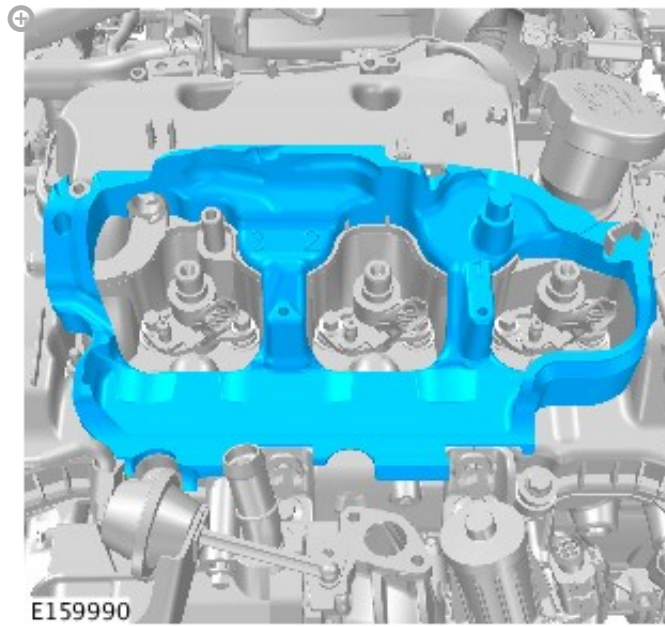


20.

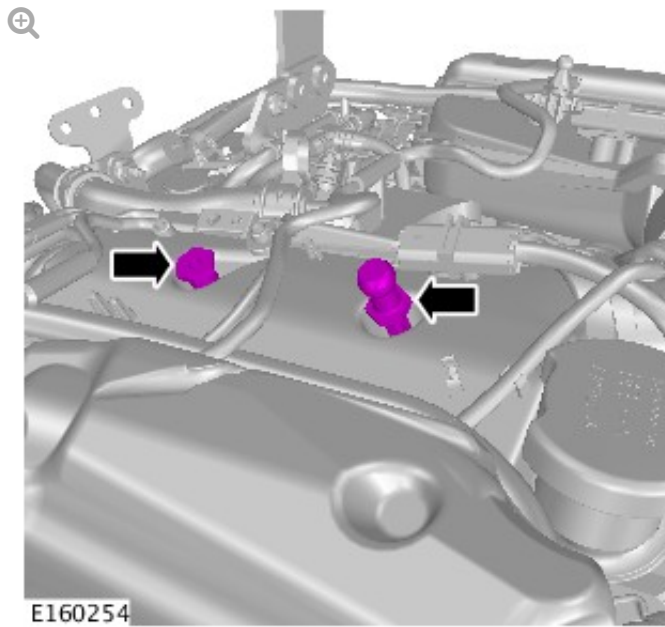


21.

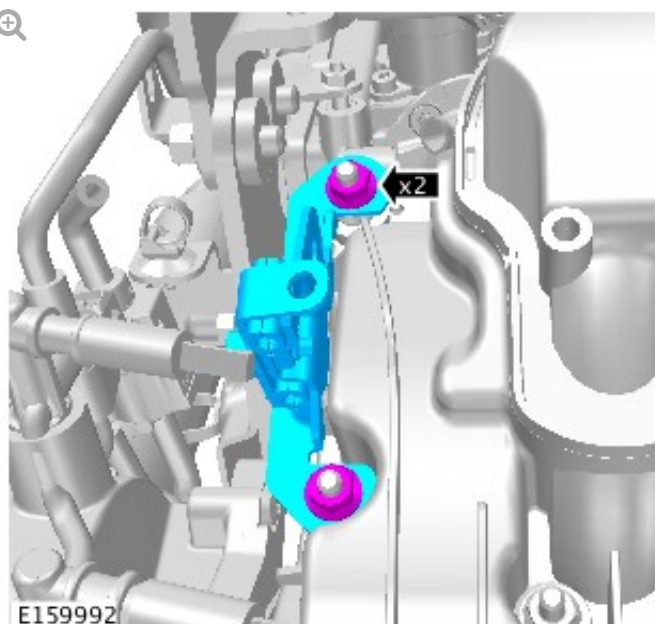


22.

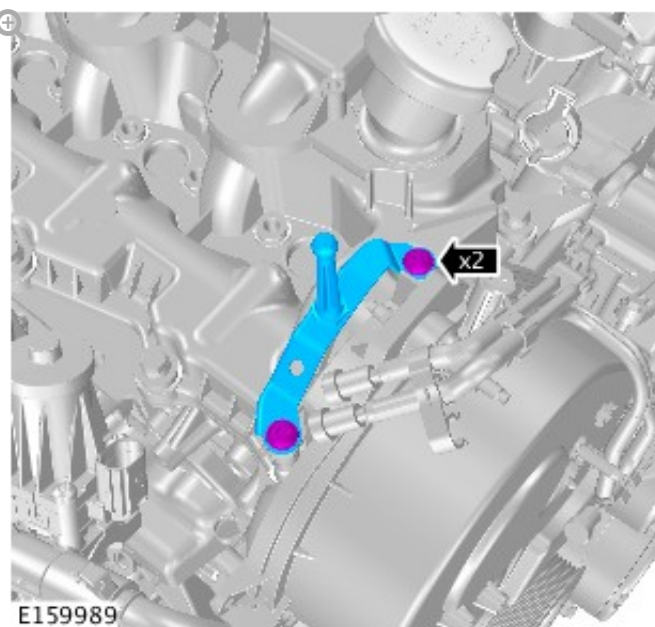

23.

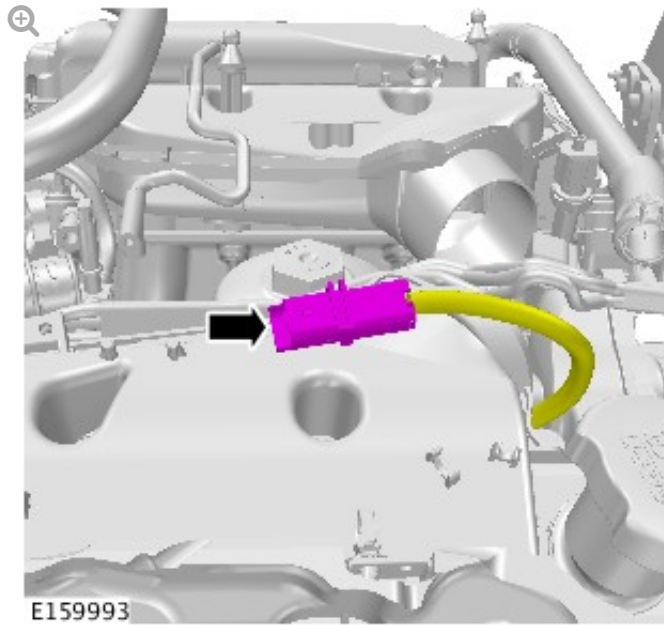

24.

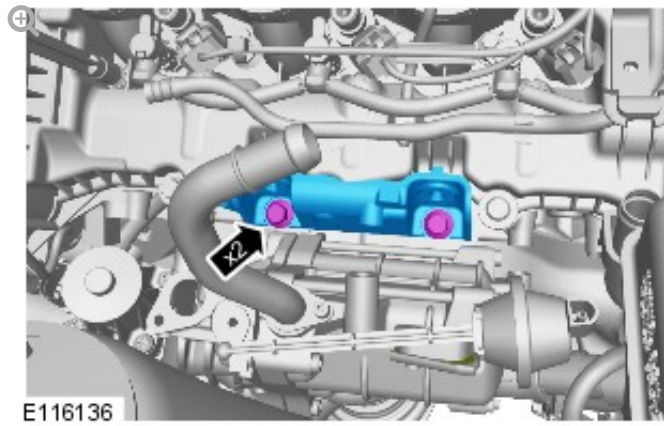


25.

CAUTION:

Make sure that the mating faces are clean and free of corrosion and foreign material.

NOTES:

- Discard the gasket.
- Some variation in the illustrations may occur, but the essential information is always correct.

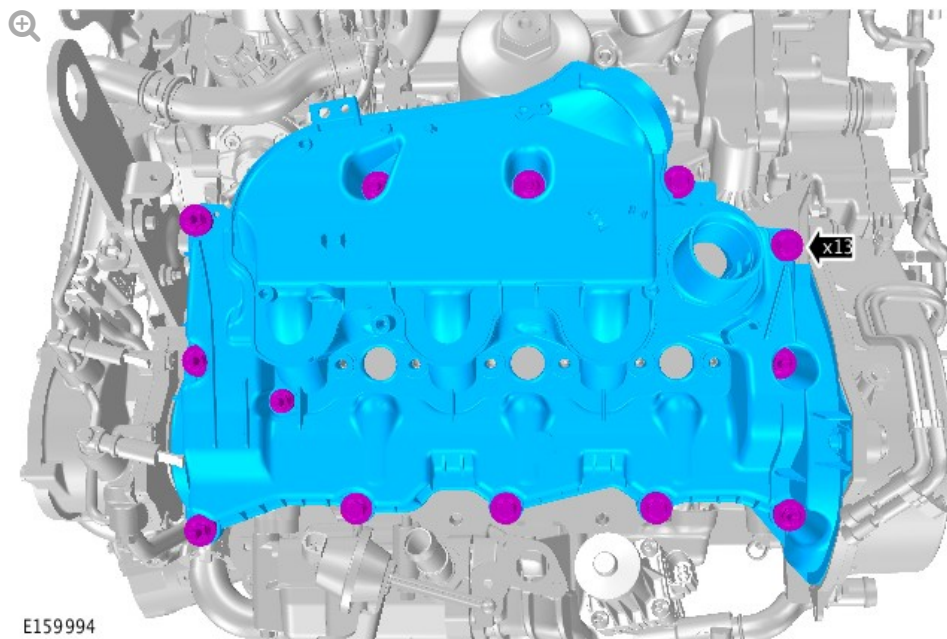

INSTALLATION


1.

CAUTIONS:

- Make sure that the mating faces are clean and free of corrosion and foreign material.
- Install all the bolts finger tight before final tightening.

NOTE:

Install a new gasket.

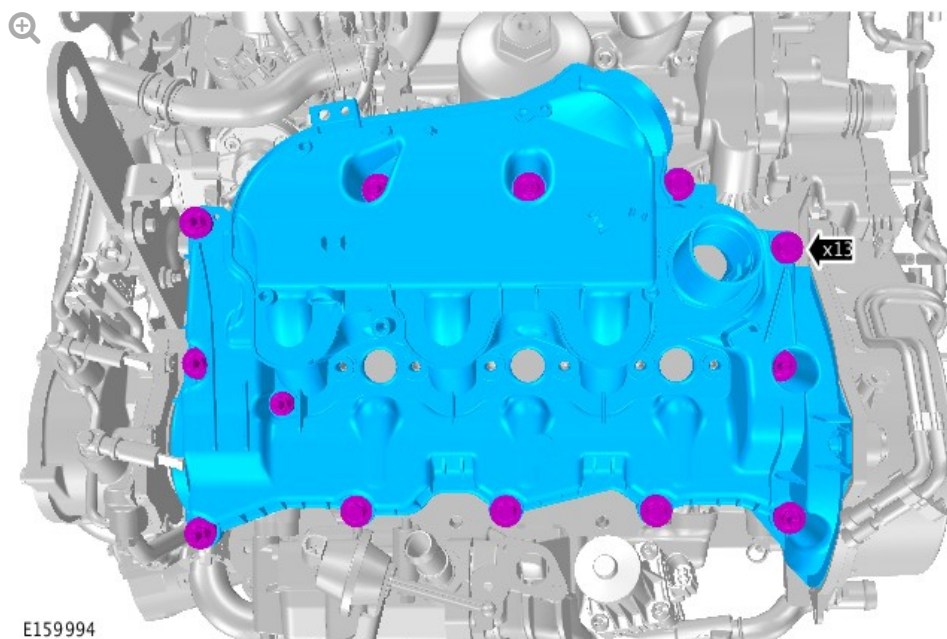


E159994

Renew Part: *Camshaft cover gasket.*

Torque: 10 Nm


2.

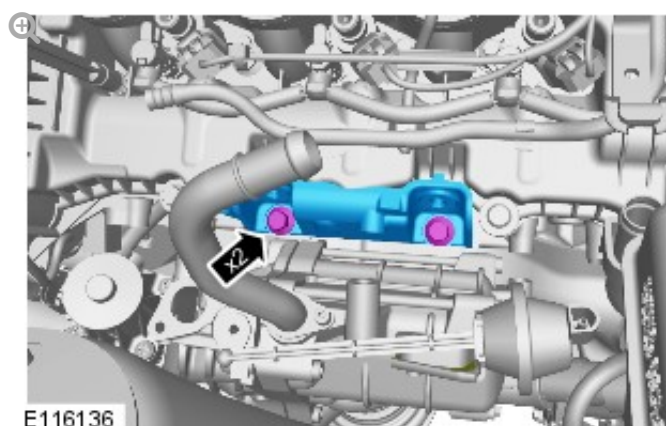


E116136

Torque: 24 Nm

3.

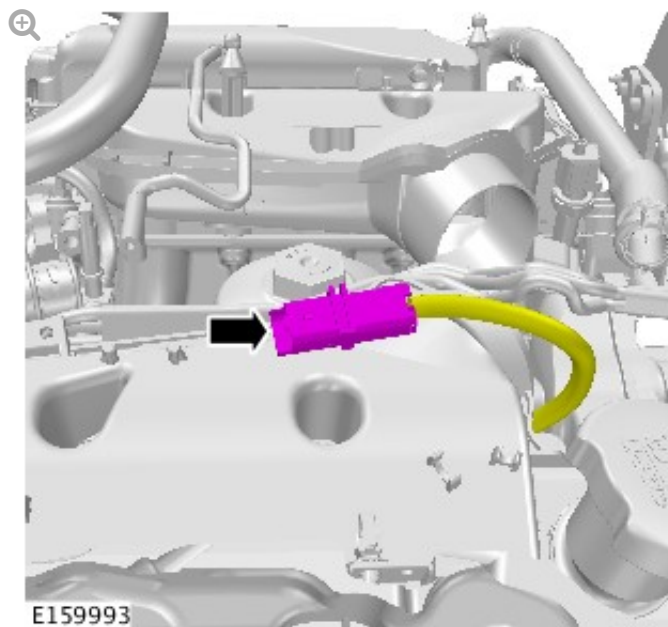


4.

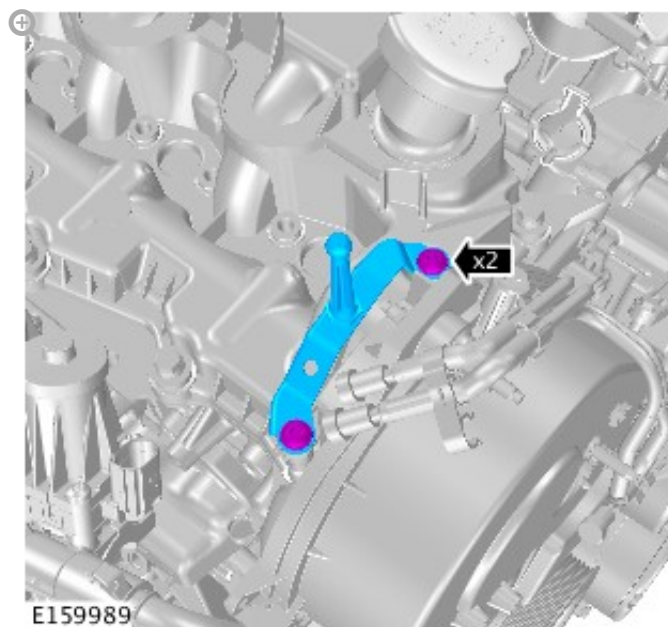


Torque: 9 Nm

5.

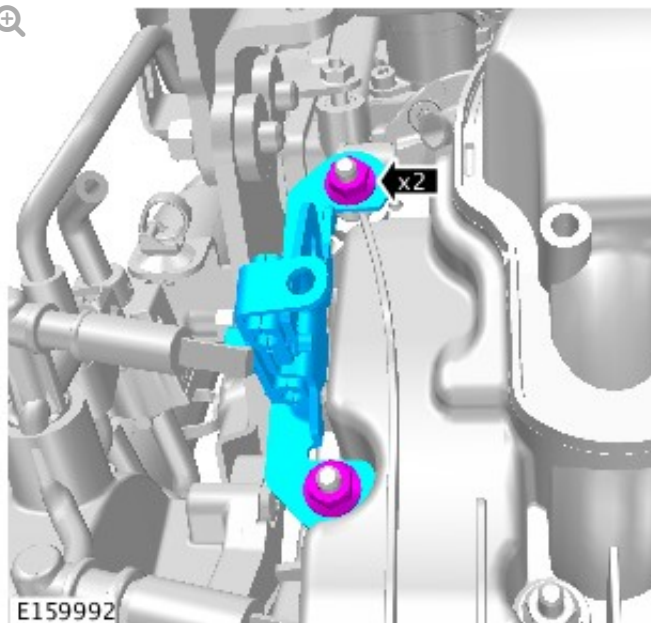


Torque: 9 Nm


6.

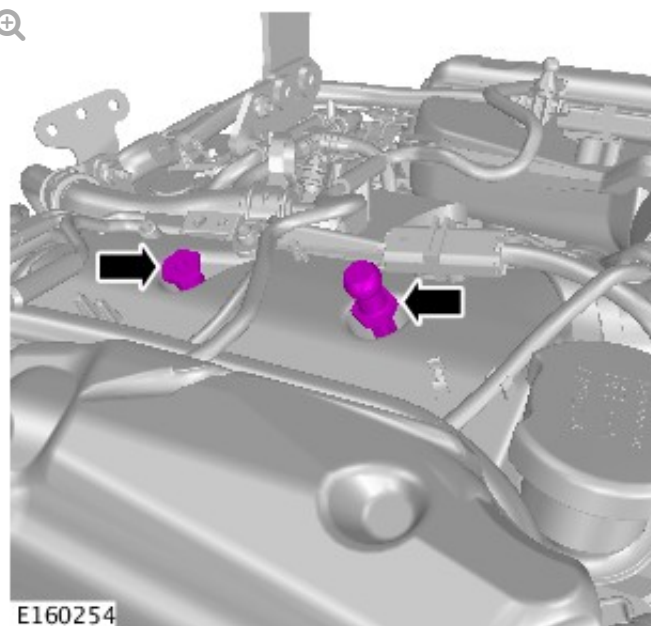


7.

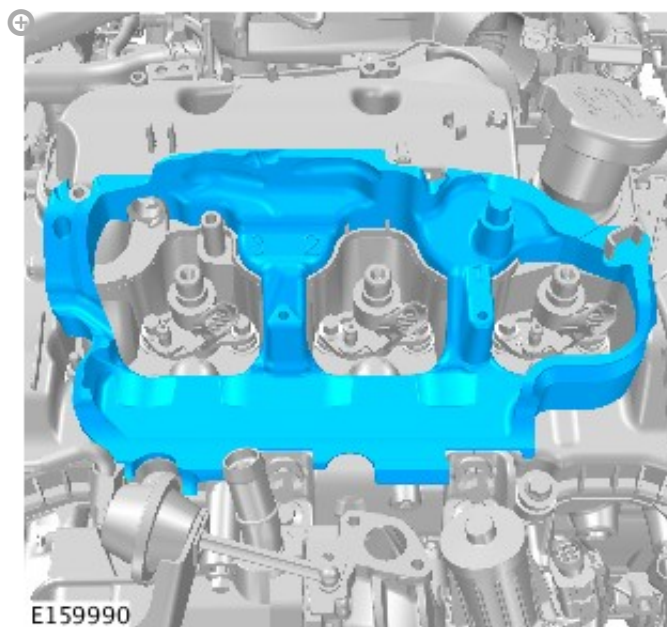


8.

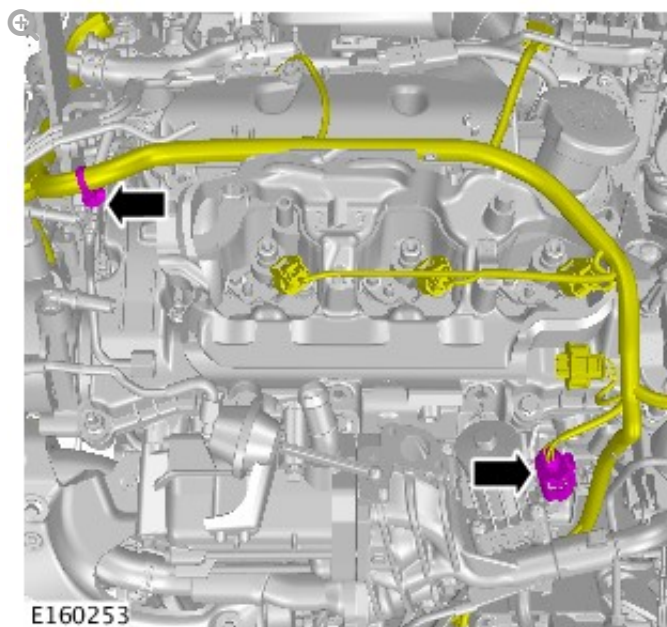

9.

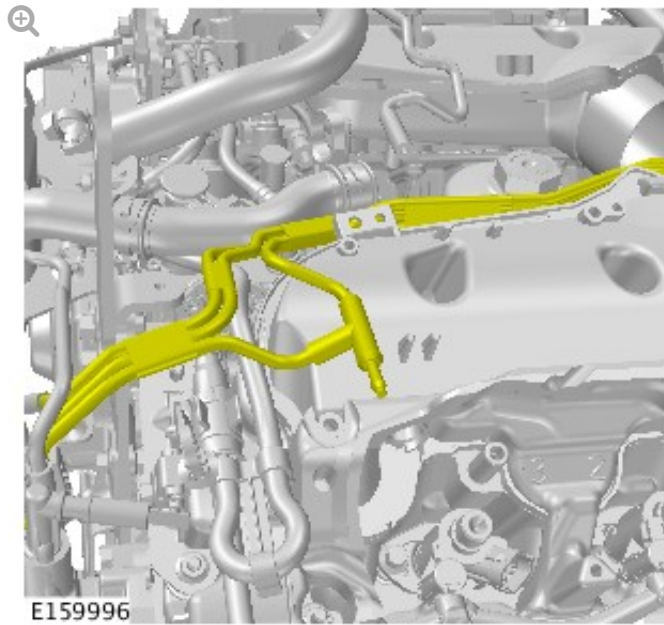


10.

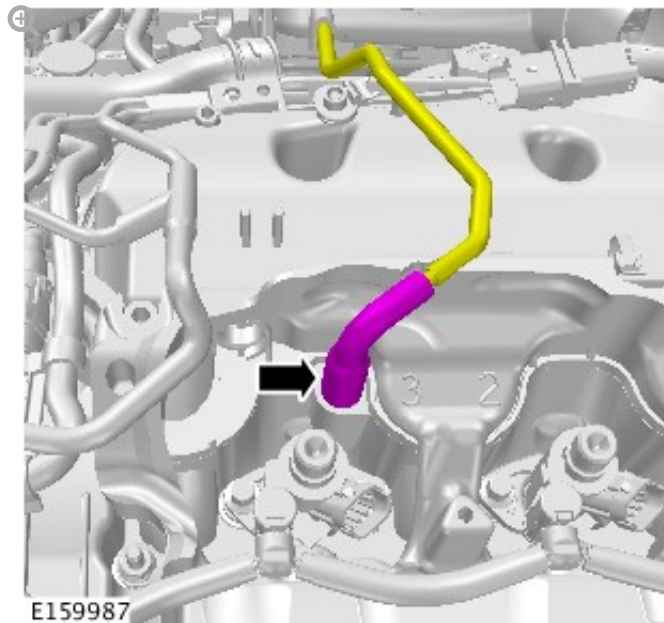

11.

NOTE:

This step is only required if previously removed.

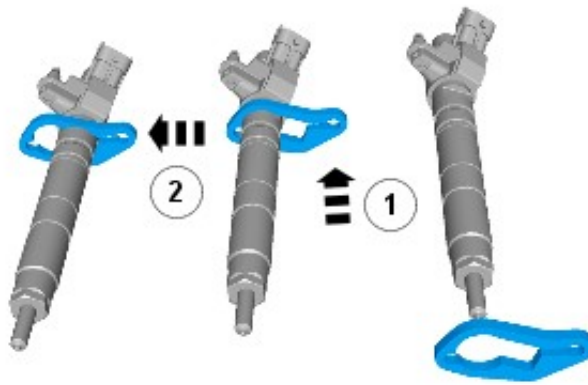

E144700


12.

CAUTION:

Make sure that new sealing washers are installed.

NOTES:

- This step is only required if new components are not installed.
- Install new O-ring seals.
- Repeat this step for each of the fuel injectors.
-

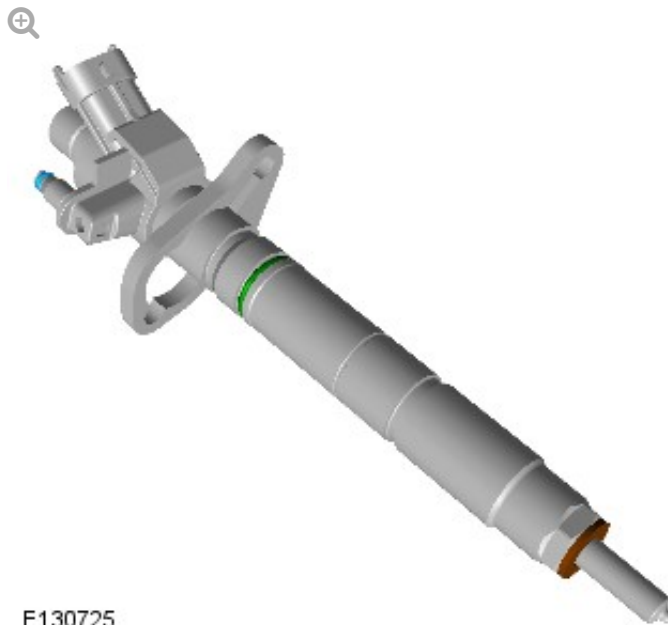

E130725

Renew Part: [Fuel injector washers](#).

Renew Part: [Fuel injector O-ring seals](#).


13.

CAUTION:

Make sure that the area around the open fuel injector ports are clean and free of foreign material and lubricant prior to installing the fuel injector.

NOTE:

Tighten the retaining bolts evenly and progressively.

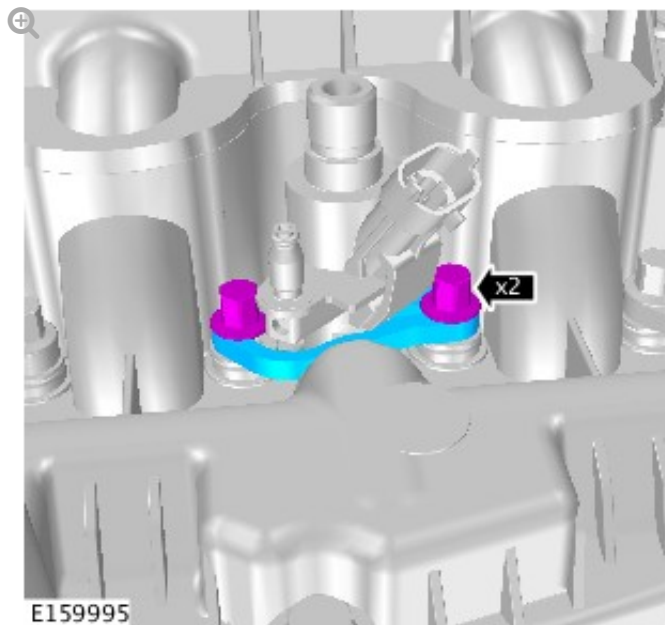

Torque: 9 Nm


14.

CAUTION:


Be prepared to collect escaping fuel.

NOTE:

Make sure that the fuel injector return line has a maximum of 8 uses.

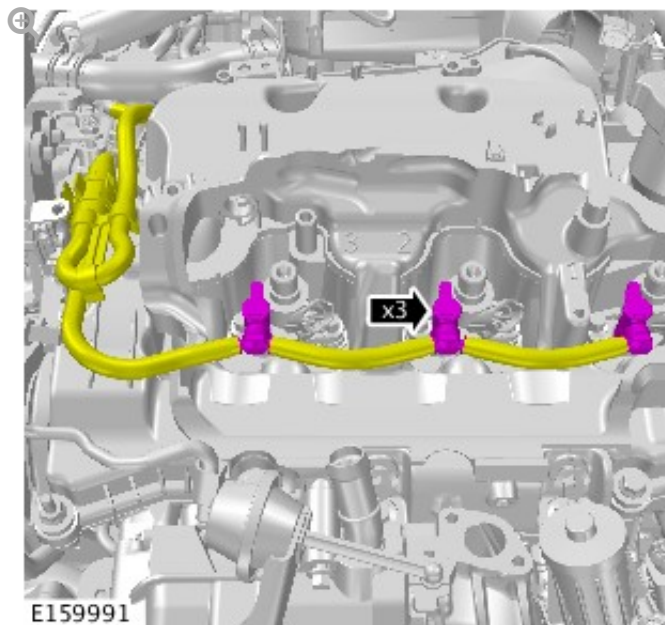

15. Install the 2 remaining fuel injectors.

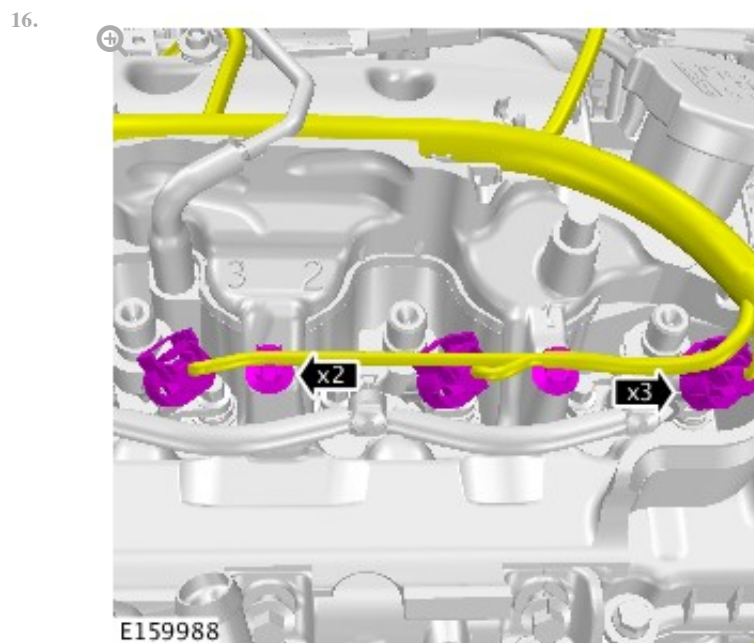

17. Refer to: [Intake Air Shutoff Throttle](#) (303-04A Fuel Charging and Controls - TDV6 3.0L Diesel, Removal and Installation).
18. Refer to: [Right Fuel Rail](#) (303-04A Fuel Charging and Controls - TDV6 3.0L Diesel, Removal and Installation).

19. Refer to: [Timing Cover](#) (303-01A Engine - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).
20. Connect the battery ground cable
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).