

PUBLISHED: 31-AUG-2017
2015.0 RANGE ROVER (LG), 303-01

ENGINE - TDV8 4.4L DIESEL

ENGINE (G1509185)

INSTALLATION

INSTALLATION

SPECIAL TOOL(S)



303-021

303-021



Engine support
bracket



E131596

JLR-303- 1569

Lifting Bracket,
Engine

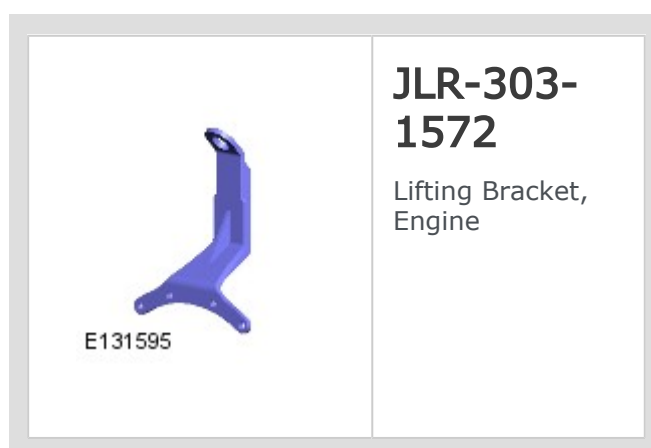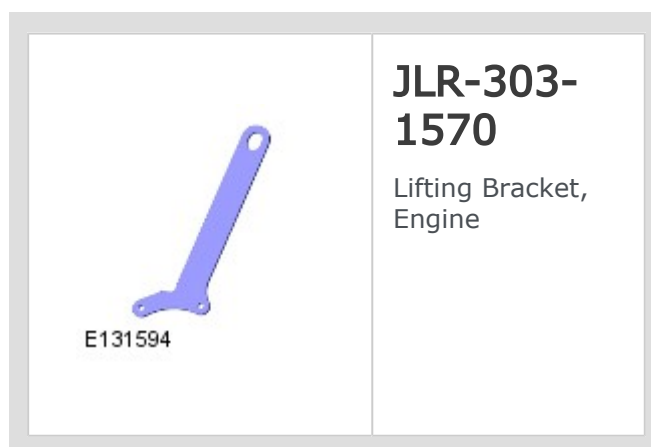

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME	
Step 19	Renew Part	Air conditioning pipe to compressor O-ring seals	1
Step 40	Renew Part	Steering column lower shaft lower bolt	1



NOTES:


- Some variation in the illustrations may occur, but the essential information is always correct.
- Some components shown removed for clarity.

1.




NOTE:

This step requires the aid of another technician.

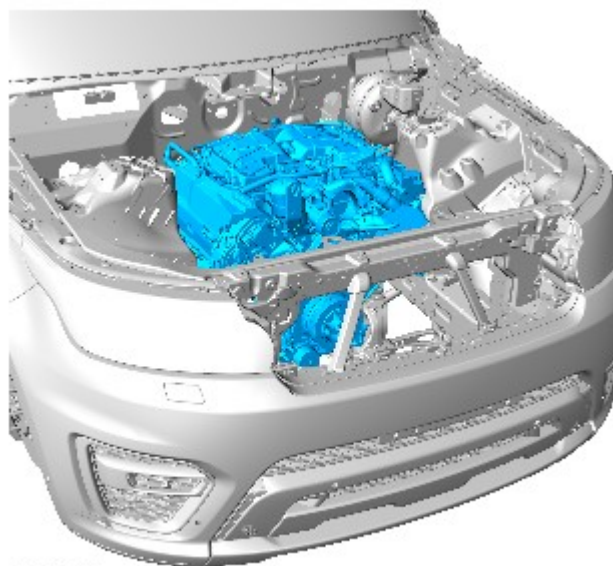


E149361


2.

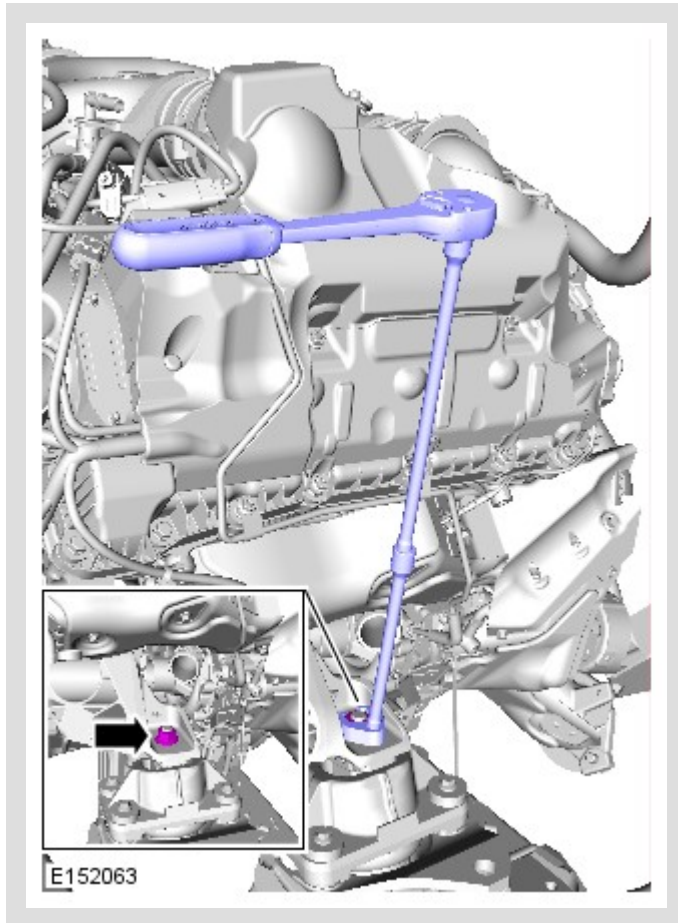


Torque: 110 Nm

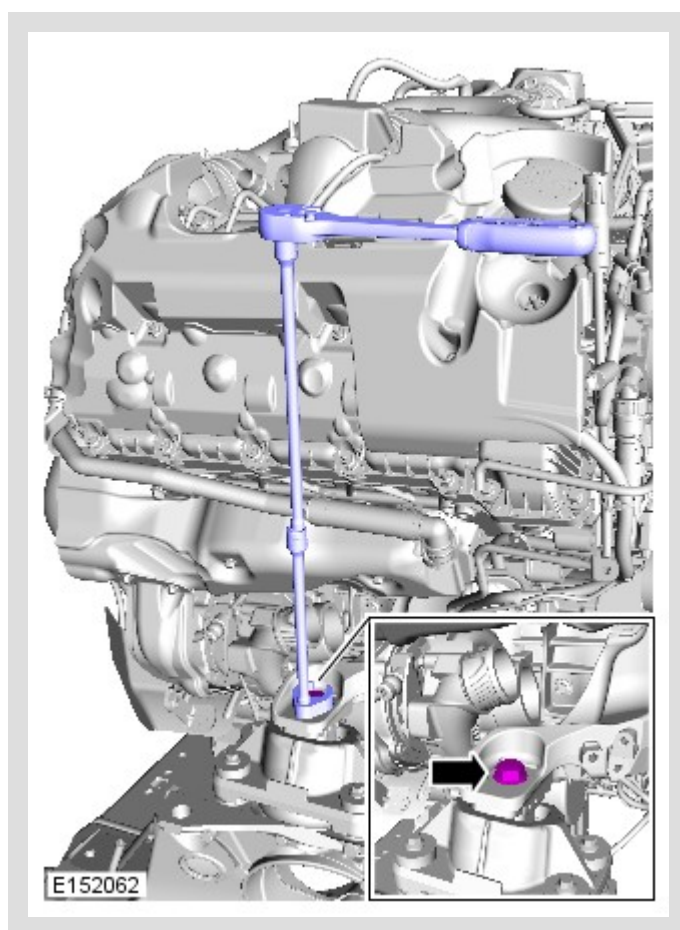

Torque: 110 Nm

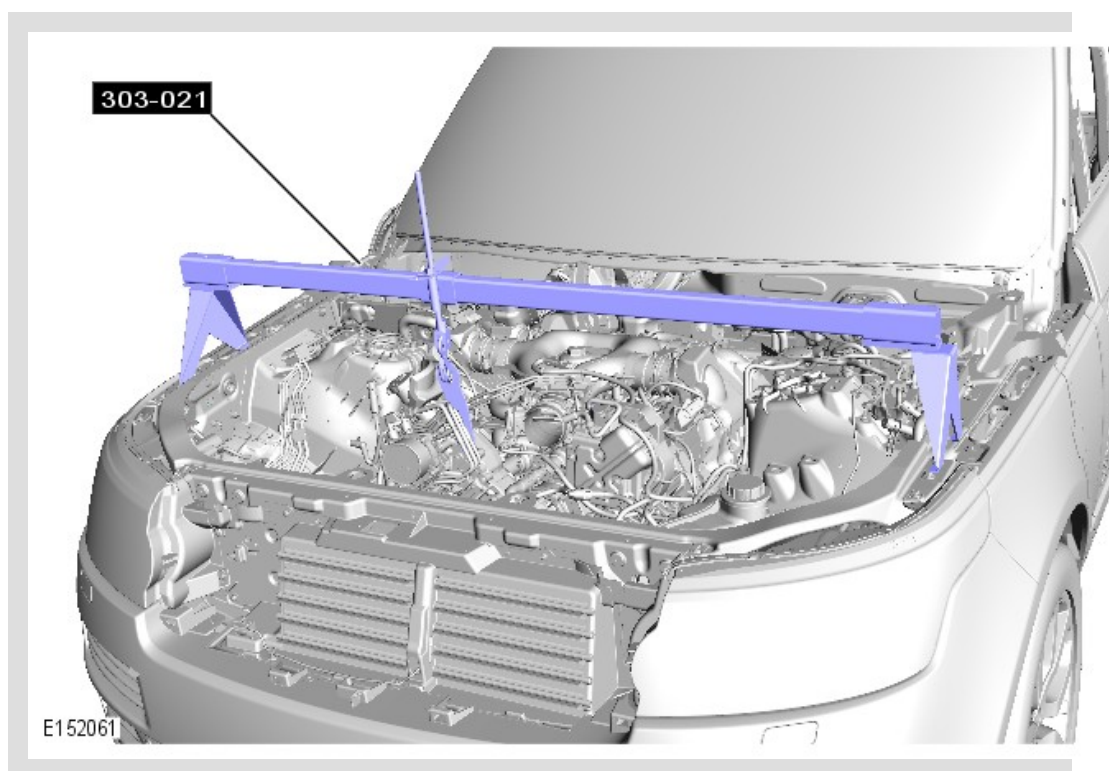


Special Tool(s): [303-021](#)

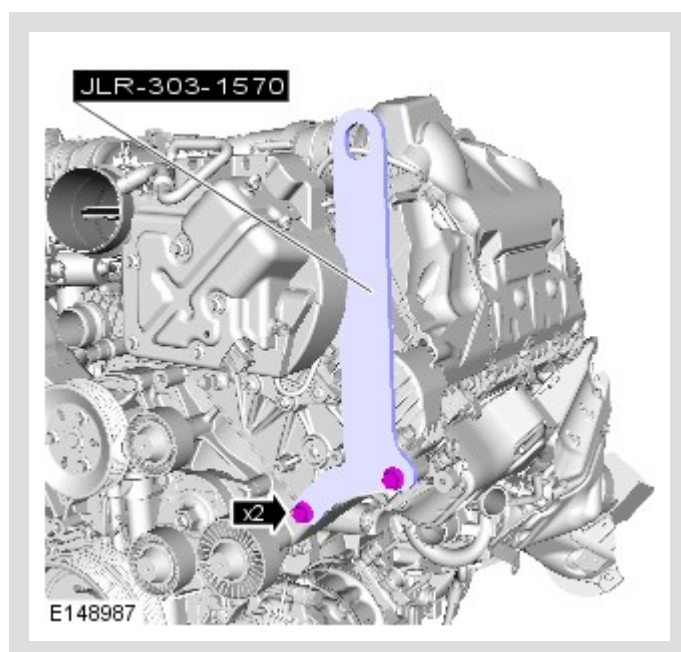


Special Tool(s): [JLR-303-1570](#)

6.

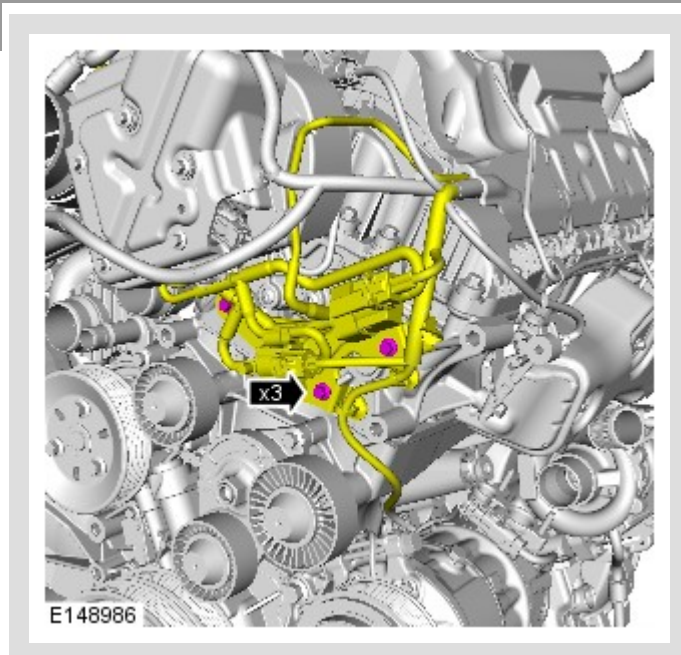


Torque: 10 Nm

7.

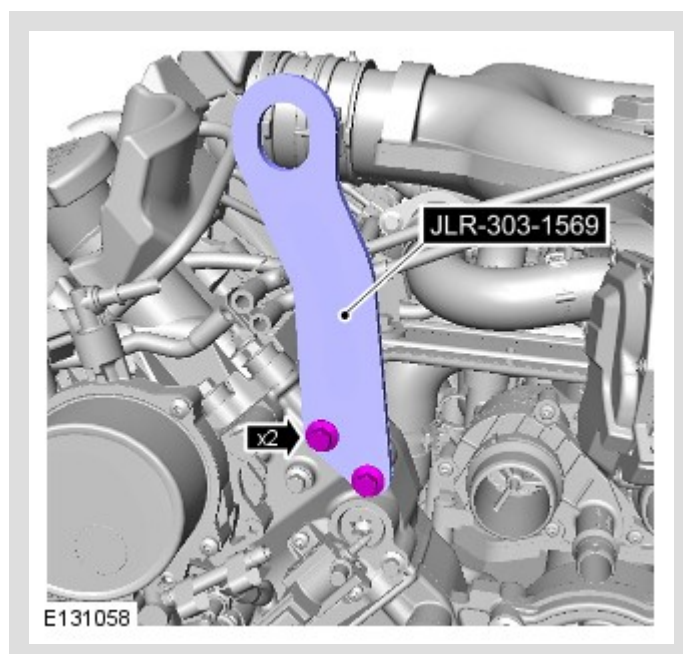


Special Tool(s): [JLR-303-1569](#)


8.

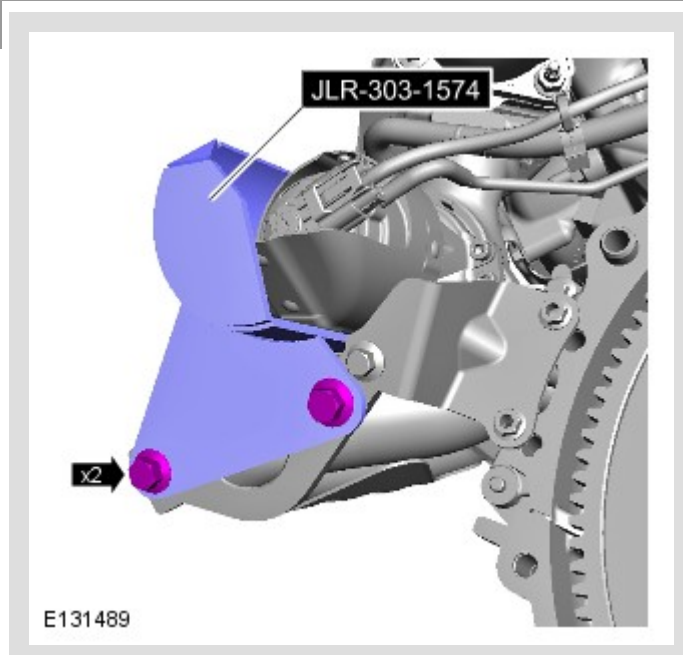

Special Tool(s): [JLR-303-1574](#)

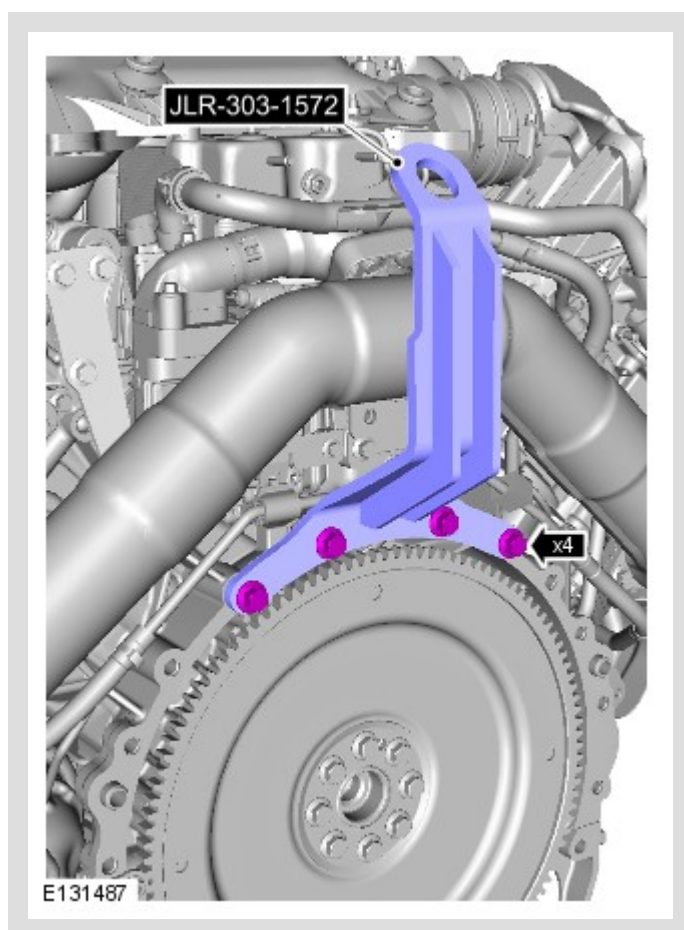


Special Tool(s): [JLR-303-1572](#)

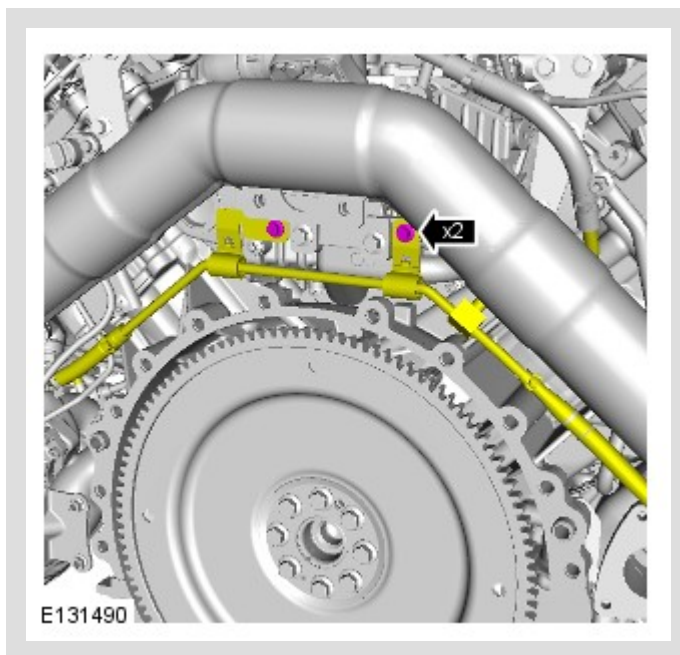


Torque: 12 Nm

11. Refer to: [Transmission - TDV8 4.4L Diesel](#) (307-01B Automatic Transmission /Transaxle - Vehicles With: 8HP70 8-Speed Automatic Transmission AWD, Removal).
12. Refer to: [Differential Case](#) (205-03 Front Drive Axle/Differential, Removal and Installation).
- 13.

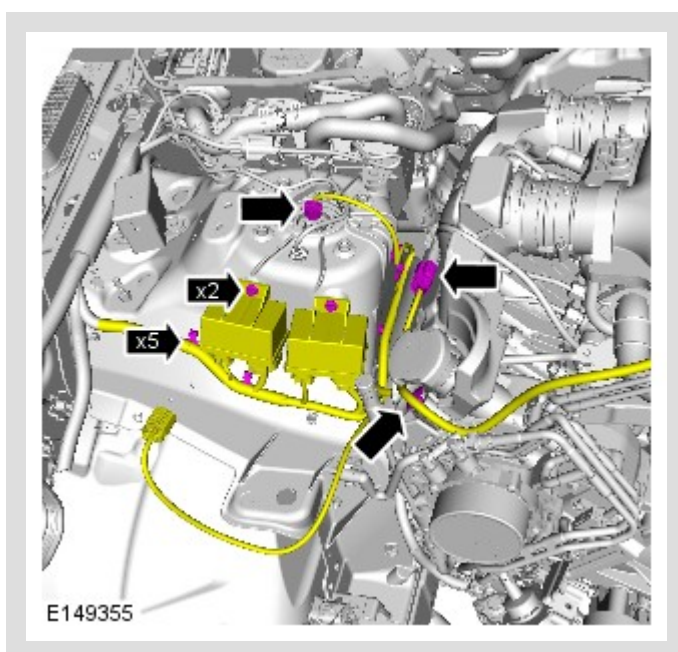


Torque: 10 Nm


14.

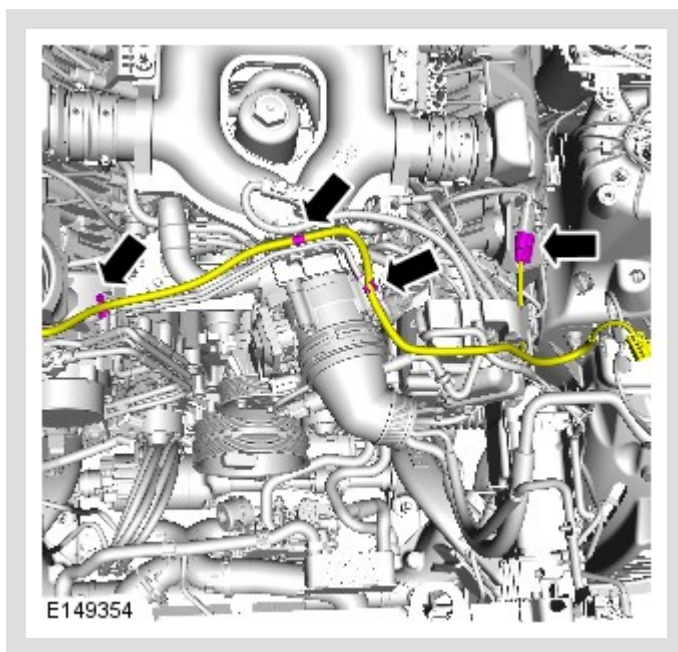


15.

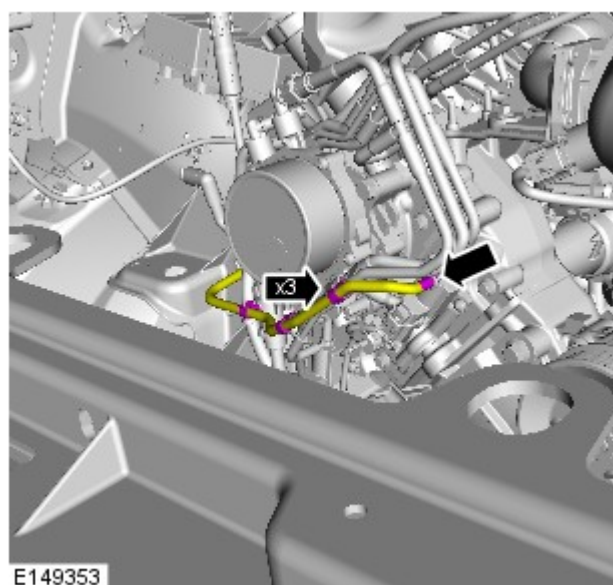

16.

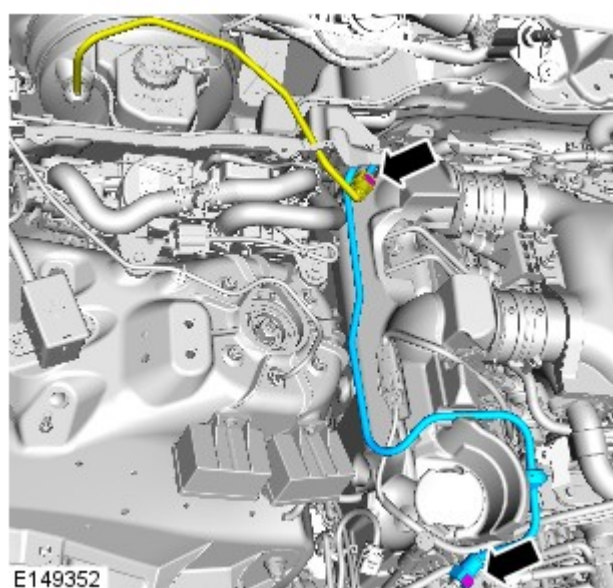


17.

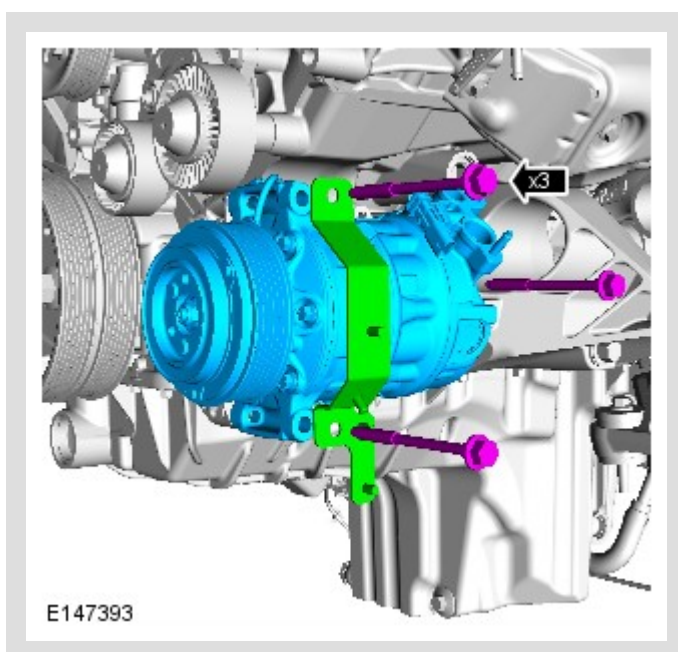

Torque: 25 Nm

18.

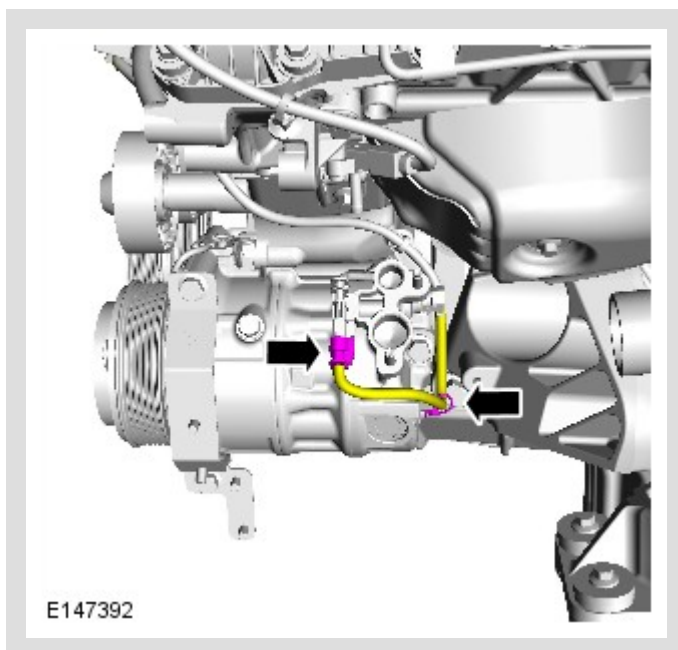


19.






CAUTION:

Install new o-ring seals

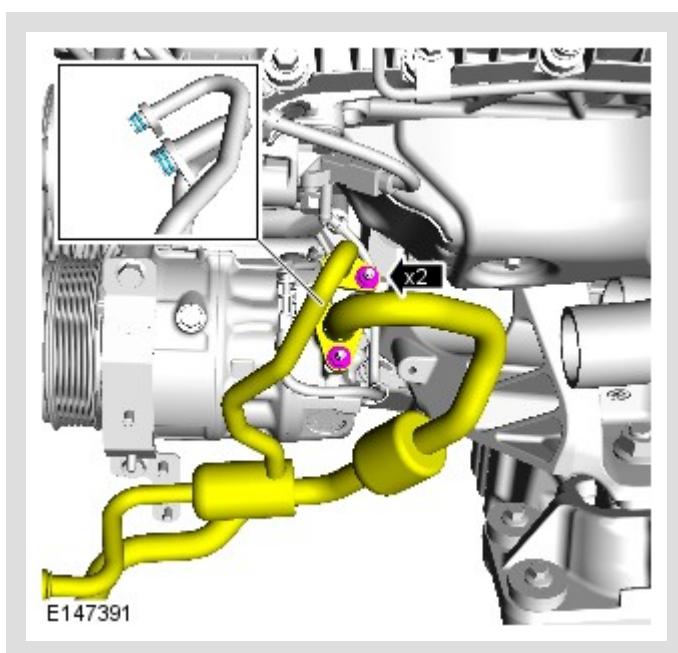


Renew Part: *Air conditioning pipe to compressor O-ring seals : 1 .*

Torque: **9 Nm**

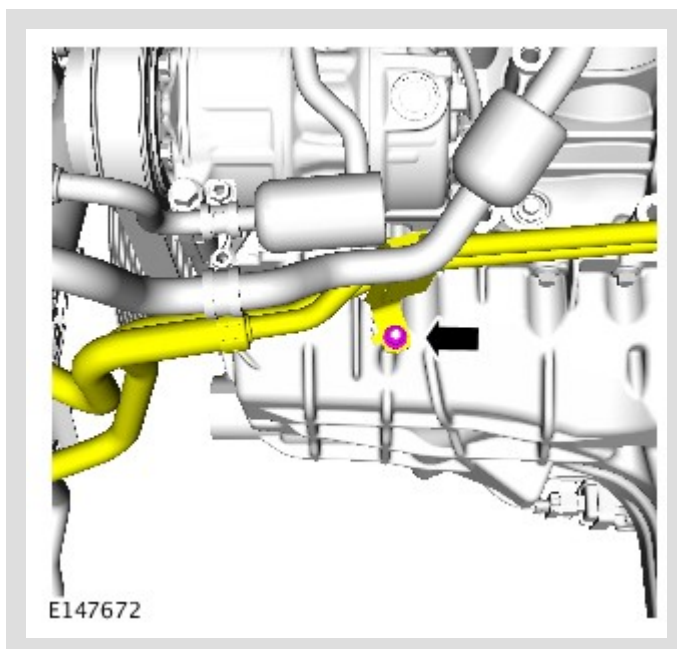


Torque: 9 Nm

21.

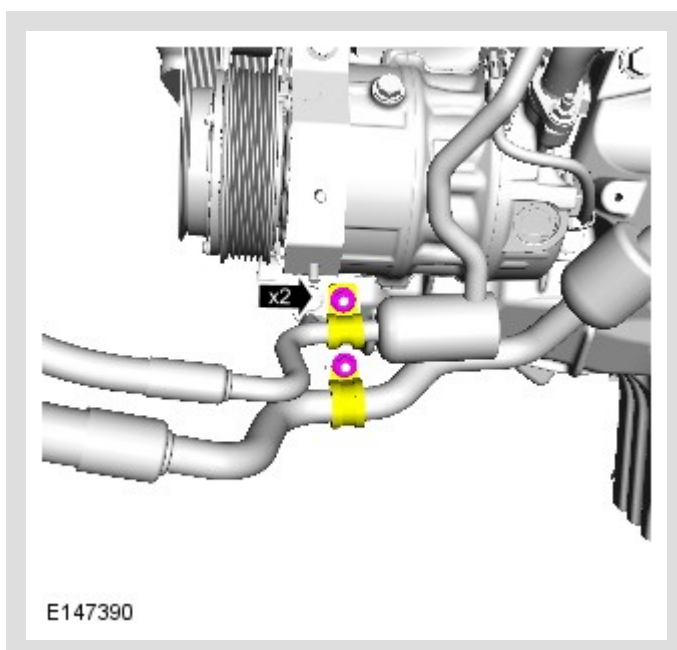


Torque: 9 Nm

22.

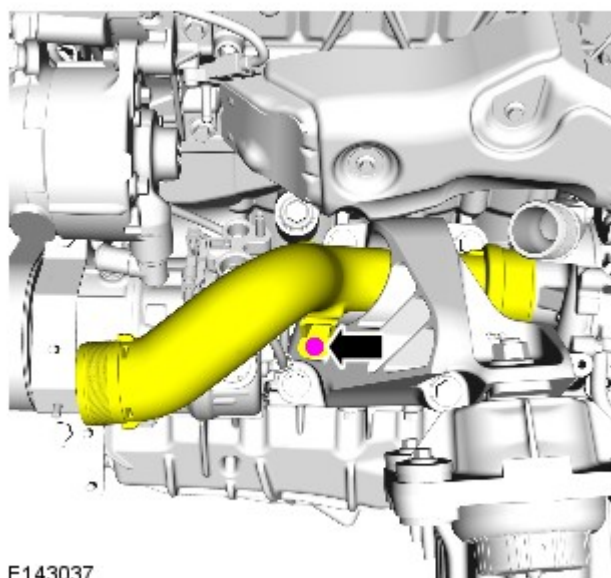

Torque: 12 Nm


23.

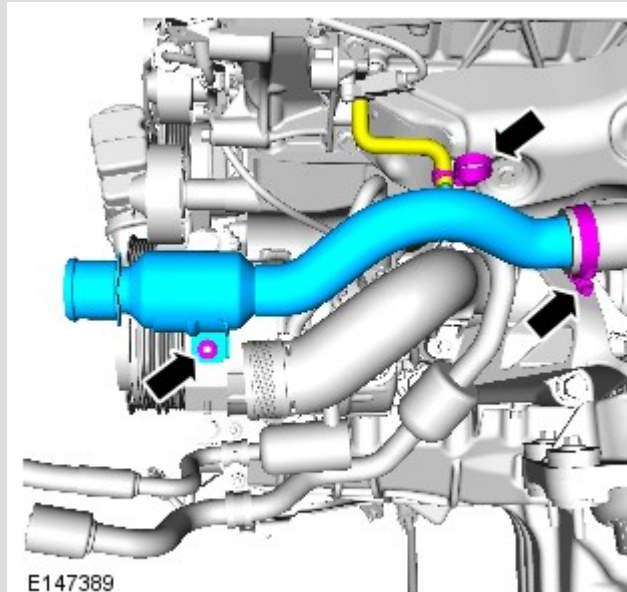

Torque:
M6 10 Nm

Clamp 3.5 Nm

24.

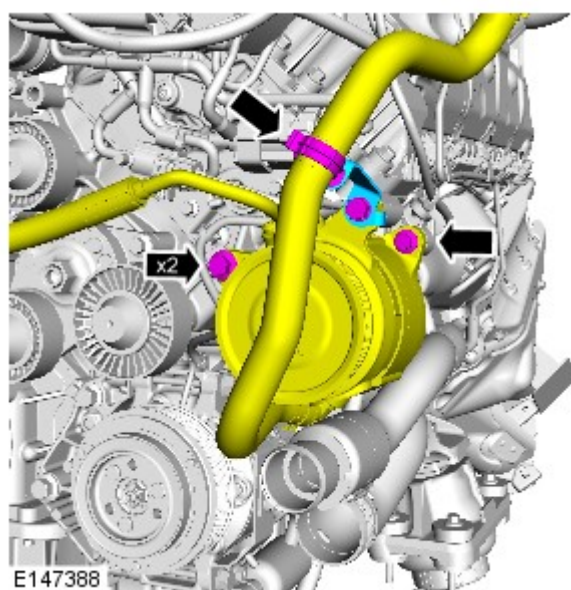


Torque:

M8 25 Nm


M10 45 Nm

25.

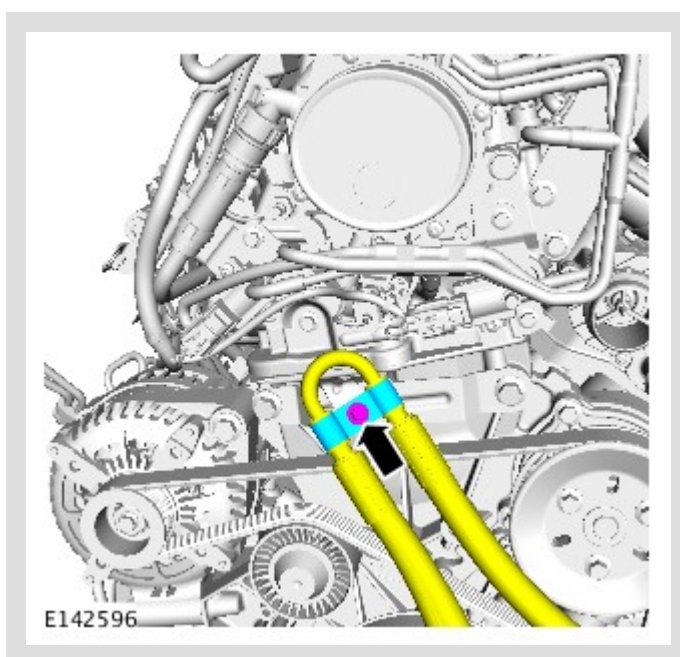


Torque: 10 Nm

26.

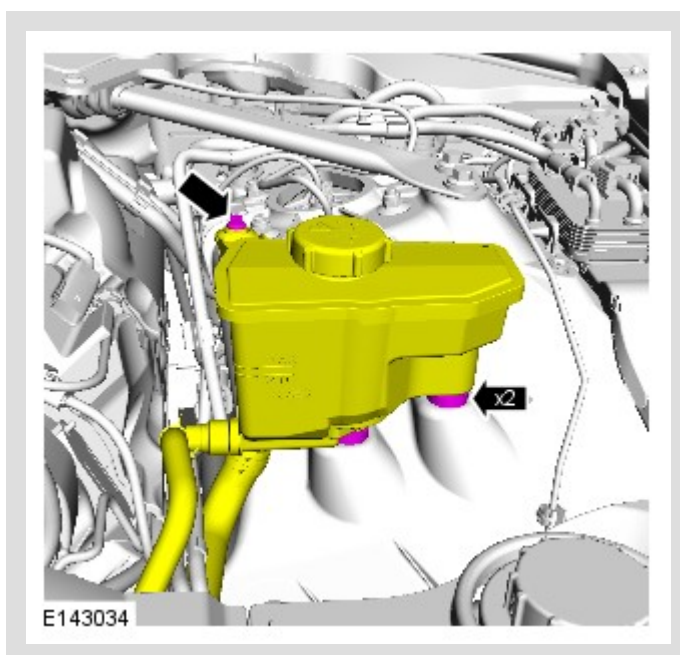


Torque: 9 Nm

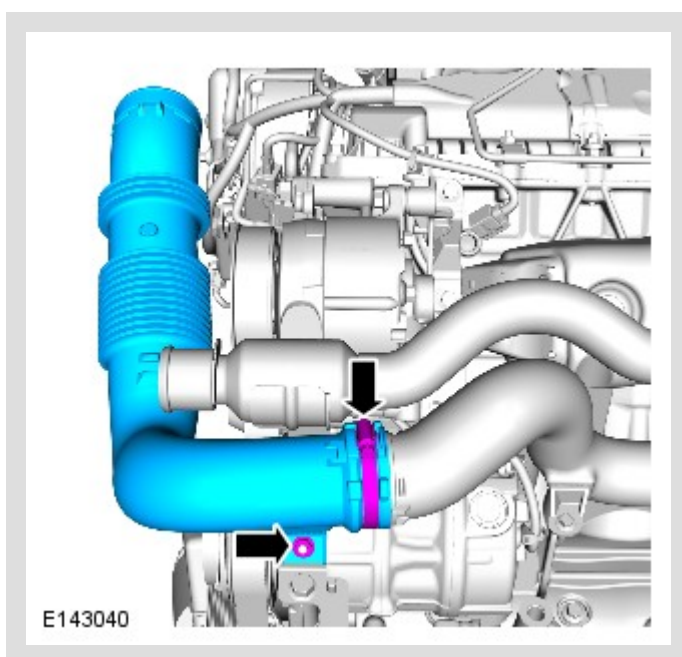

Torque:


M6 12 Nm

Clamp 3.5 Nm

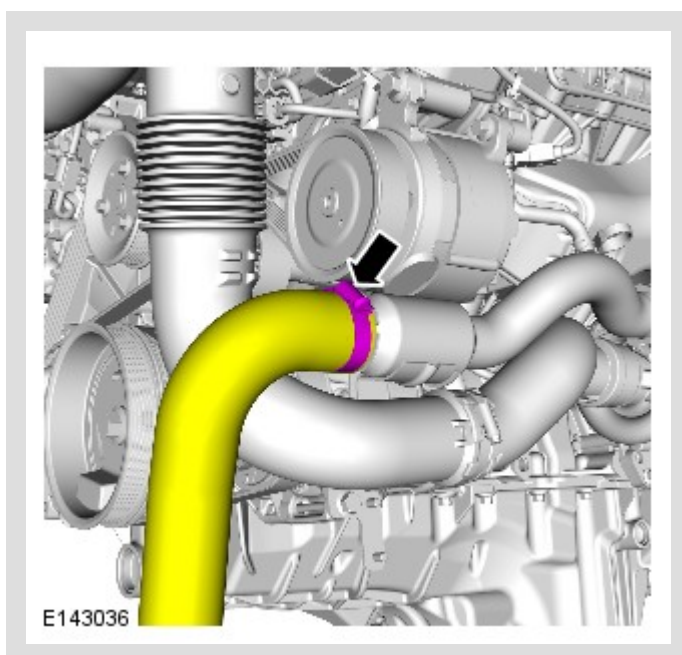


Torque: 3.5 Nm


29.

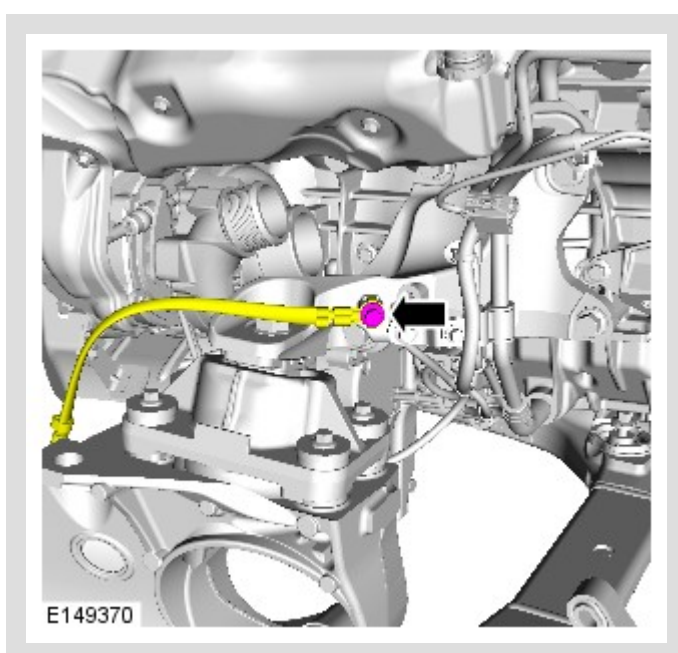


Torque: 25 Nm


30.

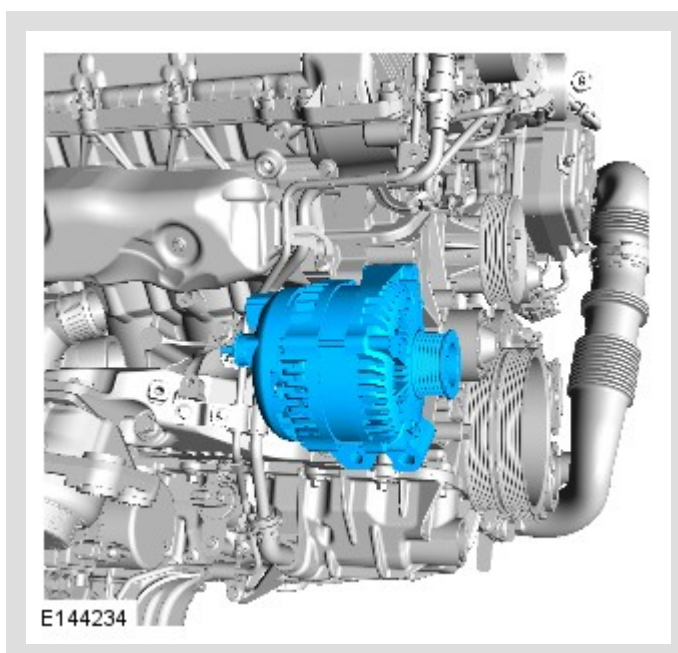

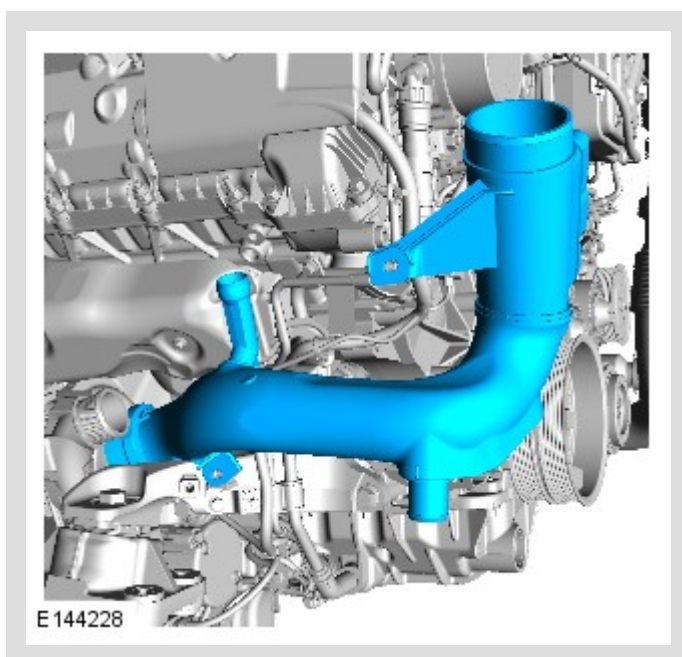

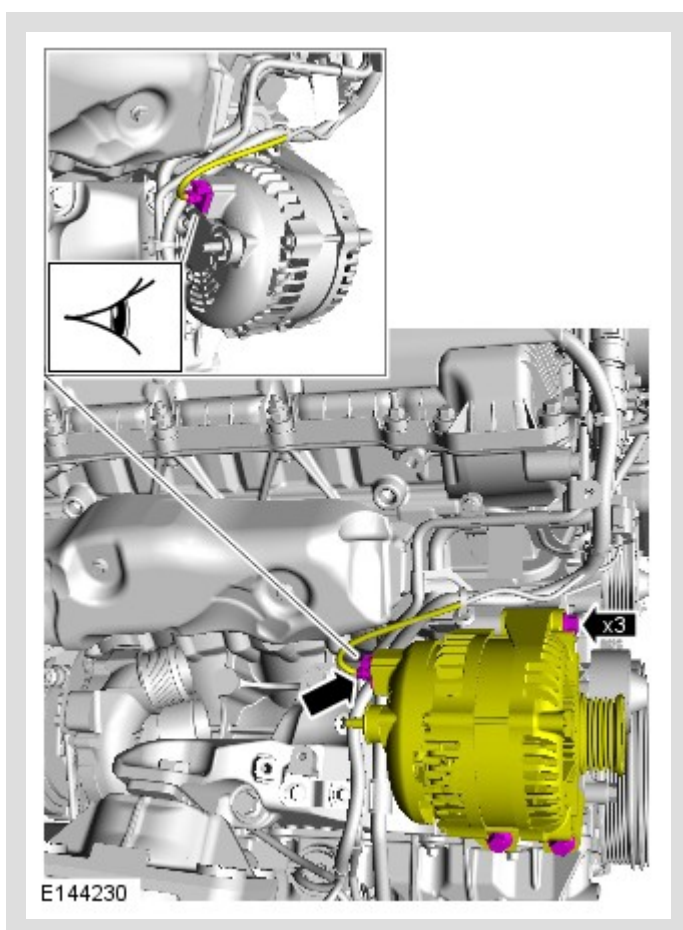


Torque: 47 Nm

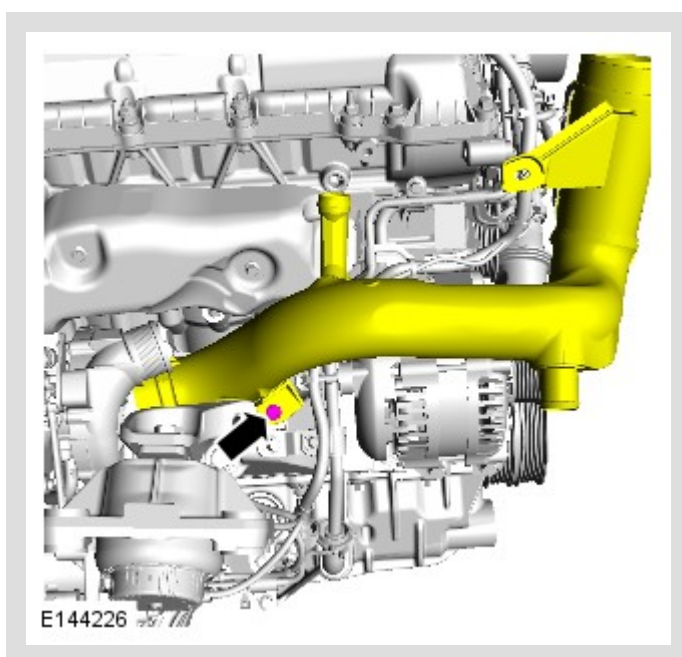


Torque: 8 Nm

34.

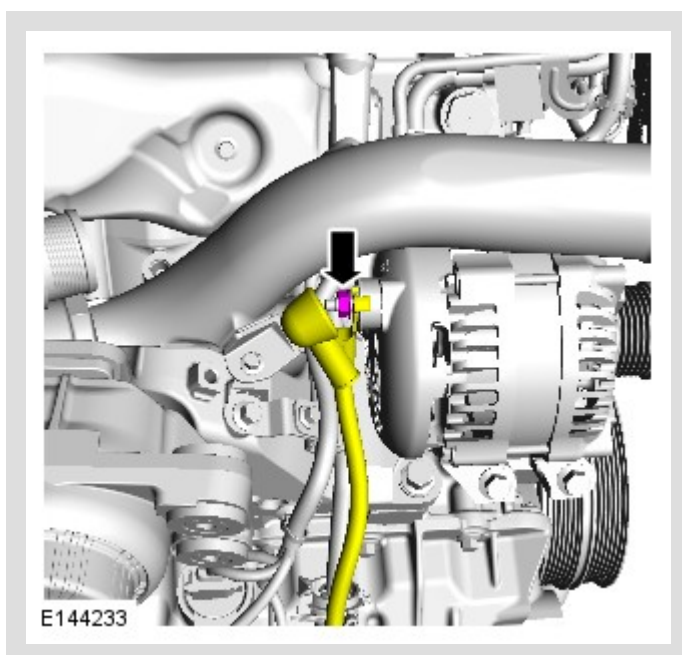


Torque: 12 Nm

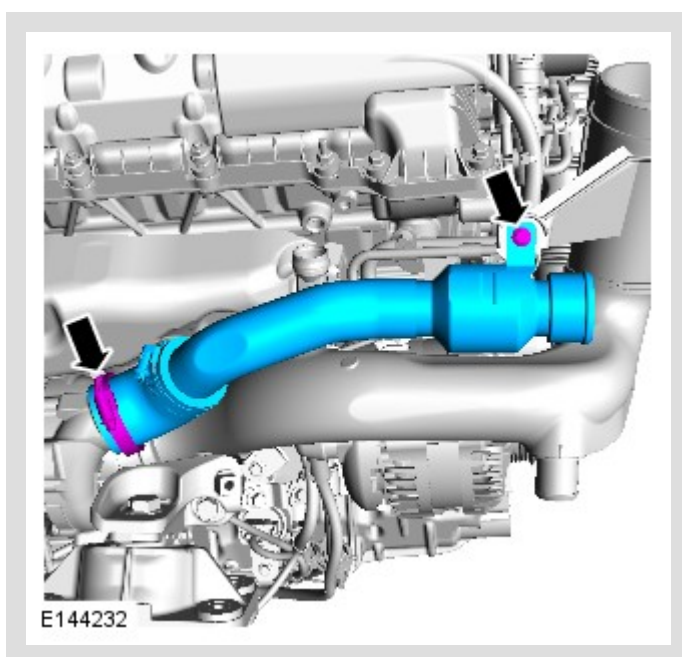

Torque:


Clamp **3.5 Nm**

Bolt **8 Nm**

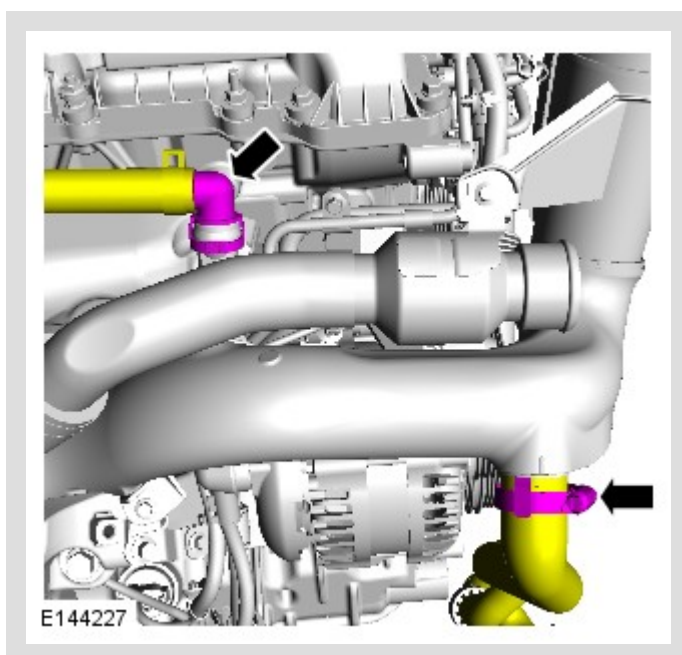


Torque: 3.5 Nm


37.

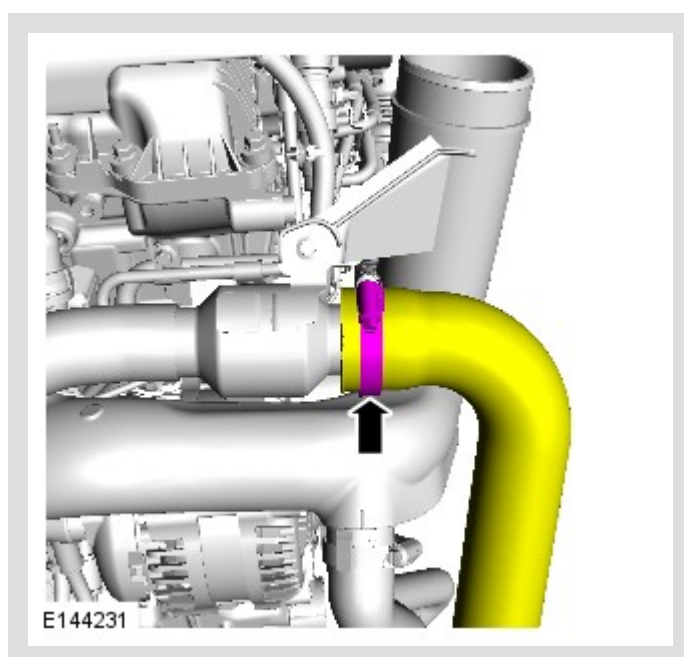

Torque: 3.5 Nm

38.

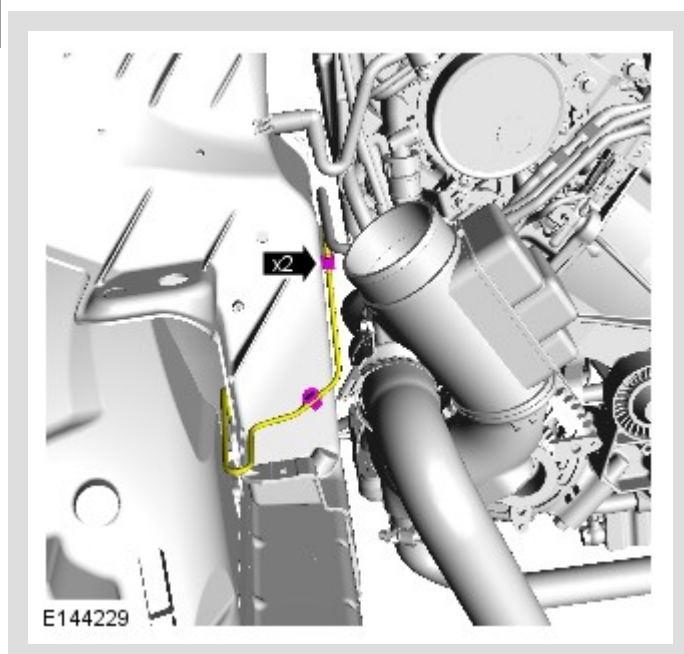

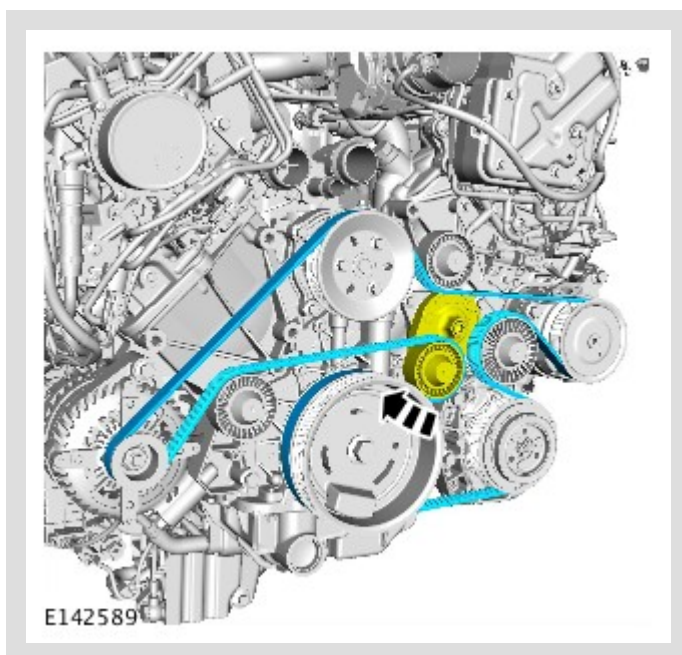


⚠ **CAUTION:**

Make sure that a new bolt is installed.

△ **NOTE:**


LHD illustration shown, RHD is similar.

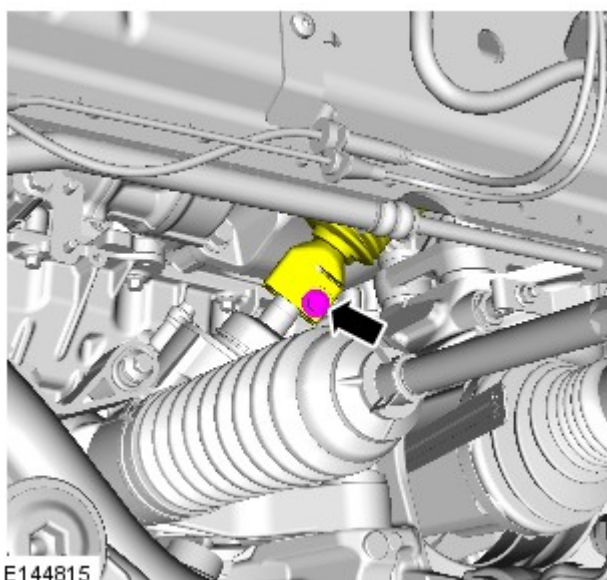

Using a suitable tool, clean out the threads.

Renew Part: *Steering column lower shaft lower bolt : 1* .


41.

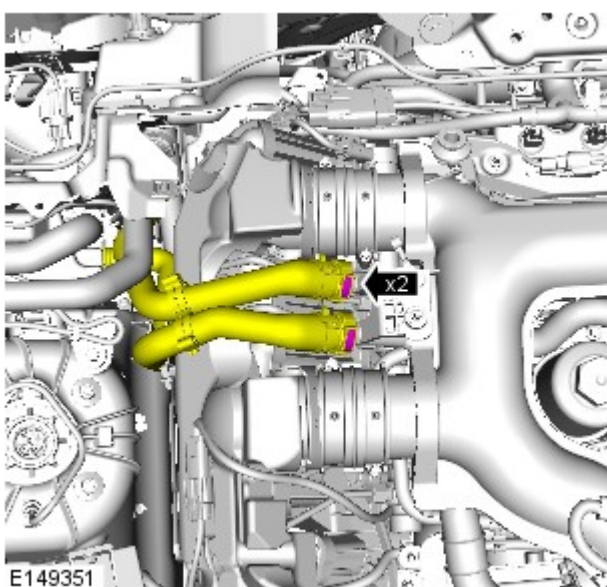


42.

**NOTE:**


LHD illustration shown, RHD is similar.

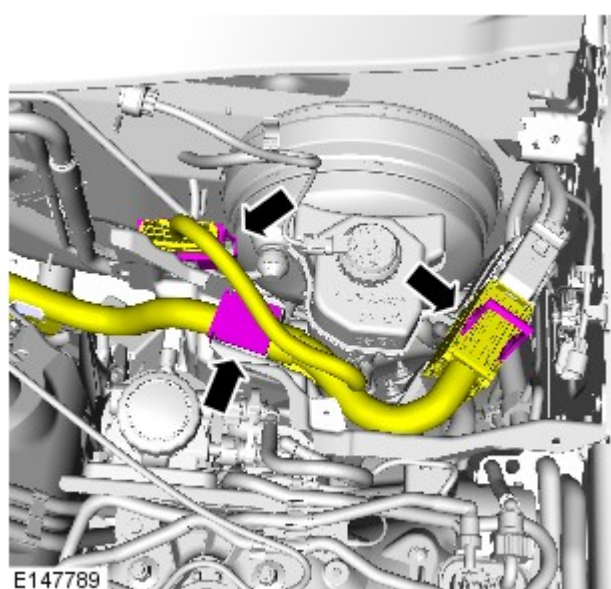


43.

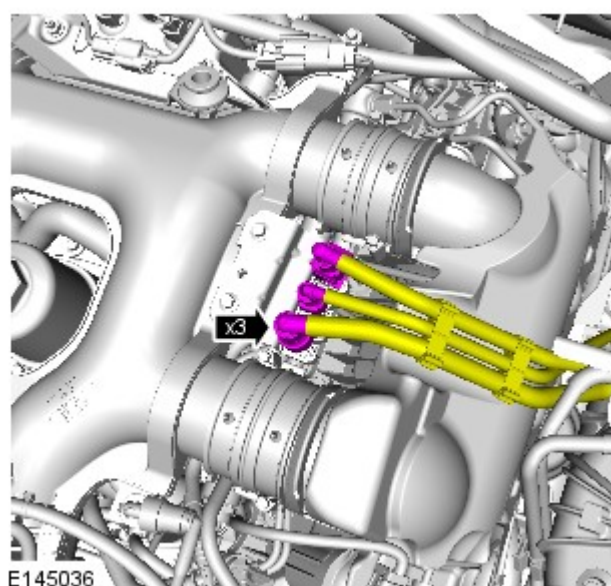


44.

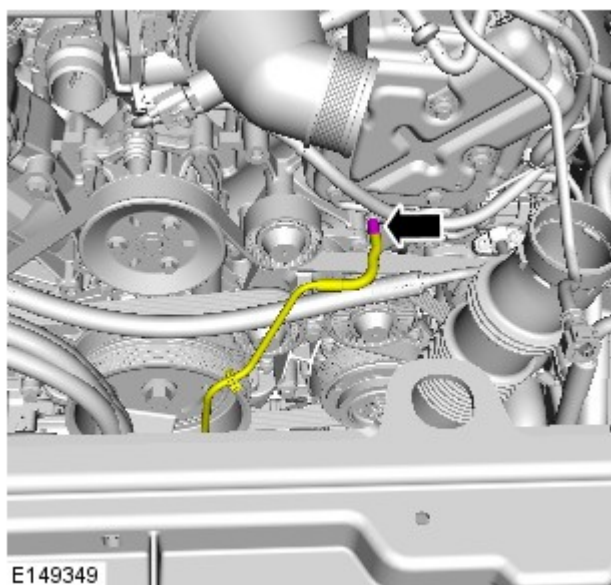


45.

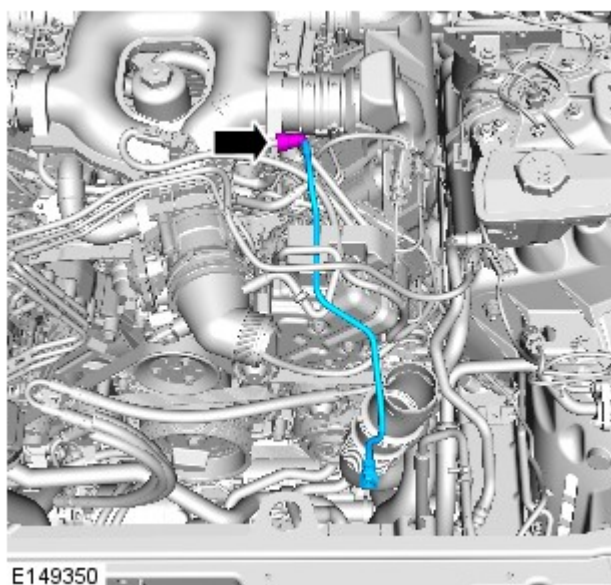


46.

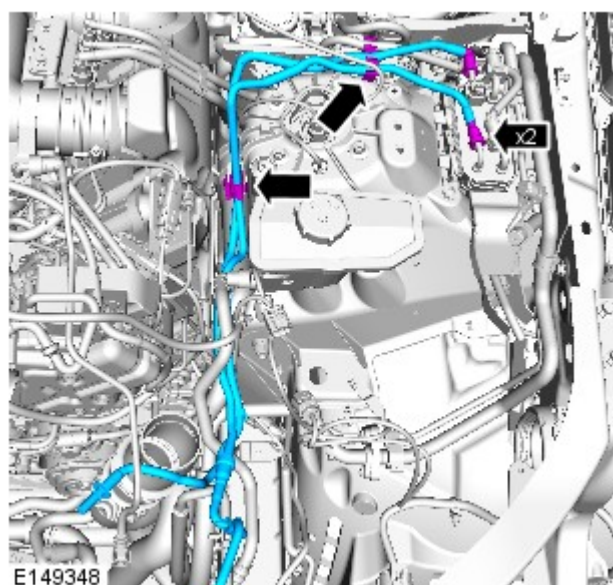


47.

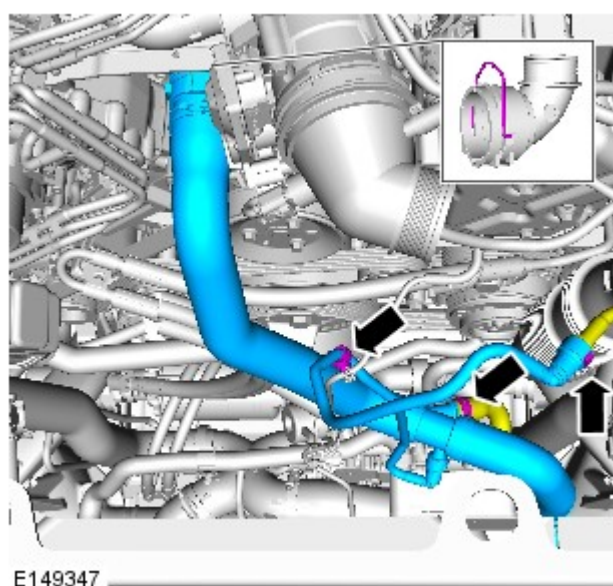

48.

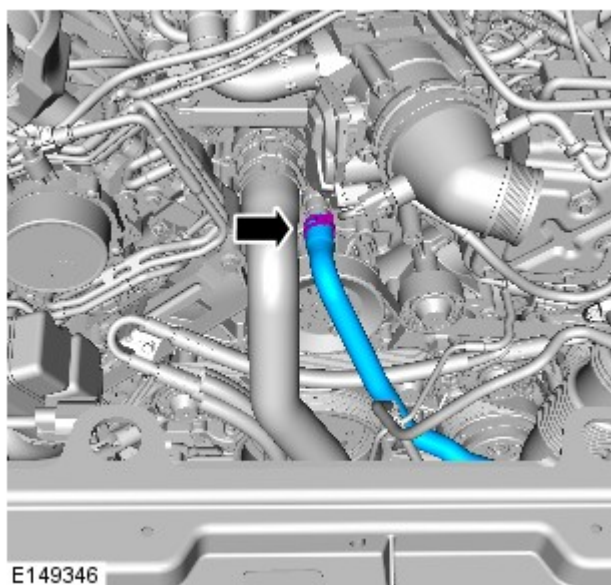

49.

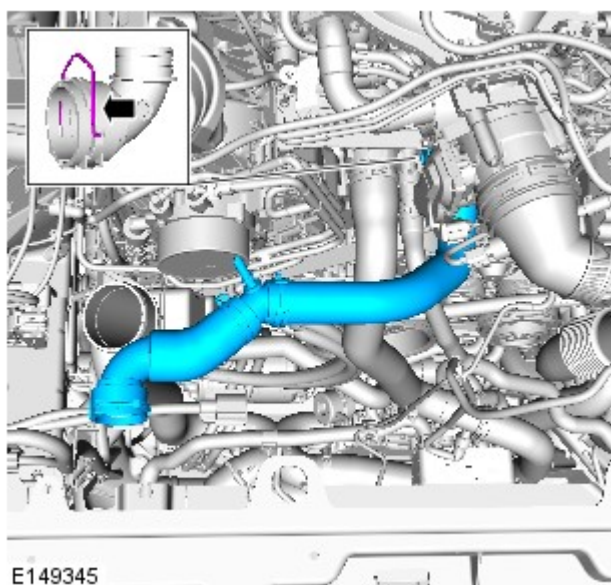

50.

Refer to: [Radiator](#) (303-03F Engine Cooling - TDV8 4.4L Diesel, Removal and Installation).

51.

Refer to: [Secondary Bulkhead Centre Panel - TDV8 4.4L Diesel](#) (501-02 Front End Body Panels, Removal and Installation).

52.

Connect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).