

PUBLISHED: 03-MAY-2017
2015.0 RANGE ROVER (LG), 303-01

ENGINE - TDV8 4.4L DIESEL

ENGINE OIL DRAINING AND FILLING

(G1509160)

12.60.05	ENGINE OIL - DRAIN AND REFILL - INCLUDES OIL FILTER RENEW	4400 CC, TDV8	0.7	USED WITHINS	
----------	---	------------------	-----	-----------------	--

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME	
Filling Step 1	Renew Part	Oil pan drain plug	1
Filling Step 3	Renew Part	Oil filter	1
Filling Step 3	Renew Part	Oil filter O-ring seal	1

DRAINING

**WARNING:**

The spilling of hot engine oil is unavoidable during this procedure, care must be taken to prevent scalding.

**CAUTION:**


Correct installation of the oil filler cap can be obtained by tightening the cap until hard stop.

**NOTE:**

Clean the components general area prior to dismantling.

Refer to: [Engine Cover - 4.4L V8 - TdV8](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

2.

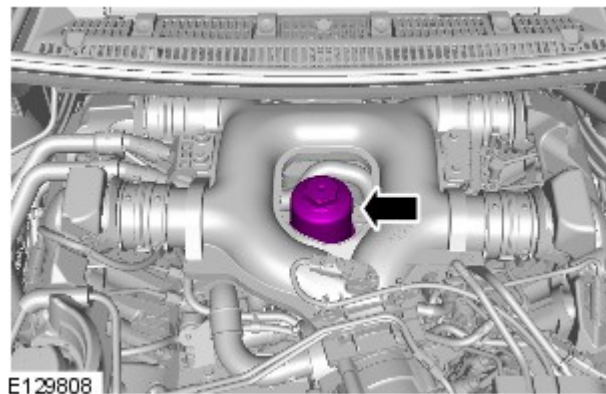


- Loosen the oil filter cover 3 turns and allow the engine oil to drain.

3.




NOTE:

Position cloth to collect fluid spillage.

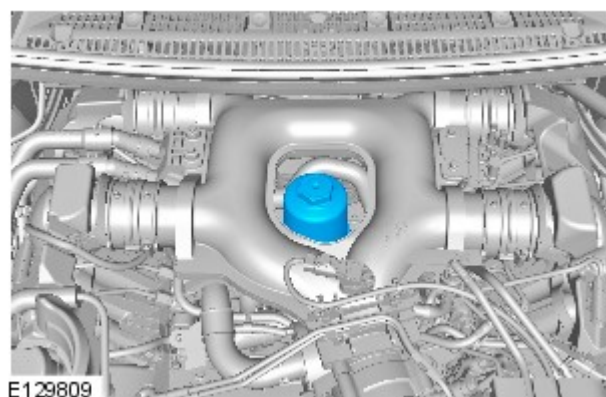

4.

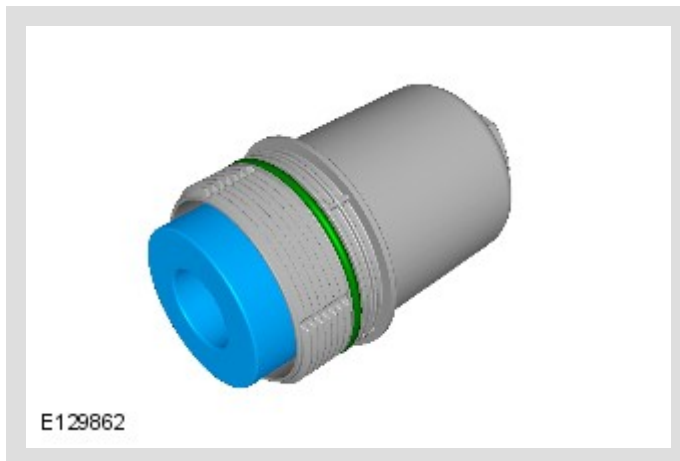

- Remove and discard the oil filter element.
- Remove and discard the oil filter cover O-ring seal.

5.



WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

6.


Refer to: [Engine Undershield](#) (501-02 Front End Body Panels, Removal and Installation).

7.



WARNING:


Observe due care when draining, as the fluid can be very hot.

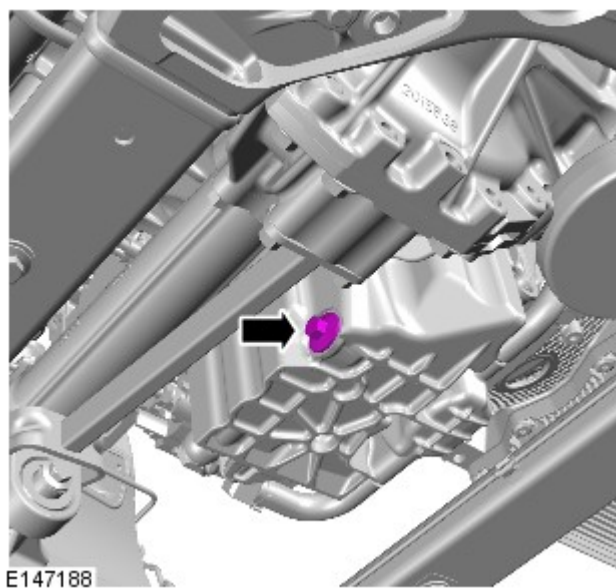

- Position a container to collect the engine oil.
- Remove and discard the oil pan drain plug.

FILLING

1.

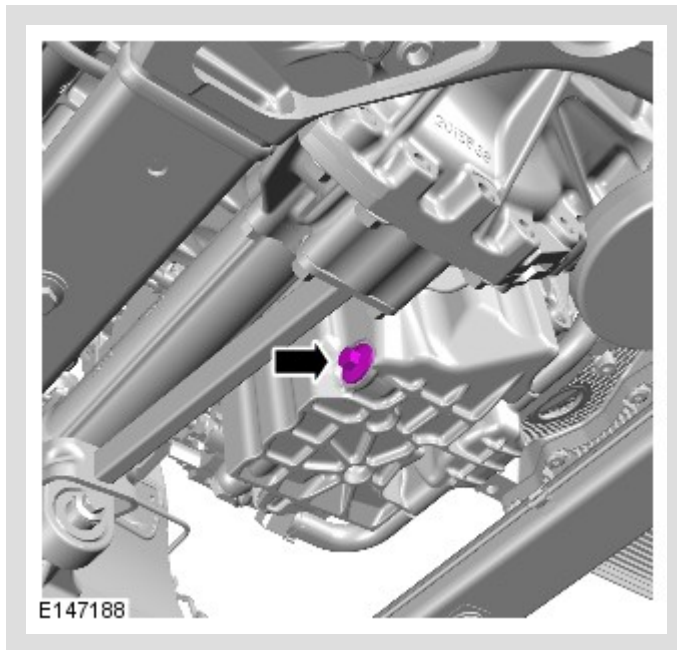

⚠ CAUTION:

Make sure that a new oil pan drain plug is installed.

Install the oil pan drain plug.


Renew Part: *Oil pan drain plug : 1* .

Torque: **23 Nm**

- Remove the container.


2. Refer to: [Engine Undershield](#) (501-02 Front End Body Panels, Removal and Installation).

3.

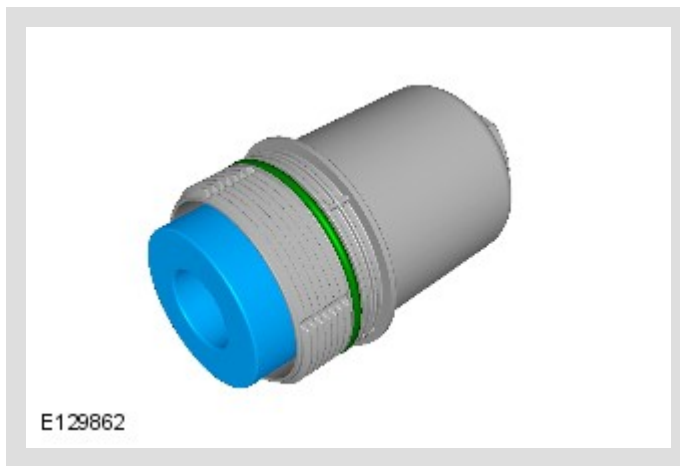


- Clean the components.
- Install a new oil filter element to the oil filter cover.
Renew Part: [Oil filter : 1](#) .
- Install a new oil filter cover O-ring seal.
Renew Part: [Oil filter O-ring seal : 1](#) .
- Lubricate the O-ring seal with clean engine oil.

4.

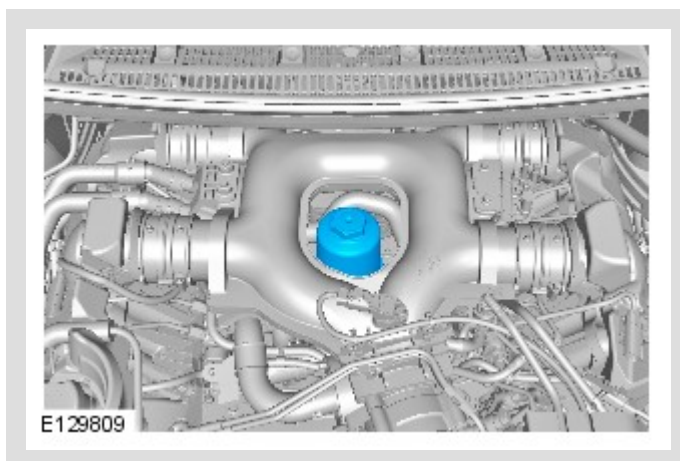

Torque: 27 Nm

5.

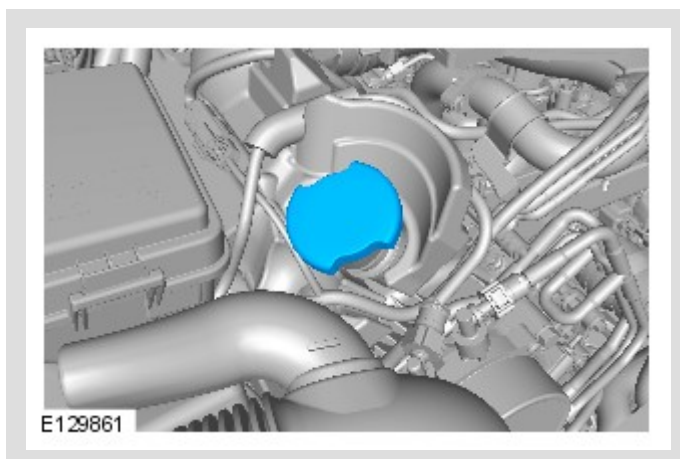

- Fill the engine with the recommended oil to the correct level.

6. Install the engine cover.

Refer to: [Engine Cover - 4.4L V8 - TdV8](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

7.



CAUTION:

Make sure that the vehicle has been left for 5 minutes from filling with oil.

- Start the engine and allow to run for 10 minutes, stop the engine.
- Check for leaks.

8.




CAUTIONS:


- Make sure that the selector lever is in the park (P) position.
- Make sure that the hood is open.

- Set the ignition to the ON position.


9.

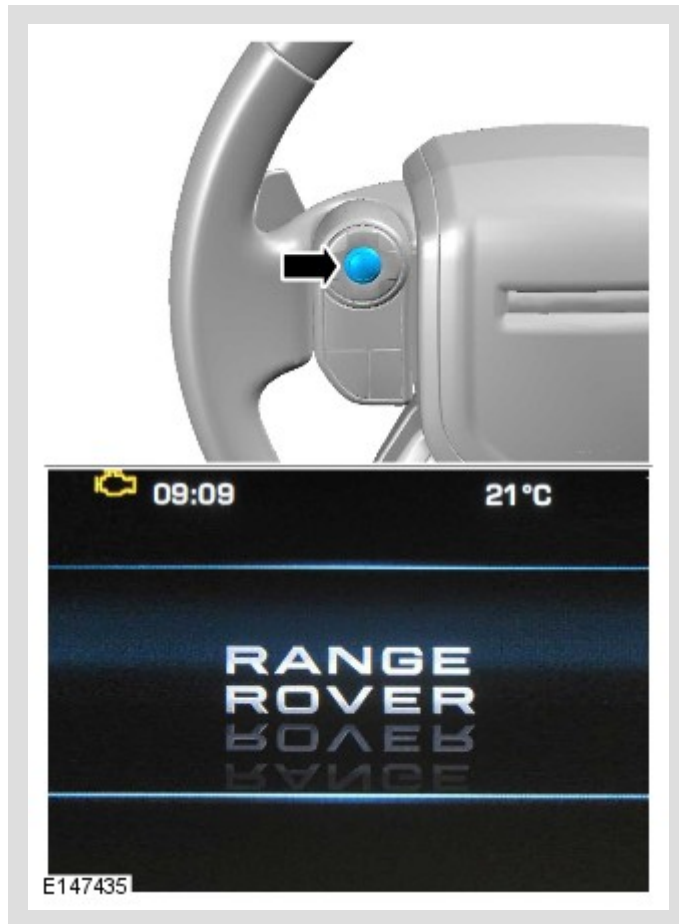


- Press the left-hand OK button to access the Instrument Cluster (IC) Main Menu.

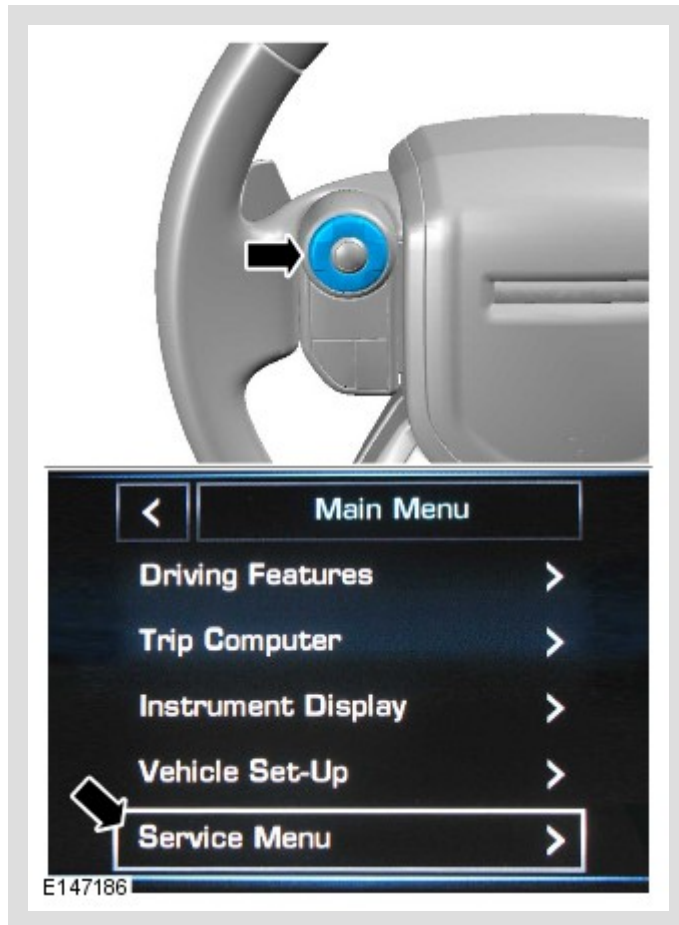

- Press the left-hand directional button and select Service Menu.

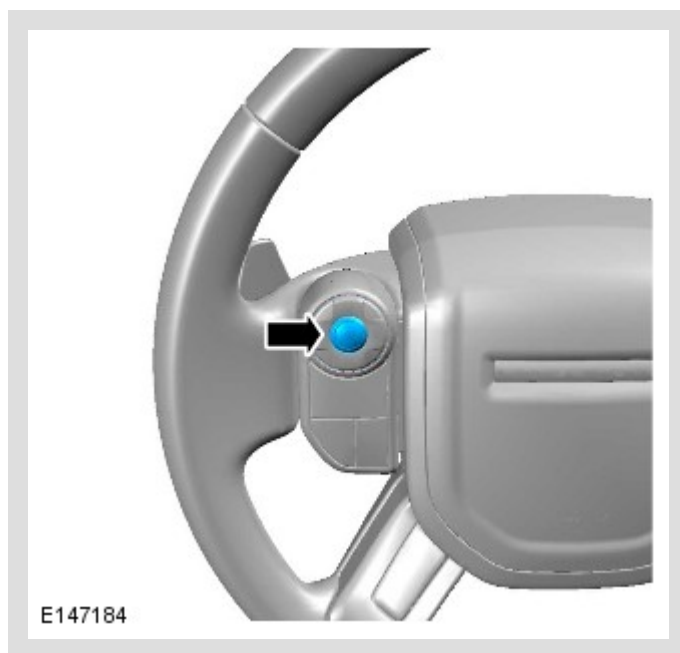

- Press the left-hand OK button.

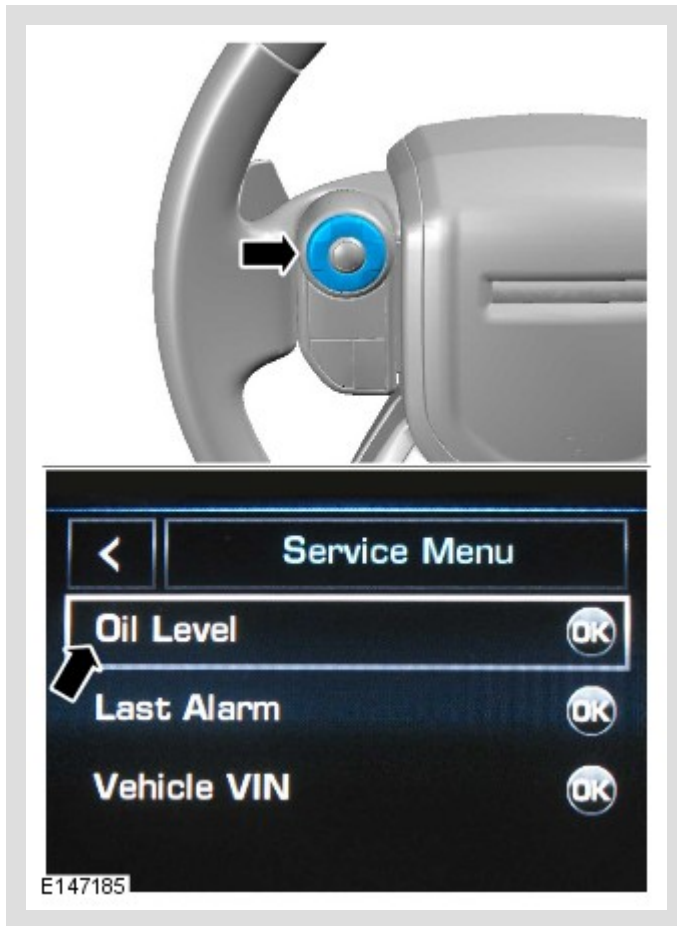

- Press the left-hand directional button and select the Oil Level display.




- Press the left-hand OK button to access the Oil Level display.


14.

⚠ CAUTION:

Make sure that the hood is open.

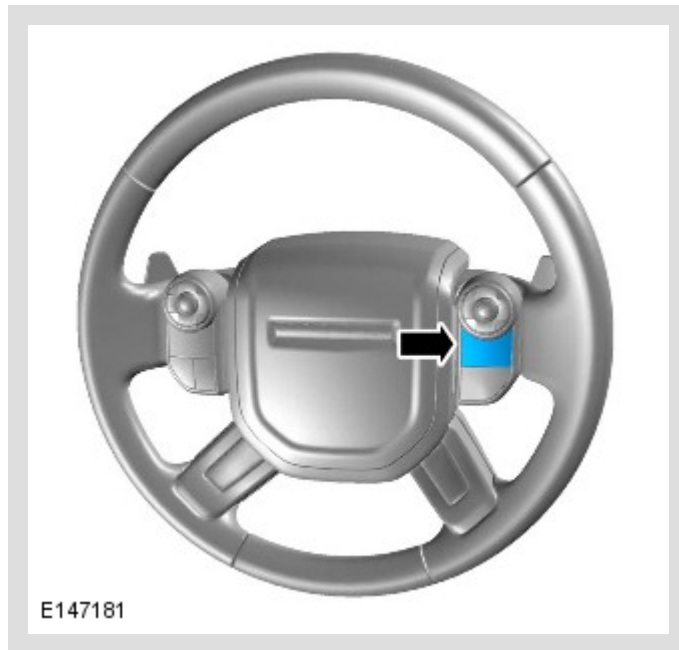

- Press the speed control cancel button twice within 2 seconds while being on the oil level display.

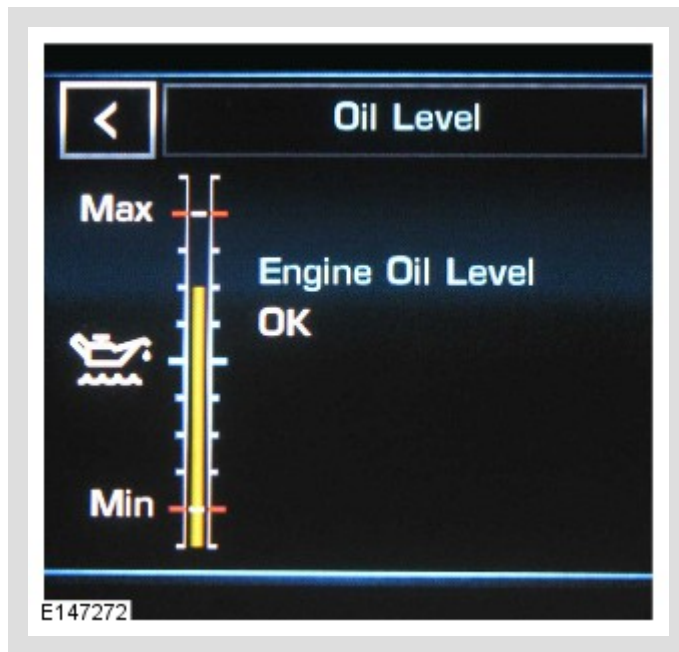

- The message center displays the actual oil level in service mode.
- Only after having started and run the engine for 10 minutes (as indicated in Step 7), switch off the engine, then stabilizing for 10 minutes, take a reading from the oil level display and, if necessary top up with engine oil.

16. Set the ignition to the OFF position.

17. Allow 10 minutes for the engine oil level to stabilize if there has been additional oil top up.



NOTE:

The following steps are to update the average oil level value.

18. Repeat step 8 to 14 to access the oil level display in service mode.

19.



NOTE:

The actual volume displayed on the bar graph will be written into the electronic control unit as a new value.



- Press and hold the speed control cancel button for more than 5 seconds.
- The message center display the current oil level.



NOTE:

Close the hood.

20.

Set the ignition to the OFF position.

21.


Set the ignition to the ON position.

22.




NOTE:

The following steps are to check the current oil level in a customer mode.

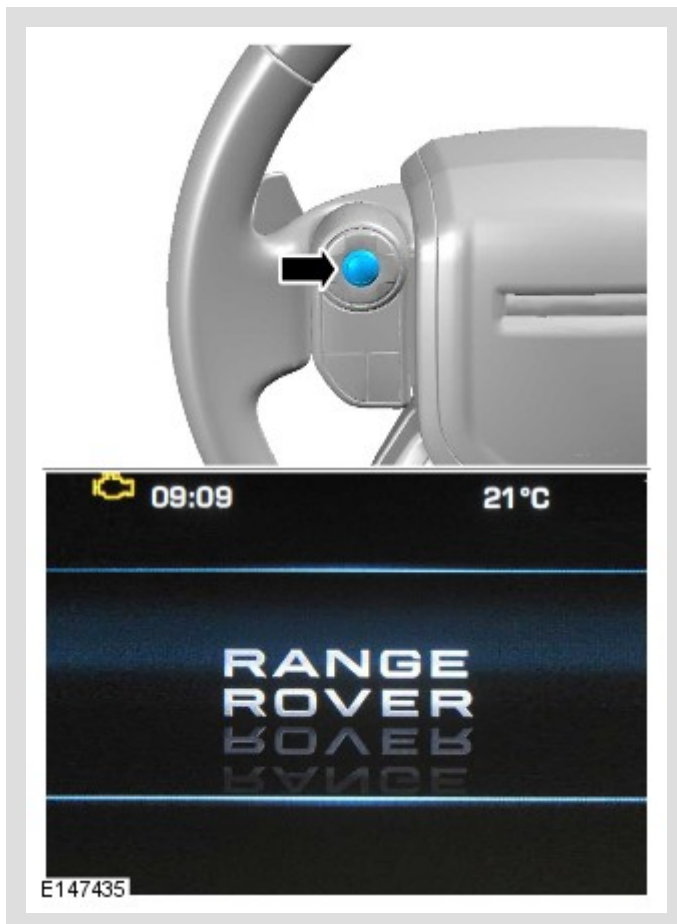


- Press the left-hand OK button to access the Instrument Cluster (IC) Main Menu.


23.

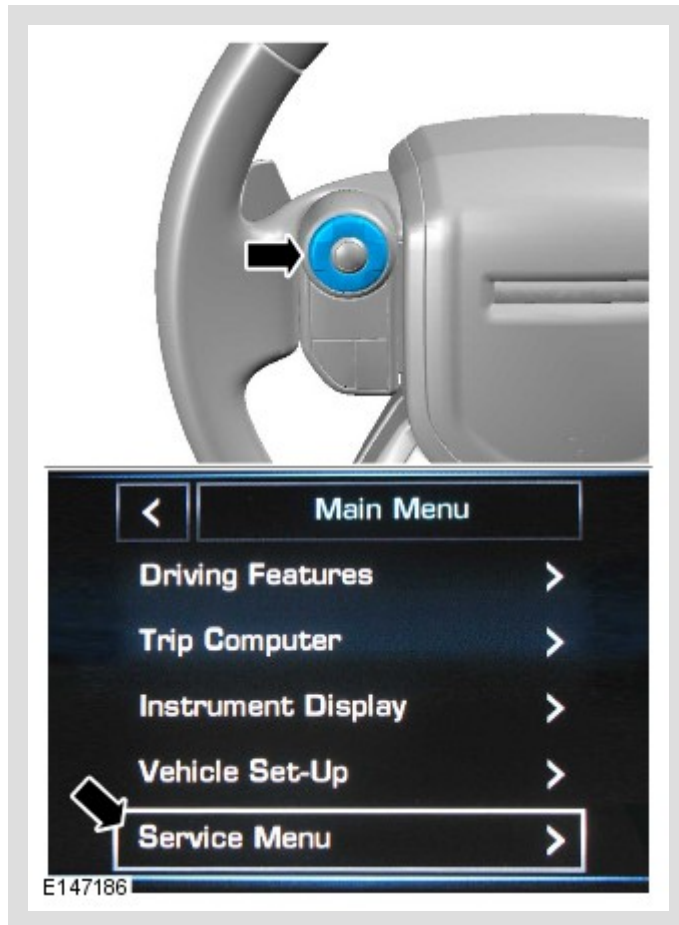

- Press the left-hand directional button and select Service Menu.

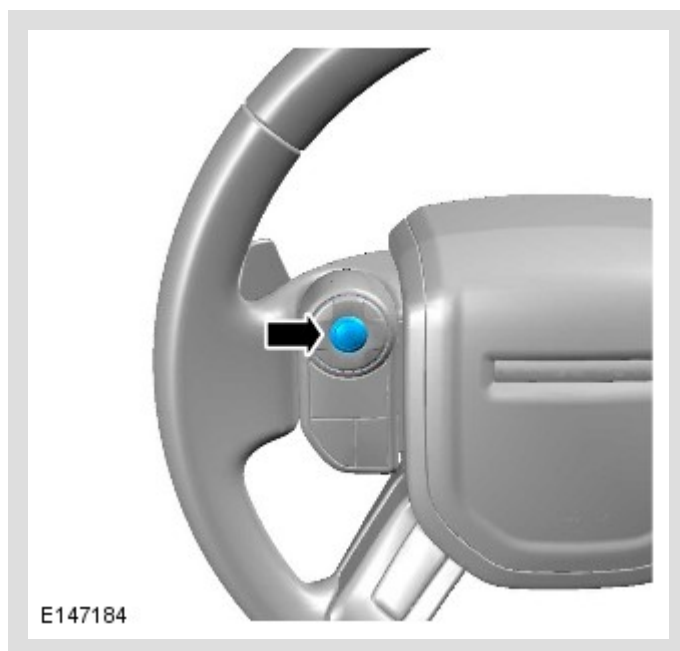

- Press the left-hand OK button.

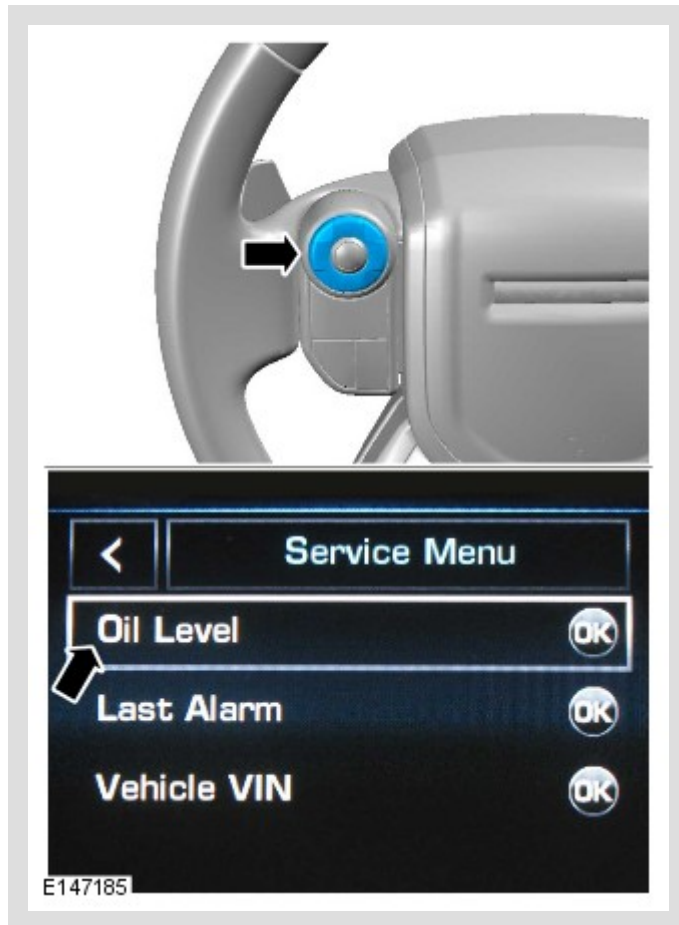

- Press the left-hand directional button and select the Oil Level display.



- Press the left-hand OK button and follow the instructions.

△ ■ NOTE:

If the message shows "Not available" wait for further 10 mins to allow the oil level to stabilize.

Make sure that the average oil level value has now been updated.

