

PUBLISHED: 03-MAY-2017
2015.0 RANGE ROVER (LG), 303-01

ENGINE - TDV8 4.4L DIESEL

ENGINE (G1509184)

REMOVAL

REMOVAL

SPECIAL TOOL(S)



303-021

303-021



Engine support
bracket



E131596

JLR-303- 1569

Lifting Bracket,
Engine

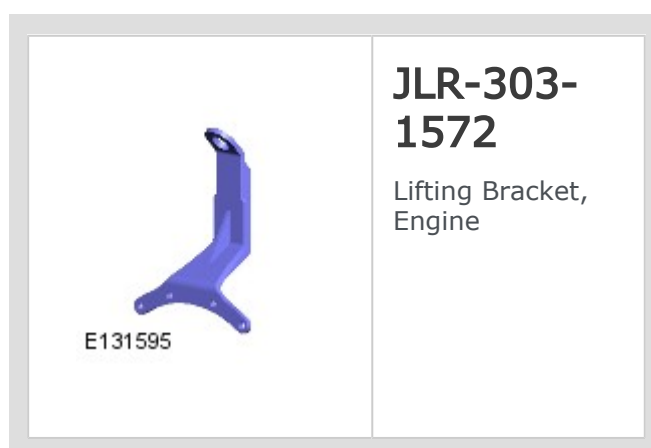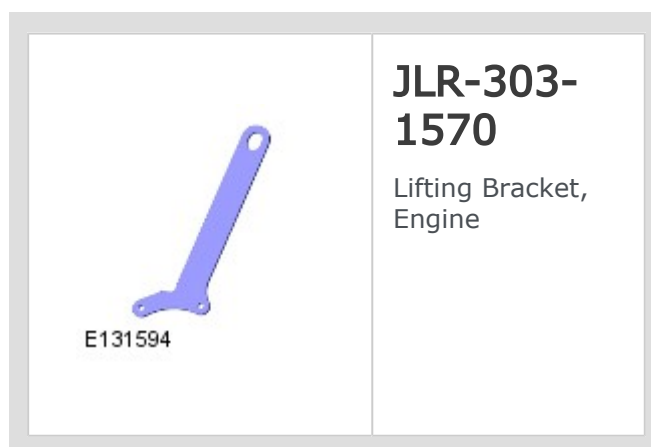

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME	
Step 16	Renew Part	Steering column lower shaft lower bolt	1
Step 38	Renew Part	Air conditioning pipe to compressor O-ring seals	1



NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.
- Some components shown removed for clarity.

1. Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.



WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3.

Refer to: [Hood](#) (501-02 Front End Body Panels, Removal and Installation).


4.

Refer to: [Secondary Bulkhead Centre Panel - TDV8 4.4L Diesel](#) (501-02 Front End Body Panels, Removal and Installation).


5.

Refer to: [Radiator](#) (303-03F Engine Cooling - TDV8 4.4L Diesel, Removal and Installation).


6.

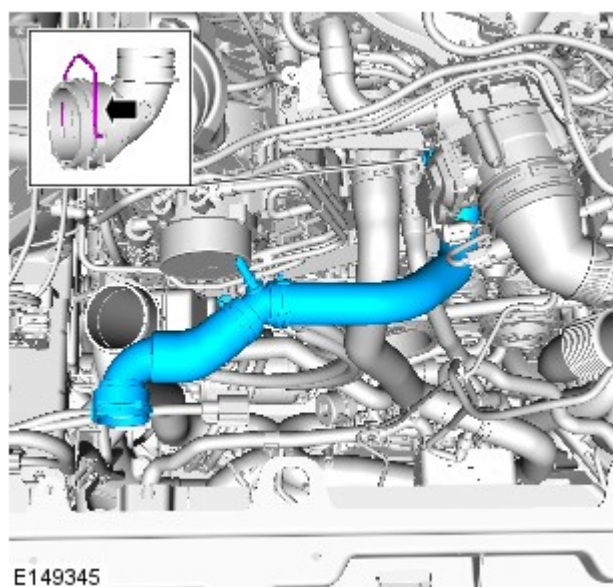

7.

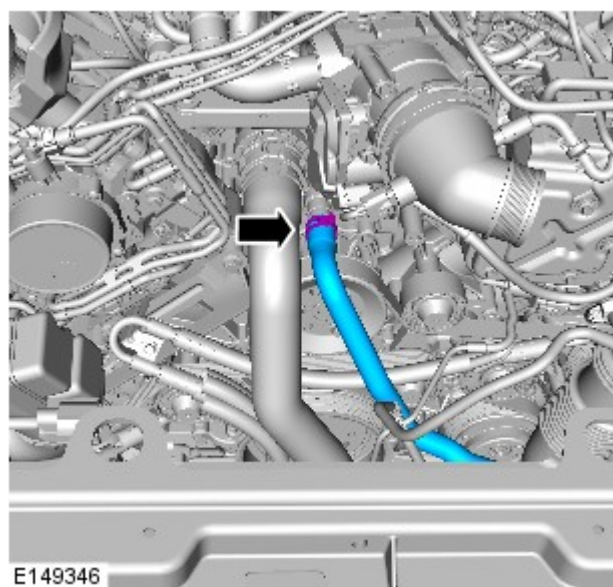


8.

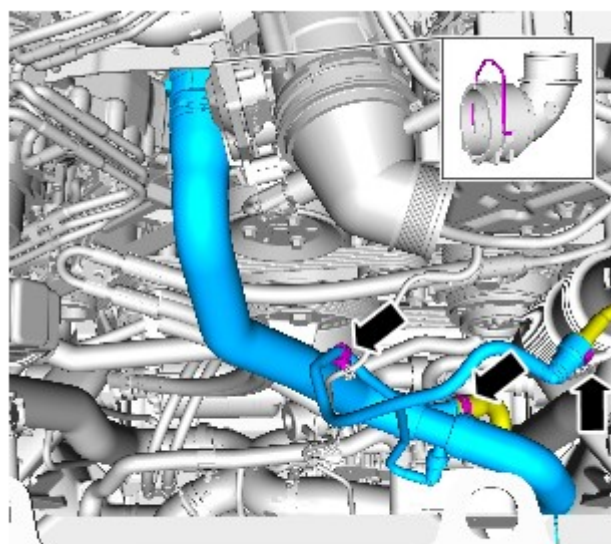


E149347

9.

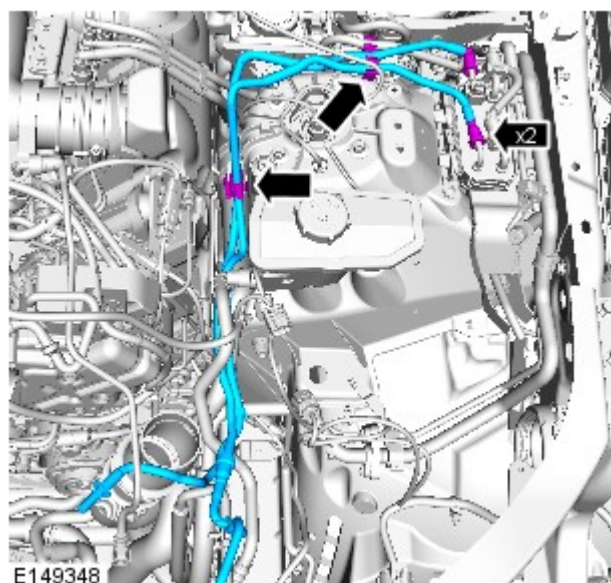


E149348

10.

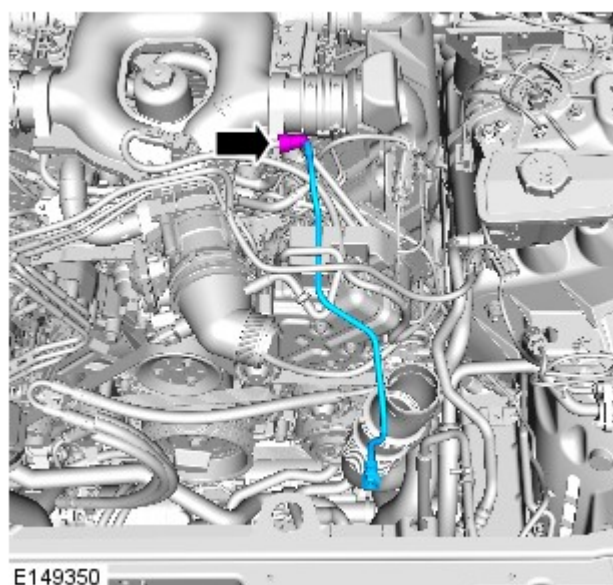


11.

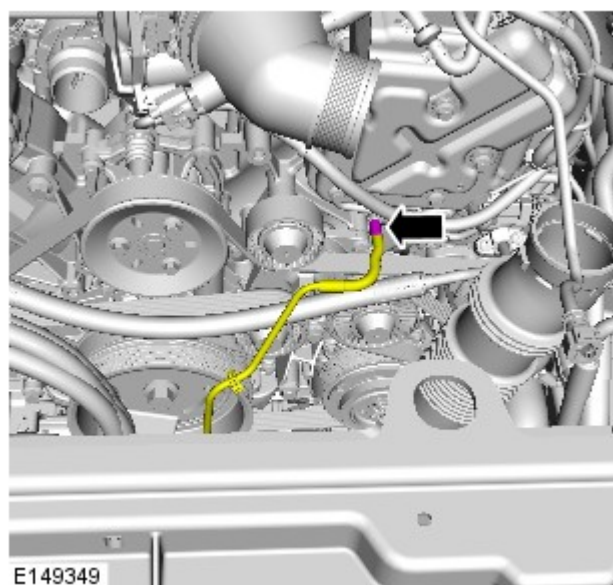

12.

Refer to: [Diesel Fuel System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

13.

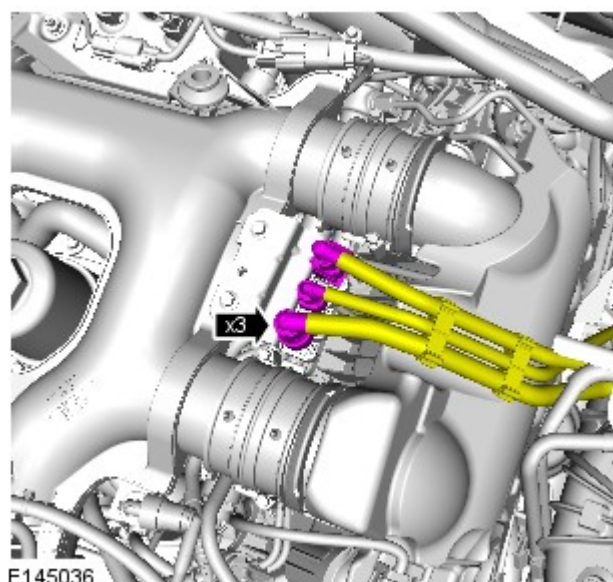


14.




NOTE:

LHD illustration shown, RHD is similar.

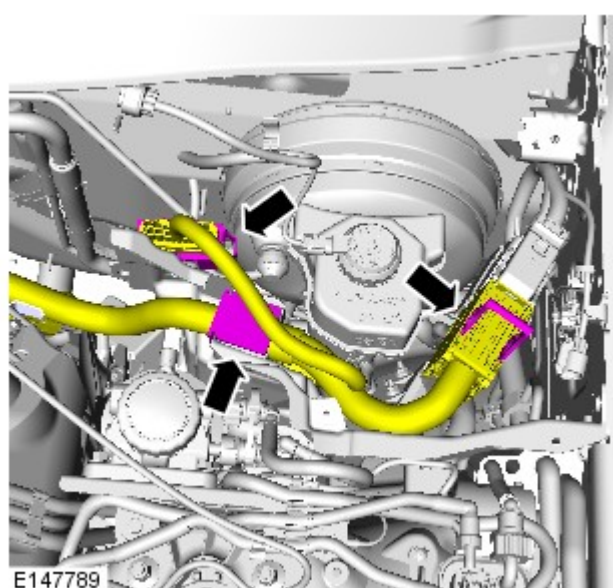

15.

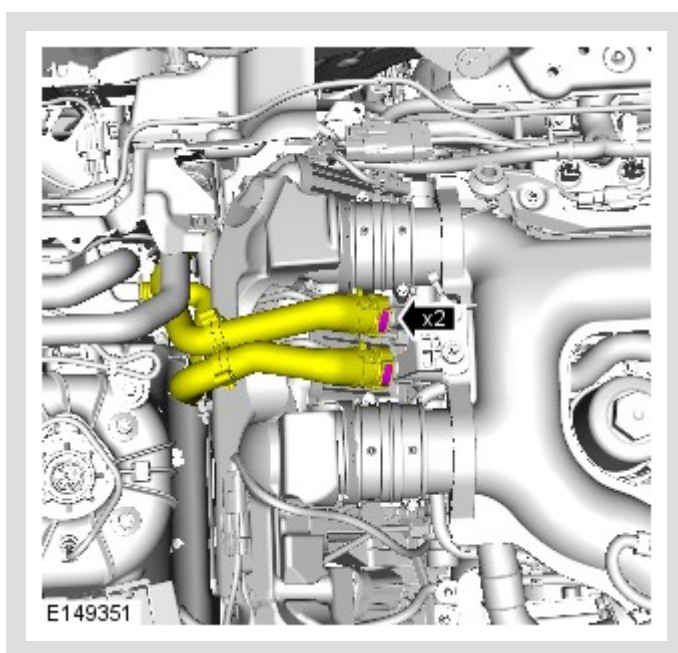


16.

⚠ CAUTION:

Discard the bolt.


△ NOTE:

LHD illustration shown, RHD is similar.

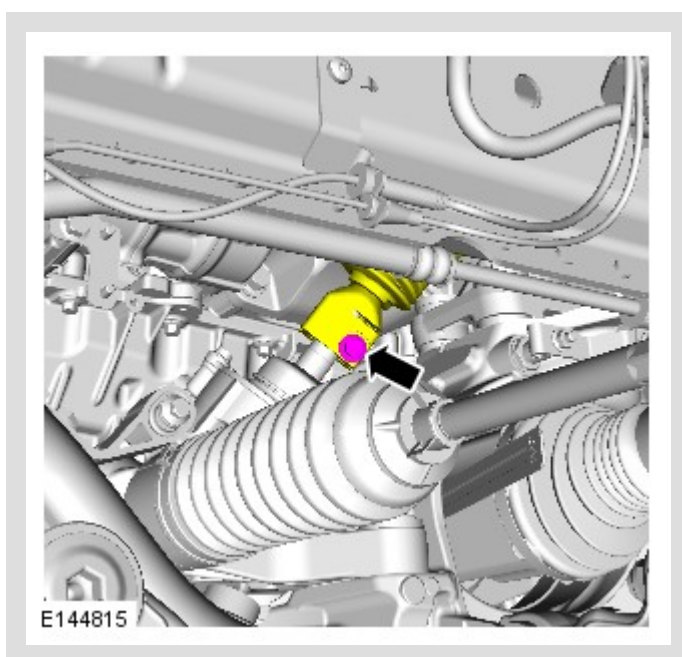


Align the steering wheel to straight ahead.


Renew Part: *Steering column lower shaft lower bolt* : 1 .

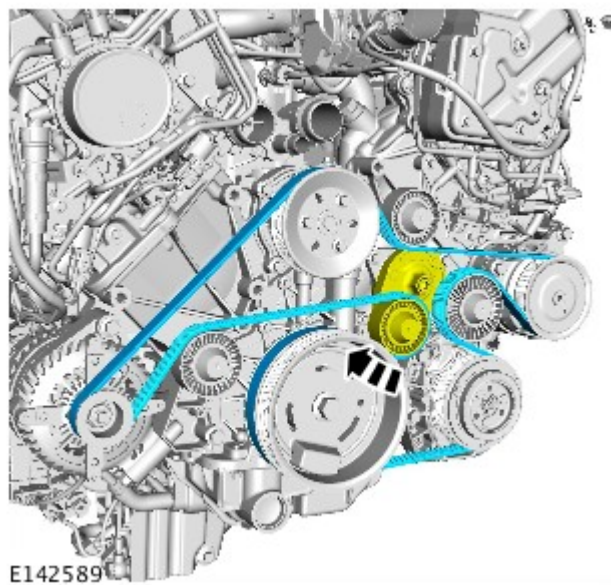


18.

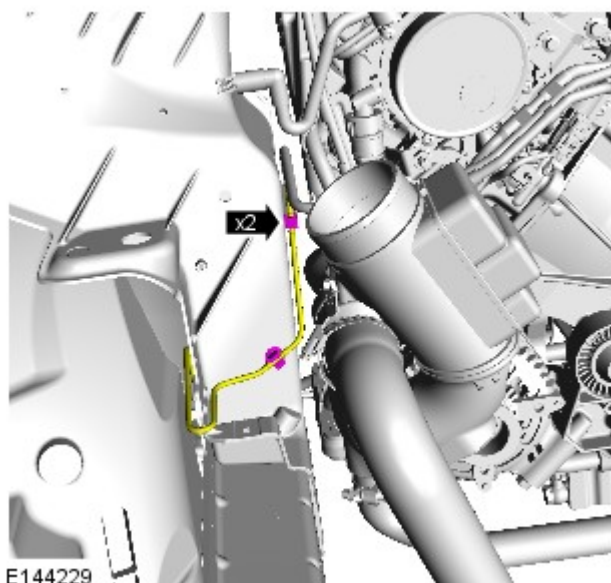


19.

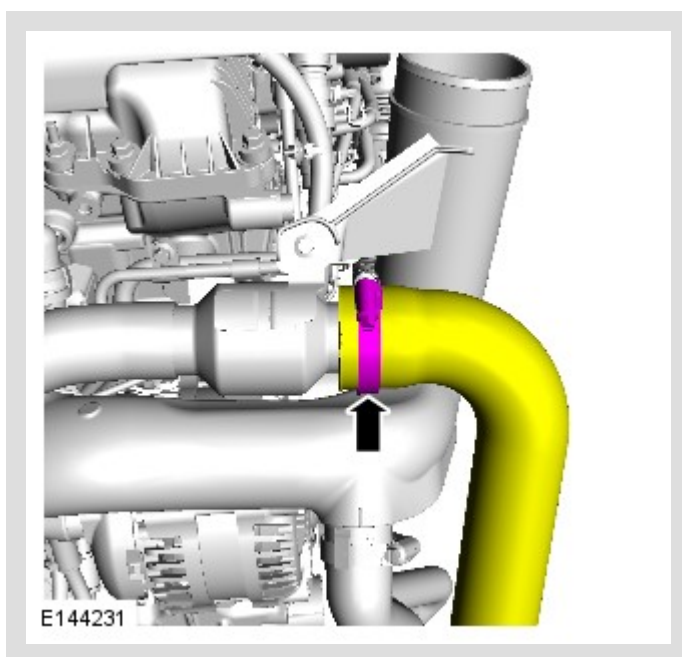

20.

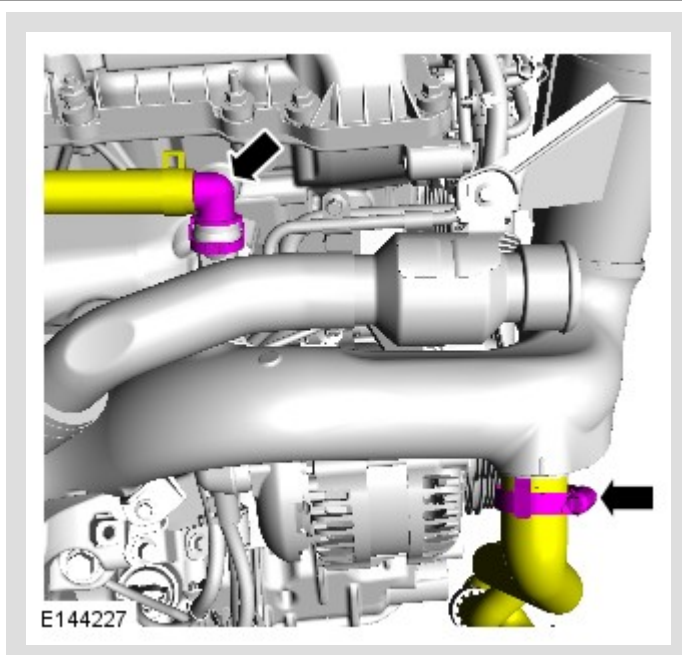


21.

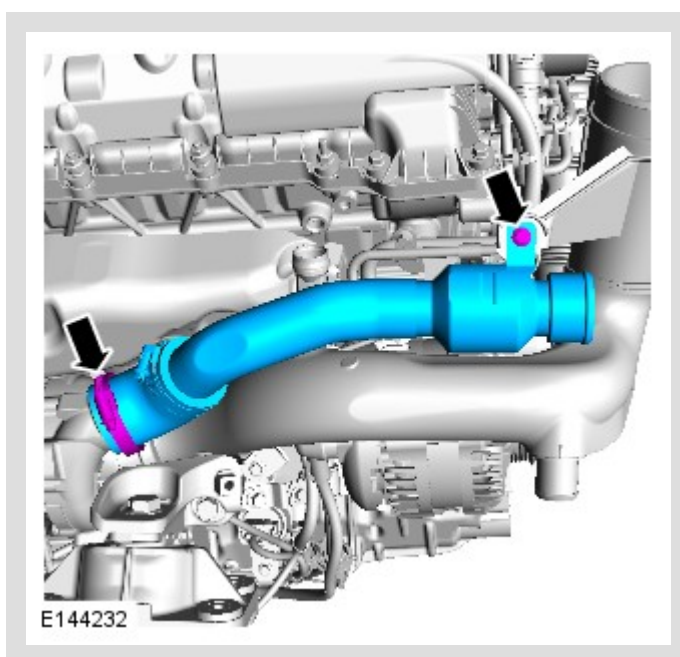

22.

⚠ CAUTION:

Take extra care when removing the battery cable from the generator.

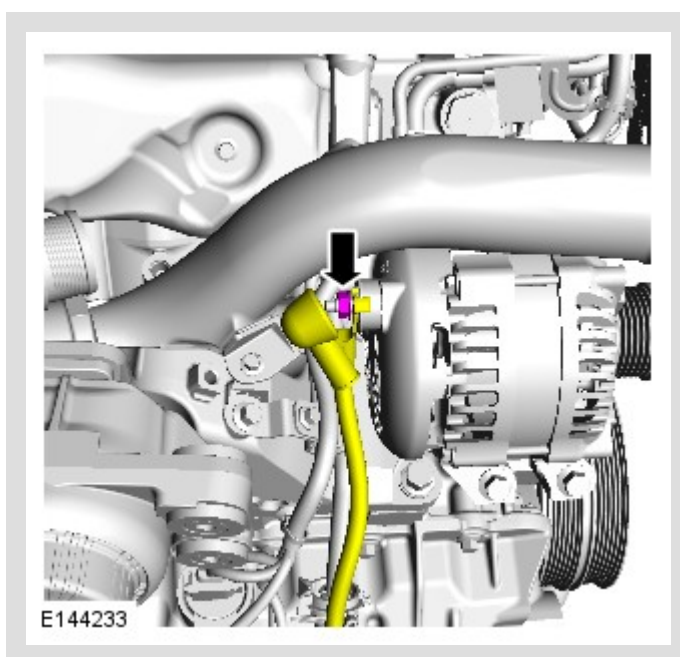


23.



NOTE:

The component cannot be removed at this stage.

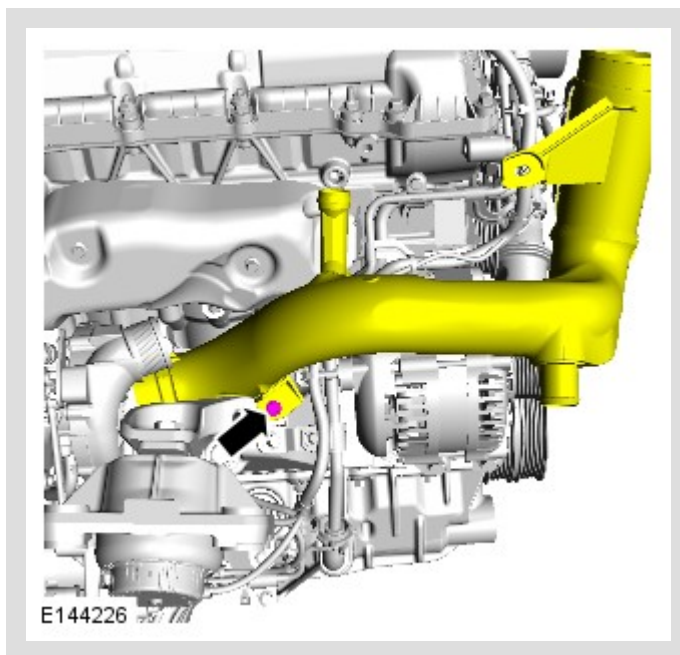

24.




CAUTIONS:


- Take extra care not to damage the battery cable terminal when removing the wiring harness or generator. Make sure that the terminal is not bent or split.
- Support the generator prior to disconnecting the electrical connectors.



NOTE:


The component cannot be removed at this stage.

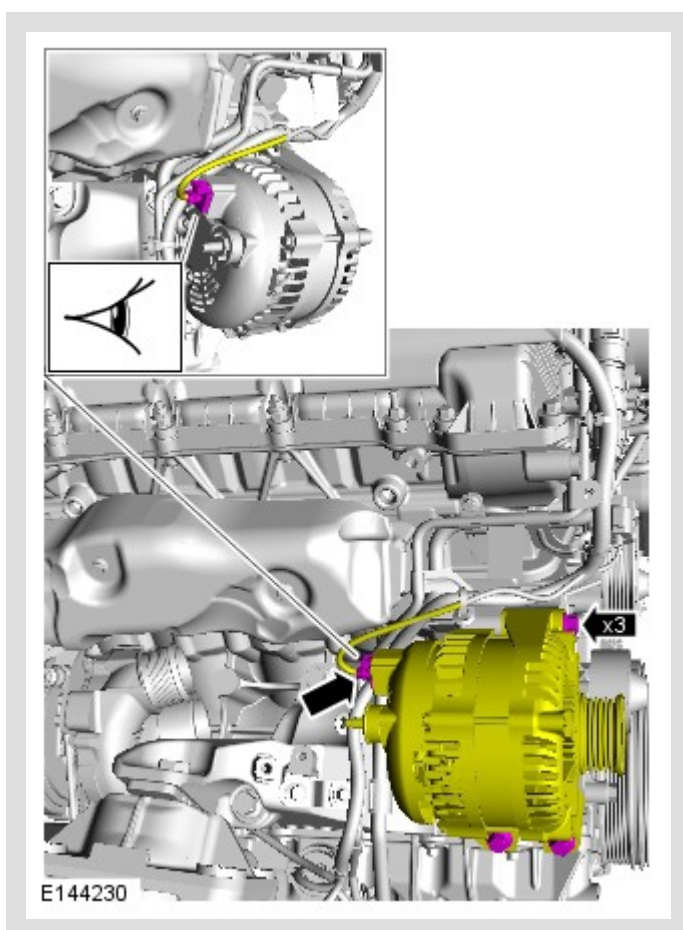

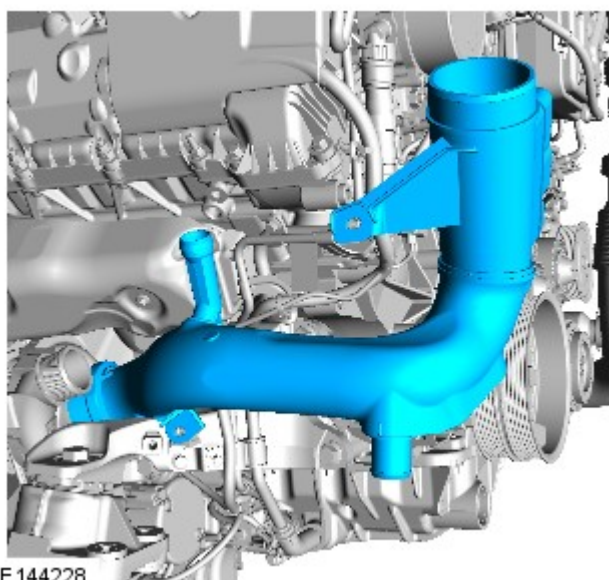


E144228

26.

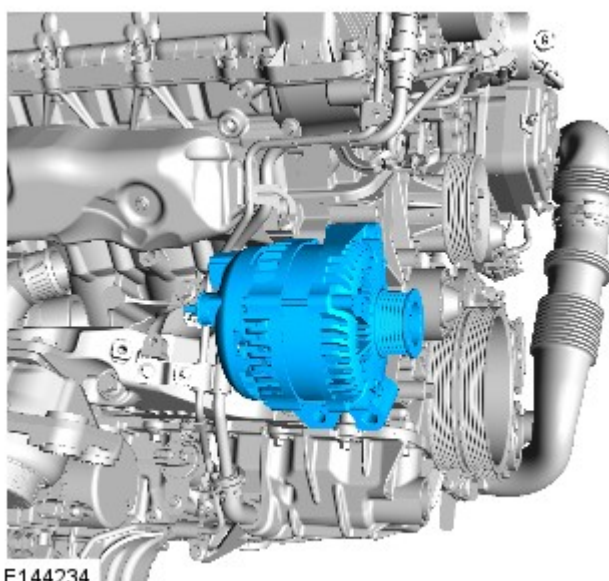


E144234


27.

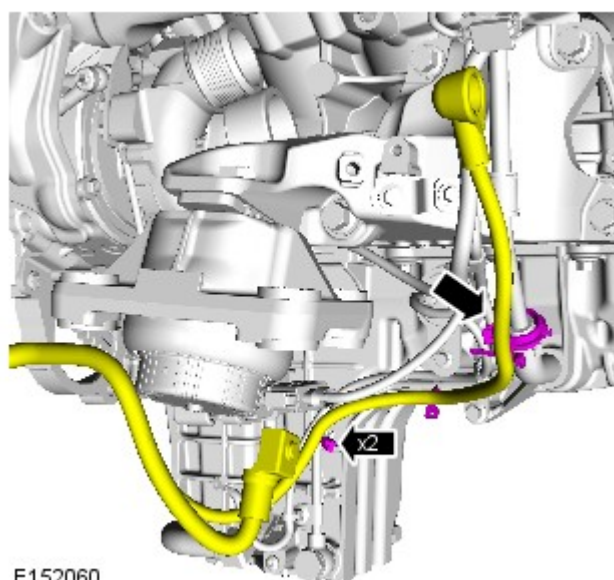


28.

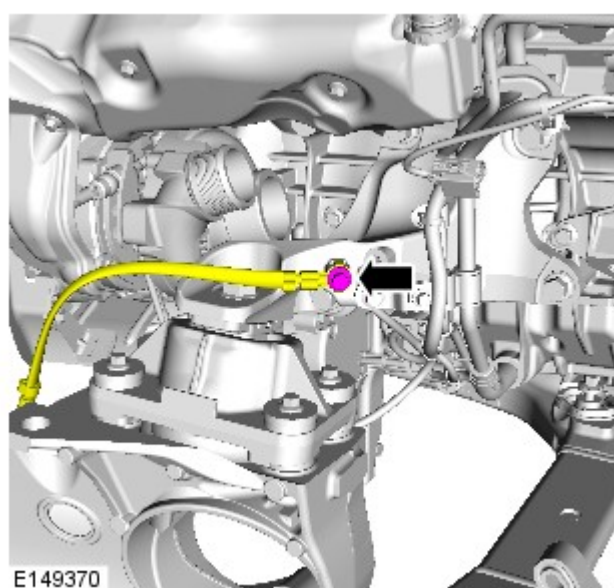


29.

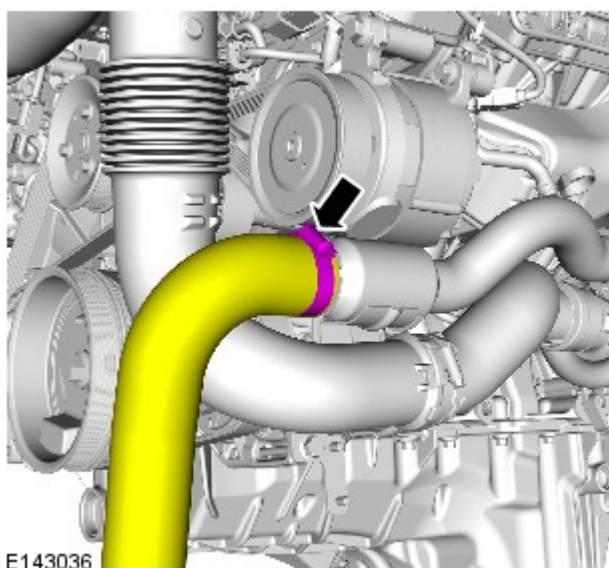


30.

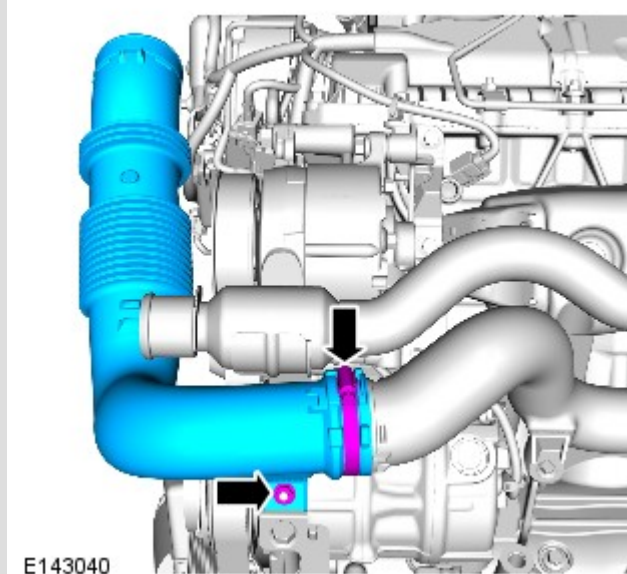


31.

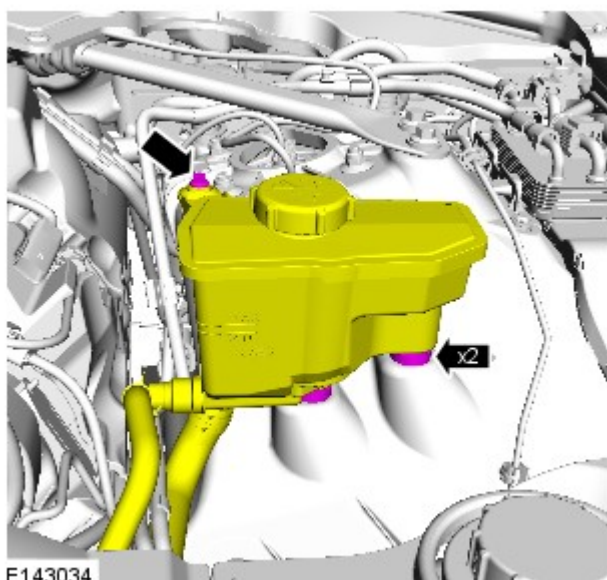


32.

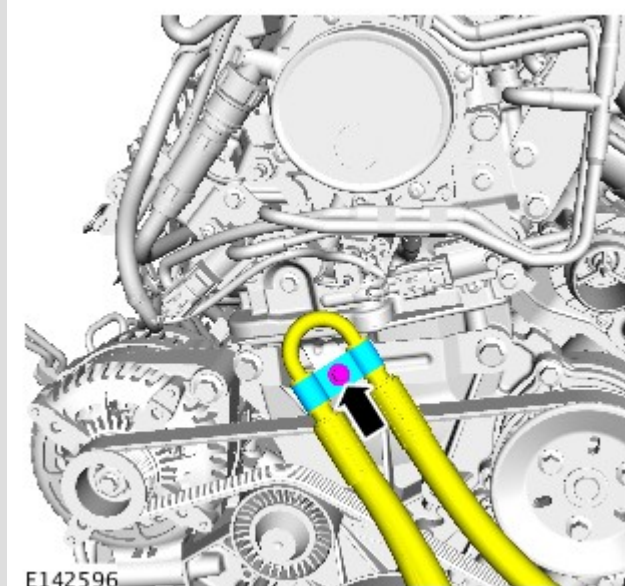


33.

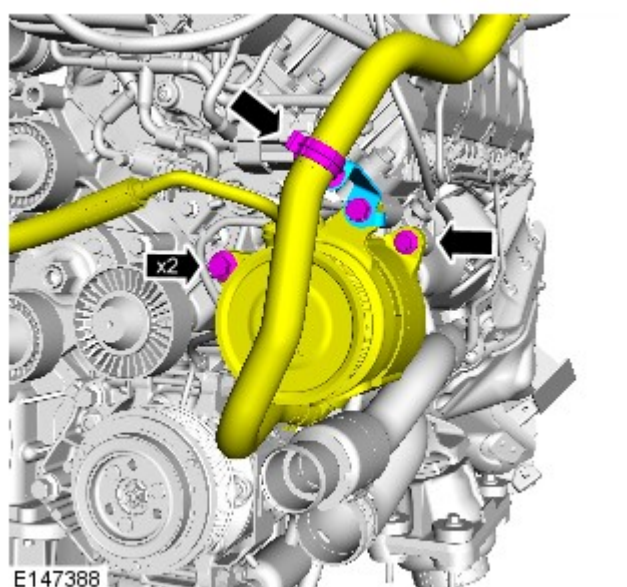

34.

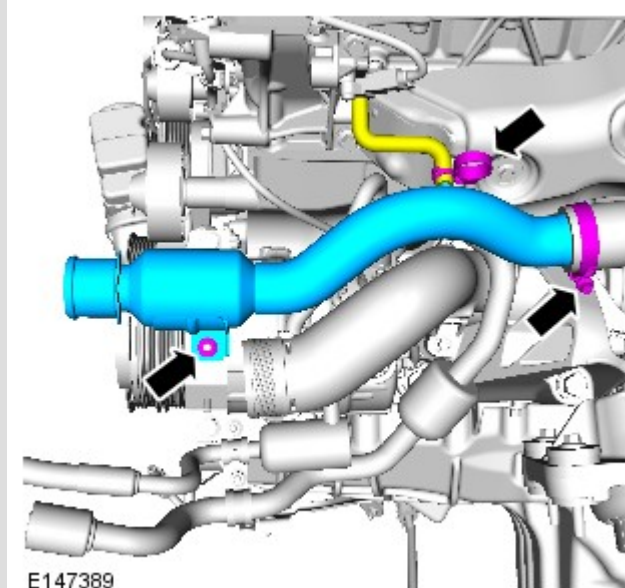


35.

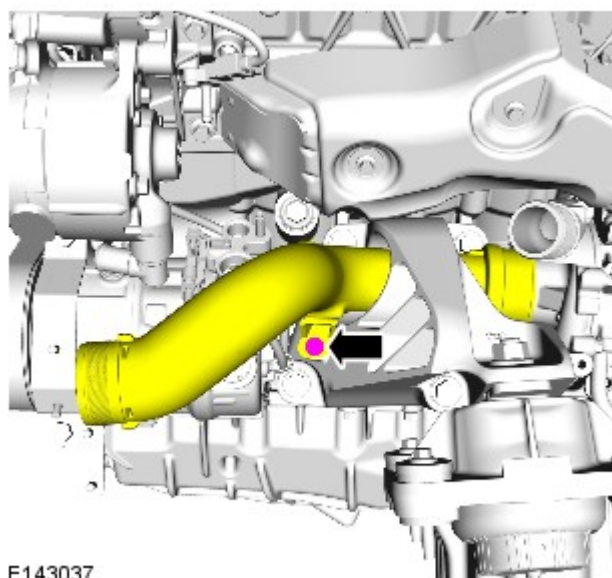


E143037

36.

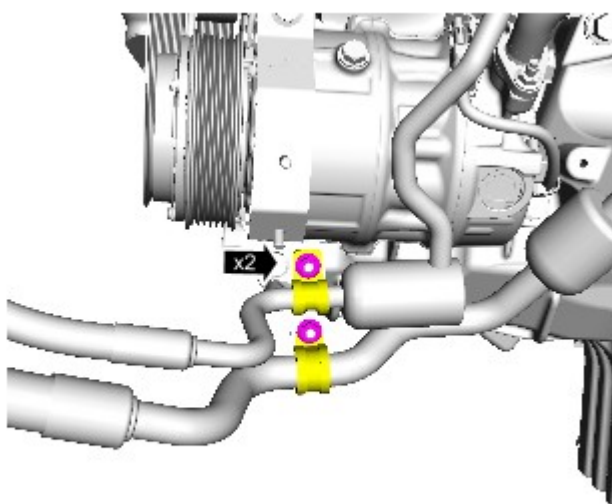

E147390

37.

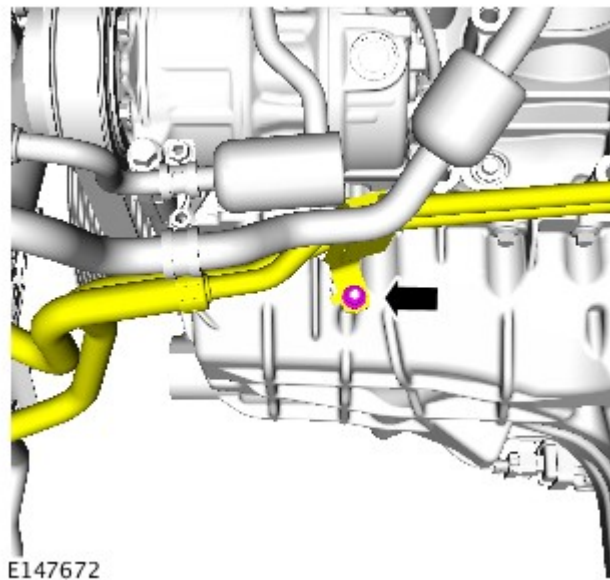


38.




CAUTION:

Remove and discard the O-ring seals.

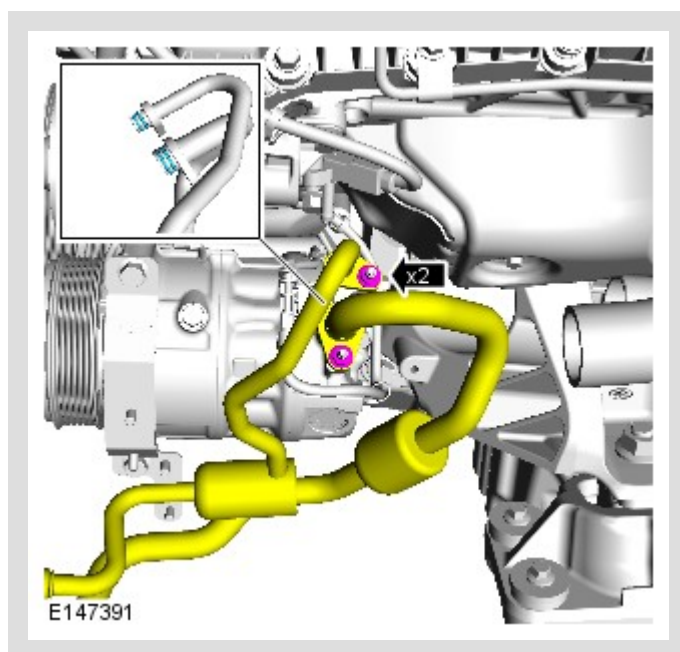


Renew Part: *Air conditioning pipe to compressor O-ring seals : 1 .*


39.

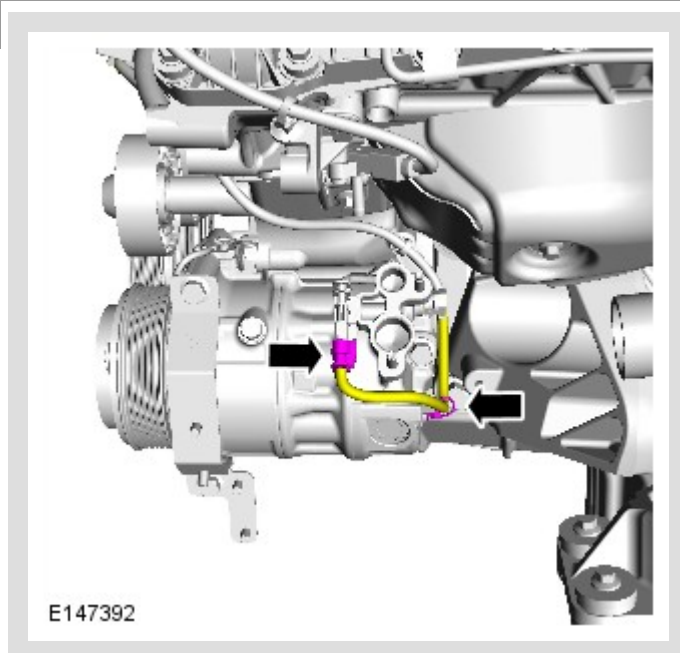


40.

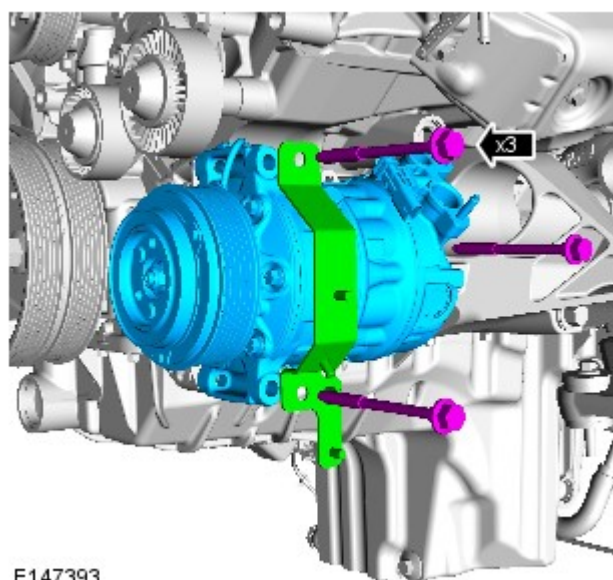


41.

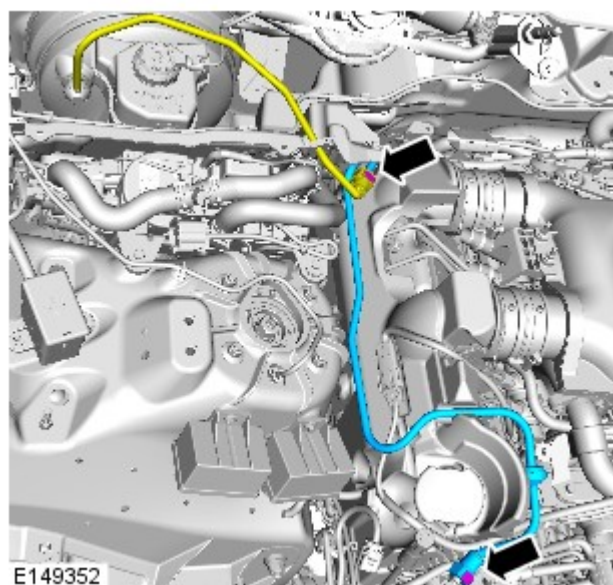


42.

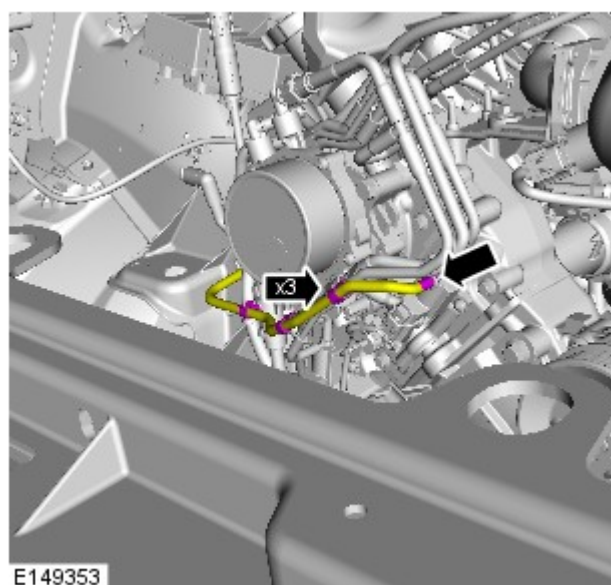


43.

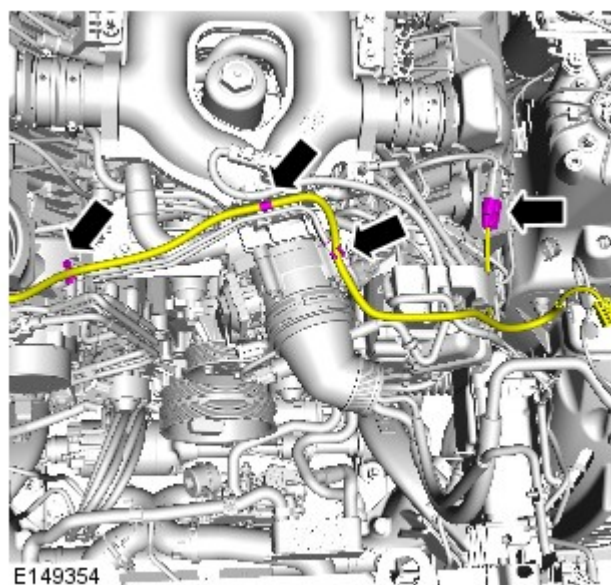


44.

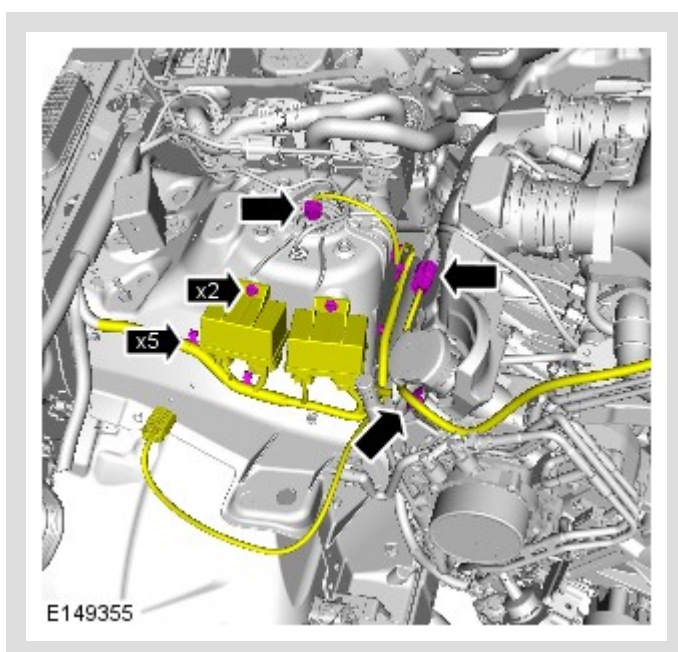

45.

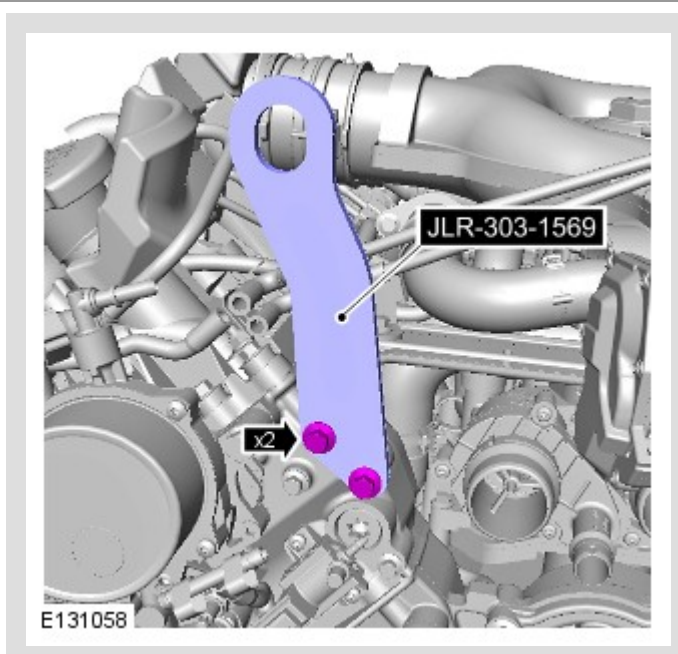

Special Tool(s): [JLR-303-1569](#)
Torque: 40 Nm

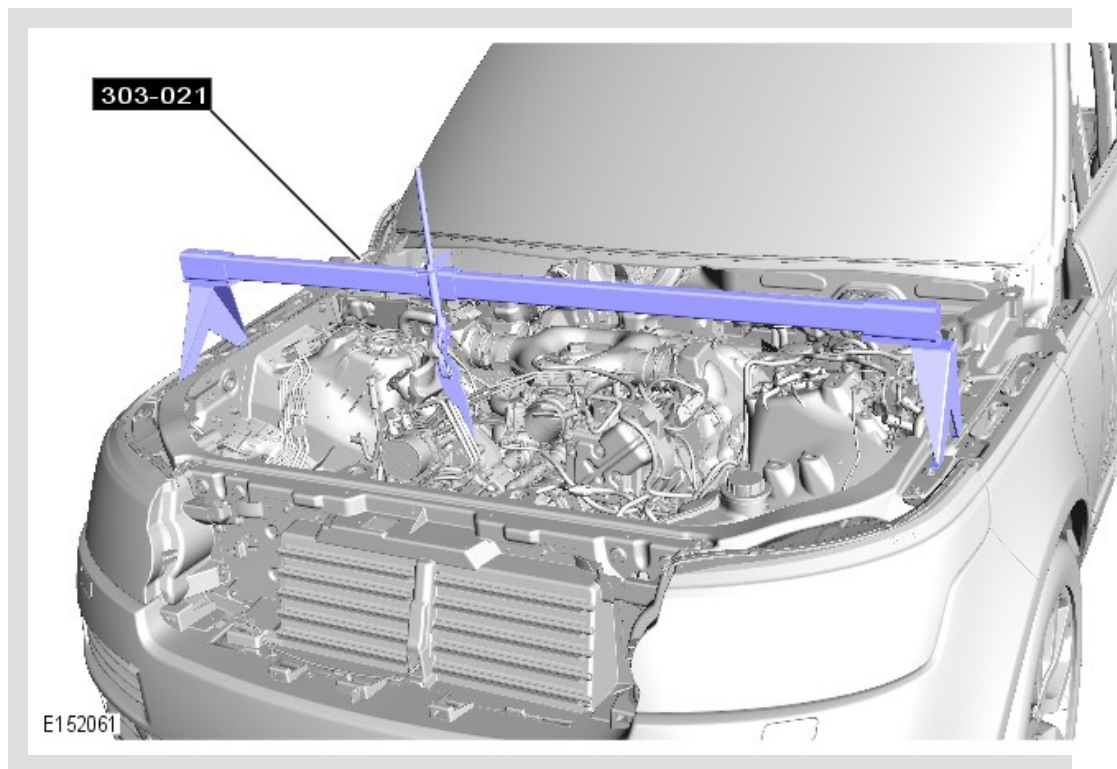


Special Tool(s): [303-021](#)


47. Refer to: Axle Assembly (205-03 Front Drive Axle/Differential, Removal and Installation).

48. Refer to: [Transmission - TDV8 4.4L Diesel](#) (307-01B Automatic Transmission /Transaxle - Vehicles With: 8HP70 8-Speed Automatic Transmission AWD, Removal).

49.

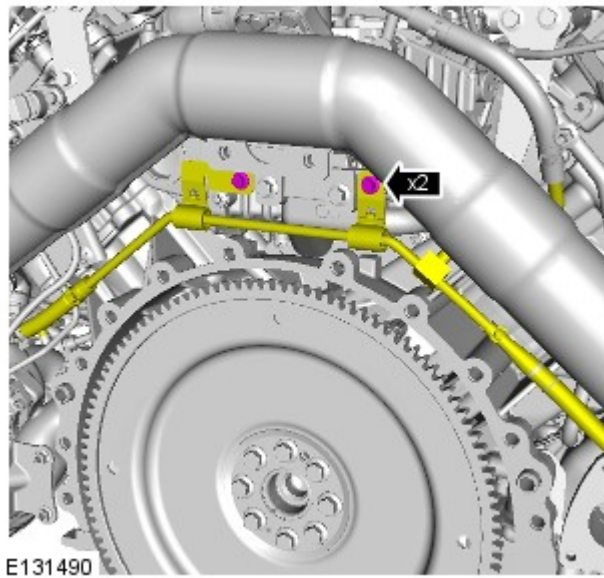


E131490

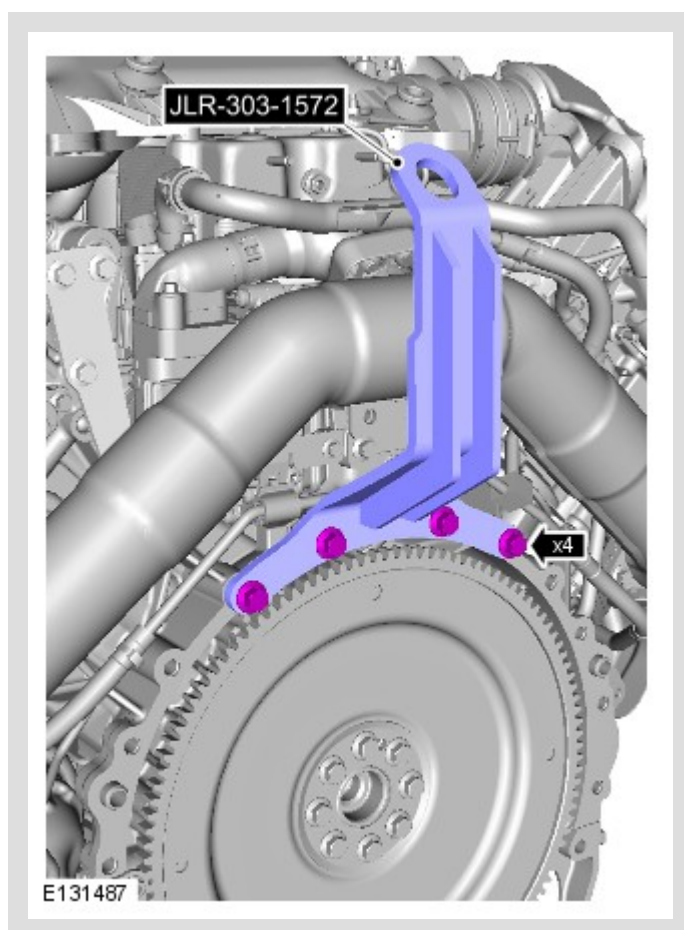

Special Tool(s): [JLR-303-1572](#)

Torque: 40 Nm

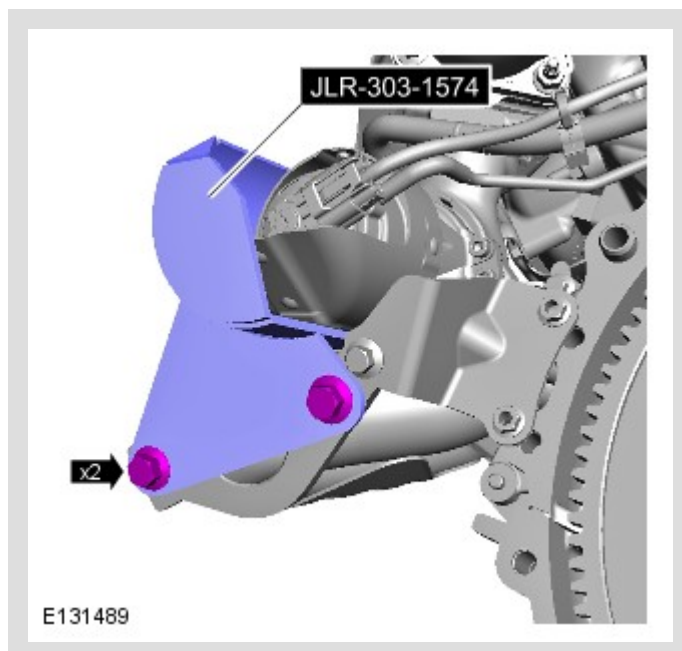


Special Tool(s): [JLR-303-1574](#)

Torque: 20 Nm

52.




53.

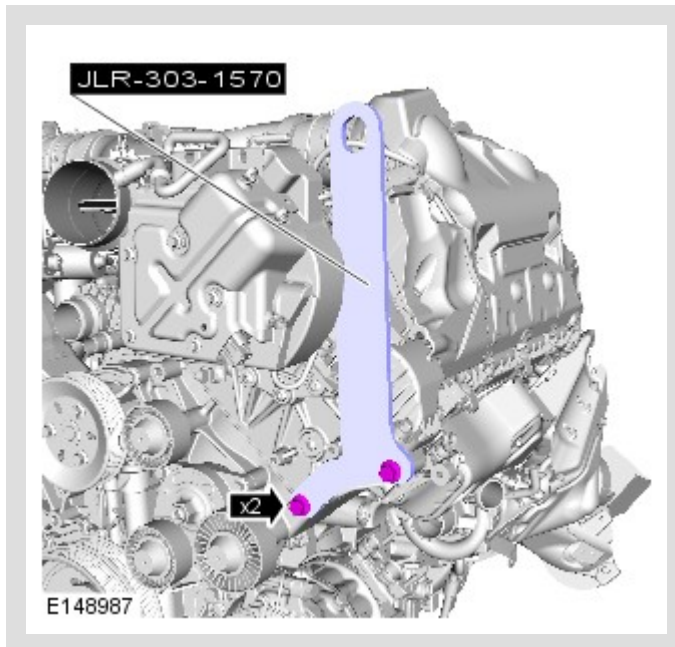



Special Tool(s): [JLR-303-1570](#)

Torque: 40 Nm

54.

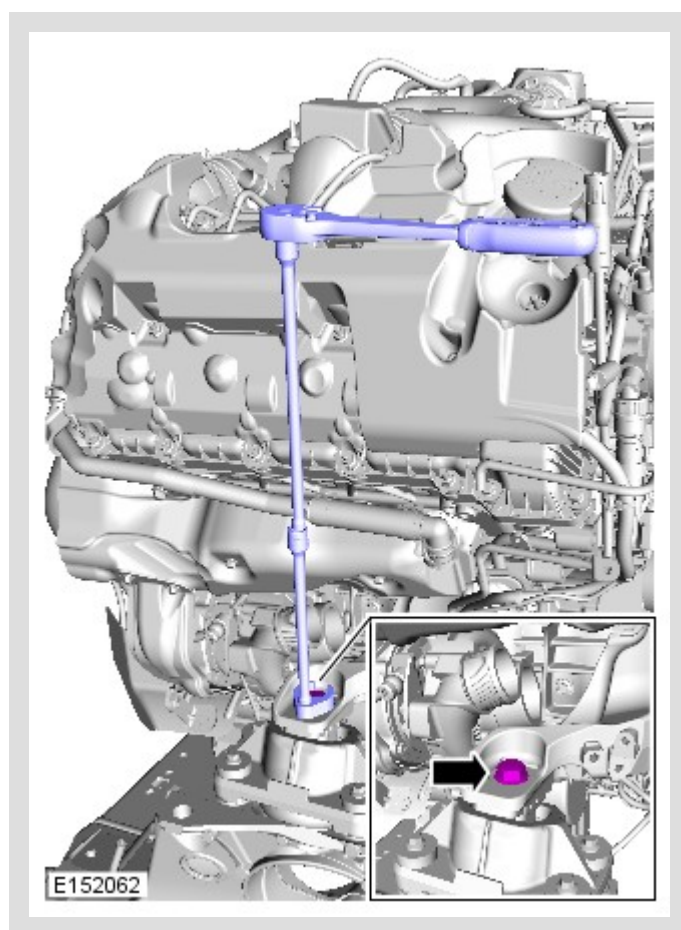

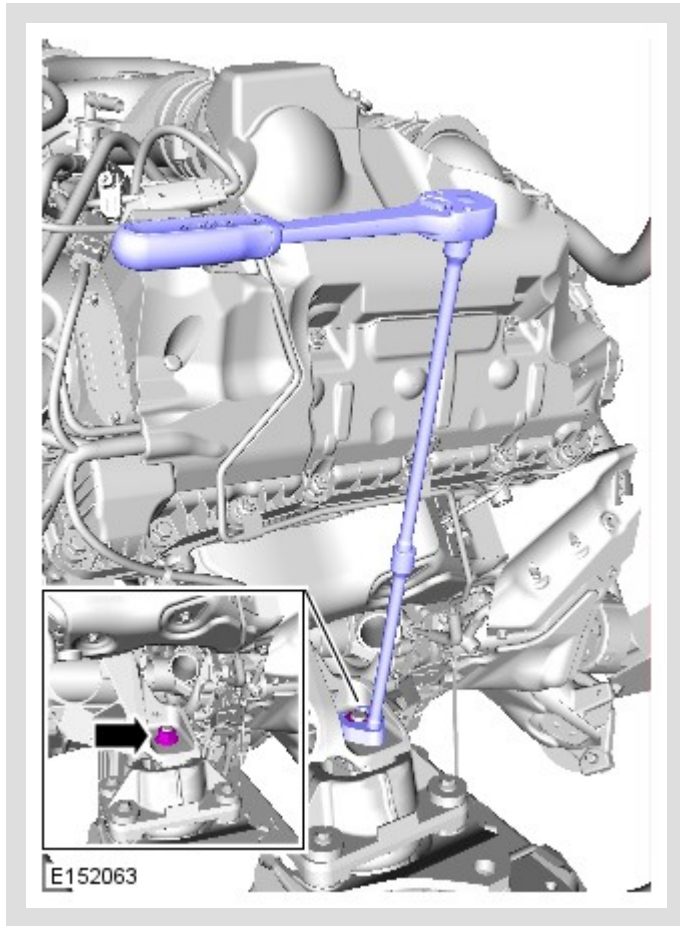

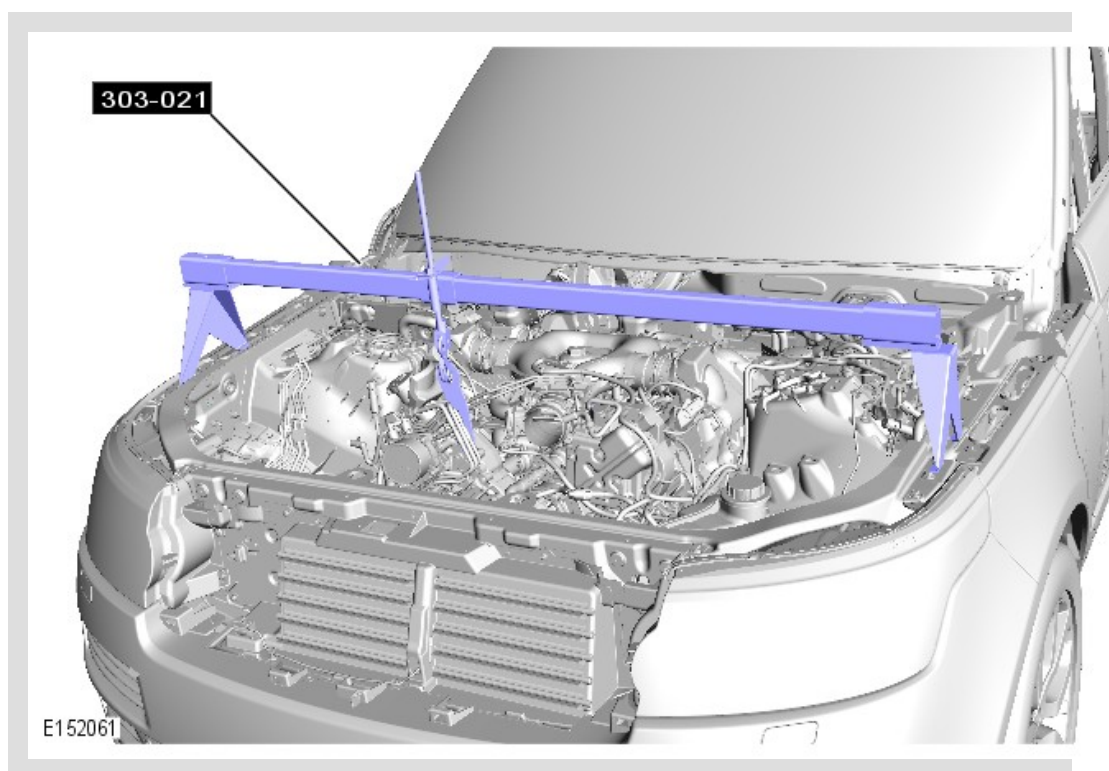


Special Tool(s): [303-021](#)

57.



NOTE:

This step requires the aid of another technician.

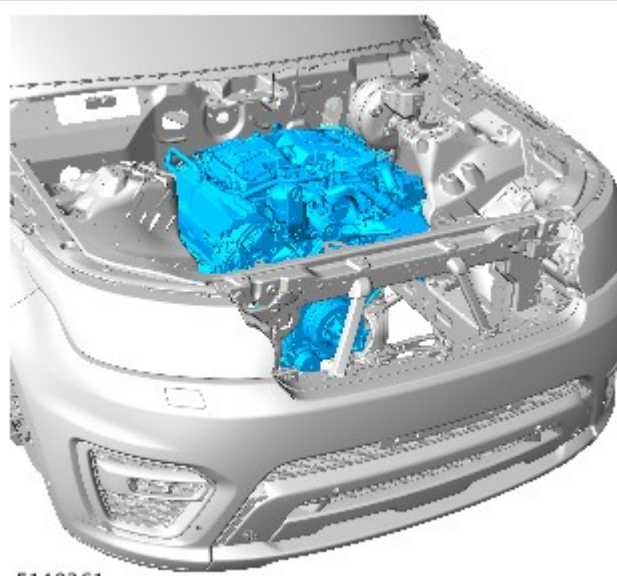

E149361